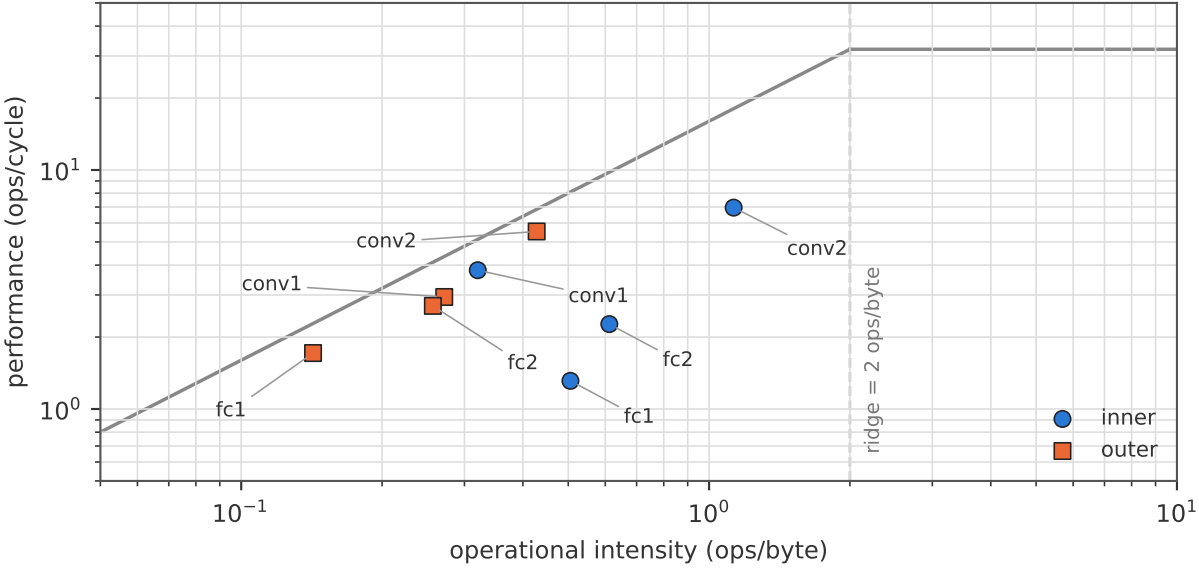
performance (ops/cycle)
10^1
10^0
operational intensity (ops/byte)
10^{-1}
10^0
10^1
conv2
conv1
fc2
fc1
conv2
conv1
fc2
fc1
ridge = 2 ops/byte
inner
outer