
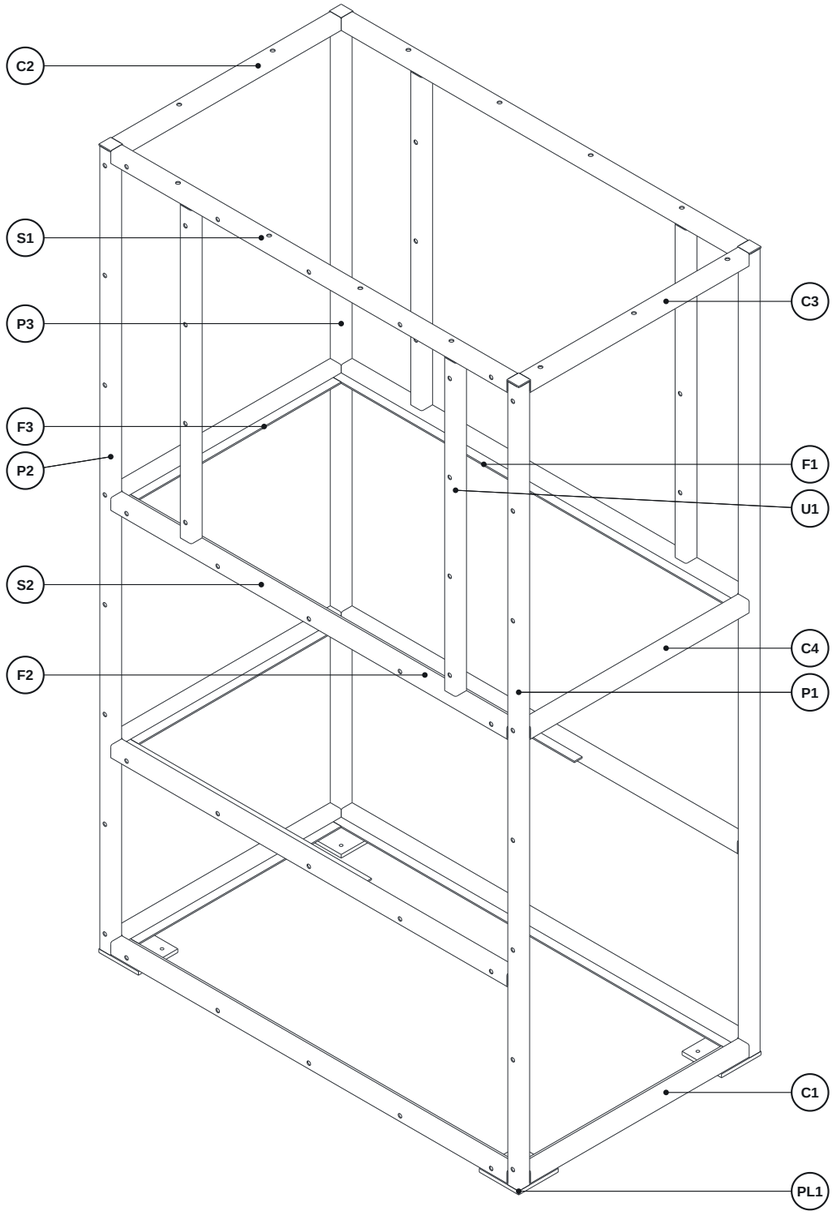


ISOMETRIC - FRONT LEFT (NOT TO SCALE)

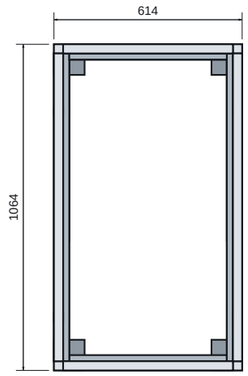

PLAN

FRONT

Datum C = left face

RIGHT SIDE

Datum B = front face (left in this view)


GENERAL NOTES

1 30x30x2.0 SHS C350L0 to AS/NZS 1163 (black or pre-primed; DuraGal OK - grind zinc 25 mm each side of welds + extract fumes).
Flat bar and plate grade 250 (AS/NZS 3678 / 3679.1).
2 Datums (all sheets): A underside of base rails, B front face, C left face. Dimensions mm, from datums unless noted.
3 GMAW, AS/NZS 1554.1 category GP. Fillets 3 mm (on 2 mm wall). SHS joints welded all round (details A/B, sheet 4).
4 Faces marked * receive panels, doors or pads: grind welds flush. Build SA-L / SA-R flat (sheet 2), then box (sheet 3).
5 Holes D9.0 for M6 steel rivnuts (fit after coating); drill per sheet 6 before welding. Pads PL1: 4x M8 tapped.
6 Tolerances: see sheet 4. Diagonals are the key checks.
7 HOLD POINT H1: mid rails (S2 mid, C3 mid rear) and ledges F2/F3 partition sit on the AC grille split M3 (462 above A). Tape-check M3, re-run tools/make_weld_pack.py, then weld.
8 RS1 rail spacers are NOT welded: bolt to U1 after coating, pack 0-4 mm to set the 19in rails (465.1 hole centres).
9 Finish: blast + zinc primer + powder coat (sheet 4).
10 Weldment 43 kg (+ spacers 4.9 kg); 152 rivnuts; 38 joints.

MARK LIST (full cut list sheet 5)


MARK	QTY	DESCRIPTION	CUT / SIZE
P1	2	Post	1763.2
P2	1	Post	1763.2
P3	1	Post	1763.2
S1	4	Side rail	1004.0
S2	4	Side rail	1004.0
C1	1	Cross rail	554.0
C2	2	Cross rail	554.0
C3	3	Cross rail	554.0
C4	1	Cross rail	554.0
U1	4	Rack upright	731.2
RS1	4	Rail spacer LOOSE	731.2
F1	4	Ledge (flat bar)	1004.0
F2	2	Ledge (flat bar)	611.0
F3	4	Ledge (flat bar)	514.0
PL1	4	Castor pad, 4x M8 tapped	PL 100x100x8
PL2	4	Post top cap	PL 30x30x3

PROJECT	SRA-16 Silent AC Rack - welded 30x30x2.0 frame
TITLE	Welded frame - general arrangement + mark list
DOC NO.	CP-SRA16-FRM-001 SHEET 1 OF 6 REV A
SCALE	1:20 (iso NTS) @ A3 UNITS mm LAYOUT v1.4.0
DATE	2026-10-18 DRAWN Claude (AI) for Carbon Project
STATUS	FOR FABRICATION after hold point H1 (AC grille split M3)

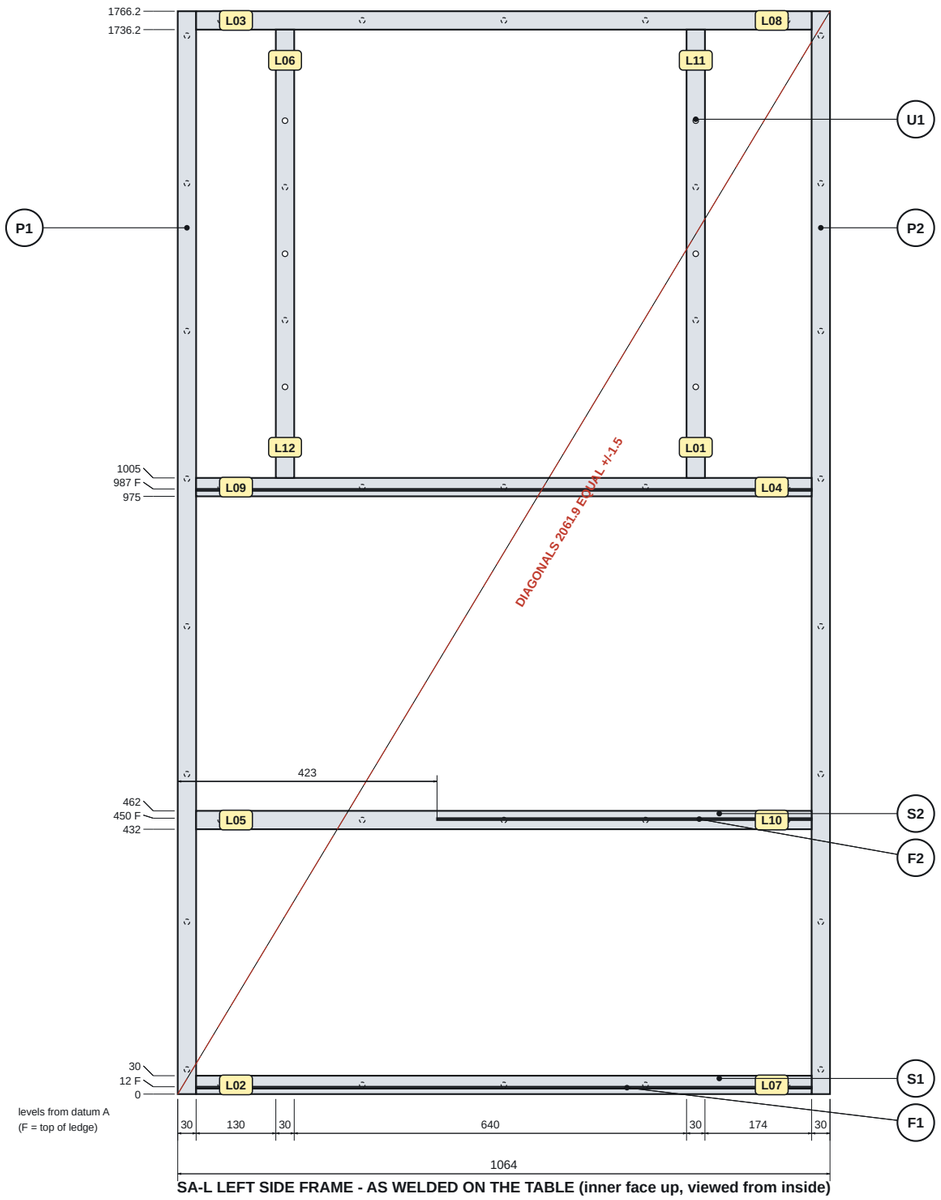

SA-L LEFT SIDE FRAME - AS WELDED ON THE TABLE (inner face up, viewed from inside)

scale 1:10 front (datum B) on the left dashed circles = rivnut holes in the outer face (underneath)

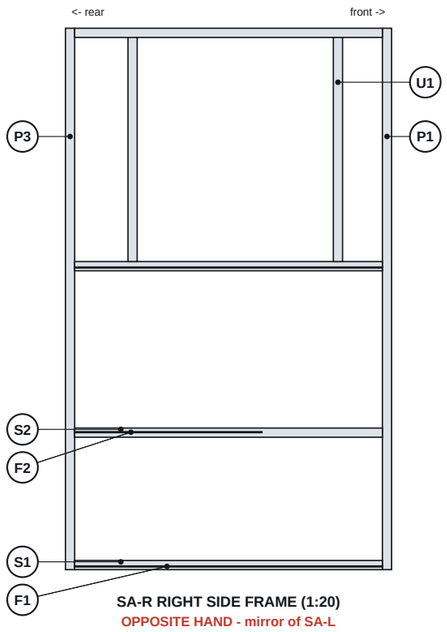

SA-R RIGHT SIDE FRAME (1:20)

OPPOSITE HAND - mirror of SA-L

inner face up, front on the RIGHT
rear post is P3 (P2 is SA-L only)
joints R01-R12 = mirror of L01-L12

SIDE FRAMES - FIT-UP AND WELD (make SA-L, then SA-R opposite hand)

1 Drill all members first (sheet 6). Posts outer-face holes DOWN.
2 Lay P1 + P2 flat, inner faces up, against a straight stop. Outside of posts 1064 apart (datum B to rear face).
3 Fit S1 (base, top) and S2 (mid, shelf) between the posts: S1 base flush with the post bottoms (datum A), levels per ordinates.
4 Stand U1 on the shelf rail at 160 and 830 from datum B.
5 Square each joint, clamp. Diagonals equal within 1.5, posts parallel within 1. Tack 2 per joint on the up face; re-check.
6 Weld in joint order L01 > L12 (balanced). Up-face seams + the short side fillets (3F uphill) - let each joint cool.
7 Turn over. Weld the outer-face seams in the same order, then grind flush (* faces carry the side panel). Re-check diagonals.
8 Inner face up again: ledges, underside stitches only (det. C): F1 floor, top 18 below S1 top; F2 partition, top 12 below S2 (mid) top, from 423 to rear post; F1 shelf, 18 below S2 top.
Gauge: an offcut of the actual ply on the rail top.
9 Flat within 2 over the frame (straight-edge the outer face).

JOINTS SA-L (SA-R: R-numbers, mirror)

JOINT	MEMBER END	WELDED TO	WELD (* = external face: grind flush)
L01	U1 upright rear left	S2 Shelf left	fillet 3: front+rear; flush: outer*, inner
L02	S1 Base left	P1 post FL	fillet 3: top; flush: outer*, inner, bottom*
L03	S1 Top left	P1 post FL	fillet 3: bottom; flush: outer*, inner; top: with cap
L04	S2 Shelf left	P2 post RL	fillet 3: bottom+top; flush: outer*, inner
L05	S2 Mid left	P1 post FL	fillet 3: bottom+top; flush: outer*, inner
L06	U1 upright front left	S1 Top left	fillet 3: front+rear; flush: outer*, inner
L07	S1 Base left	P2 post RL	fillet 3: top; flush: outer*, inner, bottom*
L08	S1 Top left	P2 post RL	fillet 3: bottom; flush: outer*, inner; top: with cap
L09	S2 Shelf left	P1 post FL	fillet 3: bottom+top; flush: outer*, inner
L10	S2 Mid left	P2 post RL	fillet 3: bottom+top; flush: outer*, inner
L11	U1 upright rear left	S1 Top left	fillet 3: front+rear; flush: outer*, inner
L12	U1 upright front left	S2 Shelf left	fillet 3: front+rear; flush: outer*, inner


LEDGES ON THE SIDE FRAMES (det. C, underside stitches only)

WELD	FRAME	LEDGE	ON RAIL	TOP BELOW RAIL	STITCHES (@ 150 c/c)
K01	SA-L	F1 floor left	S1 Base left	18	8 x 25 + returns
K02	SA-R	F1 floor right	S1 Base right	18	8 x 25 + returns
K05	SA-L	F2 partition left	S2 Mid left	12	5 x 25 + returns
K06	SA-R	F2 partition right	S2 Mid right	12	5 x 25 + returns
K08	SA-L	F1 shelf left	S2 Shelf left	18	8 x 25 + returns
K09	SA-R	F1 shelf right	S2 Shelf right	18	8 x 25 + returns


RECORD (measure tacked, then after welding)

FRAME	STAGE	DIAG 1	DIAG 2	LENGTH 1064	FLAT <= 2	INITIALS
SA-L	tacked					
SA-L	welded					
SA-R	tacked					
SA-R	welded					

PROJECT	SRA-16 Silent AC Rack - welded 30x30x2.0 frame
TITLE	Side frames SA-L / SA-R - fit-up, joints, ledges
DOC NO.	CP-SRA16-FRM-001 SHEET 2 OF 6 REV A
SCALE	1:10 / 1:20 @ A3 UNITS mm LAYOUT v1.4.0
DATE	2026-10-18 DRAWN Claude (AI) for Carbon Project
STATUS	FOR FABRICATION after hold point H1 (AC grille split M3)

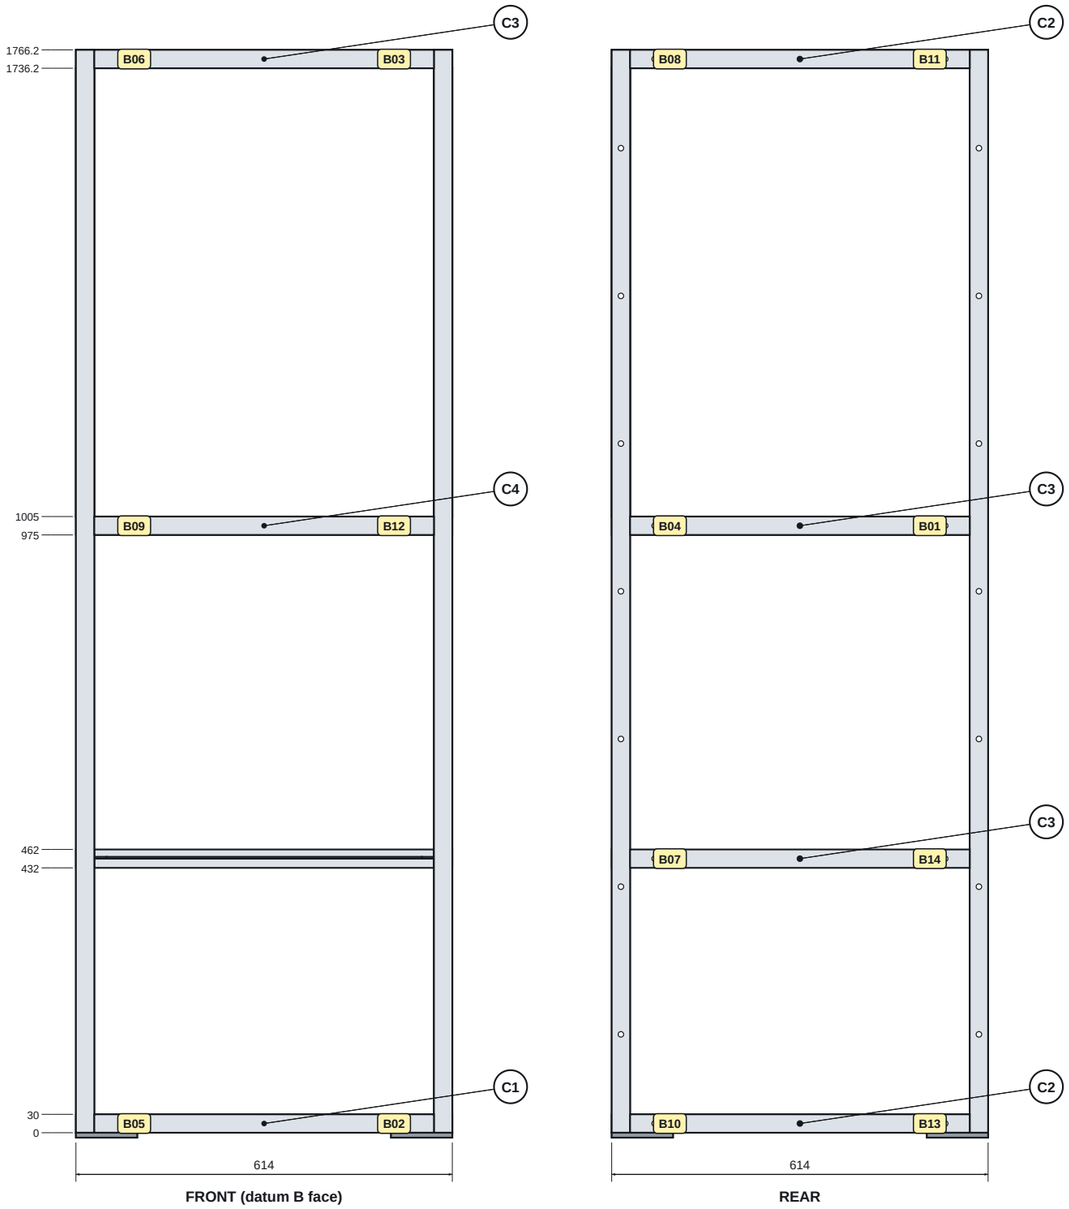

FRONT (datum B face) REAR

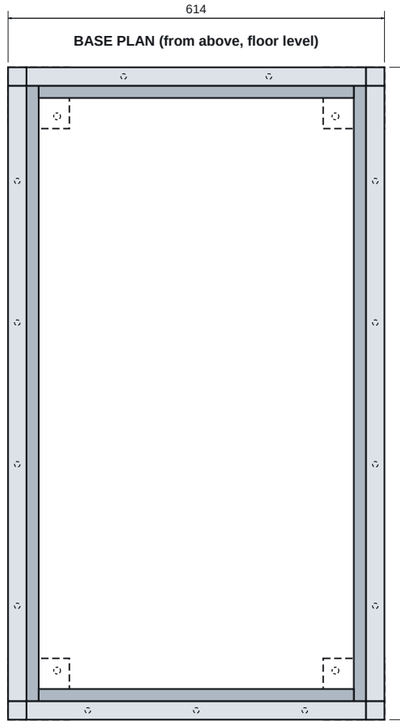

BASE PLAN (from above, floor level)

PL1 100x100 dashed: PL1 pads below, 4x M8, skirt rivnuts

BOX JOINTS (cross rails C into posts)

JOINT	RAIL END	POST	WELD (* grind flush)
B01	C3 Shelf rear	P2 RL	fillet 3: bottom+top; flush: inner, rear*
B02	C1 Base front	P1 FR	fillet 3: top; flush: front*, inner, bottom*
B03	C3 Top front	P1 FR	fillet 3: bottom; flush: front*, inner; top: with cap
B04	C3 Shelf rear	P3 RR	fillet 3: bottom+top; flush: inner, rear*
B05	C1 Base front	P1 FL	fillet 3: top; flush: front*, inner, bottom*
B06	C3 Top front	P1 FL	fillet 3: bottom; flush: front*, inner; top: with cap
B07	C3 Mid rear	P3 RR	fillet 3: bottom+top; flush: inner, rear*
B08	C2 Top rear	P3 RR	fillet 3: bottom; flush: inner, rear*; top: with cap
B09	C4 Shelf front	P1 FL	fillet 3: bottom+top; flush: front*, inner
B10	C2 Base rear	P3 RR	fillet 3: top; flush: inner, rear*, bottom*
B11	C2 Top rear	P2 RL	fillet 3: bottom; flush: inner, rear*; top: with cap
B12	C4 Shelf front	P1 FR	fillet 3: bottom+top; flush: front*, inner
B13	C2 Base rear	P2 RL	fillet 3: top; flush: inner, rear*, bottom*
B14	C3 Mid rear	P2 RL	fillet 3: bottom+top; flush: inner, rear*


CHECK BEFORE WELDING (tacked) AND AFTER

CHECK	TARGET	TOL
Front / rear face diagonals	1869.9	+/-2
Left / right face diagonals	2061.9	+/-2
Top / base diagonals	1228.5	+/-1.5
Body diagonals (4, corner-corner)	2151.4	+/-3
Outside W x D	614 x 1064	+/-1.5
Height (A to top)	1766.2	+/-1.5
Pads coplanar (rock test on table)	0	<=1
Rack uprights front-rear (19in rails)	700	+/-1

PADS, CAPS, BENCH LEDGES

PL1 castor pads PW1-PW4: grind the post/rail bottom seams flush, clamp pads to the flat table (frame inverted), 3 fillet on the inner edges + seal outer edges, grind outer edges flush (det. E).
PL2 caps T1-T4: 3 seal fillet all round, grind flush (det. D).
F3 ledges are welded on the bench BEFORE the box (rail clamped to a straight-edge, stitches from the centre out). A ledge makes the piece position-specific - paint-mark it:
K03 C1 BASE FRONT + F3, top 18 below rail top
K04 C2 BASE REAR + F3, top 18 below rail top
K07 C3 MID REAR + F3, top 12 below rail top
K10 C3 SHELF REAR + F3, top 18 below rail top
Ledge on the face opposite the rear-panel holes (C1: either side); rail top = the face opposite the skirt holes.

BOX ASSEMBLY (on its side)

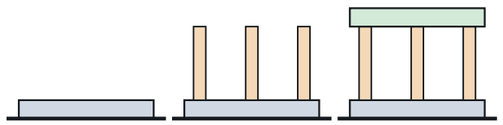


1 SA-L flat 2 C rails stood up 3 SA-R lowered on

4 Check the four faces and body diagonals (table), twist <= 2.
5 Weld B01 > B14 in order, rolling the box so every joint is flat or horizontal (never overhead). Cool between joints.
6 Invert on the flat table: clamp PL1 pads to the table so all four are coplanar, grind bottom seams flush, weld PW1-PW4.
7 Weld PL2 caps T1-T4, grind all external faces flush.

PROJECT	SRA-16 Silent AC Rack - welded 30x30x2.0 frame
TITLE	Box assembly - cross rails, pads, caps, checks
DOC NO.	CP-SRA16-FRM-001 SHEET 3 OF 6 REV A
SCALE	1:10 @ A3 UNITS mm LAYOUT v1.4.0
DATE	2026-10-18 DRAWN Claude (AI) for Carbon Project
STATUS	FOR FABRICATION after hold point H1 (AC grille split M3)

A SHS T-JOINT - ELEVATION


proportional, NTS

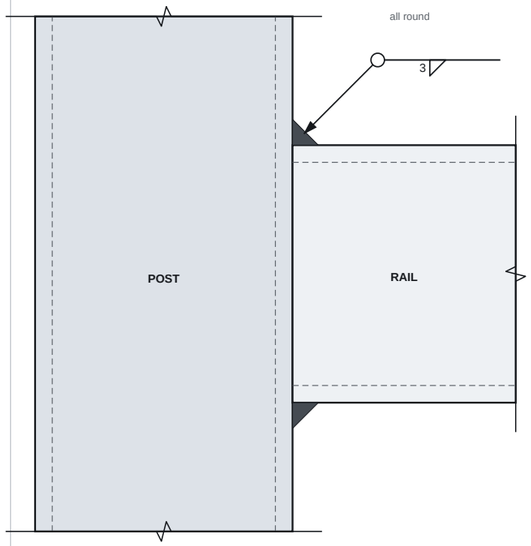

Square-cut end, fit tight (gap 0-1). Weld ALL ROUND: 3 fillet where the rail meets the post face (shown), flare seam where the faces run flush (det. B). Tack 2 per joint first.

B FLUSH FACES - SECTION


proportional, NTS

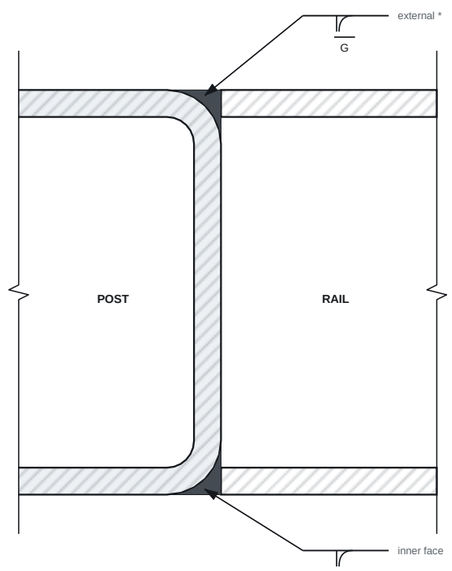

Section on the rail centreline. The tube corner radii leave a flare groove where faces run flush: fill it in one pass. Faces marked * carry panels, seals or pads: grid FLUSH (G). Inner faces stay as welded.

C LEDGE ON RAIL - SECTION


proportional, NTS

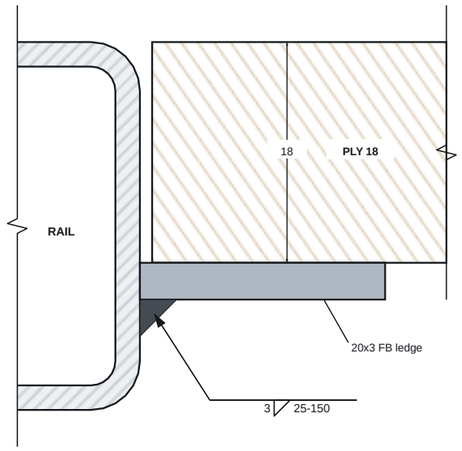

Ledge top 18 below the rail top for the floor and shelf, 12 for the partition: set it with an offcut of the real ply. Stitch the UNDERSIDE only - the top face is the ply seat.

D POST TOP CAP PL2 - ELEVATION

proportional, NTS

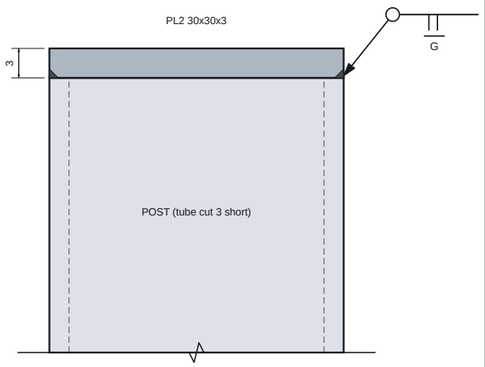


Cap top = frame top (datum A + 1766.2).
Top rails butt against the cap edge.

Cap flush with the tube faces all round: seal weld the seam (outside corner) and grind flush on all faces - the top panel and side panels bear here. Weld after the box (step 7).

E CASTOR PAD PL1


proportional, NTS

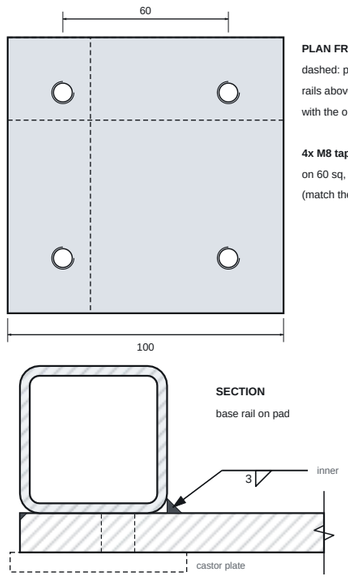

Outer edges flush with the frame: seal weld, grind flush. Weld with the four pads clamped to the flat table (coplanar). Castor bolts: plate t + 8 max - must NOT reach the rail walls.

F M6 RIVNUT PANEL FIXING

proportional, NTS

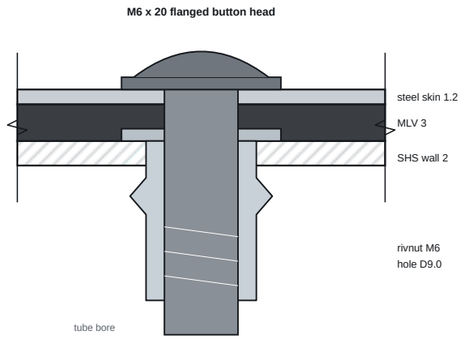

Drill before welding, deburr. Fit rivnuts (steel, flat head, grip 0.5-3) after coating. M6 x 20: skin + MLV 4.2, the rest into the rivnut (6 min engaged). MLV punched D8 = gasket.

WELDING PROCEDURE (WPS-lite)

Process	GMAW (MIG), short-circuit transfer
Wire	ER70S-6 (AWS A5.18) ~ ISO 14341-A G 42 4 M21 3Si1, 0.8
Gas	Ar + 15-18% CO2 (e.g. Argoshield Light), 12-15 L/min
Start settings	17-18.5 V, WFS 4.5-6 m/min (~70-100 A)
	stick-out 8-10, push 10-15 deg - prove on a coupon
Fillet	3 leg (2.1 throat) on 2 wall; tacks 6-8 long
Positions	1F/1G, 2F; short 3F uphill OK; no overhead
Preheat / PWHT	none (C350L0, t < 10)
Heat / distortion	balanced order (joint IDs), cool between
Standard	AS/NZS 1554.1 category GP
Inspection	100% visual: no cracks, burn-through, LOF;
	undercut <= 0.5; no porosity on ground faces
Galvanised stock	grind zinc 25 each side, fume extraction


FABRICATION TOLERANCES

Cut length (same mark matched <= 0.5)	+/-0.5
Cut squareness across 30 face	<= 0.5
Rail levels from datum A	+/-1
Outside W x D x H	+/-1.5
Face diagonals (equal)	+/-2
Side frame diagonals (equal)	+/-1.5
Panel faces flat (straight-edge)	<= 2
Twist / pads coplanar	<= 1
Rivnut hole positions	+/-1
Member straightness	L/1000

FINISH

Remove spatter; external * faces ground flush (80 grit), edges broken. Blast Sa 2.5 (or chemical pretreat - tubes are perforated by rivnut holes: coater to drain and dry them). Zinc-rich primer + polyester powder, satin black or RAL 7016. Mask the earth point. Fit rivnuts after coating; bond frame to PE (M6, star washer, bare metal) and the 19in strips with 4 mm2 jumpers.

WELD SYMBOLS (AS 1101.3)



- fillet, size = leg
- flare-bevel groove (flush faces)
- square butt / seal run
- weld all round
- flush contour; G = grind

Symbol under the line = arrow side.

PROJECT	SRA-16 Silent AC Rack - welded 30x30x2.0 frame
TITLE	Weld details, procedure, tolerances, finish
DOC NO.	CP-SRA16-FRM-001 SHEET 4 OF 6 REV A
SCALE	details NTS (proportional) @ A3 UNITS mm LAYOUT v1.4.0
DATE	2026-10-18 DRAWN Claude (AI) for Carbon Project
STATUS	FOR FABRICATION after hold point H1 (AC grille split M3)


CUT LIST - CP-SRA16-FRM-001 (all members square cut, deburred)

MARK	QTY	DESCRIPTION	SECTION	CUT	HOLES	KG EA	KG	STAGE	WHERE
P1	2	Post	30x30x2.0 SHS	1763.2	8	2.96	5.92	SA-L/R	post FL; post FR
P2	1	Post	30x30x2.0 SHS	1763.2	15	2.96	2.96	SA-L	post RL
P3	1	Post	30x30x2.0 SHS	1763.2	15	2.96	2.96	SA-R	post RR
S1	4	Side rail	30x30x2.0 SHS	1004.0	9	1.68	6.74	SA-L/R	Base left; Base right; Top left; Top right
S2	4	Side rail	30x30x2.0 SHS	1004.0	5	1.68	6.74	SA-L/R	Mid left; Mid right; Shelf left; Shelf right
C1	1	Cross rail	30x30x2.0 SHS	554.0	3	0.93	0.93	BOX	Base front
C2	2	Cross rail	30x30x2.0 SHS	554.0	5	0.93	1.86	BOX	Base rear; Top rear
C3	3	Cross rail	30x30x2.0 SHS	554.0	3	0.93	2.79	BOX	Mid rear; Shelf rear; Top front
C4	1	Cross rail	30x30x2.0 SHS	554.0	0	0.93	0.93	BOX	Shelf front
U1	4	Rack upright	30x30x2.0 SHS	731.2	7	1.23	4.91	SA-L/R	upright front left; upright front right; upright rear left; upright rear right
RS1	4	Rail spacer (LOOSE - bolted, not welded)	30x30x2.0 SHS	731.2	0	1.23	4.91	LOOSE	spacer front left; spacer front right; spacer rear left; spacer rear right
F1	4	Ledge (flat bar)	20x3 FB	1004.0	0	0.47	1.89	SA-L/R	floor left; floor right; shelf left; shelf right
F2	2	Ledge (flat bar)	20x3 FB	611.0	0	0.29	0.58	SA-L/R	partition left; partition right
F3	4	Ledge (flat bar)	20x3 FB	514.0	0	0.24	0.97	BENCH	floor front; floor rear; partition rear; shelf rear
PL1	4	Castor pad, 4x M8 tapped	PL 100x100x8	-	4 M8	0.63	2.51	FINAL	corner FL; corner FR; corner RL; corner RR
PL2	4	Post top cap	PL 30x30x3	-	-	0.02	0.08	FINAL	top of each post


Weldment 43.1 kg incl. caps and weld metal (0.34 kg); spacers RS1 4.9 kg loose. SHS cut lengths of posts are 3 short of the frame height (cap PL2 on top).

STOCK NESTING (first-fit, kerf 3, 10 trim per bar)

SHS 30x30x2.0 SHS, 6.5 m lengths

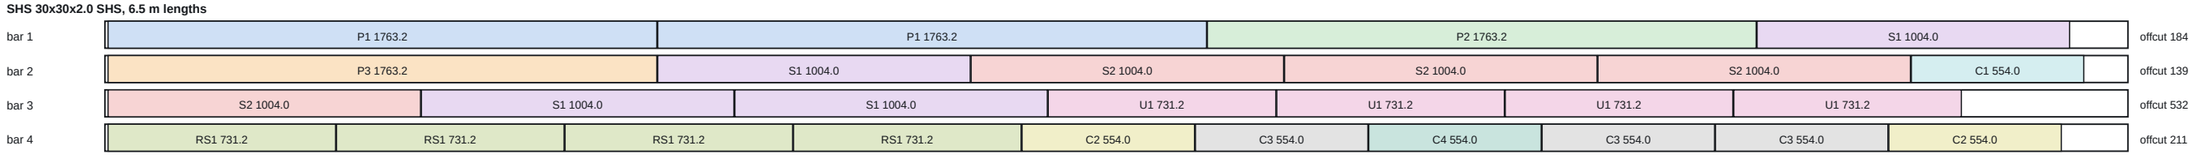

FB 20x3, 6.0 m lengths



FRAME PURCHASE LIST (indicative AUD, Sept 2026 - get quotes)

ITEM	QTY	UNIT	AUD/UNIT	AUD
30x30x2.0 SHS C350L0, 6.5 m length (incl. RS1 spacers)	4	len	52.00	208
Flat bar 20x3, 6.0 m length (ledges)	2	len	22.00	44
Flat bar 100x8 (castor pads, 4 x 100 + saw)	0.45	m	32.00	14
Flat bar 30x3 (post caps)	0.2	m	6.00	1
M6 steel rivnut, flat head, grip 0.5-3 (+10%)	170	ea	0.35	59
M8 x 12 set screw 8.8 + spring washer (castors)	16	ea	0.40	6
Welding wire, gas, discs, primer (share)	1	lot	60.00	60
Blast + zinc primer + powder coat (frame)	1	job	320.00	320

Materials AUD 714 (excl. GST). Castors, panels and rack parts are in bom/BOM.md.

LABOUR ESTIMATE (one-off, manual; tube-laser members save ~6 h)

TASK	HOURS
Cut + deburr 27 SHS + 10 FB pieces, plates	3.5
Drill 152 rivnut holes, tap 16 x M8	3.4
Fit + tack SA-L, SA-R	2.5
Fit + tack box, checks	2.0
Ledges (10), pads, caps	1.5
Weld 8.1 m (repositioning, cooling)	2.4
Grind external faces flush, dress	3.0
Final inspection, measure, record	0.8

Total ~19 h; at AUD 110/h ~ AUD 2,100

SHOP TRAVELLER (initial each box as the batch is done)

MARK	QTY	CUT	DEBURR	DRILL	PAINT MARK	BENCH WELD	FIT + TACK	WELD	QC
P1	2	☐	☐	☐	☐	n/a	☐	☐	☐
P2	1	☐	☐	☐	☐	n/a	☐	☐	☐
P3	1	☐	☐	☐	☐	n/a	☐	☐	☐
S1	4	☐	☐	☐	☐	n/a	☐	☐	☐
S2	4	☐	☐	☐	☐	n/a	☐	☐	☐
C1	1	☐	☐	☐	☐	☐	☐	☐	☐
C2	2	☐	☐	☐	☐	☐	☐	☐	☐
C3	3	☐	☐	☐	☐	☐	☐	☐	☐
C4	1	☐	☐	n/a	☐	n/a	☐	☐	☐
U1	4	☐	☐	☐	☐	n/a	☐	☐	☐
RS1	4	☐	☐	n/a	☐	n/a	n/a	n/a	☐
F1	4	☐	☐	n/a	☐	n/a	☐	☐	☐
F2	2	☐	☐	n/a	☐	n/a	☐	☐	☐
F3	4	☐	☐	n/a	☐	☐	☐	☐	☐
PL1	4	☐	☐	☐	☐	n/a	☐	☐	☐
PL2	4	☐	☐	n/a	☐	n/a	n/a	☐	☐

BENCH WELD = F3 ledges onto C1 / C2 / C3 (sheet 3). QC = length, squareness, holes, mark legible. Keep this sheet with the job.

PROJECT	SRA-16 Silent AC Rack - welded 30x30x2.0 frame
TITLE	Cut list, stock nesting, purchase, labour
DOC NO.	CP-SRA16-FRM-001 SHEET 5 OF 6 REV A
SCALE	- @ A3 UNITS mm LAYOUT v1.4.0
DATE	2026-10-18 DRAWN Claude (AI) for Carbon Project
STATUS	FOR FABRICATION after hold point H1 (AC grille split M3)

DRILLING SCHEDULE - D9.0 holes for M6 steel rivnuts, on the face centreline, positions from each member's DATUM END

MARK	QTY	FACE (position)	USE	DATUM END	POSITIONS (mm from datum end)
P1	2	outer side face	Side panel fixing	bottom end	40.0 280.9 521.8 762.7 1003.5 1244.4 1485.3 1726.2
P2	1	outer side face	Side panel fixing	bottom end	40.0 280.9 521.8 762.7 1003.5 1244.4 1485.3 1726.2
P2	1	rear face	Rear panel fixing	bottom end	160.4 401.3 642.2 883.1 1124.0 1364.9 1605.8
P3	1	outer side face	Side panel fixing	bottom end	40.0 280.9 521.8 762.7 1003.5 1244.4 1485.3 1726.2
P3	1	rear face	Rear panel fixing	bottom end	160.4 401.3 642.2 883.1 1124.0 1364.9 1605.8
S1	4	outer side face	Side panel fixing	front end	40.0 271.0 502.0 733.0 964.0
S1	4	bottom (at base) / top (at top)	Plinth skirt fixing (at base) / Top panel fixing (at top)	front end	155.5 386.5 617.5 848.5
S2	4	outer side face	Side panel fixing	front end	40.0 271.0 502.0 733.0 964.0
C1	1	bottom face	Plinth skirt fixing	left end	100.0 277.0 454.0
C2	2	rear face	Rear panel fixing	left end	40.0 277.0 514.0
C2	2	bottom (at base) / top (at top)	Plinth skirt fixing (at base) / Top panel fixing (at top)	left end	158.5 395.5
C3	3	rear (at mid, shelf) / top (at top)	Rear panel fixing (at mid, shelf) / Top panel fixing (at top)	left end	40.0 277.0 514.0
C4	1	-	no holes	left end	-
U1	4	outer side face	Side panel fixing	bottom end	40.0 257.1 474.1 691.2
U1	4	inner face	19in rail-spacer bolts	bottom end	148.5 365.6 582.7
PL1	4	plate	castor bolts	-	4x M8 tapped through (6.8 drill), 60 square on the pad centre

PIECE DRILLING (1:10 - datum end on the left, one bar per drilled face)


P1 x2
outer side face



P2 x1
outer side face




rear face




P3 x1
outer side face



rear face



S1 x4
outer side face




bottom (at base) / top (at top)



S2 x4
outer side face



C1 x1
bottom face




C2 x2
rear face



bottom (at base) / top (at top)




C3 x3
rear (at mid, shelf) / top (at top)



U1 x4
outer side face



inner face



FACES AND HANDING

Faces are named for the member IN POSITION: outer side = carries a side panel (x = 0 or 614); rear = rear panel; top = top panel; bottom = plinth skirt (between the castor pads); inner face of U1 = 19in rail-spacer bolts (RS1, packed 0-4 mm).

ONE PIECE, TWO POSITIONS: S1 (base or top side rail), C2 (base or top rear) and C3 (mid / shelf rear or top front) are identical pieces. As a base rail the second face points DOWN (skirt), as a top rail UP (top panel). Any piece fits either place until a bench ledge is welded on (sheet 3) - then paint-mark its position.

Two drilled faces: the second face's holes sit midway between the first face's, so rivnut bodies never meet inside the 26 mm bore.

P2 and P3 are a HANDED PAIR (rear-left / rear-right): lay them out in position and mark the faces before drilling. All other marks are identical left / right.

Datum end: posts and uprights = bottom; side rails S = front end; cross rails C = left end (seen from the front).
Tube laser: cad/exports/frame_members/<mark>.step has each member with its holes, datum end at the origin along +X.

NOT DRILLED HERE (drill on assembly)

Door hinges and toggle latches rivet to the skins and doors (sheet-metal pack CP-SRA16-SMP-001): no frame holes for them.
RS1 rail spacers: drill D7 through both walls at assembly to match the U1 rivnuts (M6 x 50 + packers); 19in strips to suit.
Ply floor / partition / shelf: 10g x 32 wing-tip self-drilling screws through the ply into the ledges at ~200 pitch.
Earth point: one U1 inner-face rivnut, rear-right upright - mask D20 during coating, star washer to bare metal.

PROJECT	SRA-16 Silent AC Rack - welded 30x30x2.0 frame
TITLE	Drilling schedule + piece drilling drawings
DOC NO.	CP-SRA16-FRM-001 SHEET 6 OF 6 REV A
SCALE	piece bars 1:10 @ A3 UNITS mm LAYOUT v1.4.0
DATE	2026-10-18 DRAWN Claude (AI) for Carbon Project
STATUS	FOR FABRICATION after hold point H1 (AC grille split M3)