
Logica 2.1 console cable

Two signal wires and ground from the Amiga's parallel port to a USB-TTL serial adapter.
The terminal runs at 9600 baud, 8N1, no flow control, VT100/ANSI, 80×25.

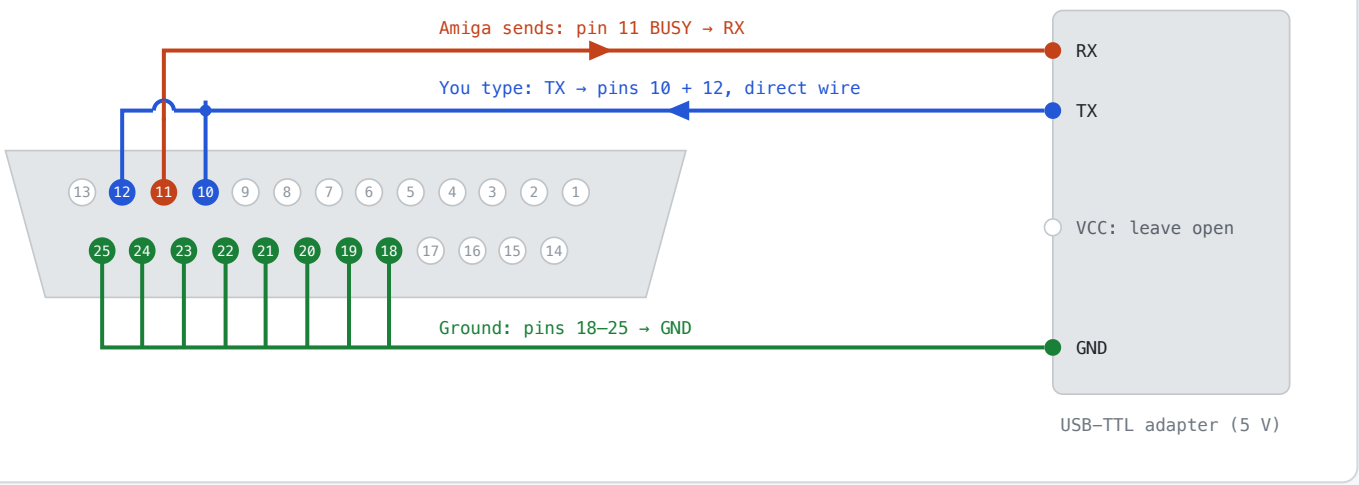

The connector is drawn as you see the Amiga's socket from behind the computer. That is also the solder side of the DB25 male plug you build, so the pin positions match while soldering. Check against the numbers moulded into the plug. Pins without a wire stay unconnected.

Pin mapping

DB25 PIN	AMIGA SIGNAL	GOES TO	DOES
11	BUSY (CIA-B PA0)	Adapter RX	Console output from the Amiga
10 + 12, tied	ACK (CIA-A FLAG) and POUT (CIA-B PA1)	Adapter TX, a direct wire	Your keys into the Amiga. POUT reads the bits; ACK's edges let a key break a running test.
18–25	Ground	Adapter GND	Common ground. One pin is enough; several is better.

Before you plug it in

- Use a **TTL** adapter: 5 V, or 3.3 V with 5 V tolerant inputs. The Amiga drives BUSY at 5 V.
- **Never** use an RS-232 (±12 V) adapter on the parallel port.
- No resistor between TX and pins 10 + 12. A series resistor (even 1 kΩ) keeps a 3.3 V adapter's low level above what the Amiga reads as low, and no key arrives. Logica 2.1 never drives these pins, so the direct wire is safe. If your cable has the resistor from an earlier version of this sheet, bridge it.
- The parallel port test's ACK check needs a loop plug in place of this cable, as in Logica 2.0.
- Leave the adapter's VCC pin unconnected; the adapter is powered over USB.

Or skip the cable: the USB-C adapter board in `hardware/console-adapter/` (FTDI, plugs straight into the port, same wiring, safe to leave plugged in) is ready to order from JLCPCB.