


From idea to router.

Korpora designs panel furniture in the browser and turns the same project into everything the workshop needs: a cut list with edge banding, a hardware list, drawings with a drilling map for every part, and files for the CNC machine.

For panel furniture workshops, with a CNC router or with a sliding table saw.

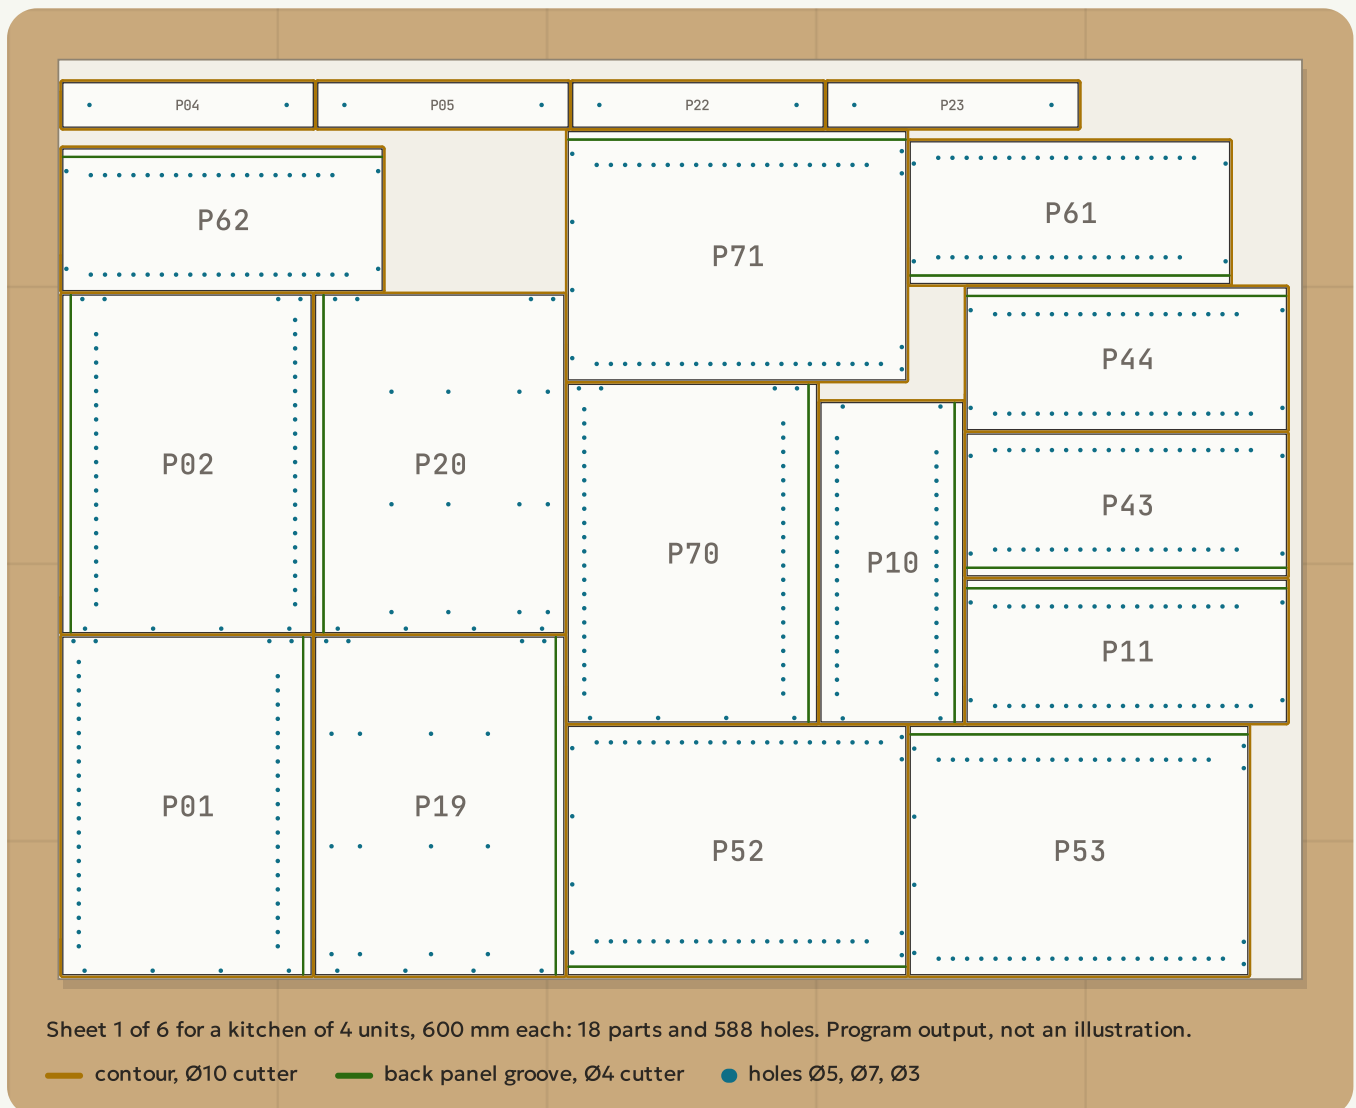

 **Every new account gets a 30-day trial, starting when the email is confirmed, to try the software. No card and no automatic payment.**

Every drawing, table and file in this brochure is output of the program from one project: a kitchen of 4 units, 600 mm each.

How do the sizes get to the machine?

In four steps, in one project. Changing a size updates everything after it: the model, the cut list, the drawings and the G-code.

- 1 Sizes and fronts**
Choose the type of furniture and set the sizes, doors, drawers and shelves. Decor, edge banding, hinges, handles and slides come from the catalogue.
- 2 3D model**
The furniture is assembled from real parts with thickness, edge banding and grain direction. The program checks shelf sag, door weight against the hinges and holes close to an edge.
- 3 Cut list and hardware**
A list of parts with cut sizes after edge banding, nesting on sheets, and the hardware counted out, ready to order.
- 4 Drawings and CNC**
An assembly drawing, a drawing with a drilling map for every part, layered DXF and G-code for every sheet.



The same kitchen in 3D, as you see it in the editor.


No.	Part	Finished, mm	Cut, mm	Band, length	Band, width	Holes
P01	Left side	760 × 560 × 18	760 × 559	1	—	49
P02	Right side	760 × 560 × 18	760 × 559	1	—	49
P03	Bottom	564 × 560 × 18	564 × 559	1	—	—
P04	Front rail	564 × 100 × 18	564 × 100	—	—	2
P05	Back rail	564 × 100 × 18	564 × 100	—	—	2
P06	HDF back panel	747 × 578 × 3	747 × 578	—	—	—
P07	Left door	757 × 297 × 18	753 × 293	2 + 2	2 + 2	5
P08	Right door	757 × 297 × 18	753 × 293	2 + 2	2 + 2	5
P09	Shelf	562 × 520 × 18	562 × 519	1	—	—

The first base unit of the same kitchen: 9 of 87 parts. The cut size is already reduced by the edge banding thickness.

The construction follows workshop practice: the bottom and top sit between the sides, the HDF back goes into a groove, base cabinets have rails for the worktop, and cut sizes are reduced by the edge banding.


Where exactly do the holes go?

On the drawing of every part: coordinates, diameter and depth of every hole, following the hardware manufacturer's documentation — Blum, Hettich, GTV and Salice for hinges, GTV and Blum for slides.

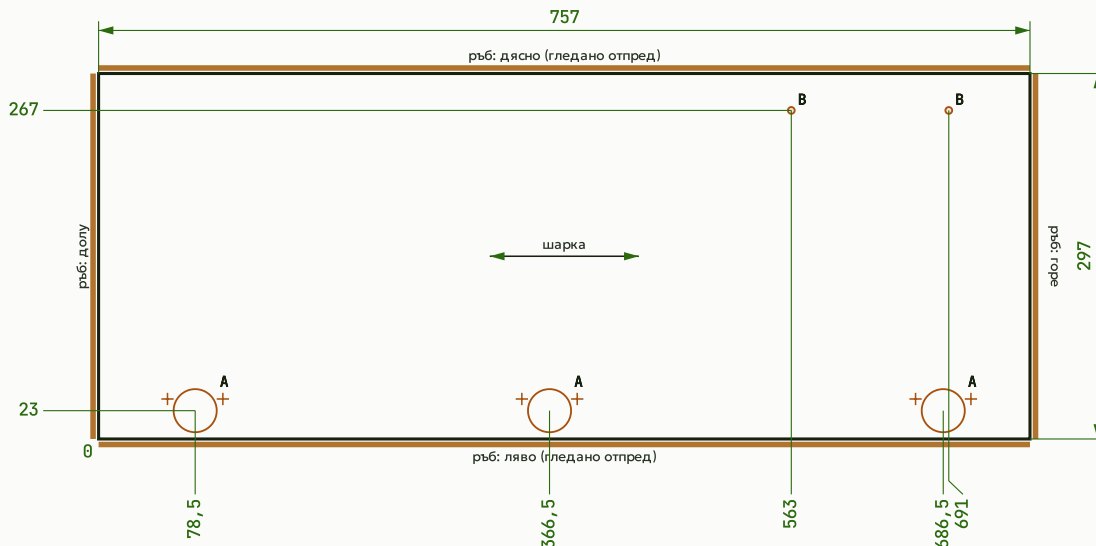

The left door of the first base unit, 757 × 297 mm: sizes, edge banding and drilling map. Drawing labels are in Bulgarian.

Чашка на панта • М 1:1

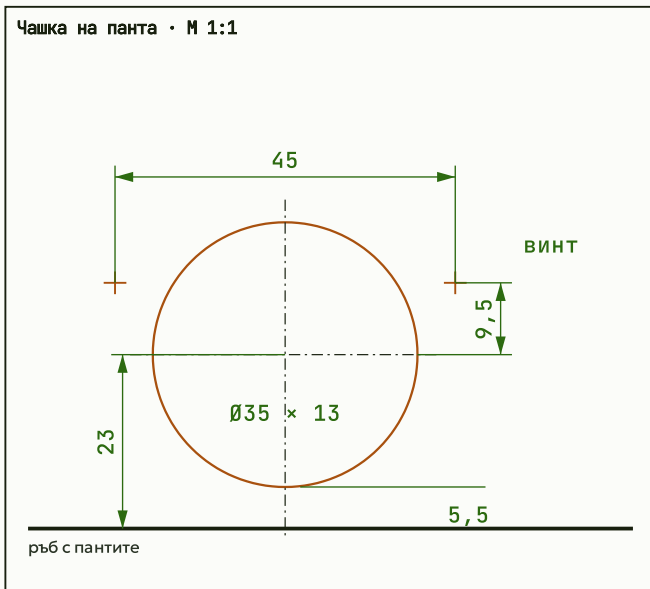

Scale 1:1: print this page at actual size and you can lay the hinge on the drawing.

- ✦ A Ø35 cup 5.5 mm from the door edge: that is what the Blum CLIP top table gives for a 16.5 mm overlay with a 0 mm plate.
- ✦ Mounting plates and shelf supports follow the 32 mm system: the first row is 37 mm from the front edge.
- ✦ Handles are drilled at the hole spacing of the chosen model, slides to the manufacturer's template.
- ✦ Horizontal holes in the edges (for confirmat screws) are in the drawing's table, separate from the G-code.
- ⚠ If a hinge, slide or hole falls outside the manufacturer's table, the program tells you what to change. Where the document says nothing, the program decides and marks the value “наш избор” (our choice).

What does the machine get?

Layered DXF and G-code for every sheet of the nesting. The cut list, hardware and drilling tables download separately.

```
%
01001 (KORPORA - SHEET 1/6)
(SPEC SHA256 4e9e6062a9eadd38 - POST iso-2.1)
(STOCK PB18 2800X2070X18 - Z0 TOP OF SHEET - XY0 LOWER LEFT)
(SIMULATE AND DRY RUN BEFORE CUTTING)
G21 G17 G90 G94 G40 G49 G80
G54
(T1 DRILL D5 - 476 HOLES)
G91 G28 Z0
G90
T1 M6
S6000 M3
G0 G43 H1 Z20.
G98 G81 X46. Y74. Z-12. R3. F2000
X46. Y106. Z-12. R3.
X46. Y138. Z-12. R3.
```

The start of the G-code for sheet 1 of 6: header, tool change and the G81 drilling cycle.

Layered DXF R12

The layer name carries the operation, tool and depth, so the CAM program maps them without guessing. The layers of the sheet at the top of this page:

CONTOUR_D10_Z-18_3 DRILL_D3_Z-10 DRILL_D5_Z-12
DRILL_D5_Z-19_5 DRILL_D7_Z-19_5 GROOVE_W4_Z-8

G-code GRBL

For GRBL machines: the program stops for a manual tool change and Z zeroing.

The whole project as ZIP

Drawings, DXF and G-code for every sheet, the tables and the project specification in one archive.

G-code ISO / Fanuc

G81 drilling cycle, G43 tool length compensation and tool changes with T... M6.

CSV tables

Cut list, hardware and every hole — semicolon-separated, they open straight in Excel and LibreOffice.

SVG drawings

An assembly drawing and a drawing of every part in A3 format, ready to print.

 The post-processors are generic, not made for a specific controller. Before the first cut, run the program in a simulation and as a dry run above the sheet, and check the zero point, tools and spindle speeds against your machine.

What can you design?


Panel furniture for the kitchen, bedroom, living room and study — from a single cabinet to a whole kitchen.

Kitchen and cabinets




Base cabinet

600 × 820
width 300–1,200 mm




Wall cabinet

600 × 720
width 300–1,200 mm



Tall cabinet


600 × 2,100
width 300–1,200 mm



Kitchen run

2,400 × 2,170
2–6 units of 400–900 mm

Bedroom

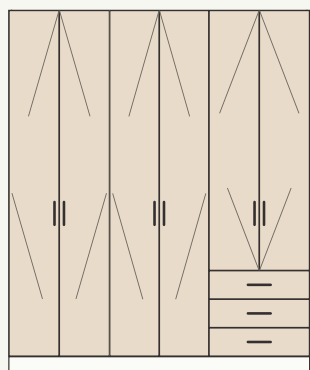

Wardrobe

2,000 × 2,400
width 800–3,000 mm




Chest of drawers

800 × 850
width 400–1,600 mm



Bedside table


450 × 550
width 350–650 mm

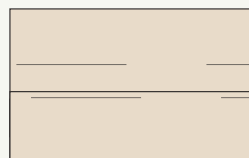

Bed

1,646 × 1,000
mattress 90–200 cm

Living room and study

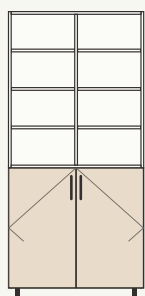


Bookcase

900 × 1,900
width 400–2,400 mm




TV unit

1,800 × 480
width 1,000–2,600 mm

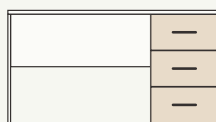

Desk

1,400 × 750
width 900–1,800 mm

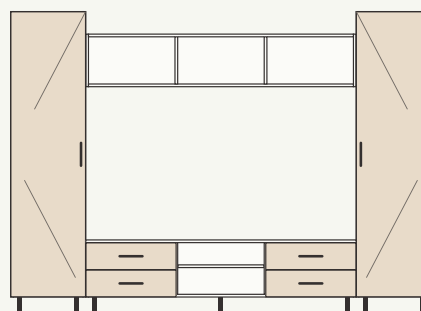

Living-room wall unit

2,800 × 2,000
width 2,200–3,600 mm

All 12 types at 1:50, with the sizes the program starts them with. Wall cabinets hang at their height above the floor.

How much does it cost?

Every account gets a 30-day trial, starting when the email is confirmed, to try our software — with all features, no card and no automatic payment.

1 month

€30

€30 per month
€25 excl. VAT

3 months

€85.50

€28.50 per month
€71.25 excl. VAT
5% off

6 months

€162

€27 per month
€135 excl. VAT
10% off

12 months

€288

€24 per month
€240 excl. VAT
20% off

Lifetime

€900

one-off, for the life of the service
€750 excl. VAT

- For consumers, prices are final and include 20% VAT. For businesses the price without VAT is also shown; VAT is charged under the rules of the buyer's country.
- Lifetime is a single payment — 2.5 times the yearly price without the 12-month discount — and is valid for as long as Korpora is offered.
- You order a plan from your account, and it is activated manually once the payment arrives.
- When the trial or a paid period ends, your projects stay available to download. New projects and changes need an active plan.
- Prices as of 9 October 2026; full terms: korpora.carbonstealth.eu/en/terms

Do I need to install anything?

No. Korpora runs in the browser — Chrome, Edge, Firefox or Safari on a computer with WebGL 2. Projects are kept on the server, not on your computer.

Which languages is the program in?

The website, account and admin pages are in Bulgarian, English and Italian. The editor, drawings and tables are in Bulgarian for now.

Where is my data kept?

On a server in the European Union. Passwords are kept only as Argon2id hashes. The team opens the contents of your projects (sizes, materials, drawings) only for support, and every download is recorded in the audit log; the project name and type are visible in the admin panel.

Try it on a real order.

30 days are enough to take one order from the sizes to the machine. If Korpora does not work for you, you pay nothing, and your projects stay available to download.

Scan the code or open korpora.carbonstealth.eu/en
Questions: info@carbonstealth.eu

