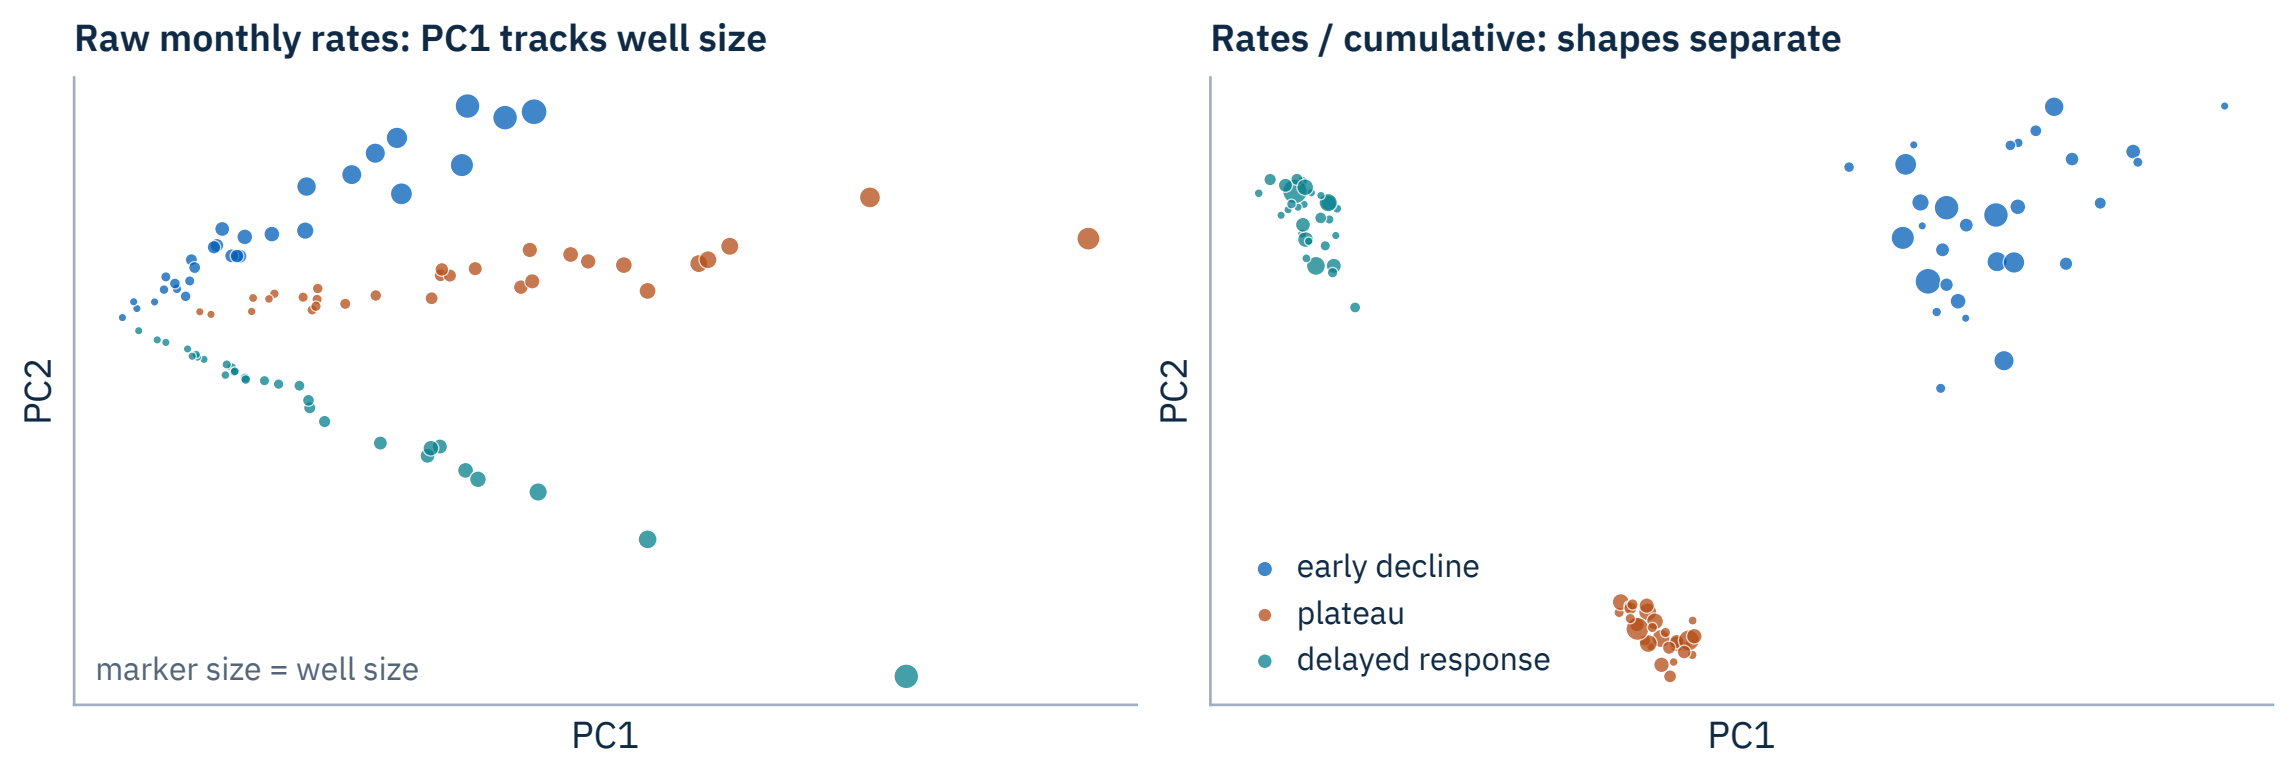
Raw monthly rates: PC1 tracks well size
PC2
PC1
marker size = well size
Rates / cumulative: shapes separate
PC2
PC1
early decline
plateau
delayed response