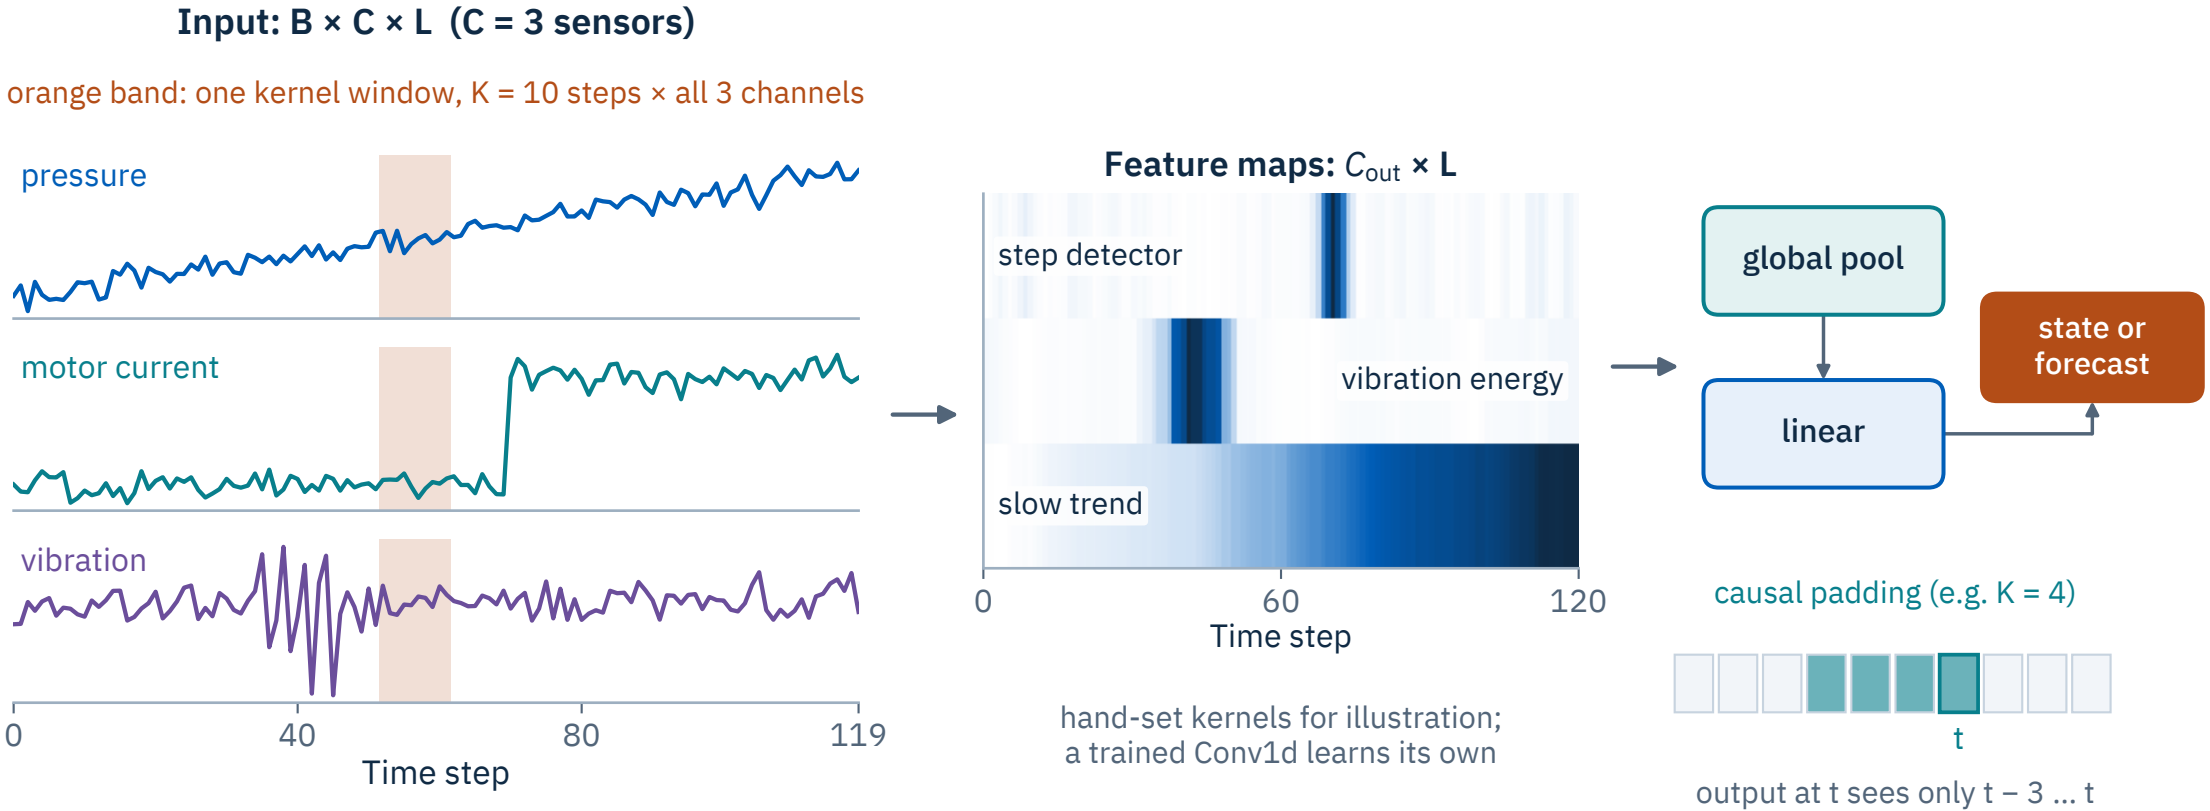
Input: B × C × L (C = 3 sensors)
orange band: one kernel window, K = 10 steps × all 3 channels
pressure
motor current
vibration
0
40
80
119
Time step
Feature maps: C_{out} × L
step detector
vibration energy
slow trend
0
60
120
Time step
hand-set kernels for illustration;
a trained Conv1d learns its own
global pool
linear
state or
forecast
causal padding (e.g. K = 4)
t
output at t sees only t − 3 … t