


Pine A64 Gaming PC - Wiring Schematic

Exported reviewer schematic matching README.md. No custom PCB; point-to-point low-voltage wiring only.

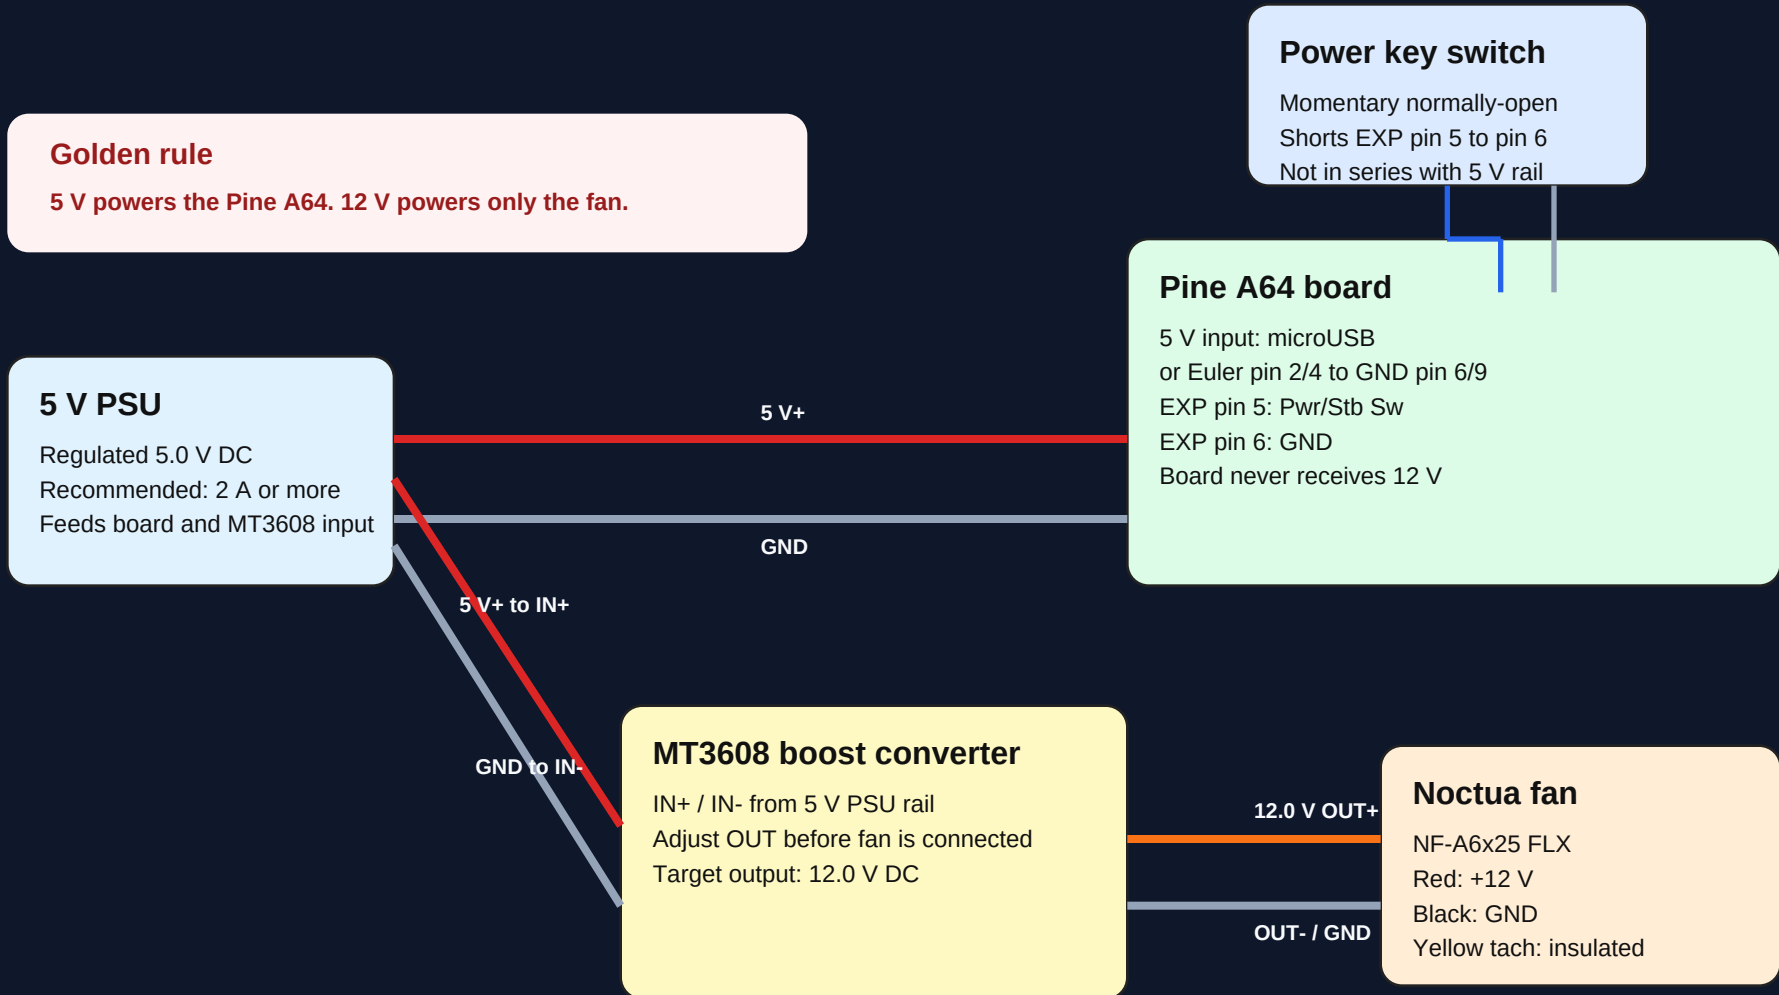

Pre-power checklist

1. Verify PSU is about 5.0 V DC.
2. Verify MT3608 input polarity before power.
3. Adjust MT3608 OUT+/OUT- to 12.0 V before connecting the fan.
4. Connect fan red to OUT+, black to OUT-, and insulate the yellow tach wire.
5. Verify the key switch only shorts EXP pin 5 to EXP pin 6 when pressed.
6. Confirm no 12 V conductor can touch any Pine A64 header or board input.