

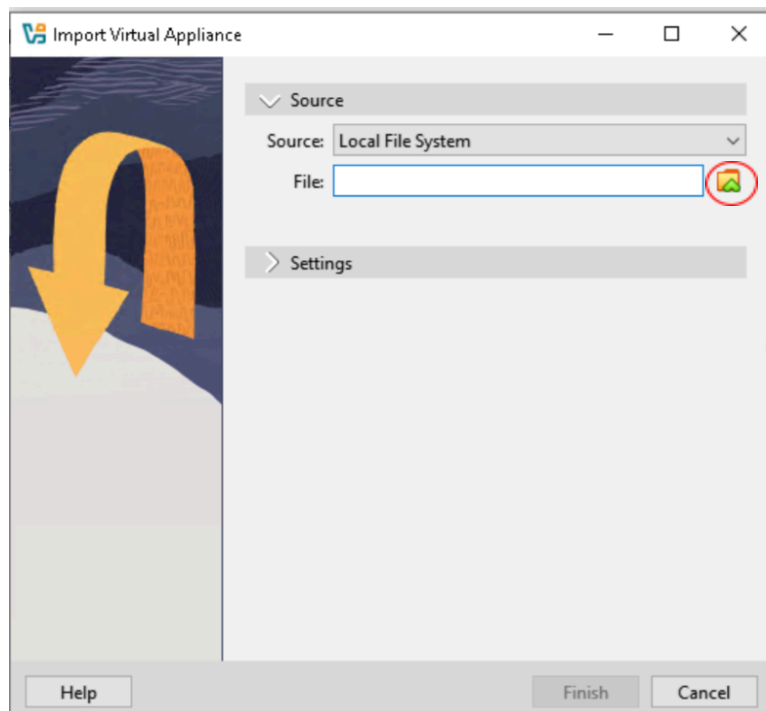
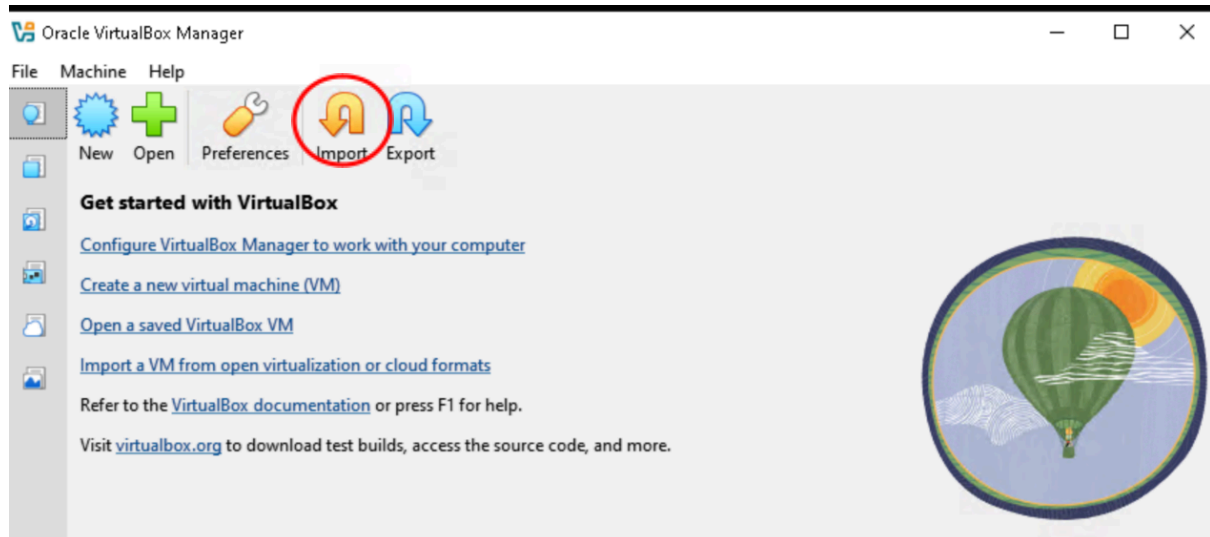



ArubaOS Virtual Appliance Installation

Requirements


- VirtualBox installed
- Network switch
- Aruba AP

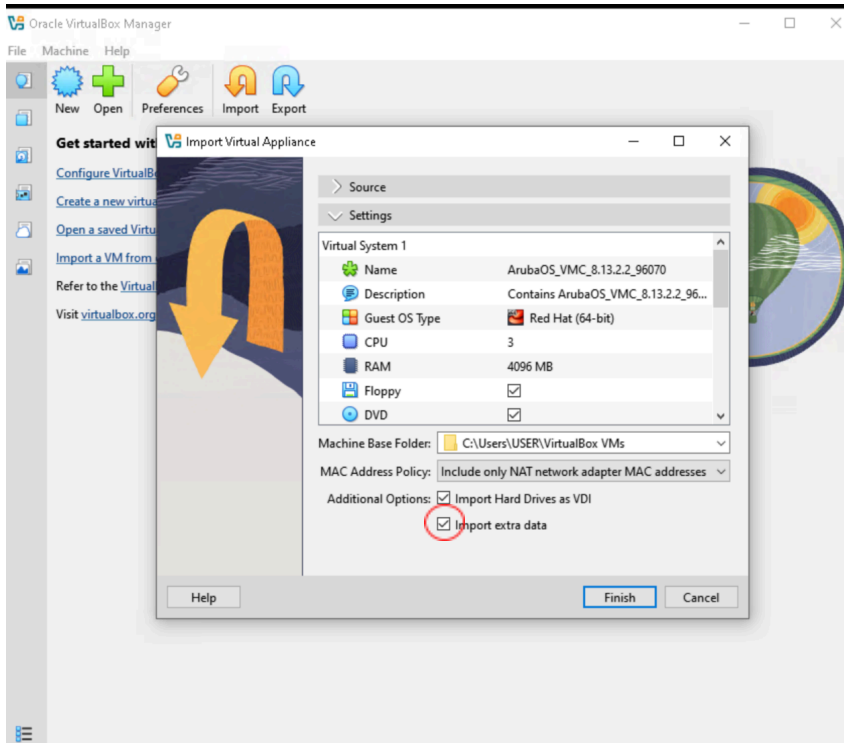

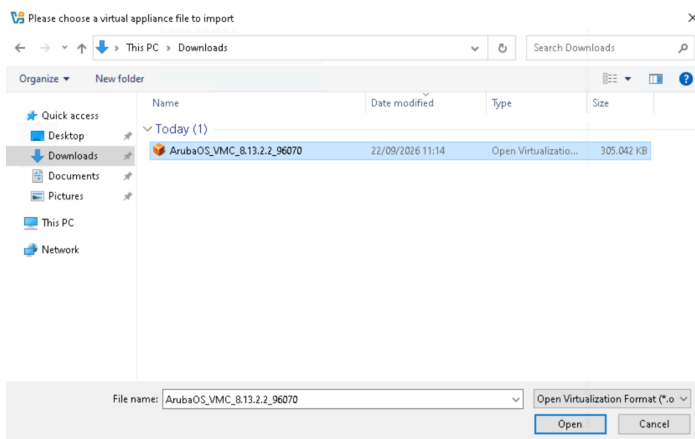


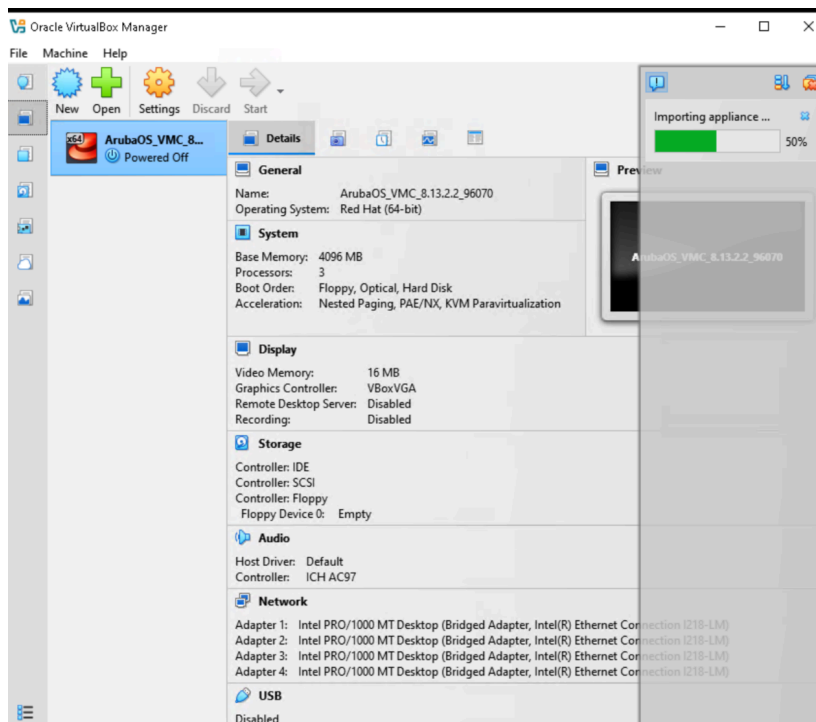


Set Virtual Cable Connected disabled for every adapter except “Adapter 2”

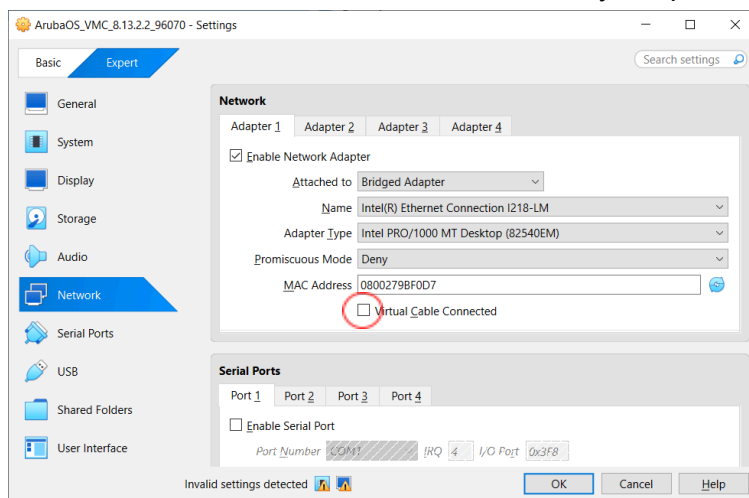

Set “Name” to the ethernet adapter of you laptop

Set “Promiscuous Mode” to Allow All

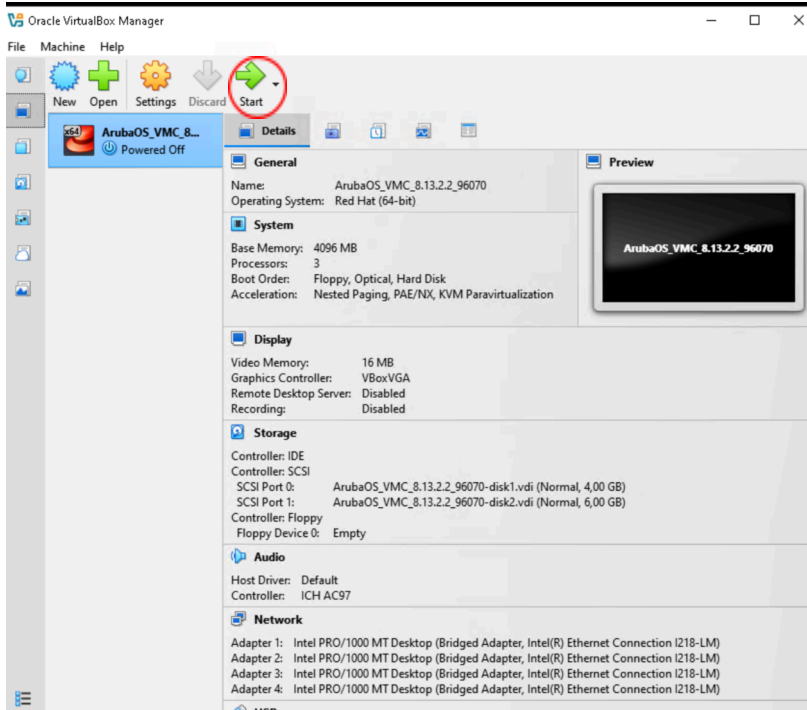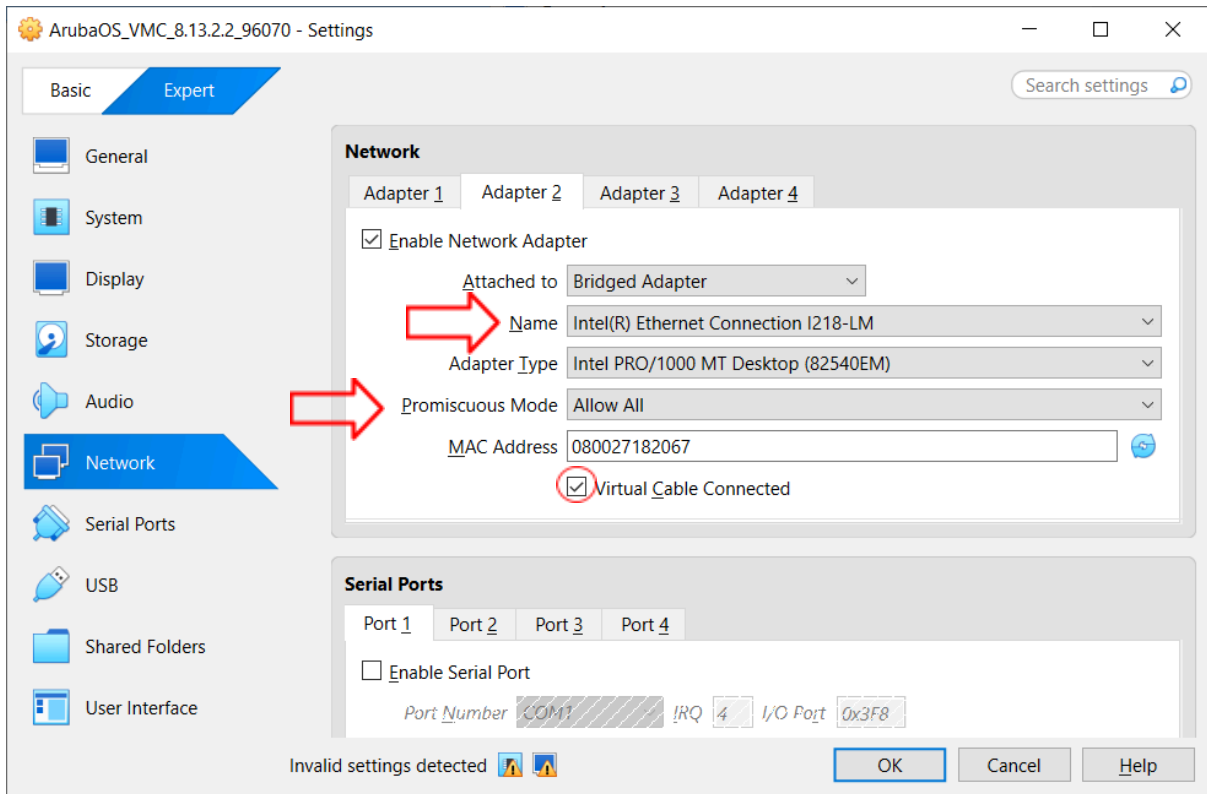

```

Sep 24 01:05:52 LOG: Enable FPAAPS debugging ...
Sep 24 01:05:52 LOG: done
Sep 24 01:05:52 LOG: done
Sep 24 01:05:52 LOG: Enable NTP debugging ...
Sep 24 01:05:52 LOG: done
Sep 24 01:05:52 LOG: Enable DNS debugging ...
Sep 24 01:05:52 LOG: done
Sep 24 01:05:52 LOG: Marking uplink interface UP...
Sep 24 01:05:52 LOG: done
Initiated DHCP, awaiting DHCP response

Auto-provisioning is in progress. It requires DHCP and Activate servers
Choose one of the following options to override or debug auto-provisioning...
  'enable-debug'      : Enable auto-provisioning debug logs
  'disable-debug'     : Disable auto-provisioning debug logs
  'mini-setup'        : Start mini setup dialog. Provides minimal customization
and requires DHCP server
  'full-setup'         : Start full setup dialog. Provides full customization
  'static-activate'   : Provides customization for static or PPPOE ip assignme
nt. Uses activate for conductor information

Enter Option (partial string is acceptable): full-setup

Are you sure that you want to stop auto-provisioning and start full setup dialog
? (yes/no): yes

```

```

***** Welcome to the ArubaMC-UA setup dialog *****
This dialog will help you to set the basic configuration for the switch.
These settings, except for the Country Code, can later be changed from the
Command Line Interface or Graphical User Interface.

```

```

Commands: <Enter> Submit input or use [default value], <ctrl-I> Help
<ctrl-B> Back, <ctrl-F> Forward, <ctrl-A> Line begin, <ctrl-E> Line end
<ctrl-D> Delete, <BackSpace> Delete back, <ctrl-K> Delete to end of line
<ctrl-L> Previous question <ctrl-X> Restart beginning <ctrl-R> Reload box

```

```

Enter System name [ArubaMC-UA_18_20_67]:
Enter Switch Role (standalone|md) [md]: standalone
Enter Controller VLAN ID [1]:
Enter Controller VLAN port [GE 0/0/0]:
Enter Controller VLAN port mode (access|trunk) [access]:
Do you wish to configure IPv4 address on vlan (yes/no) [yes]:
Enter VLAN interface IP address [172.16.0.254]: 192.168.1.10
Enter VLAN interface subnet mask [255.255.255.0]:
Enter IP Default gateway [none]: 192.168.1.1
Enter DNS IP address [none]:
Do you wish to configure IPv6 address on vlan (yes/no) [yes]: no

```

```

Option to configure VLAN interface IPv6 address: no
Country code: BE
IANA Time Zone: Europe/Brussels

```

```

If you accept the changes the switch will restart!
Type <ctrl-L> to go back and change answer for any question
Do you wish to accept the changes (yes/no) yes

```

```

INFO: Backing up existing configuration directory.

```

```

Creating configuration... Done.

```

```

System will now restart!

```

```

[10:11:27]:Starting rebootme

```


```

[10:11:27]:Shutdown processing started
ls: /flash/log/ntp*: No such file or directory
[10:11:30]:Starting database backup
[10:11:30]:Syncing data...
...

```

VM Will reboot.

Set Laptop Ethernet static IP:

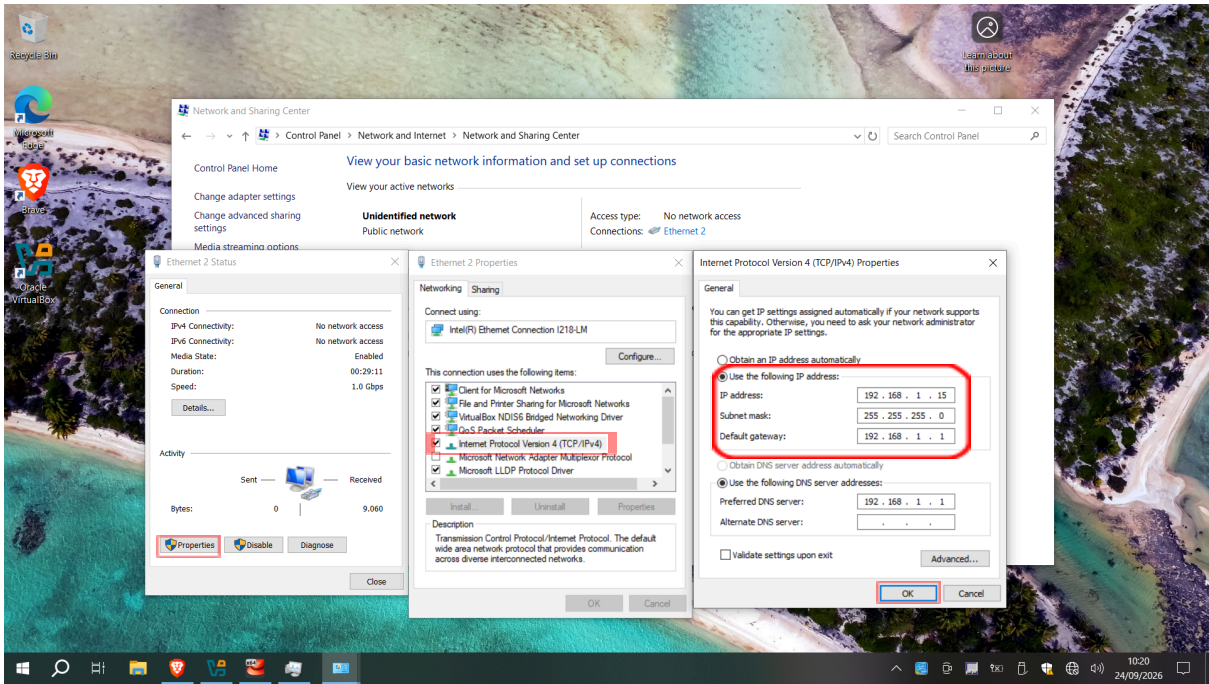

Login to WebUI



Dashboard

Configuration

WLANs

Roles & Policies

Access Points

AP Groups

Authentication

Services

Interfaces

System

Tasks

License

Redundancy

Connect to external license server: ☐

Usage

Inventory

KEY	FEATURE	COUNT	TYPE	EXPIRATION	STATUS
ub+E/4P+-OPqMW1Jo-5qNSZKsc-31OcYr09-NehTj1C-fBIqhmy-n-q9B2hhOv-pYpyAo88-j6dN9zpg-nQM POOL ALLOCATED					
/ 1					

To install new licenses you will need:

- Obtain License Keys from [HPE Aruba My Networking Portal](#)

Enter the license keys in the text box below, one key per line.

Cancel

OK

Mobility Controller
Dashboard

Configuration

- WLANs
- Roles & Policies
- Access Points
- AP Groups
- Authentication
- Services
- Interfaces
- System
- Tasks
- License**
- Redundancy

Connect to external license server: ☐

Usage

Usage Summary	Usage by This Controller	Usage by Other Controller					
	AP Access Points	PEF Policy Enforcement Firewall	RF Protect Wireless Intrusion Protection	ACR Advanced Cryptography	WebCC Web Content Classification	VIA Virtual Intranet Access	MC-VA-RW Rest of World Regulatory Domain
Feature Enabled	☒	☐	☐	☐	☐	☒	☒
Scope	Per-AP	Per-AP	Per-AP	Per-Session	Per-AP	Per-Session	Per-Device
Licenses Installed	1	0	0	0	0	0	1000
Expired Licenses	0	0	0	0	0	0	0
Active Licenses	1	0	0	0	0	0	1000
Licenses Used	0	0	0	0	0	0	0
Licenses Remaining Available	0	0	0	0	0	0	1000

> Inventory

DHCP Server Configuration

Create DHCP pool “pool-1” with “192.168.1.0/24” subnet

Dashboard
Configuration
WLANs
Roles & Policies
Access Points
AP Groups
Authentication
Services
Interfaces
System
Tasks
License

AirGroup VPN Firewall IP Mobility External Services Guest Provisioning **DHCP** WAN

DHCP Server

IPv4 DHCP server: ☒
IPv6 DHCP server: ☐

IP VERSION	NAME	DEFAULT ROUTER	NETWORK
+			

Add New Pool Configuration

IP version:
Pool name:
Default router: (Multiple Default Routers should be separated by spaces)
DNS servers: (Multiple DNS Servers should be separated by spaces)
Import from DHCP/PPPoE: ☐
Domain name:
WINS: (Multiple WINS Servers should be separated by spaces)
Import from DHCP/PPPoE: ☐
Lease days:
Lease hrs:
Lease mins:
Lease secs:
Network IP address type:
Network IP address:
Network IP mask:
Pool type:
OPTION IP/TEXT/HEX VALUE

Cancel Submit

Set excluded range to ‘192.168.1.1-192.168.1.100’ and ‘192.168.1.120-192.168.1.254’

IPv4 Excluded Address Range

IPv4 EXCLUDED ADDRESS

192.168.1.1 192.168.1.100
192.168.1.120 192.168.1.254

Add Excluded Address

IPv4 excluded range:

Apply the pending changes

admin

Pending Changes

- ☒ Pending Changes for 1 Group
- ☒ Mobility Controller

Close Discard changes Deploy changes

Add the AP to the Allowlist

- Enter MAC address
- Set AP group to "default"

Wait for the AP to appear and provision it
(Can take more than 5 minutes)

Set AP group to 'default' and press 'Submit'

Add new VLAN:

Dashboard

Configuration

- WLANs
- Roles & Policies
- Access Points
- AP Groups
- Authentication
- Services
- Interfaces**
- System

Ports **VLANs** IP Routes GRE Tunnels Pool Management OSPF Multicast

VLANs	
NAME	ID(S)
--	1

[+](#)

Set IPv4 for vlan 5

Ports **VLANs** IP Routes GRE Tunnels Pool Management OSPF Multicast

VLANs	
NAME	ID(S)
wlan-clients	5
--	1

[+](#)

VLANs > wlan-clients		VLAN IDs	Options					
ID	IPv4 ADDRESS	IPv6 ADDRESS	ENABLE NAT	PORT MEMBERS	ADMIN STATE	OPERATIONAL STATE	PD CLIENT	DHCP SETTINGS
5	--	--	--	--	--	--	Disabled	None

[+](#)

Port Members **IPv4** IPv6 More

IP Address Assignment

IP assignment: Static

IP address: 192.168.2.1

Netmask: 255.255.255.192

IP DHCP settings: None

MTU:

Suppress ARP: ☐

> IGMP

> Other Option

Cancel **Submit**

Create DHCP pool "pool-2" with "192.168.2.0/26" subnet

AirGroup VPN Firewall IP Mobility External Services Guest Provisioning **DHCP** WAN

Pool Configuration			
IP VERSION	NAME	DEFAULT ROUTER	NETWORK
IPv4	pool-1	192.168.1.1	192.168.1.0

[+](#)

Add New Pool Configuration

IP version: IPv4

Pool name: pool-2

Default routers: 192.168.2.1 (Multiple Default Routers should be separated by spaces)

DNS servers: (Multiple DNS Servers should be separated by spaces)

Import from DHCP/PPPoE: ☐

Domain name:

WINS: (Multiple WINS Servers should be separated by spaces)

Import from DHCP/PPPoE: ☐

Lease days: 1

Lease hrs:

Lease mins:

Lease secs:

Network IP address type: Static

Network IP address: 192.168.2.0

Network IP mask: 255.255.255.192

Pool type: None

Cancel **Submit**

[?](#) admin

Pending Changes

☒ Pending Changes for 1 Group

☒ [+](#) Mobility Controller

Pending Changes

Close **Discard changes** **Deploy changes**

Setup a new WLAN

Dashboard

Configuration

WLANs

Roles & Policies

Access Points

AP Groups

Authentication

Dashboard
Configuration
WLANs
Roles & Policies
Access Points
AP Groups
Authentication
Services
Interfaces
System
Tasks
License
Redundancy
Diagnostics
Maintenance

WLANs 0

NAME (SSID)



New WLAN

General VLANs Security Access

Name (SSID): TESTWLAN

Primary usage: ☒ Employee ☐ Guest

Broadcast on: Select AP Groups

Forwarding mode: Tunnel

General VLANs Security Access

VLAN: wlan-clients

Show VLAN details

Cancel Back Next

Cancel Back Next

Dashboard

Configuration

WLANs
Roles & Policies
Access Points
AP Groups
Authentication
Services
Interfaces
System
Tasks
License
Redundancy

Diagnostics
Maintenance

New WLAN

General VLANs Security Access

More Secure

Enterprise

Personal

Open

Less Secure

Key management: WPA2-Personal

☒ Use static Pre-Shared Key (PSK)

Passphrase: *****

Retype: *****

☐ Use Aruba Multi Pre-Shared Keys (MPSK)

Auth servers: +

MAC authentication: Disabled

Denylisting: ☐

Cancel Back Next

Dashboard

Configuration

WLANs
Roles & Policies
Access Points
AP Groups
Authentication
Services
Interfaces
System
Tasks
License
Redundancy

2016-08-08 10:10:10

New WLAN

General VLANs Security Access

Default role: logon

Cancel Back Finish

