Laboratory Exercise 5

Using Interrupts with Assembly Code

The purpose of this exercise is to investigate the use of interrupts for the ARM A9 processor, using assembly-language code. To do this exercise you need to be familiar with the exceptions processing mechanisms for the ARM A9 processor, and with the operation of the ARM Generic Interrupt Controller (GIC). These concepts are discussed in the tutorials *Introduction to the ARM Processor*, and *Using the ARM Generic Interrupt Controller*. You should also read the parts of the DE1-SoC Computer documentation that pertain to the use of exceptions and interrupts.

Part I

Consider the main program shown in Figure 1. The code first sets the exceptions vector table for the ARM processor using a code section called *.vectors*. Then, in the *.text* section the main program needs to set up the stack pointers (for both interrupt mode and supervisor mode), initialize the generic interrupt controller (GIC), configure the pushbutton KEYs port to generate interrupts, and finally enable interrupts in the processor. You are to fill in the code that is not shown in the figure.

The function of your program is to show the numbers 0 to 3 on the *HEX*0 to *HEX*3 displays, respectively, when a corresponding pushbutton *KEY* is pressed. Since the main program simply "idles" in an endless loop, as shown in Figure 1, you have to control the displays by using an interrupt service routine for the pushbutton KEYs port.

Perform the following:

- 1. Create a new folder to hold your Monitor Program project for this part. Create a file, such as *part1.s*, and type the assembly language code for the main program into this file.
- 2. Create any other source code files you may want, and write the code for the *CONFIG_GIC* subroutine that initializes the GIC. Set up the GIC to send interrupts to the ARM processor from the pushbutton KEYs port.
- 3. The bottom part of Figure 1 gives the code required for the interrupt handler, *SERVICE_IRQ*. You have to write the code for the *KEY_ISR* interrupt service routine. Your code should show the digit 0 on the *HEX*0 display when *KEY*₀ is pressed, and then if *KEY*₀ is pressed again the display should be "blank". You should toggle the *HEX*0 display between 0 and "blank" in this manner each time *KEY*₀ is pressed. Similarly, toggle between "blank" and 1, 2, or 3 on the *HEX*1 to *HEX*3 displays each time *KEY*₁, *KEY*₂, or *KEY*₃ is pressed, respectively.
 - Figure 2 provides code, using just simple loops, which can be used for the other ARM exception handlers.
- 4. Make a new Monitor Program project in the folder where you stored your source-code files. In the Monitor Program screen illustrated in Figure 3, make sure to choose Exceptions in the *Linker Section*

Presets drop-down menu. Compile, download, and test your program.

```
.section
                            .vectors, "ax"
                  В
                            _start
                                                   // reset vector
                  В
                                                   // undefined instruction vector
                            SERVICE_UND
                  В
                            SERVICE_SVC
                                                   // software interrupt vector
                  В
                            SERVICE_ABT_INST // aborted prefetch vector
                            SERVICE_ABT_DATA // aborted data vector
                  В
                  .word
                                                   // unused vector
                            SERVICE_IRQ
                  В
                                                   // IRQ interrupt vector
                                                   // FIQ interrupt vector
                  В
                            SERVICE_FIQ
                  .text
                  .global
                            _start
_start:
/* Set up stack pointers for IRQ and SVC processor modes */
                  · · · code not shown
                  BL
                            CONFIG_GIC
                                                   // configure the ARM generic interrupt controller
/* Configure the pushbutton KEYs port to generate interrupts
                  · · · code not shown
/* Enable IRQ interrupts in the ARM processor */
                  \cdots code not shown
IDLE:
                  В
                            IDLE
                                                   // main program simply idles
/* Define the exception service routines */
SERVICE_IRQ:
                  PUSH
                            \{R0-R7, LR\}
                                                   // GIC CPU interface base address
                  LDR
                            R4, =0xFFFEC100
                  LDR
                            R5, [R4, #0x0C]
                                                   // read the ICCIAR in the CPU interface
FPGA_IRQ1_HANDLER:
                  CMP
                            R5, #73
                                                   // check the interrupt ID
                                                   // if not recognized, stop here
UNEXPECTED: BNE
                            UNEXPECTED
                  BL
                            KEY_ISR
                                                   // write to the End of Interrupt Register (ICCEOIR)
EXIT_IRQ:
                  STR
                            R5, [R4, #0x10]
                  POP
                            {R0-R7, LR}
                            PC, LR, #4
                  SUBS
                                                   // return from exception
```

Figure 1: Main program and interrupt service routine.

```
/* Undefined instructions */
SERVICE_UND:
B SERVICE_UND

/* Software interrupts */
SERVICE_SVC:
B SERVICE_SVC

/* Aborted data reads */
SERVICE_ABT_DATA:
B SERVICE_ABT_DATA

/* Aborted instruction fetch */
SERVICE_ABT_INST:
B SERVICE_ABT_INST
```

SERVICE_FIQ:

B SERVICE_FIQ

.end

Figure 2: Exception handlers.

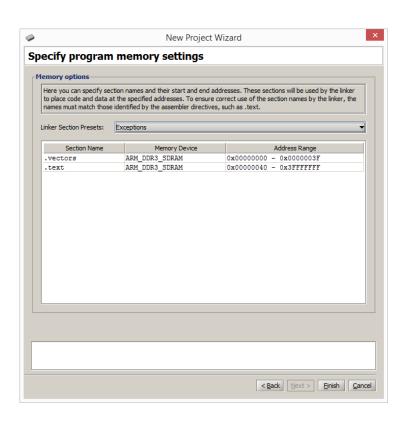


Figure 3: Selecting the Exceptions linker section.

Part II

Consider the main program shown in Figure 4. The code is required to set up the ARM A9 stack pointers for interrupt and supervisor modes, and then enable interrupts. The subroutine *CONFIG_GIC* configures the GIC to send interrupts to the ARM processor from two sources: HPS Timer 0, and the pushbutton KEYs port. The main program calls the subroutines *CONFIG_HPS_TIMER* and *CONFIG_KEYS* to set up the two ports. You are to write each of these subroutines. Set up HPS Timer 0 to generate one interrupt every 0.25 seconds.

In Figure 4 the main program executes an endless loop writing the value of the global variable COUNT to the red lights LEDR. In the interrupt service routine for HPS Timer 0 you are to increment the variable COUNT by the value of the RUN global variable, which should be either 1 or 0. You are to toggle the value of the RUN global variable in the interrupt service routine for the pushbutton KEYs, each time a KEY is pressed. When RUN = 0, the main program will display a static count on the red lights, and when RUN = 1, the count shown on the red lights will increment every 0.25 seconds.

Make a new Monitor Program project for this part, and assemble, download, and test your code.

Part III

Modify your program from Part II so that you can vary the speed at which the counter displayed on the red lights is incremented. All of your changes for this part should be made in the interrupt service routine for the pushbutton KEYs. The main program and the rest of your code should not be changed.

Implement the following behavior. When KEY_0 is pressed, the value of the RUN variable should be toggled, as in Part I. Hence, pressing KEY_0 stops/runs the incrementing of the COUNT variable. When KEY_1 is pressed, the rate at which COUNT is incremented should be doubled, and when KEY_2 is pressed the rate should be halved. You should implement this feature by stopping HPS Timer 0 within the pushbutton KEYs interrupt service routine, modifying the load value used in the timer, and then restarting the timer.

Part IV

For this part you are to add a third source of interrupts to your program, using the A9 Private Timer. Set up the timer to provide an interrupt every 1/100 of a second. Use this timer to increment a global variable called TIME. You should use the TIME variable as a real-time clock that is shown on the seven-segment displays HEX3 - 0. Use the format SS:DD, where SS are seconds and DD are hundredths of a second. You should be able to stop/run the clock by pressing pushbutton KEY_3 . When the clock reaches 59:99, it should wrap around to 00:00.

Make a new folder to hold your Monitor Program project for this part. Modify the main program from Part III to call a new subroutine, named $CONFIG_PRIV_TIMER$, which sets up the A9 Private Timer to generate the required interrupts. To show the TIME variable in the real-time clock format SS:DD, you can use the same approach that was followed for Part 4 of Lab Exercise 4. In that previous exercise you used polled I/O with the private timer, whereas now you are using interrupts. One possible way to structure your code is illustrated in Figure 5. In this version of the code, the endless loop in the main program writes the value of a variable named HEX_code to the HEX3 - 0 displays.

```
.section
                            .vectors, "ax"
                  · · · code not shown
                  .text
                  .global
                             _start
_start:
/* Set up stack pointers for IRQ and SVC processor modes */
                  · · · code not shown
                  BL
                            CONFIG_GIC
                                                   // configure the ARM generic interrupt controller
                  BL
                            CONFIG_HPS_TIMER // configure HPS Timer 0
                                                   // configure the pushbutton KEYs port
                  BL
                            CONFIG_KEYS
// Enable IRQ interrupts in the ARM processor
                  · · · code not shown
                  LDR
                            R5, =0xFF200000
                                                   // LEDR base address
LOOP:
                  LDR
                            R3, COUNT
                                                   // global variable
                  STR
                            R3, [R5]
                                                   // light up the red lights
                            LOOP
                  В
/* Configure the HPS timer to create interrupts at 0.25 second intervals */
CONFIG_HPS_TIMER:
                  · · · code not shown
                  BX
                            LR
/* Configure the pushbutton KEYS to generate interrupts */
CONFIG_KEYS:
                  · · · code not shown
                  BX
                            LR
/* Global variables */
                  .global
                            COUNT
COUNT:
                  .word
                            0x0
                                                   // used by timer
                                                   // used by pushbutton KEYs
                  .global
                            RUN
RUN:
                  .word
                                                   // initial value to increment COUNT
                            0x1
                  .end
```

Figure 4: Main program for Part II.

Using the scheme in Figure 5, the interrupt service routine for the private timer has to increment the *TIME* variable, and also update the *HEX_code* variable that is being written to the 7-segment displays by the main program.

Make a new Monitor Program project and test your program.

```
.text
                  .global
                            _start
_start:
/* Set up stack pointers for IRQ and SVC processor modes */
                  · · · code not shown
                  BL
                            CONFIG_GIC
                                                      // configure the ARM generic interrupt controller
                            CONFIG_PRIV_TIMER
                  BL
                                                      // configure the private timer
                  BL
                            CONFIG_HPS_TIMER
                                                      // configure HPS Timer 0
                                                      // configure the pushbutton KEYs port
                  BL
                            CONFIG_KEYS
/* Enable IRQ interrupts in the ARM processor */
                  · · · code not shown
                  LDR
                                                      // LEDR base address
                            R5, =0xFF200000
                                                      // HEX3-0 base address
                  LDR
                            R6, =0xFF200020
LOOP:
                  LDR
                            R4, COUNT
                                                      // global variable
                  STR
                            R4, [R5]
                                                      // light up the red lights
                  LDR
                            R4, HEX_code
                                                      // global variable
                  STR
                                                      // show the time in format SS:DD
                            R4, [R6]
                            LOOP
                  В
/* Configure the MPCore private timer to create interrupts every 1/100 seconds */
CONFIG_PRIV_TIMER:
                  \cdots code not shown
                  BX
                            LR
/* Configure the HPS timer to create interrupts at 0.25 second intervals */
CONFIG_HPS_TIMER:
                  · · · code not shown
                  BX
                            LR
/* Configure the pushbutton KEYS to generate interrupts */
CONFIG_KEYS:
                  · · · code not shown
                  BX
                            LR
/* Global variables */
                            COUNT
                  .global
COUNT:
                  .word
                            0x0
                                                      // used by timer
                  .global
                            RUN
                                                      // used by pushbutton KEYs
                                                      // initial value to increment COUNT
RUN:
                  .word
                            0x1
                            TIME
                  .global
TIME:
                                                      // used for real-time clock
                  .word
                            0x0
                            HEX_code
                  .global
HEX_code:
                  .word
                            0x0
                                                      // used for 7-segment displays
                  .end
```

Figure 5: Main program for Part IV.

Copyright ©2015 Altera Corporation.