
ABCD Parameters When Receiving End is Open Circuited

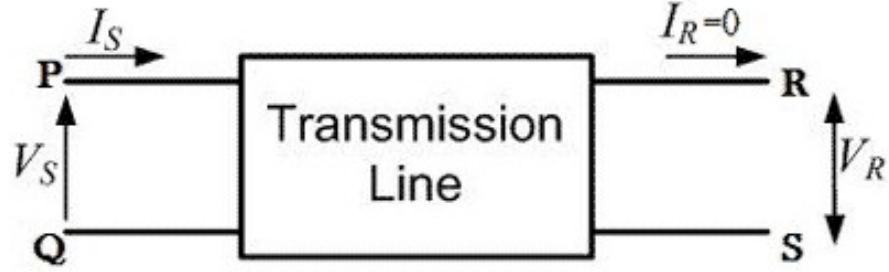

The receiving end is open-circuited, meaning the receiving end current $I_R = 0$

$$V_S = A\,V_R + B\,0 \Rightarrow V_S = A\,V_R + 0$$

$$A = \left.\frac{V_S}{V_R}\right|_{I_R = 0}$$

$$I_S = C\,V_R + D\,0 \Rightarrow I_S = C\,V_R + 0$$

$$C = \left.\frac{I_S}{V_R}\right|_{I_R = 0}$$

A is the ratio of the sending-end voltage to the open-circuit receiving-end voltage.

A is a dimensionless parameter

C is the open-circuit conductance

The unit of C is mho