
ABCD Parameters When Receiving End is Short Circuited

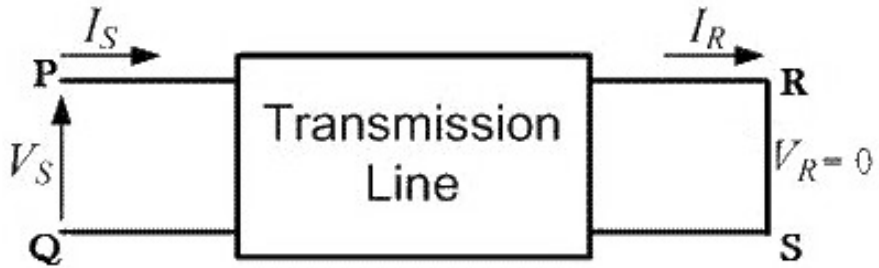

$$V_S = A\,0 + B\,I_R \Rightarrow V_S = 0 + B\,I_R$$

$$B = \left.\frac{V_S}{I_R}\right|_{V_R = 0}$$

$$I_S = C\,0 + D\,I_R \Rightarrow I_S = 0 + D\,I_R$$

$$D = \left.\frac{I_S}{I_R}\right|_{V_R = 0}$$

B is the ratio of the sending-end voltage to the short-circuit receiving-end current.

Since dimension-wise B is a ratio of voltage to current, its unit is Ω.

D is the ratio of sending-end current to the short-circuit receiving-end current.

D is a ratio of current to current; it's a dimensionless parameter