


3 -Front brake control

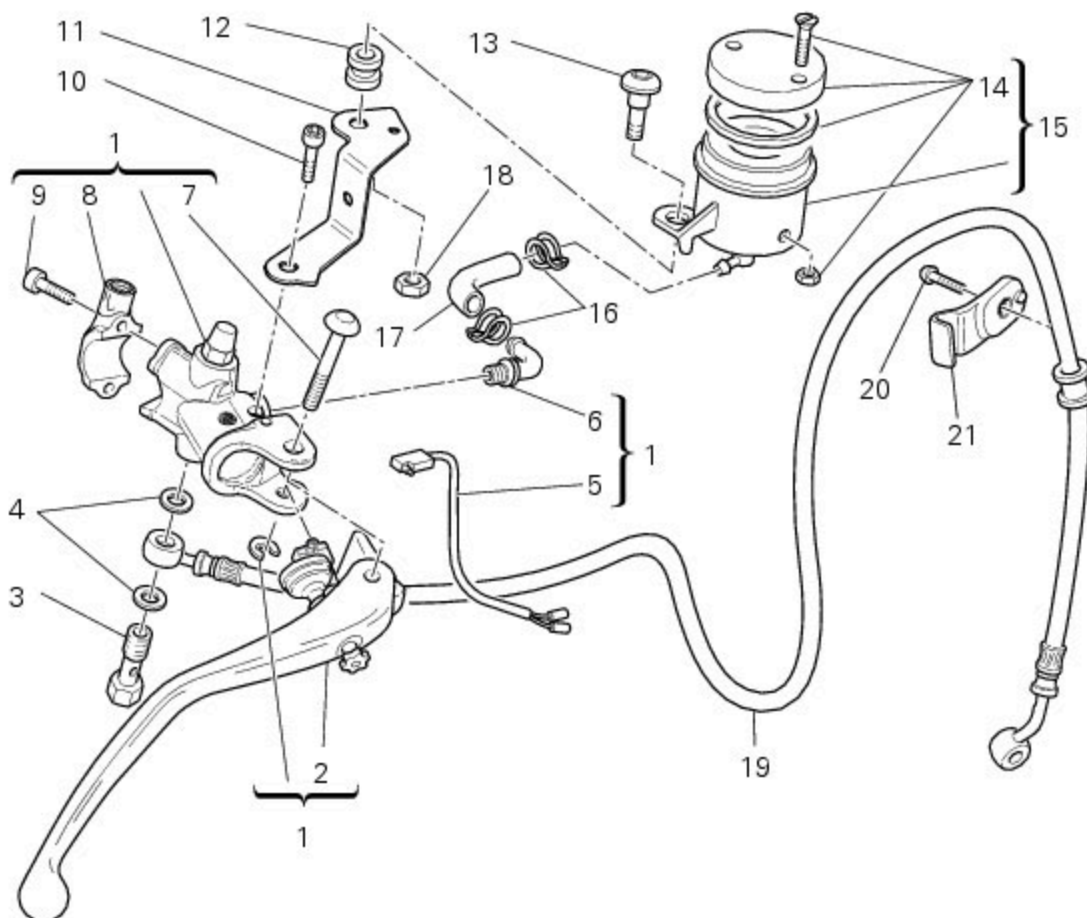

- 1 Front brake master cylinder
- 2 Brake lever
- 3 Banjo bolt
- 4 Sealing washer
- 5 Microswitch
- 6 Hose fitting
- 7 Pin
- 8 U-bolt
- 9 Screw
- 10 Screw
- 11 Reservoir bracket
- 12 Vibration damper mount
- 13 Screw
- 14 Fluid reservoir cover
- 15 Fluid reservoir assembly
- 16 Hose clip
- 17 Reservoir-master cylinder hose
- 18 Nut
- 19 Callipers-master cylinder hose
- 20 Screw
- 21 Bracket

 Spare parts catalogue

 Important

Bold reference numbers in this section identify parts not shown in the figures alongside the text, but which can be found in the exploded view diagram.

Removal of the front brake master cylinder

 Warning

The brake master cylinder manufacturer advises against servicing the brake master cylinder due to the safety critical nature of this component. Incorrect overhaul of these critical safety components can endanger rider and passenger safety.

Maintenance operations on these units are limited to replacing the following parts: control lever, reservoir unit, reservoir fasteners and master cylinder fasteners.


Operation	Section reference
Drain the braking system	D 4, Draining the brake circuit
Remove the rear-view mirrors	E 1, Removal of the rear-view mirrors
Disconnect the brake hose from the master cylinder assembly	G 3, Removal of the front brake system

 Note


For the ABS front braking system, also refer to Sect. G 9.1, [Refitting the front fork \(1100 ABS\)](#), Sect. G 9.2, [System components](#), Sect. G 9.3, [ABS components maintenance](#).

Unscrew the screws (9) securing the mounting U-bolt (8) and then remove the front brake master cylinder assembly (1) from the handlebar.

For disassembly of components of the master cylinder assembly (1), refer to the exploded view at the beginning of this chapter.

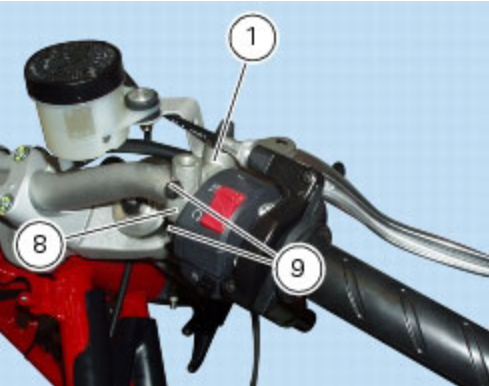


When reconnecting the hoses, install the special screw (3) with the sealing washers (4) and tighten the screw to the specified torque (Sect. C 3, [Frame torque settings](#)).

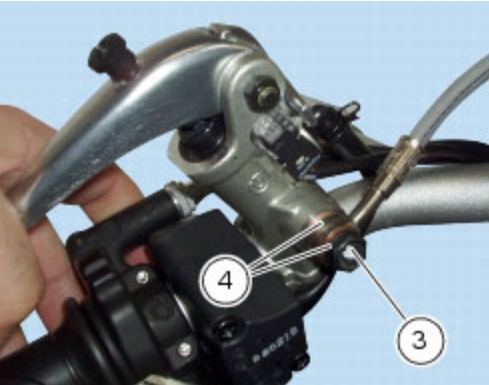

Refitting the front brake master cylinder

Insert the front brake master cylinder unit (1) on the right side of the handlebar to bring the terminal internal edge in correspondence to the bolted joints (A).
Tighten the fixing screws (9) to the specified torque (Sect. C 3, [Frame torque settings](#)) following the sequence 1-2-1 starting from the upper screw.

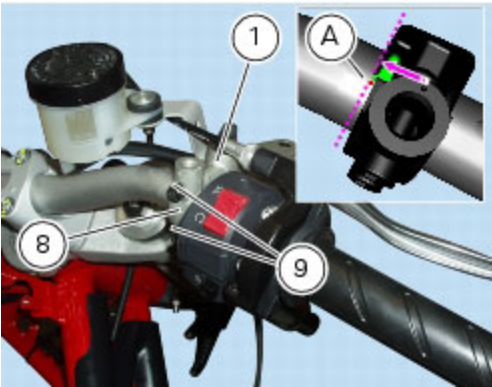

 Warning

If incorrectly positioned, the hose can affect brake operation and foul moving parts.

Operation	Section reference
Reconnect the brake hose to the master cylinder	G 3, Refitting the front brake system
Fill the brake circuit	D 4, Filling the brake system with fluid
Refit the rear-view mirrors	E 1, Refitting the rear-view mirrors