




Connectors

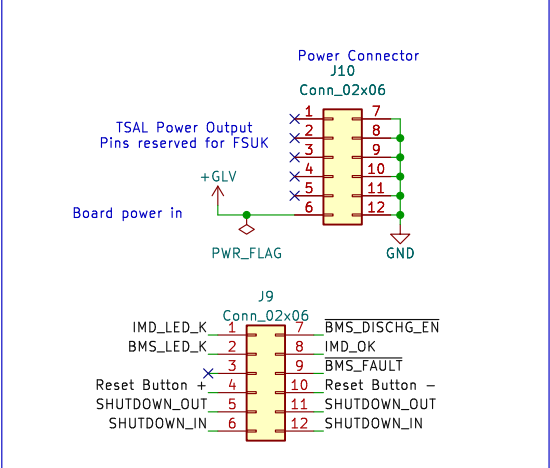


Input Filtering

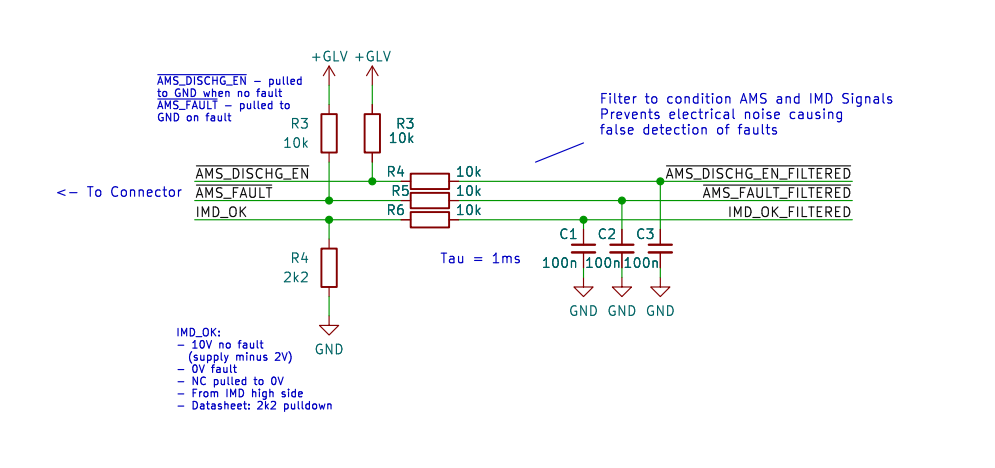


Shutdown Relays

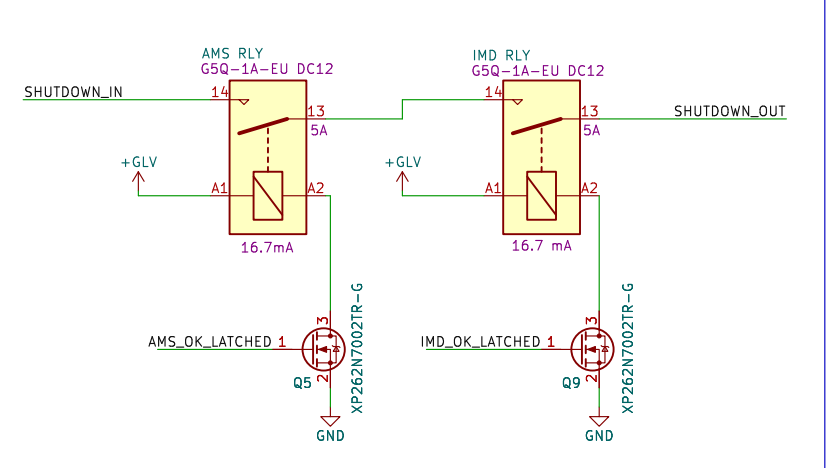


AMS Latch

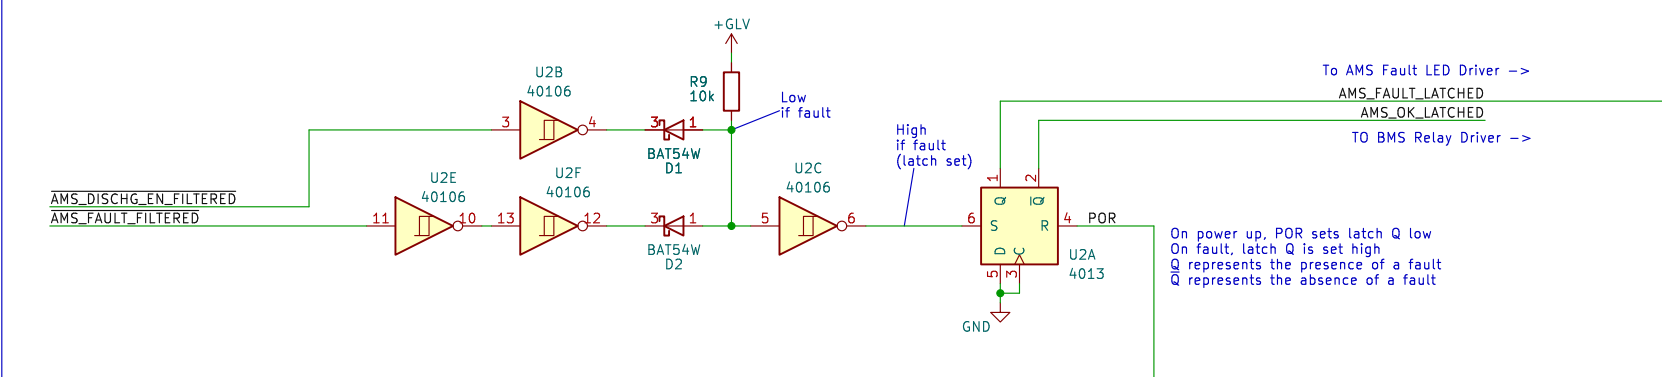


AMS LED Signal

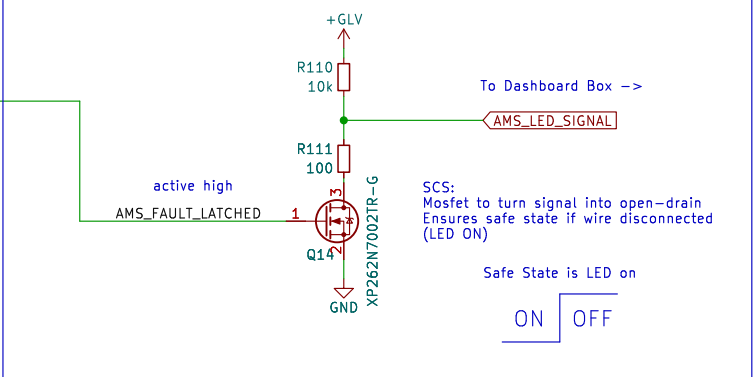


IMD Latch

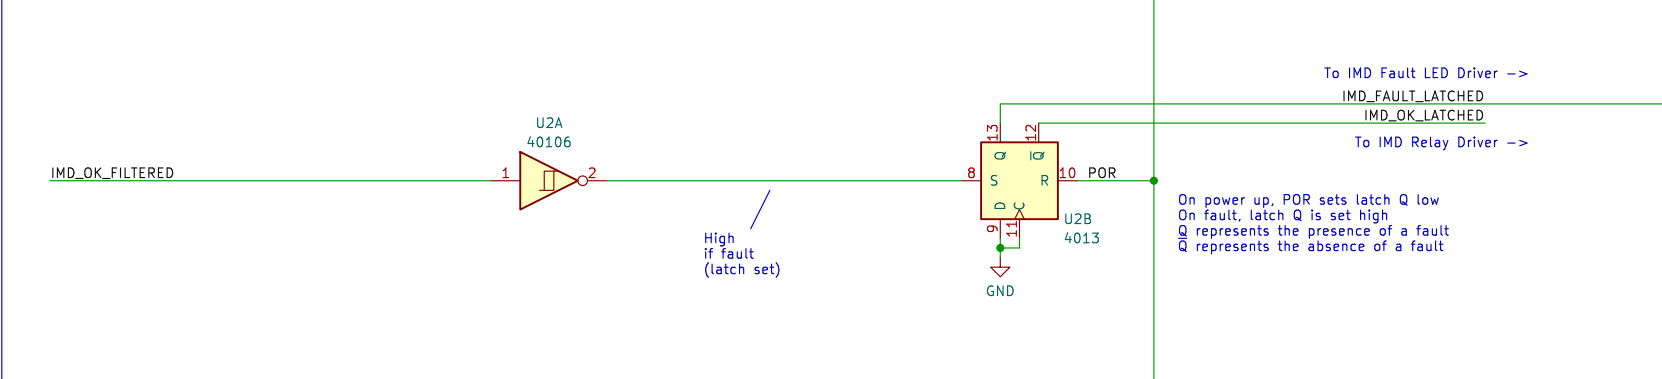


IMD LED Signal

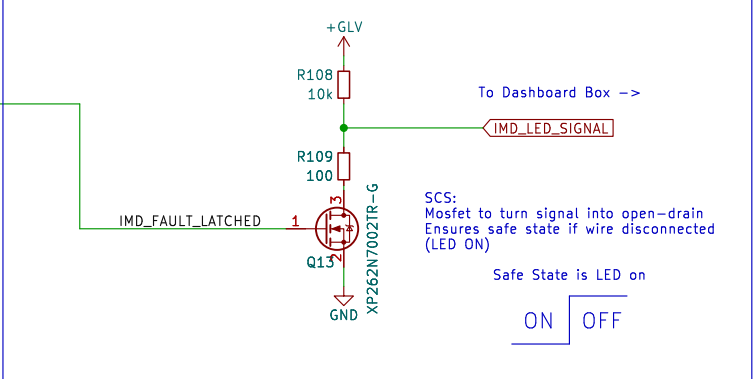

Power On Reset

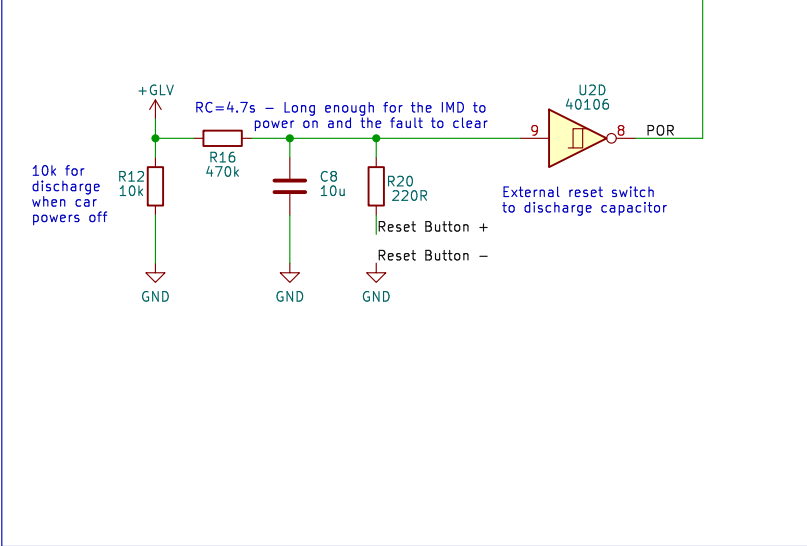

TSAL Power Switching for FSUK (No TSAL Battery connected for FSG)

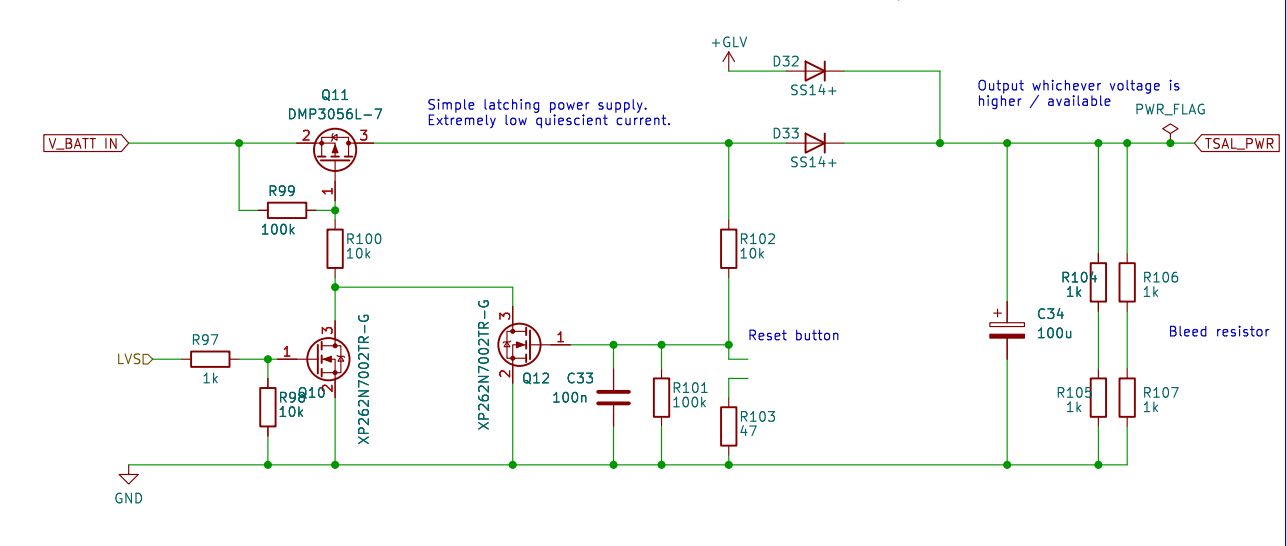

FSUK RULE

EV4.10.3 The TSAL itself must have a green light, continuously on, when the LVS is active and for at least 15 minutes after the LVS is switched off (see EV4.10.16), and ALL of the following conditions are true:

- All AIRs are opened.
- The pre-charge relay, see EV5.7.2, is opened.
- The voltage at the vehicle side of the AIRs inside the TSAC does not exceed 60VDC or 25VACRMS.

FSG Rule

EV4.10.3 The TSAL itself must have a green light, continuously on, active if and only if the LVS is active and ALL of the following conditions are true:

- All AIRs are opened.
- The pre-charge relay, see EV5.7.2, is opened.
- The voltage at the vehicle side of the AIRs inside the TSAC does not exceed 60 VDC or 50 VACRMS.

Hence, no separate TSAL battery is used for FSG, and all circuits that use TSAL power instead powered by the LVS

Vehicle: STAG 12
Drawn By: Adam Eastman
Checked By: Ray Wang, John McGarvey
CAD Part: N/A
SUFST
Sheet: Latching PCB
File: Latching_PCB.kicad_sch
Title: AMS/IMD Latching PCB (PCB integrated with TSAL Logic)
Size: A3 Date: 2026-03-25 Rev: v1.0.0
KiCad E.D.A. 9.0.4 Id: 7/14