


OptiMax-i

LET'S GROW TOGETHER


MLVL

Wire	From	Point	To	Point	Signal
1	KMM	2	NG_LDEC	R	
2	KMM	4	NG_LDEC	S	
3	KMM	6	NG_LDEC	T	
YW/GR	X1		NG_LDEC		

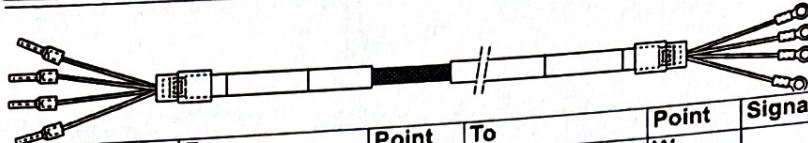


Wire	From	Point	To	Point	Signal
1	KMLVLOFF	6	MLVL	W	
2	KMLVLOFF	4	MLVL	V	
3	KMLVLOFF	2	MLVL	U	
YW/GR	X2		MLVL		

MASP

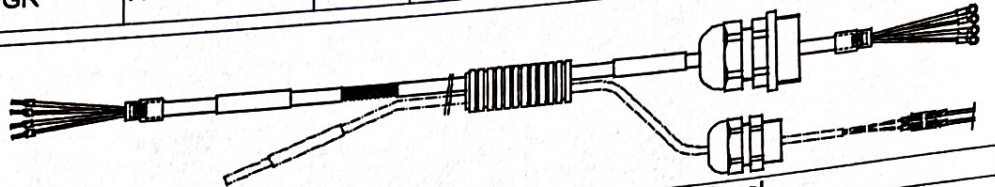

Wire	From	Point	To	Point	Signal
1	KMASP	2	MASP	U1	
2	KMASP	4	MASP	V1	
3	KMASP	6	MASP	W1	
YW/GR	X3		MASP		
207-WH	MCB08	9	MASP	1	DTTHMASP
207-BR	MCB08	8	X-C-MASP	6	+26VDCL2

MLU

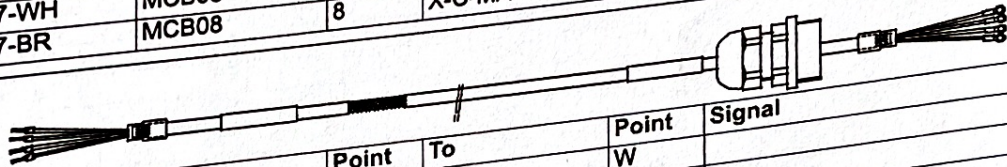

Wire	From	Point	To	Point	Signal
1	QMLU	2	MLU	W	
2	QMLU	4	MLU	V	
3	QMLU	6	MLU	U	
YW/GR	X10		MLU		

WD ACTEX

Wire	From	Point	To	Point	Signal
WH	WDRHS	4	WD		WD
BR	WDRHS	3	WD		LGD


Optical cable DDMP->NG_LDEC




Optical cable MCB->TRIAx



Optical cable MCB->T_TRIAX

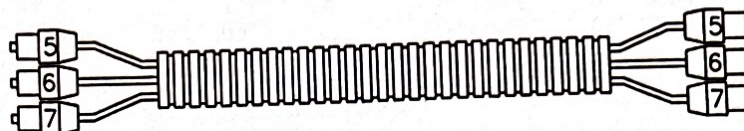


DTTHTM




Wire	From	Point	To	Point	Signal
BL	#67B	2	TM	T1	
BR	KMM	14	TM	T2	


Triax Power

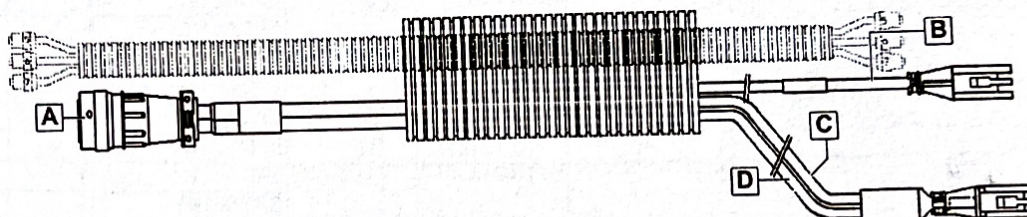

Wire	From cable	Point	To connector	Point	Signal
1	C	1	A	N	+5VDC
2	C	5	A	P	+5VDC
3	C	6	A	R	+5VDC
4	C	4	A	S	-5VDC
5	C	8	A	T	-5VDC
6	C	9	A	U	-5VDC
1	D	2	A	J	+12VDC
2	D	7	A	L	-12VDC
3	D	12	A	E	+26VDC
4	D	10	A	G	-26VDC
5	D	3	A	V	DD2
1	B	1	A	A	+290V
2	B	2	A	B	+290V
3	B	4	A	C	-290V
4	B	5	A	D	-290V
DRAINWIRE	D		A	W	Shielding
DRAINWIRE	C		A	X	Shielding
YW/GR	B		A	Y	Shielding

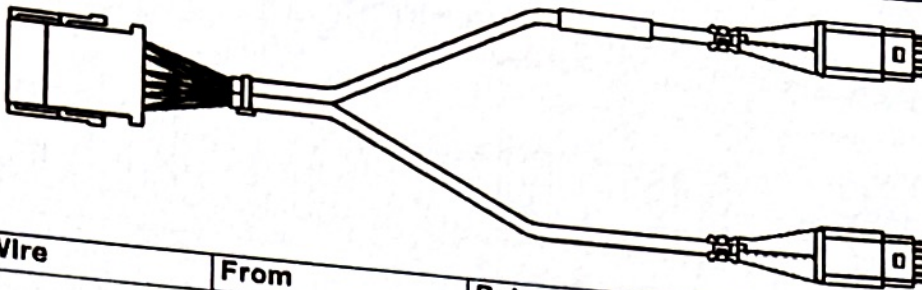

Wire	From	Point	To	Point	Signal
1	EPDAF14	1	EPDAF14	1	
2	EPDAF14	2	EPDAF14B	1	
3	EPDAF14	3	EPDAF14	2	
4	EPDAF14	4	EPDAF14B	2	
5	EPDAF14	5	EPDAF14	3	
6	EPDAF14	6	EPDAF14B	3	
7	EPDAF14	7	EPDAF14	4	
8	EPDAF14	8	EPDAF14B	4	
9	EPDAF14	9	EPDAF14	5	
10	EPDAF14	10	EPDAF14B	5	
11	EPDAF14	11	EPDAF14	6	
12	EPDAF14	12	EPDAF14B	6	
13	EPDAF14	13	EPDAF14	7	
14	EPDAF14	14	EPDAF14B	7	
15	EPDAF14	15	EPDAF14	8	
16	EPDAF14	16	EPDAF14B	8	
17	EPDAF14	17	EPDAF14	9	
18	EPDAF14	18	EPDAF14B	9	
19	EPDAF14	19	EPDAF14	10	
20	EPDAF14	20	EPDAF14B	10	
21	EPDAF14	21	EPDAF14	11	
22	EPDAF14	22	EPDAF14B	11	
23	EPDAF14	23	EPDAF14	12	
24	EPDAF14	24	EPDAF14B	12	
			EPDAF14	13	
			EPDAF14B	13	
			EPDAF14	14	
			EPDAF14B	14	
			EPDAF14	15	
			EPDAF14B	15	
			EPDAF14	16	
			EPDAF14B	16	
			EPDAF14	17	
			EPDAF14B	17	
			EPDAF14	18	
			EPDAF14B	18	
			EPDAF14	19	
			EPDAF14B	19	
			EPDAF14	20	
			EPDAF14B	20	
			EPDAF14	21	
			EPDAF14B	21	
			EPDAF14	22	
			EPDAF14B	22	
			EPDAF14	23	
			EPDAF14B	23	
			EPDAF14	24	
			EPDAF14B	24	

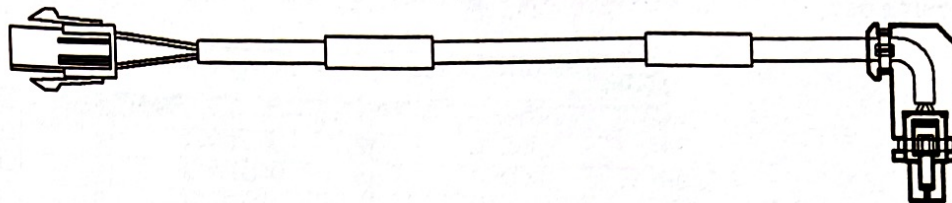


Wire	From	Point	To	Point	Signal
01	XC*	01	XC**	01	
02	XC*	02	XC**	02	
03	XC*	03	XC**	03	
04	XC*	04	XC**	04	

XC* = XC417 or XC418 or XC419

XC** = XCF1 or XCF2 or XCF3 or XCF4 or XF5 or XCF6 or XCR1 or XCR2 or XCR3 or XCR4 or XR5 or XCR6


Cables without number > Cables on the QSC back rest

DTWT 1 (TSF) QSC



Wire	From	Point	To	Point	Signal
WH	X-QSC	A	X-DTWT1	3	DT-WT-1
BR	X-QSC	D	X-DTWT1	1	LGD
GR	X-QSC	C	X-DTWT1	5	+26VDCL1
YW	X-QSC	E	X-DTWT1	2	DT-WT-CAL-1
DRAINWIRE	X-QSC	F	X-DTWT1	4	LGD

DTWT 1 (TSW) QSC

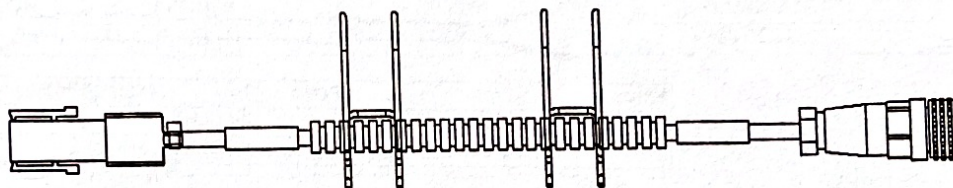


Wire	From	Point	To	Point	Signal
WH	X-QSC	C	X-DTWT1	1	+26VDCL1
BR	X-QSC	A	X-DTWT1	2	DT-WT-1
GR	X-QSC	D	X-DTWT1	3	LGD
YW	X-QSC	E	X-DTWT1	4	DT-WT-CAL-1
DRAINWIRE	X-QSC	F	X-DTWT1	5	LGD

DTWT 2 QSC




Wire	From	Point	To	Point	Signal
WH	X-QSC	Z	X-DTWT2	3	DTWT2
BR	X-QSC	a	X-DTWT2	1	LGD
GR	X-QSC	b	X-DTWT2	5	+26VDCL1
YW	X-QSC	c	X-DTWT2	2	DT-WT-CAL-2
DRAINWIRE	X-QSC	d	X-DTWT2	4	LGD

DTWTFA QSC




Wire	From	Point	To	Point	Signal
WH	X-QSC	Z	X-DTWT2	3	DTWT2
BR	X-QSC	a	X-DTWT2	1	LGD
GR	X-QSC	b	X-DTWT2	5	+26VDCL1
YW	X-QSC	c	X-DTWT2	2	DT-WT-CAL-2
DRAINWIRE	X-QSC	d	X-DTWT2	4	LGD

LDRHS QSC




Wire	From	Point	To	Point	Signal
WH	X-QSC	N	X-LDRHS	1	LDRHS
BR	X-QSC	P	X-LDRHS	2	LGD

LDLHS QSC



Wire	From	Point	To	Point	Signal
WH	X-QSC	J	X-LDLHS	1	LDLHS
BR	X-QSC	K	X-LDLHS	2	LGD


WD QSC

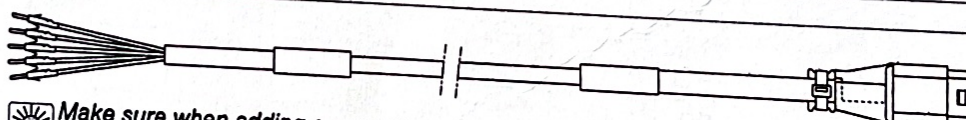

 Make sure when adding a warp stop motion or when adjusting the warp stop motion that the cables are correctly connected.

Wire	From	Point	To	Point	Signal
WH	X-QSC	J	X-WDRHS	1	PGD (POTENTIAL GROUND)
BR	X-QSC	R	X-WDRHS	2	LED1
BL	X-QSC	T	X-WDRHS	2	LED2
GR	X-QSC	S	X-WDRHS	3	GND LED
YW	X-QSC	G	X-WDRHS	4	WDRHS
GY	X-QSC	h	X-WDRHS	5	+26V DC
PK	X-QSC	V	X-WDRHS	6	WDLHS


PXFASFTY QSC



Wire	From	Point	To	Point	Signal
WH	X-QSC	e	X-PXFASFTY	1	+26VDCS
BR	X-QSC	f	X-PXFASFTY	2	PXFASFTY


Cables sorted according to number

#52: Resolver

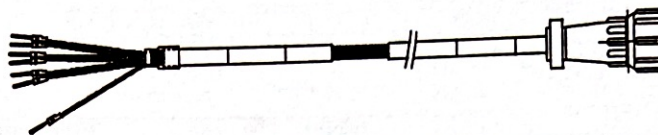


Wire	From	Point	To	Point	Signal
WH	MCB04	4	XC52	A	RSREF
BR	MCB04	3	XC52	B	RSGND
GR	MCB04	9	XC52	E	RSSINSGN
YW	MCB04	1	XC52	D	RSSGNGND
GY	MCB04	5	XC52	G	RSCOSSGN
PK	MCB04	6	XC52	H	RSSGNGND
DRAINWIRE	MCB04	7			RSGND

#55: Oil pressure detection




Wire	From	Point	To	Point	Signal
BR	MCB15	23			+26VDCL2
BL	MCB15	12			DTLUPRESS

#57A: Detection levelling outside cam motion




Wire	From	Point	To	Point	Signal
WH	MCB11	9	XC57A	1	PXLVLOFF
BR	MCB11	18	XC57A	2	LGD
GR	MCB05	4	XC57A	3	DTLUSHVL
YW	MCB11	23	XC57A	4	+26VDCL2

#60: Parallel communication

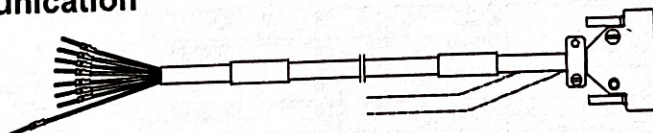


Wire	From	Point	To	Point	Signal
WH	MCB01	6	XCOMP	3	LGD
BR	MCB02	2	XCOMP	6	SELVEDGE
GR	MCB02	10	XCOMP	7	PULSE/REV
YW	MCB02	3	XCOMP	8	WARPSTOP
GY	MCB02	11	XCOMP	9	START/STOP
PK	MCB02	12	XCOMP	10	FILLINGST.
BL	MCB02	1	XCOMP	11	VCOMP
RD	MCB02	9	XCOMP	12	SPARE

#66: Signal light on the control box




Wire	From	Point	To	Point	Signal
WH	MCB09	5	XSL	1	26VDC2
BR	MCB09	13	XSL	2	SLGR
GR	MCB09	12	XSL	3	SLOR
YW	MCB09	11	XSL	4	SLRD
GY	MCB09	10	XSL	5	SLWH

#67A: High voltage in control box

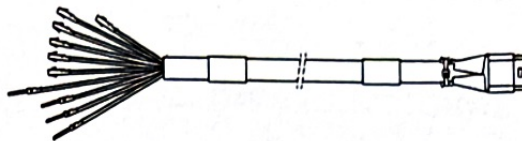


Wire	From	Point	To	Point	Signal
WH	DDMP05	5	XC67	1	KMM
BR	MCB08	14	XC67	2	DTTHTM
GR	MCB15	14	XC67	3	KSFTY
YW	MCB08	7	XC67	4	+26VDCL2
GY	MCB15	17	XC67	5	ACGND
PK	MCB15	1	XC67	6	KSTRTSTP
BL	MCB08	6	XC67	7	DTQMLU
RD	MCB15	19	XC67	8	KMLVLON
BK	MCB15	21	XC67	9	KMLVLOFF
VT	MCB15	13	XC67	10	KMASP
GY/PK	MCB08	15	XC67	11	DTQMASP
RD/BL	MCB11	6	XC67	12	BMSTA
WH/GR	MCB08	13	XC67	13	DTQMLVL
BR/GR	MCB08	12	XC67	14	DTKMM

#67B: High voltage in control box




Wire	From	Point	To	Point	Signal
1	XC67	1	KMM	A1	KMM
2	XC67	2	#DTTHTM	BL	DTTHTM
3	XC67	3	KSFTY	A1	KSFTY
4	XC67	4	XK	5	+26VDCL2
5	XC67	5	XK	4	ACGND
6	XC67	6	XK	1	KSTRTSTP
7	XC67	7	QMLU	14	DTQMLU
8	XC67	8	KMLVLON	A1	KMLVLON
9	XC67	9	KMLVLOFF	A1	KMLVLOFF
10	XC67	10	KMASP	A1	KMASP
11	XC67	11	QMASP	14	DTQMASP
12	XC67	12	XK	6	BMSTA
13	XC67	13	QMLVL	13	DTQMLVL
14	XC67	14	KMM	13	DTKMM

#101: Keyboard and display



Wire	From	Point	To	Point	Signal
WH	MCB01	21	XTERM	06	RTXHS+
BL	MCB01	20	XTERM	07	RTXHS-


#102: Keyboard and display

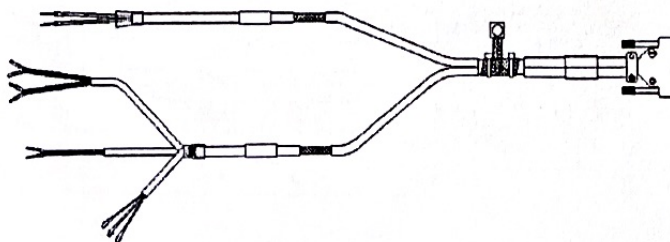

Wire	From	Point	To	Point	Signal
WH	XCOMP	5	XTERM	4	RX+


Wire	From	Point	To	Point	Signal
BR	XCOMP	4	XTERM	5	RX-
GR	XCOMP	2	XTERM	12	TX+
YW	XCOMP	1	XTERM	13	TX-
GY	MCB01	1	XTERM	1	26VDC2
PK	MCB01	3	XTERM	2	PGD (POTENTIAL GROUND)
BL	PDGN	Z	XTERM	10	DGD
RD	PDGN	T	XTERM	15	TXRS232
BK	PDGN	U	XTERM	8	RXRS232
DRAINWIRE			XTERM		PE

#105A: Signal light on the machine




Wire	From	Point	To	Point	Signal
WH	MCB09	4	XC105	1	+26VDC2
BR	MCB09	25	XC105	2	SLGR
GR	MCB09	24	XC105	3	SLOR
YW	MCB09	23	XC105	4	SLRD
GY	MCB09	22	XC105	5	SLWH

#105B: Signal light on the machine




Wire	From	Point	To	Point	Signal
WH	XC105	1	SL	SUP	+26VDC2
BR	XC105	2	SL	GR	SLGR
GR	XC105	3	SL	OR	SLOR
YW	XC105	4	SL	RD	SLRD
GY	XC105	5	SL	WH	SLWH

#108: POWER ON push buttons on the control box




Wire	From	Point	To	Point	Signal
BR	KSFTY	13	POWER ON	14	ESAC
BL	KSFTY	14	POWER ON	13	

#116: Water temperature detection




Wire	From	Point	To	Point	Signal
WH	MCB05	10	XC116	1	+26VDC2
BR	MCB05	12	XC116	2	DTTHWA

#117: Oil temperature detection



Wire	From	Point	To	Point	Signal
WH	MCB05	09	XC117	1	+26VDC2
BR	MCB05	13	XC117	2	DTTHLU

#171: RHS airtucker valves



Wire	From	Point	To	Point	Signal
WH	ATB-X01	24Z	XC171	01	ATIVIN+RHS
BR	ATB-X01	24B	XC171	02	ATIVIN-RHS
GR	ATB-X01	24D	XC171	03	ATIVHOLD+RHS


Wire	From	Point	To	Point	Signal
YW	ATB-X01	24F	XC171	04	ATIVHOLD-RHS

#172: RHS airtucker cutter




Wire	From	Point	To	Point	Signal
1	ATB-X01	06F	XC172	01	ATIMCTA+RHS
2	ATB-X01	06D	XC172	02	ATIMCTA-RHS
3	ATB-X01	06B	XC172	03	ATIMCTB+RHS
4	ATB-X01	06Z	XC172	04	ATIMCTB-RHS
SCREENING BRAID					

#174: Proximity switch in pickfinding position




Wire	From	Point	To	Point	Signal
WH	MCB11	8	XC174	1	PXPFP
BR	MCB11	19	XC174	2	LGD

#175: Proximity switch in weaving position



Wire	From	Point	To	Point	Signal
WH	MCB11	25	XC175	1	+26VDCL2
BR	MCB11	5	XC175	2	PXWP

#188 #189 #190: ELO 1 motor

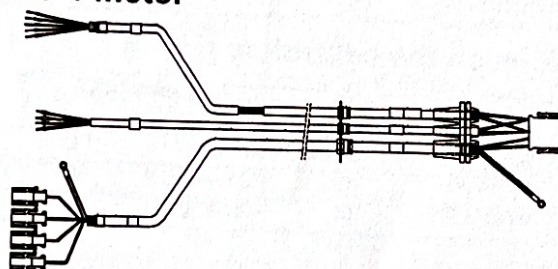

#188: Let-off motion motor 1 power (ELO 1)

Wire	From	Point	To	Point	Signal
1	TRIAX01	1	XCELO	1	LOPHA1
2	TRIAX01	2	XCELO	2	LOPHA2
3	TRIAX03	1	XCELO	7	LOPHB1
4	TRIAX03	2	XCELO	8	LOPHB2
5	TRIAX02	1	XCELO	5	LOPHC1
6	TRIAX02	2	XCELO	6	LOPHC2
7	TRIAX04	1	XCELO	3	LOPHD1
8	TRIAX04	2	XCELO	4	LOPHD2


#189: Let-off motion motor 1 power (ELO 1)

Wire	From	Point	To	Point	Signal
WH	TRIAX17	14	XCELO	15	RSREF
BR	TRIAX17	1	XCELO	16	RSGND
GR	TRIAX17	16	XCELO	19	RSSINSGN
YW	TRIAX17	3	XCELO	20	RSSGNGND
GY	TRIAX17	15	XCELO	23	RSCOSSGN
PK	TRIAX17	2	XCELO	24	RSSGNGND
DRAINWIRE	TRIAX17	4			RSGND

#190: Let-off motion 1 brake and bimetal (ELO 1)

Wire	From	Point	To	Point	Signal
1	TRIAX19	11	XCELO	9	+BIMLO
2	TRIAX19	9	XCELO	13	-BIMLO
3	TRIAX19	1	XCELO	17	BRELO+
4	TRIAX19	8	XCELO	21	BRELO-

#191 #192 #193: ETU motor

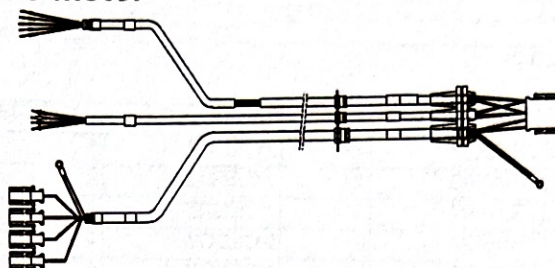

#191: Take-up motor power (ETU)

Wire	From	Point	To	Point	Signal
1	TRIAX09	1	XCETU	1	TUPHA1
2	TRIAX09	2	XCETU	2	TUPHA2
3	TRIAX11	1	XCETU	3	TUPHB1
4	TRIAX11	2	XCETU	4	TUPHB2
5	TRIAX10	1	XCETU	5	TUPHC1
6	TRIAX10	2	XCETU	6	TUPHC2
7	TRIAX12	1	XCETU	7	TUPHD1
8	TRIAX12	2	XCETU	8	TUPHD2

#192: Take-up motor resolver (ETU)

Wire	From	Point	To	Point	Signal
WH	TRIAX17	23	XCETU	15	RSREF
BR	TRIAX17	11	XCETU	16	RSGND
GR	TRIAX17	25	XCETU	20	RSSINSGN
YW	TRIAX17	13	XCETU	19	RSSGNGND
GY	TRIAX17	24	XCETU	23	RSCOSSGN
PK	TRIAX17	12	XCETU	24	RSSGNGND
DRAINWIRE	TRIAX17	10	XCETU		RSGND

#193: Take-up motor brake and bimetal (ETU)

Wire	From	Point	To	Point	Signal
1	TRIAX19	12	XCETU	9	+BIMTU
2	TRIAX19	6	XCETU	13	-BIMTU
3	TRIAX19	2	XCETU	17	BRETU+
4	TRIAX19	5	XCETU	21	BRETU-