

**J-TREK**



**USER GUIDE**  
-----  
**JX09/JX09PRO**

 Bluetooth 5.4

 HiFi Stereo

 Group Intercom



Thank you very much for purchasing the J-TREK Motorcycle Intercom. To ensure safe and proper use, please be sure to read this instruction manual before use. The illustrations and content of this manual may differ partially from the actual product due to specification changes, etc. This instruction manual also serves as the warranty certificate, so please keep it in a safe place.

## Contents



<b>Safety Precautions</b>	01
<b>Parts Names</b>	02
<b>Operation Summary Table</b>	03
<b>Included Items List</b>	04
<b>Charging the Unit</b>	05
<b>Installation Method</b>	06~09
• Clip Mounting	06
• Adhesive Mounting	06
• Unit Installation	07
• Unit Removal	07
• Speaker and Microphone Installation	08~09
<b>Power ON/OFF</b>	10
<b>Pairing</b>	10~18
• Pairing with Smartphone	10~11
• Pairing with Intercom	12~14
• Switch the Intercom Indicator Color	14
• Pairing with Other Brand Intercom	15
• Examples of Pairing with Other Brand Intercom	16~18
<b>Music Sharing Function</b>	19~20
<b>Listening to FM Radio</b>	21
<b>Troubleshooting Guide</b>	22~23
<b>Product Specifications</b>	24
<b>Warranty Period and Contact Information</b>	25

# Safety Precautions

## ⚠ Warning

!	<b>Do not place the device in environments with excessive dust, high humidity, or high temperatures.</b>
!	<b>Do not disassemble or modify this product.</b>
!	<b>Do not drop or strike this product.</b>
!	<b>Do not wipe this product with corrosive liquids.</b>
!	<b>Note that the communication range is affected by the surrounding environment.</b>
!	<b>To prevent electromagnetic interference or compatibility issues, turn off the power or stop using this product in locations marked with signs such as "Intercom Prohibited".</b>
!	<b>Do not use this product near medical devices, etc.</b>
!	<b>For safe driving, check and comply with the laws and regulations regarding intercom use in your area. When using this product while touring, adjust the volume to an appropriate level and pay full attention to driving and road conditions.</b>

## Parts Names

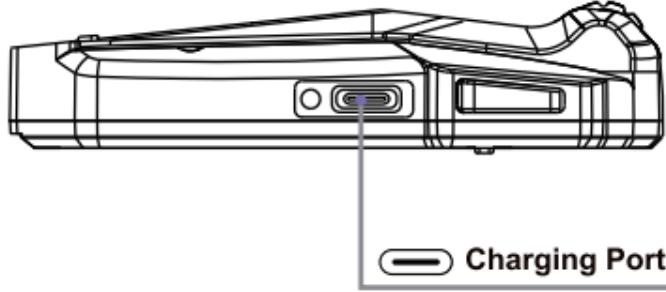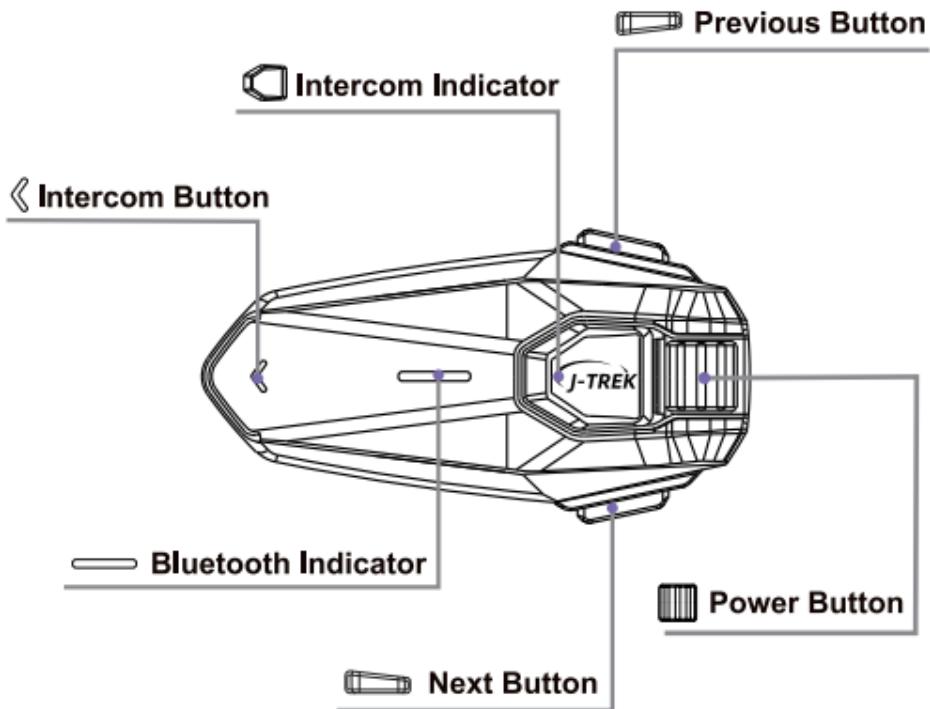


# Operation Summary Table

Function	Button(s)	Operation
Power ON/OFF	Power Button	Press and hold for 3 sec
Check Battery Level	Previous & Intercom Button	Press both for once
Smartphone Pairing	Previous & Next Button	Press and hold both for 3 sec
Answer/End Call	Power Button	Press once
Reject Call	Next Button	Press twice
Adjust Call Volume	Power Button	Right/left scroll
Smartphone Voice Assistant	Intercom Button	Press twice
Auto Answer ON/OFF	Intercom & Previous & Next Button	Press and hold all for 5 sec
Music Play/Pause	Power Button	Press once
Previous Track	Previous Button	Press once
Next Track	Next Button	Press once
FM Radio ON/OFF	Intercom & Power Button	Press and hold both for 2 sec
Previous FM Station	Previous Button	Press once
Next FM Station	Next Button	Press once
Change Intercom Indicator Color	Intercom & Next Button	Press once
Change Language	Intercom & Power & Next Button	Press and hold all for 5 sec
Reset	Power & Previous Button	Press and hold both for 3 sec

## Included Items List

The following are the contents of the product package. Please first check that all items are present before use. If any parts are missing, please contact the retailer where you purchased the product.

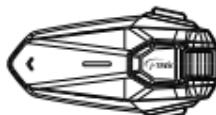

Main Unit ×1




Microphone for Jet Helmet ×1



Microphone for Full Face Helmet ×1



Magnetic Base ×1

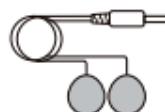

Speaker ×1



Adhesive Tape for Speaker Mounting ×2




Adhesive Tape for Jet Helmet Microphone Mounting ×1



Adhesive Tape for Full Face Microphone Mounting ×1




Charging USB Type-C Cable ×1

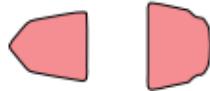

Mount Adhesive Tape [Red] ×1



Mount Adhesive Tape [White] ×1

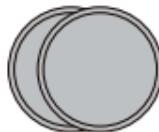

Speaker Position Adjustment Pad ×2



User Guide ×1



Quick Start Guide ×1




Mount Clip ×1

# Charging the Unit

## ◆How to Charge

Charging Method: Connect the included USB Type-C cable and a commercially available USB power adapter to the unit to charge.

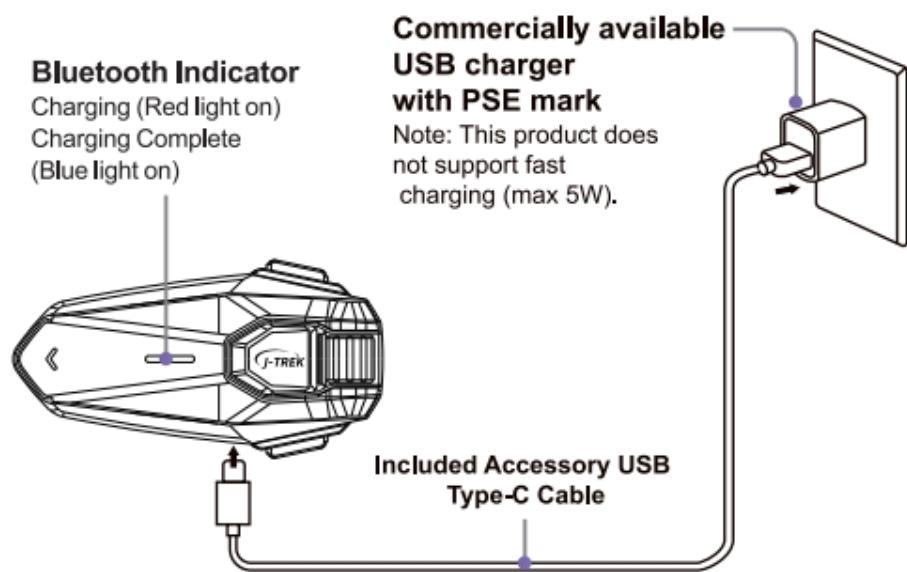


### ⚠ Caution

	Before first use, be sure to charge the product.
	To ensure the best charging effect, please use the included USB Type-C cable as much as possible.
	After charging is complete, unplug the charger and avoid leaving it in a charged state for extended periods.
	When charging, ensure the charging environment is dry, well-ventilated, and away from humid or high-temperature environments.
	When charging, keep the unit away from flammable materials such as paper, cloth, alcohol, etc., to prevent fire.


# Installation Method

## ◆ Mount Clip Installation

1. Attach the adhesive tape (white) to the magnetic base.
2. Insert the clip into the slot on the edge of the magnetic base.
3. Open the clip of the base and fix it to the edge of the helmet.
4. Using a hard, thin tool, press the recess on the back of the clip and push the clip downward to remove it.

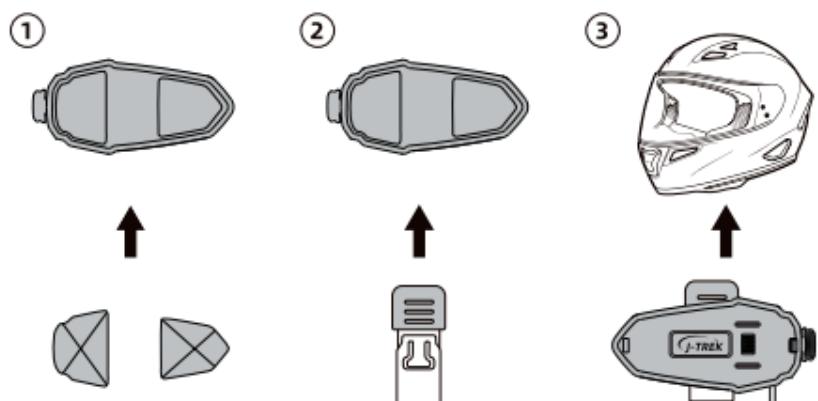


**Caution:** The mount is relatively rigid, so be careful when opening or attaching it to avoid damage.

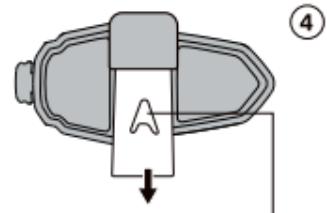

Recess on back of clip


## ◆ Adhesive-type Mount Installation

1. Select a suitable position on the helmet, wipe this area, and ensure the surface is clean and suitable for adhesion.
2. Attach the adhesive tape (red) to the magnetic base.
3. Press the magnetic base onto the helmet and hold it to secure it.

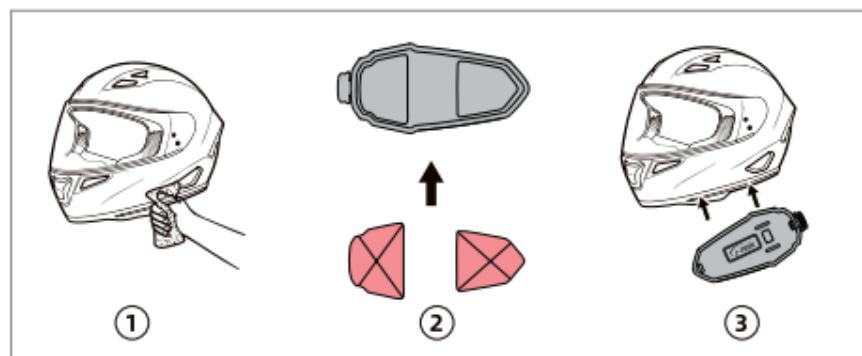


## ◆ Unit Installation

1. The JX09/JX09PRO features a magnetic design. Simply bring the unit close to the magnetic base for instant attachment.
2. Plug the speaker and microphone into the cable on the magnetic base.
3. After completing these steps, ensure the unit is securely fastened.

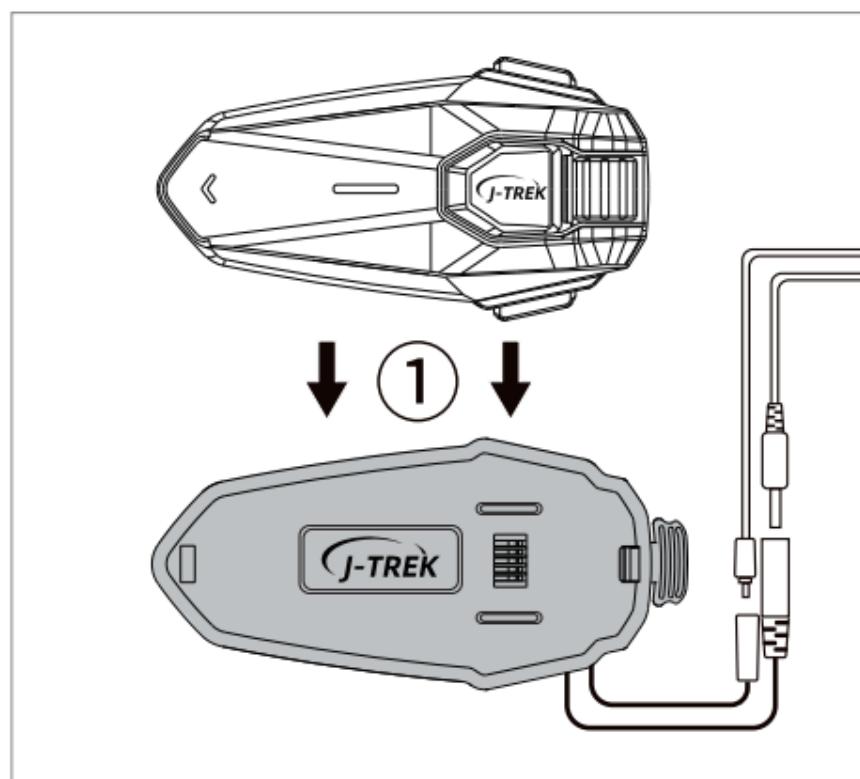

## ◆ Unit Removal


Pull the lock tab at the end of the magnetic base outward to remove the main unit.

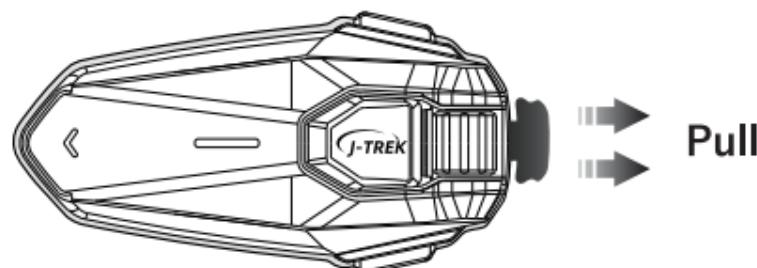

## ◆Speaker and Microphone Installation

### -Speaker Installation


1. First, remove the helmet liner.
2. Route the cable through the back or top of the liner into the helmet shell. Adjust the cable length and position to prevent the cable from coming loose during use.
3. Using the included adhesive mounting tape, attach the speakers near the ears on both sides of the helmet. Ensure the mounting position does not affect wearing comfort and safety.
4. Reattach the helmet liner to the helmet, ensuring the liner fits snugly against the helmet shell.

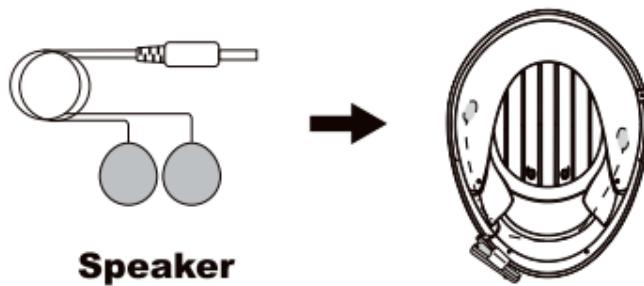


## •Microphone Installation

For clearer voice transmission, mount the microphone near the mouth.

• **Microphone for Jet Helmet:** When attaching to the helmet, adhere it so the side with the triangular mark faces the direction of the mouth.

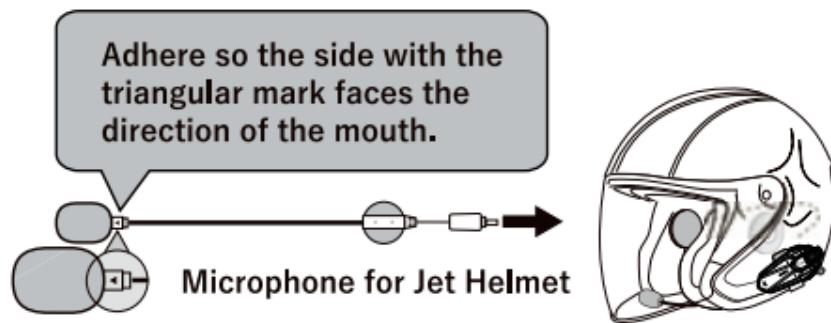


**Microphone for Full Face Helmet:** Attach inside the helmet. Route the microphone cable inside the helmet.

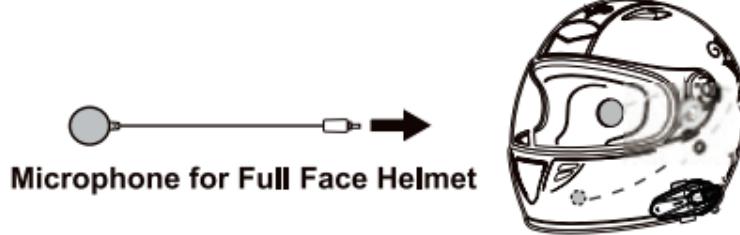


## ◆ Power ON/OFF

Press and hold the [Power Button] for 3s to turn the power ON or OFF.

**ON: Blue light on**

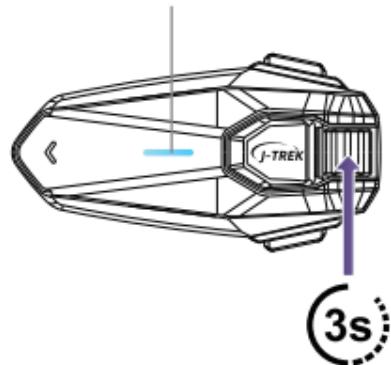

**OFF: Red light on**

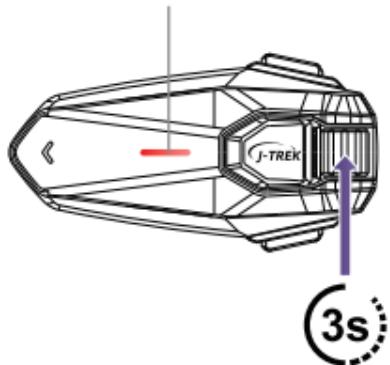


## Pairing


### ◆ Pairing with Smartphone

1. Press and hold the [Power Button] for 3s to turn power ON. Then press and hold the [Previous Button] & [Next Button] simultaneously for 3s.

**Blue light on**

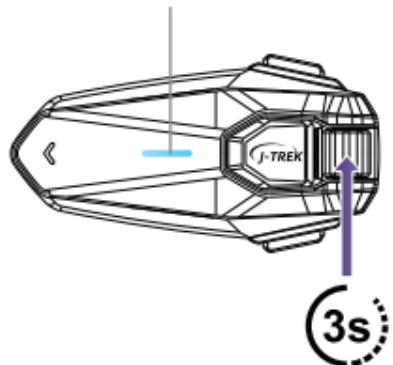

**Blue/Red flashing**

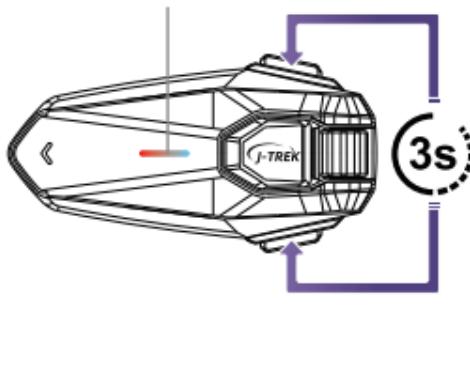


2. Turn on your smartphone's Bluetooth and select "J-TREK JX09" or "J-TREK JX09PRO" from the list of devices.
3. Once pairing is complete, the speaker will announce "Device connected successfully" and the Bluetooth indicator will flash blue.

## Making/Answering Calls


### Answer Call:

Press [Power Button] for once

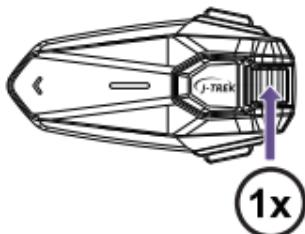


### End Call:

Press [Power Button] for once

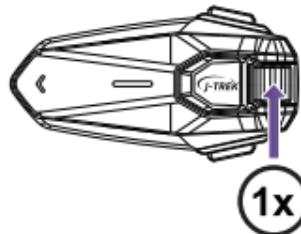


### Reject Call:

Press [Next Button] for twice

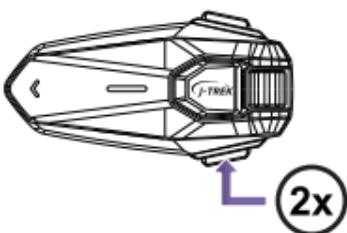

### Auto Answer ON/OFF:

Press and hold [Intercom]& [Previous]&[Next] Button for 5s

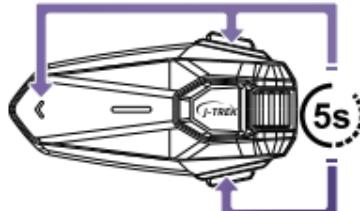


## Playing Smartphone Music

Prerequisite: Pairing with smartphone completed

### Listening to Music


#### Music Play/Pause:

Press [Power Button] for once

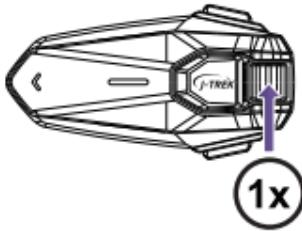


#### Adjust Music Volume:

Scroll [Power Button] to left/right

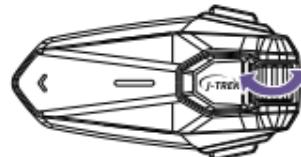


#### Previous Track:

Press [Previous Button] for once

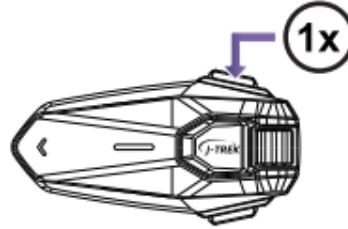

#### Next Track:


Press [Next Button] for once

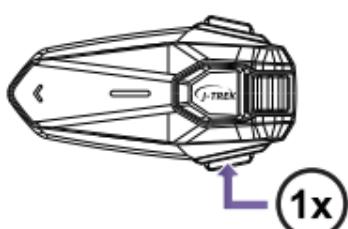

## Voice Assistant

After pairing with smartphone,  
press [Intercom Button] for twice.

(Activates Siri / Google Assistant)

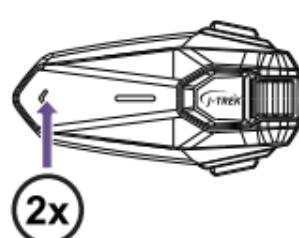


## ◆ Pairing with Intercom

Pair JX09/JX09PRO units that have no prior pairing record


### Pairing Two JX09/JX09PRO Units

1. Press and hold [Power Button] on both devices for 3s to turn the power ON.
2. Press and hold [Intercom Button] on both devices for 3s. The Bluetooth indicator will flash blue/red rapidly, and the speaker will announce "Pairing".
3. Press [Intercom Button] on either device once. Its Bluetooth indicator will flash blue/red slowly, and the speaker will announce "Searching." Wait for the two JX09/JX09PRO units to pair automatically.
4. Once pairing is complete, the speaker will announce "Intercom connected" and the indicator will light blue. It enters Intercom call mode.
5. During an intercom call, press the [Intercom Button] once to end the intercom call.
6. Press the [Intercom Button] once again to resume the intercom call.

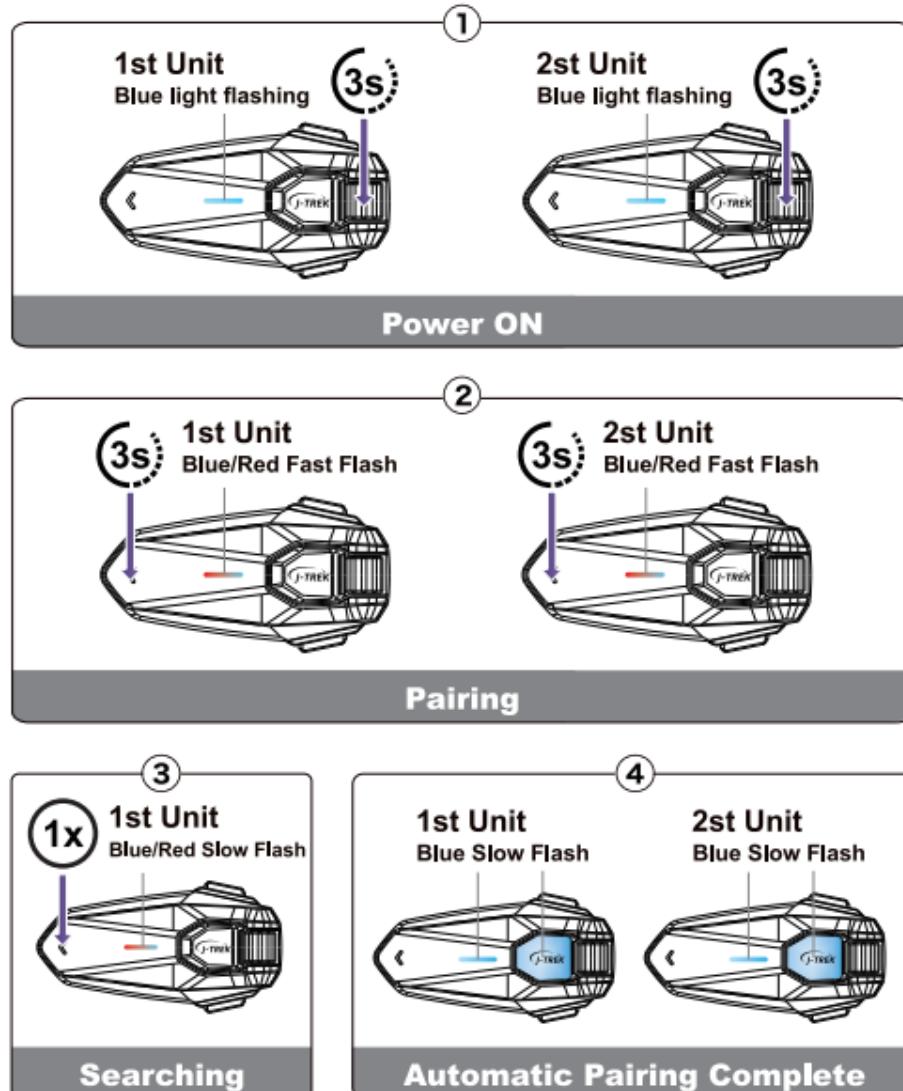


## Pairing Four JX09/JX09PRO Units

Blue Light Flashing

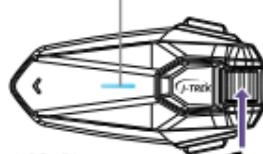


1st Unit  
Power ON

Blue Light Flashing

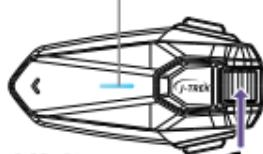


2nd Unit  
Power ON

Blue Light Flashing

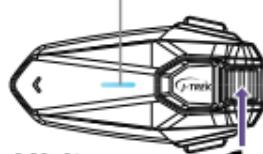


3rd Unit  
Power ON

Blue Light Flashing

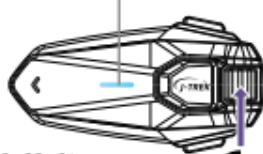


4th Unit  
Power ON

Blue/Red Fast Flash

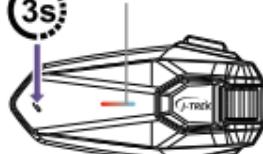


1st Unit

Blue/Red Fast Flash

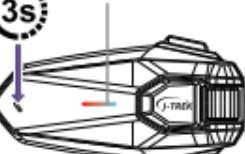


2nd Unit

Blue/Red Fast Flash

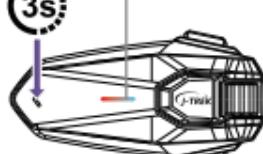


3rd Unit

Blue/Red Fast Flash

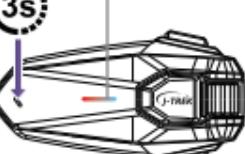


4th Unit

Blue/Red Slow Flash

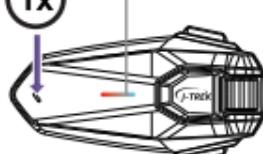


Press [Intercom Button]  
on either device once.  
Wait for the all units to  
pair automatically.


1st Unit  
Blue Slow Flash

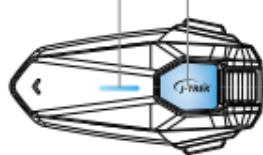


2nd Unit  
Blue Slow Flash

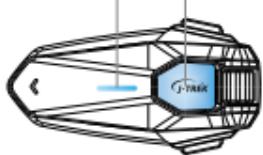

3rd Unit  
Blue Slow Flash

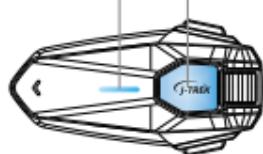


4th Unit  
Blue Slow Flash

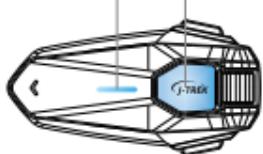

## ◆ Pair JX09/JX09PRO units that already have a pairing record


1. Press and hold the [Power Button] on all devices for 3 seconds to turn them on.

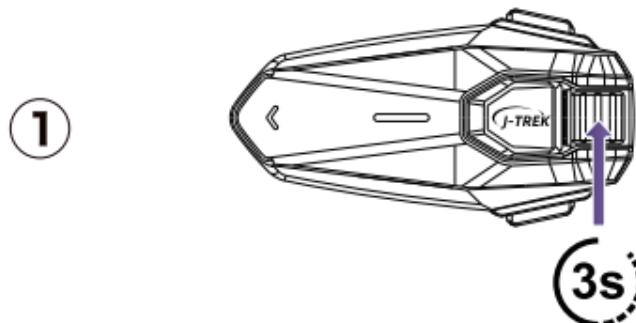

2. All devices will pair automatically, and a voice guide saying "Intercom Connected" will be played.

3. Activate the intercom function on any selected device.


4. Once the blue light on all devices is flashing slowly, you can start the conversation.

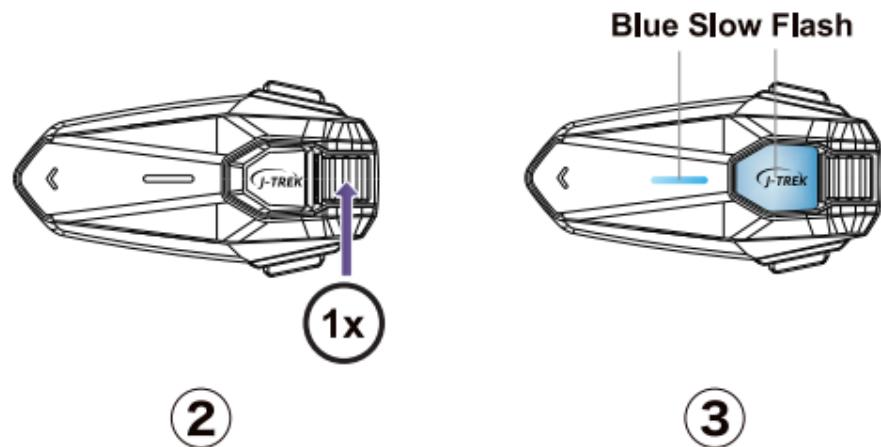

## ◆ Switch the Intercom Indicator Color


When the device is on, simultaneously press briefly [ Intercom Button] & [Next Button] to switch the intercom indicator light color. The intercom light can be switched to blink in seven colors:

red, green, blue, yellow, purple, cyan, and white.

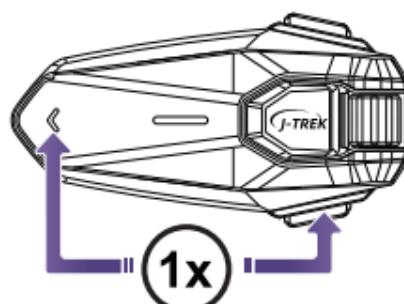


## ◆ Pairing with Other Brand Intercom

- 1.Turn ON the J-TREK by pressing and holding the [Power Button] for 3s. Also turn ON the other brand intercom.

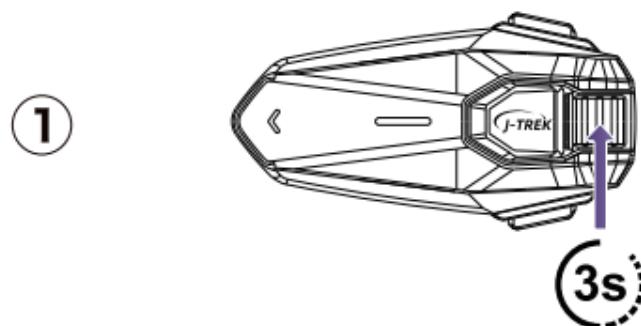


- 2.Put the other brand intercom into pairing mode according to its user guide.

- 3.On the J-TREK, press and hold the [Intercom Button] for 3s to enter pairing mode, then press the [Intercom Button] once to pair.

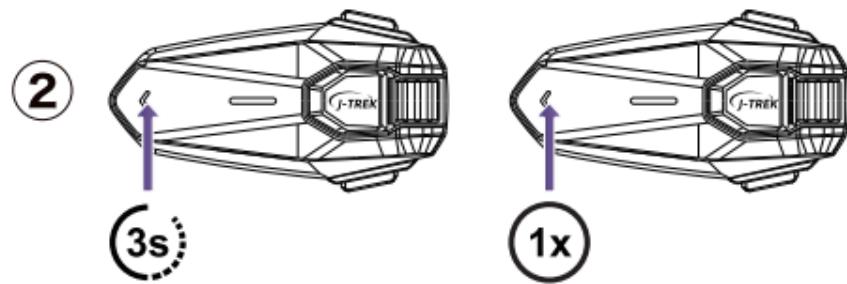

- 4.After pairing is complete, press the J-TREK [Intercom Button] once to pause/resume the intercom call.

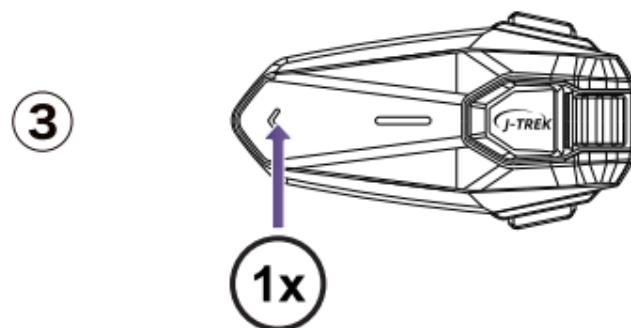

## ◆ Examples of Pairing with Other Brand Intercom

### [Example 1] Pairing Method for J-TREK and Cardo SPIRIT

1. With the Cardo SPIRIT powered ON, press and hold the "Media Button" for 5 sec to enter pairing mode. The LED light will flash red and blue.
2. With the J-TREK powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

### [Example 2] Pairing Method for J-TREK and SENA 50S

1. With the SENA 50S powered ON, press and hold the "Phone Button" to enter pairing mode. The LED light will flash red and blue.
2. With the J-TREK powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

### [Example 3] Pairing Method for J-TREK and LEXIN G2P

1. With the LEXIN G2P powered on, press and hold the "Intercom Button" for 2 seconds, the LED light flashes blue and red alternately, voice prompts "pairing".
2. With the J-TREK powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

## **[Example 4] Pairing Method for J-TREK and Fodsports FX-S**

1. With the Fodsports FX-S powered ON, press and hold the "Function Button" for 3 sec to enter pairing mode. The LED light will flash red and blue.
2. With the J-TREK powered ON, press and hold the [Intercom Button] for 3 seconds to enter pairing mode, then press the [Intercom Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

## **[Example 5] Pairing Method for J-TREK and JESIMAIK R16 Pro**

1. With the JESIMAIK R16 Pro powered ON, press and hold the "Intercom Button" for 3 sec to enter pairing mode. The LED light will flash green.
2. With the J-TREK powered ON, press and hold the [Intercom Button] for 3 seconds to enter pairing mode, then press the [Intercom Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

## **[Example 6] Pairing Method for J-TREK and FreedConn KY PRO**

1. With the FreedConn KY PRO powered ON, press and hold the "Function Button" for 8 sec to enter pairing mode. The LED light will flash red and blue.
2. With the J-TREK powered ON, press and hold the [Intercom Button] for 3 seconds to enter pairing mode, then press the [Intercom Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

## **[Example 7] Pairing Method for J-TREK and Fodsports M1-S Pro**

1. With the Fodsports M1-S Pro powered ON, press and hold the "Function Button" for 3 sec to enter pairing mode. The LED light will flash red and blue.
2. With the J-TREK powered ON, press and hold the [Intercom Button] for 3 seconds to enter pairing mode, then press the [Intercom Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the J-TREK's [Intercom Button] once to end or resume the intercom talk.

## **[Example 8] Pairing Method for J-TREK and Navigation Device**

1. Turn ON the J-TREK, press and hold the [Previous Button] & [Next Button] for 3s.
2. Turn ON the navigation device's Bluetooth, search for and connect to "J-TREK JX09" or "J-TREK JX09PRO".

## **[Example 9] Pairing Method for J-TREK and Insta 360**

1. Turn ON the J-TREK, press and hold the [Previous Button] & [Next Button] for 3s.
2. Open the "Bluetooth Headset and Microphone" list on the Insta 360, search for and connect to "J-TREK JX09" or "J-TREK JX09PRO".

# Music Sharing Function

**This product features the ability to share music with multiple JX09/JX09PRO units.**

## Starting Music Sharing:

When two intercoms for music sharing are powered ON, music sharing must be performed by the intercom that has completed pairing with a smartphone. For example, when sharing music from Intercom A to Intercom B, they are denoted as "A" and "B" below.

## Operation Method:

- ① Turn ON A, press and hold the [Previous Button] & [Next Button] for 3s to pair with a smartphone. After pairing is complete, play music.
- ② On A, press and hold [Previous Button] for 2s to turn ON music sharing. The Bluetooth indicator will flash blue slowly, and the speaker will announce "Starting music sharing."
- ③ Turn ON B, press and hold [Next Button] for 2s to receive music sharing. When the speaker makes a "beep beep" sound, B starts receiving music, indicating music sharing is successful.

### Note:

To share music with multiple JX09/JX09PRO units, turn ON the music sharing function on A, and simply turn ON music reception on B/C/D... (Just press and hold [Previous Button] for 2s to receive or decline the music shared by A).

## Ending Music Sharing:

During music sharing, press and hold [Previous] on A for 2s to turn OFF music sharing. The speaker will announce "Stop music sharing."



### Note:

1. Intercom A must have completed pairing with a smartphone.
2. During music sharing, Intercom A can pause/resume the sharing by pressing the "Previous Button" for 2s.



# How to Start and End Music Sharing

## 1. Pair A with Smartphone

Intercom A

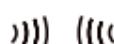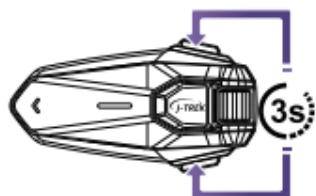


## 2. Play Music on Smartphone

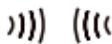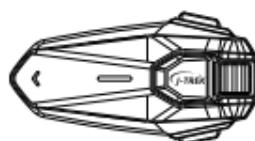


Play music on smartphone

## 3. Start Music Sharing

Intercom A

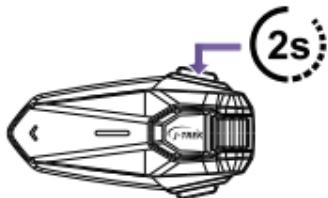


Intercom B/C/D...

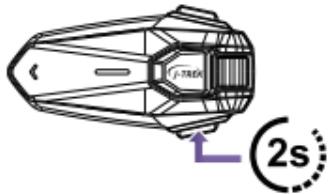


## 4. Stop/Resume Music Sharing

Intercom A

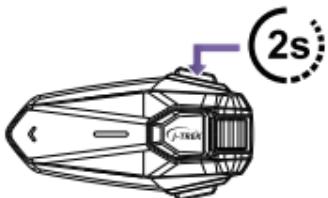

Intercom B/C/D...

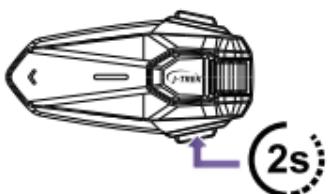


## Music Effects

During music playback, you can switch between three sound effects: Bass Boost, Mid Boost, and Treble Boost.

### Operation Method:


Press the [Previous Button] & [Next Button] once simultaneously to switch the music mode.

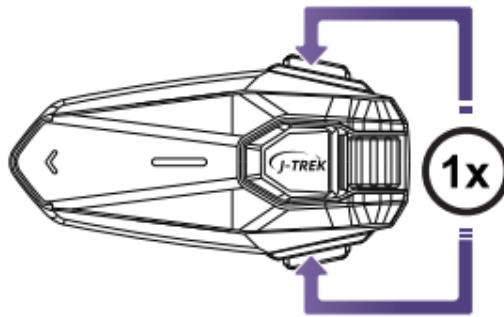

## FM Radio

### Turning FM Radio ON/OFF

Press and hold [Intercom Button] & [Power Button] simultaneously for 2 seconds to switch ON/OFF.

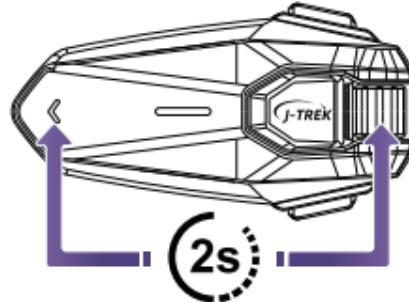

### Searching for Available FM Stations

- Move to Next Radio Station:  
Press [Next Button] once.
- Move to Previous Radio Station:  
Press [Previous Button] once.

### Adjusting FM Radio Volume

Scroll the power button left/right.

# Troubleshooting Guide

If the following situations occur, please check the corresponding section. If the problem persists, please contact the dedicated after-sales service email address.

When This Happens	Check Here
No Sound	<b>Check if the speaker &amp; microphone jack is plugged in all the way. Adjust the volume appropriately.</b>
Unable to Charge	<b>Check if the charging cable is firmly plugged into the charging port.</b> <b>Check if the interface is damaged.</b> <b>We recommend charging with the included charging cable.</b>
Poor FaceTime or WhatsApp Call Quality After Connecting to Smartphone	<b>FaceTime or WhatsApp calls cannot be controlled by the intercom. As it is an app call and not a phone call, Bluetooth does not have permission.</b> <b>Poor call quality is because LINE calls use the network; check if the network is functioning normally at that time.</b>
Power Won't Turn On	<b>Check if the battery is sufficiently charged</b>

When This Happens	Check Here
No Sound After Pairing	<p><b>Ensure the speaker and microphone cables are correctly connected.</b></p> <p><b>Verify the pairing is correct. Try resetting the intercom. Also reset the connection to this product on your mobile phone. Try pairing again after resetting.</b></p>
Unable to Pair with Other Brand Intercom	<p><b>Connection methods and Bluetooth versions may vary depending on other brands of intercoms, so pairing may not be possible. For pairing functionality, please contact the retailer where you purchased the product.</b></p>
Short Communication Range	<p><b>Verify pairing is correct, reset, and try pairing again. It may occur due to environmental influences such as building obstructions, electromagnetic interference, etc.</b></p> <p><b>We recommend moving to a location with less wind influence, open suburbs, or an area with less electromagnetic interference, then check if the communication range is normal.</b></p>

# Product Specifications

<b>Model</b>	<b>JX09/JX09PRO</b>
<b>Supported Profiles</b>	<b>A2DP, AVRCP, HFP HSP, SSP, DID, HID LDAC, AAC, SBC</b>
<b>Noise Cancellation</b>	<b>DSP&amp;CVC Compatible</b>
<b>Waterproof Rating</b>	<b>IP67</b>
<b>Charging Connector</b>	<b>USB Type-C</b>
<b>Group Intercom</b>	<b>Compatible</b>
<b>Long Distance Communication</b>	<b>Compatible</b>
<b>FM Radio</b>	<b>Compatible</b>
<b>Voice Assistant</b>	<b>Compatible</b>
<b>Phone/Navigation</b>	<b>Compatible</b>
<b>Music &amp; Talk</b>	<b>Compatible</b>
<b>Group Music Sharing</b>	<b>Compatible</b>
<b>Volume Adjustment</b>	<b>Compatible</b>
<b>Universal Intercom Connection (Connect/Communicate with other brand intercoms)</b>	<b>Compatible</b>

## **Warranty Period and Contact Information**

The warranty period for this product is one year from the date of purchase.

- The specifications of this product are subject to change without notice. Please understand in advance.
- Production and sales of this product may cease due to discontinuation of electronic components used. Please understand in advance.
- When contacting us, to ensure a prompt and accurate response, please confirm the following items before contacting us:
  - ① Product Name
  - ② Order Number
  - ③ Serial Number affixed to the unit
  - ④ Fault condition (please describe in as much detail as possible. If contacting by email, please include details regarding the malfunction symptoms.)
- For any questions or concerns regarding malfunctions, please contact the retailer where you purchased the product or the dedicated after-sales service email address below.

### **After-Sales Service Email Address**



**[support@j-trek.com](mailto:support@j-trek.com)**

Reception Hours: 10:00-12:00, 14:00-18:30

(Excludes Saturdays, Sundays, national holidays, year-end/new year holidays, and company-designated holidays)

