



USER GUIDE

JX03

Thank you very much for purchasing the J-TREK Motorcycle Intercom JX03. To ensure safe and proper use, please be sure to read this instruction manual before use. The illustrations and content of this manual may differ partially from the actual product due to specification changes, etc. This instruction manual also serves as the warranty certificate, so please keep it in a safe place.

Contents

Main Features	01
Safety Precautions	02
Parts Names	03
Operation Summary Table	04
Included Items List	05
Charging the Unit	06
Installation Method	07~10
• Mount Installation	07
• Adhesive-type Mount Installation	07
• Unit Installation	08
• Unit Removal	08
• Speaker and Microphone Installation	09~10
Power ON/OFF	11
Pairing	11~18
• Pairing with Smartphone	11
• Pairing with Same Model Intercom	12~14
• Pairing with Other Brand Intercom	15
• Examples of Pairing with Other Brand Intercom	16~18
Music Sharing Functio	19~20
Listening to FM Radio	21
Troubleshooting Guide	22~23
Product Specifications	24
Warranty Period and Contact Information	25

Main Features

- Dual chip Bluetooth 5.2
- Audio multitasking
- Equipped with JMC1.0-Mesh•Supports up to 8 people for intercom
- 1000m long-distance communication
- One-touch group connection for all units
- Automatic reconnect
- IP65 dustproof and waterproof
- English voice guidance
- FM Radio
- Universal connection

Safety Precautions


Warning

	Do not place the device in environments with excessive dust, high humidity, or high temperatures.
	Do not disassemble or modify this product.
	Do not drop or strike this product.
	Do not wipe this product with corrosive liquids.
	Note that the communication range is affected by the surrounding environment.
	To prevent electromagnetic interference or compatibility issues, turn off the power or stop using this product in locations marked with signs such as "Intercom Prohibited".
	Do not use this product near medical devices, etc.
	For safe driving, check and comply with the laws and regulations regarding intercom use in your area. When using this product while touring, adjust the volume to an appropriate level and pay full attention to driving and road conditions.

Parts Names

◀ Previous

Next ▶

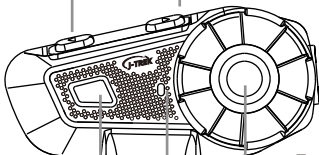


Intercom Button/
Indicator



Function
Button



Bluetooth Indicator

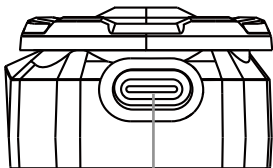

Charging/Audio Port

Operation Summary Table

Function	Button(s)	Operation
Power ON/OFF	Function & Intercom Button	Press and hold both for 3 sec
Check Battery Level	◀Previous & Next▶ Button	Press and hold both for 2 sec
Smartphone Pairing	Function Button	Press and hold for 3 sec
Answer/End Call	Function Button	Press once
Reject Call	Function Button	Press and hold for 2 sec
Redial Last Number	Function Button	Press twice
Adjust Call Volume	Function Button	Rotate right/left
Smartphone Voice Assistant	◀Previous & Next▶ Button	Press both once simultaneously
Auto Answer ON/OFF	Intercom & ◀Previous & Next▶ Button	Press and hold all three for 3 sec
Music Play/Pause	Function Button	Press once
Previous Track	◀Previous	Press once
Next Track	Next▶	Press once
FM Radio ON/OFF	Function & ◀Previous Button	Press and hold both for 2 sec
Previous FM Station	◀Previous	Press once
Next FM Station	Next▶	Press once
Adjust Intercom Volume	Function Button	Rotate right/left
Change Language	Function & Intercom & Next▶ Button	Press and hold all three for 5 sec
Reset	Function & Next▶ Button	Press and hold both for 3 sec

Included Items List

The following are the contents of the product package. Please first check that all items are present before use. If any parts are missing, please contact the retailer where you purchased the product.



Main Unit ×1



Microphone for Jet Helmet ×1



Microphone for Full Face Helmet ×1



Mount Bracket ×1



Speaker ×1



Adhesive Tape for Speaker Mounting ×2



Adhesive Tape for Jet Helmet Microphone Mounting ×1



Adhesive Tape for Full Face Microphone Mounting ×1




Charging USB Type-C Cable ×1



Audio Conversion Cable ×1



Mount Adhesive Tape [Red] ×1



Mount Adhesive Tape [White] ×3



Speaker Position Adjustment Pad



User Guide ×1



Quick Start Guide ×1



Mount Clip ×1

Charging the Unit

◆How to Charge

Charging Method: Connect the included USB Type-C cable and a commercially available USB power adapter to the unit to charge.

Bluetooth Indicator



Charging (Red light on)

Charging Complete

(Blue light on)

Commercially available USB charger with PSE mark

Note: This product does not support fast charging (max 5W).

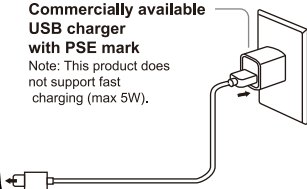

Included Accessory USB Type-C Cable

⚠ Caution



Before first use, be sure to charge the product.



To ensure the best charging effect, please use the included USB Type-C cable as much as possible.



After charging is complete, unplug the charger and avoid leaving it in a charged state for extended periods.



When charging, ensure the charging environment is dry, well-ventilated, and away from humid or high-temperature environments.




When charging, keep the unit away from flammable materials such as paper, cloth, alcohol, etc., to prevent fire.


Installation Method

◆Mount Bracket Installation

1. Attach the adhesive tape (white) to the mount bracket.
2. Insert the clip into the slot on the edge of the mount bracket.
3. Open the clip of the mount and fix it to the edge of the helmet.
4. Using a hard, thin tool, press the recess on the back of the bracket and push the clip downward to remove it.

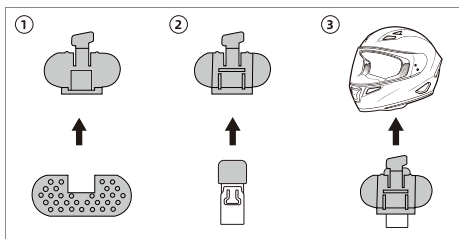


Caution: The mount is relatively rigid, so be careful when opening or attaching it to avoid damage.

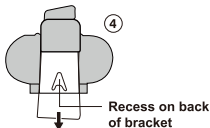


◆Adhesive-type Mount Installation

1. Select a suitable position on the helmet, wipe this area, and ensure the surface is clean and suitable for adhesion.
2. Attach the adhesive tape (red) to the mounting bracket.
3. Press the mounting base onto the helmet and hold it to secure it.

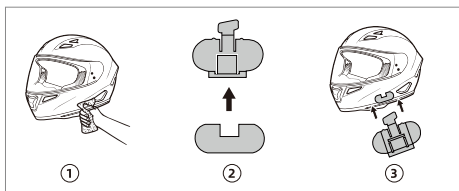


◆Unit Installation

1. Simply press the unit into the mount to complete installation.
2. Connect the audio cable to the unit's interface.
3. After completing these steps, ensure the unit is securely fastened.

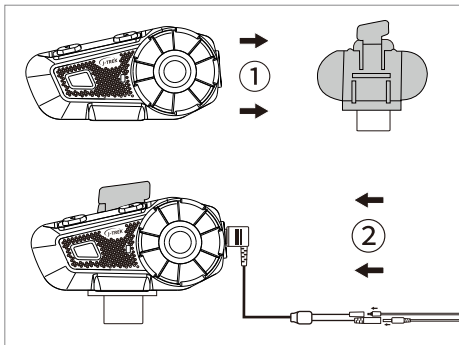

◆Unit Removal


While pressing the lock tab on the top of the mount, push the unit upward to detach it from the mount.

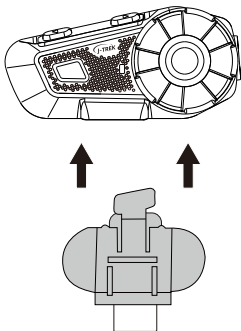

◆Speaker and Microphone Installation

-Speaker Installation


- 1.First, remove the helmet liner.
- 2.Route the cable through the back or top of the liner into the helmet shell. Adjust the cable length and position to prevent the cable from coming loose during use.
- 3.Using the included adhesive mounting tape, attach the speakers near the ears on both sides of the helmet.
- 4.Reattach the helmet liner to the helmet, ensuring the liner fits snugly against the helmet shell.

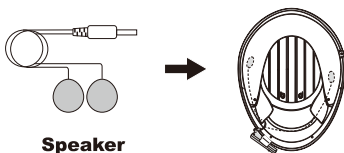


•Microphone Installation

For clearer voice transmission, mount the microphone near the mouth.

- Microphone for Jet Helmet: When attaching to the helmet, adhere it so the side with the triangular mark faces the direction of the mouth.

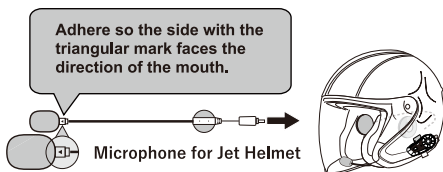


- Microphone for Full Face Helmet: Attach inside the helmet. Route the microphone cable inside the helmet.

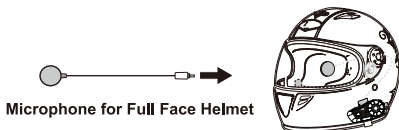


◆Power ON/OFF

Press and hold the [Function Button] & [Intercom Button] simultaneously for 3 seconds to turn the power ON or OFF.

ON: Blue light on

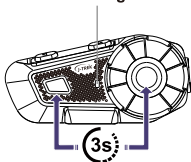

OFF: Red light on

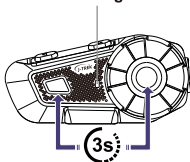


Pairing


◆Pairing with Smartphone

1. Press and hold the [Function Button] & [Intercom Button] simultaneously for 3 seconds to turn power ON. Then press and hold the [Function Button] for 3 seconds.

Blue light on

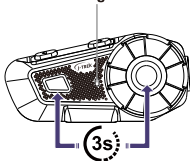

Blue/Red fast flashing

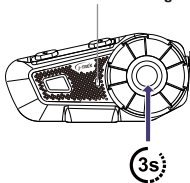


2. Turn on your smartphone's Bluetooth and select "J-TREK JX03" from the list of devices.

3. Once pairing is complete, the speaker will announce "Device connected successfully," and the Bluetooth indicator will flash blue.

Making/Answering Calls


Answer Call:

Press [Function Button] for once




End Call:

Press [Function Button] for once




Reject Call:

Press and hold [Function Button] for 2 sec



Redial Last Number:

Press [Function Button] for twice




•Playing Smartphone Music

Prerequisite: Pairing with smartphone completed

Listening to Music


Music Play/Pause:

Press [Function Button] for once




Adjust Music Volume:

Rotate [Function Button] right/left




Previous Track:

Press [◀Previous] for once



Next Track:


Press [Next▶] for once



•Voice Assistant

After pairing with smartphone, press [◀Previous] & [Next▶] simultaneously once.





(Activates Siri / Google Assistant)



◆Pairing with Intercom





Pairing Two JX03 Units

1. Press and hold [Function Button] & [Intercom Button] simultaneously for 3 seconds to turn power ON. Then press and hold the [Function Button] for 3 seconds.
2. Press the [Function Button] once on the JX03 you need to pair. The Intercom indicator will flash green rapidly, and the speaker will announce "Pairing".
3. Wait for the two JX03 units to complete pairing automatically.
4. Once pairing is complete, the speaker will announce "Device connected" and the Intercom indicator will light green. It enters Intercom call mode.
5. During an intercom call, press the [Intercom Button] once to pause the intercom call.
6. Press the [Intercom Button] once again to resume the intercom call.

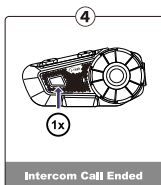
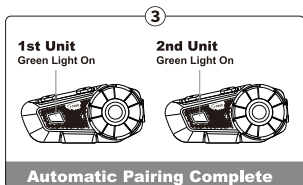
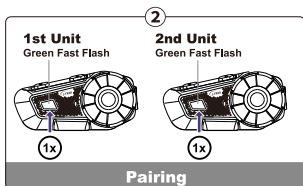
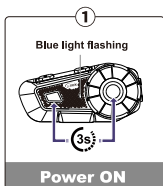


Pairing Four JX03 Units


1

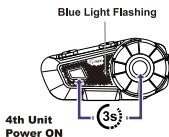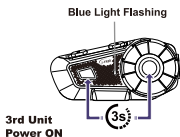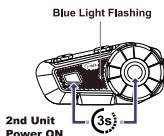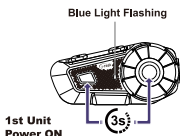

2

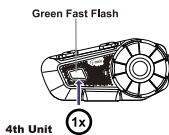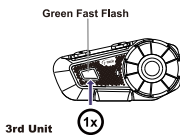
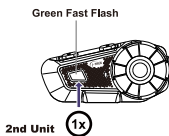
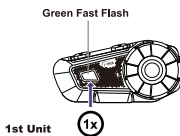


3




Pairing will complete automatically after a short while.

4




◆Pairing with Other Brand Intercom

1. Turn ON the JX03 by pressing and holding the [Function Button] & [Intercom Button] simultaneously for 3 seconds. Also turn ON the other brand intercom.

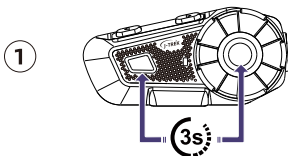


2. Put the other brand intercom into pairing mode according to its user manual.

3. On the JX03, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once to pair.

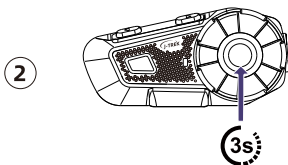

4. After pairing is complete, press the JX03 [Intercom Button] once to pause/resume the intercom call.

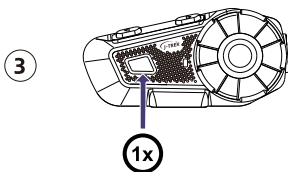

◆ Examples of Pairing with Other Brand Intercom

[Example 1] Pairing Method for JX03 and Cardo SPIRIT

1. With the Cardo SPIRIT powered ON, press and hold the "Media Button" for 5 sec to enter pairing mode. The LED light will flash red and blue.
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 2] Pairing Method for JX03 and SENA 50S

1. With the SENA 50S powered ON, press and hold the "Phone Button" to enter pairing mode. The LED light will flash red and blue.
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 3] Pairing Method for JX03 and LEXIN G2P

1. With the LEXIN G2P powered on, press and hold the "Intercom Button" for 2 seconds, the LED light flashes blue and red alternately, voice prompts "pairing".
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 4] Pairing Method for JX03 and Fodsports FX-S

1. With the Fodsports FX-S powered ON, press and hold the "Function Button" for 3 sec to enter pairing mode. The LED light will flash red and blue.
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 5] Pairing Method for JX03 and JESIMAIK R16 Pro

1. With the JESIMAIK R16 Pro powered ON, press and hold the "Intercom Button" for 3 sec to enter pairing mode. The LED light will flash green.
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 6] Pairing Method for JX03 and FreedConn KY PRO

1. With the FreedConn KY PRO powered ON, press and hold the "Function Button" for 8 sec to enter pairing mode. The LED light will flash red and blue.
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 7] Pairing Method for JX03 and Fodsports M1-S Pro

1. With the Fodsports M1-S Pro powered ON, press and hold the "Function Button" for 3 sec to enter pairing mode. The LED light will flash red and blue.
2. With the JX03 powered ON, press and hold the [Function Button] for 3 seconds to enter pairing mode, then press the [Function Button] once again.
3. After the pairing is complete, the voice prompts "pairing successful", and the intercom call can then begin.
4. During intercom conversation, press the JX03's [Intercom Button] once to end or resume the intercom talk.

[Example 8] Pairing Method for JX03 and Navigation Device

1. Turn ON the JX03, press and hold the [Function Button] for 3 seconds.
2. Turn ON the navigation device's Bluetooth, search for and connect to "J-TREK JX03".

[Example 9] Pairing Method for JX03 and Insta 360

1. Turn ON the JX03, press and hold the [Function Button] for 3 seconds.
2. Open the "Bluetooth Headset and Microphone" list on the Insta 360, search for and connect to "J-TREK JX03".

Music Sharing Function

Sharing Music Between Two JX03 Units

Starting Music Sharing:

When both intercoms for music sharing are powered on, the sharing must be initiated from the intercom that has completed pairing with a smartphone. For example, if Intercom A (paired with the phone playing music) shares audio with Intercom B, they will be denoted as "A" and "B" below.

Operating Steps:

- ① Turn ON A, press and hold the [Function Button] for 3 seconds to pair with a smartphone. After pairing is complete, play music.
- ② Open the music app on your smartphone and pause the music.
- ③ Pair A and B (refer to page 14 for operating procedure).
- ④ Press the [Intercom Button] on A once to pause the intercom call.
- ⑤ Press and hold [Intercom Button] & [Next▶] on A for 2 seconds, then press the [Function Button] once to start music sharing.

Ending Music Sharing:

During music sharing, press and hold [Intercom Button] & [Next▶] on A for 2 seconds to turn OFF music sharing. The speaker will announce "Stop music sharing."


Note:

1. Intercom A must have completed pairing with a smartphone.
2. During music sharing, Intercom A can pause/resume the sharing by pressing the "Function Button" once.


How to Start Music Sharing

1. Pair A with Smartphone

Intercom A




2. Pause Music on Smartphone




Pause music

3. Pair A and B

Intercom A
Blue Fast Flash




Intercom B
Blue Fast Flash




4. Pause Intercom Call

Intercom A




5. Start Music Sharing

Intercom A




Intercom A



FM Radio

Turning FM Radio ON/OFF

Press and hold [Function Button] & [◀Previous] simultaneously for 2 seconds to switch ON/OFF.

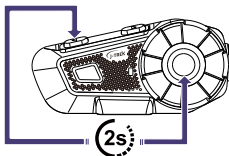

Searching for Available FM Stations

- Move to Next Radio Station: Press [Next▶] once.
- Move to Previous Radio Station: Press [◀Previous] once.

Adjusting FM Radio Volume

Rotate [Function Button] right or left.

Troubleshooting Guide

If the following situations occur, please check the corresponding section. If the problem persists, please contact the dedicated after-sales service email address.

When This Happens	Check Here
No Sound	Check if the speaker & microphone jack is plugged in all the way. Adjust the volume appropriately.
Unable to Charge	Check if the charging cable is firmly plugged into the charging port. Check if the interface is damaged. We recommend charging with the included charging cable.
Poor FaceTime or WhatsApp Call Quality After Connecting to Smartphone	FaceTime or WhatsApp calls cannot be controlled by the intercom. As it is an app call and not a phone call, Bluetooth does not have permission. Poor call quality is because LINE calls use the network; check if the network is functioning normally at that time.
Power Won't Turn On	Check if the battery is sufficiently charged

When This Happens	Check Here
No Sound After Pairing	Ensure the speaker and microphone cables are correctly connected. Verify the pairing is correct. Try resetting the intercom. Also reset the connection to this product on your mobile phone. Try pairing again after resetting.
Unable to Pair with Other Brand Intercom	Connection methods and Bluetooth versions may vary depending on other brands of intercoms, so pairing may not be possible. For pairing functionality, please contact the retailer where you purchased the product.
Short Communication Range	Verify pairing is correct, reset, and try pairing again. It may occur due to environmental influences such as building obstructions, electromagnetic interference, etc. We recommend moving to a location with less wind influence, open suburbs, or an area with less electromagnetic interference, then check if the communication range is normal.

Product Specifications

Model	JX03
Supported Profiles	A2DP、AVRCP、HFP、HSP、SSP、DID、HID
Noise Cancellation	DSP&CVC Compatible
Waterproof Rating	IP65
Dimensions	80*38.9*20mm
Unit Weight	42g
Charging Connector	USB Type-C
Group Intercom	Compatible
Long Distance Communication	Compatible
FM Radio	Compatible
Voice Assistant	Compatible
Phone/Navigation	Compatible
Music & Talk	Compatible
Group Music Sharing	Compatible
Volume Adjustment	Compatible
Universal Intercom Connection (Connect/Communicate with other brand intercoms)	Compatible

Warranty Period and Contact Information

The warranty period for this product is one year from the date of purchase.

- The specifications of this product are subject to change without notice. Please understand in advance.
- Production and sales of this product may cease due to discontinuation of electronic components used. Please understand in advance.
- When contacting us, to ensure a prompt and accurate response, please confirm the following items before contacting us:
 - ① Product Name
 - ② Order Number
 - ③ Serial Number affixed to the unit
 - ④ Fault condition (please describe in as much detail as possible. If contacting by email, please include details regarding the malfunction symptoms.)
- For any questions or concerns regarding malfunctions, please contact the retailer where you purchased the product or the dedicated after-sales service email address below.

After-Sales Service Email Address



support@j-trek.com

Reception Hours: 10:00-12:00, 14:00-18:30

(Excludes Saturdays, Sundays, national holidays, year-end/new year holidays, and company-designated holidays)

