

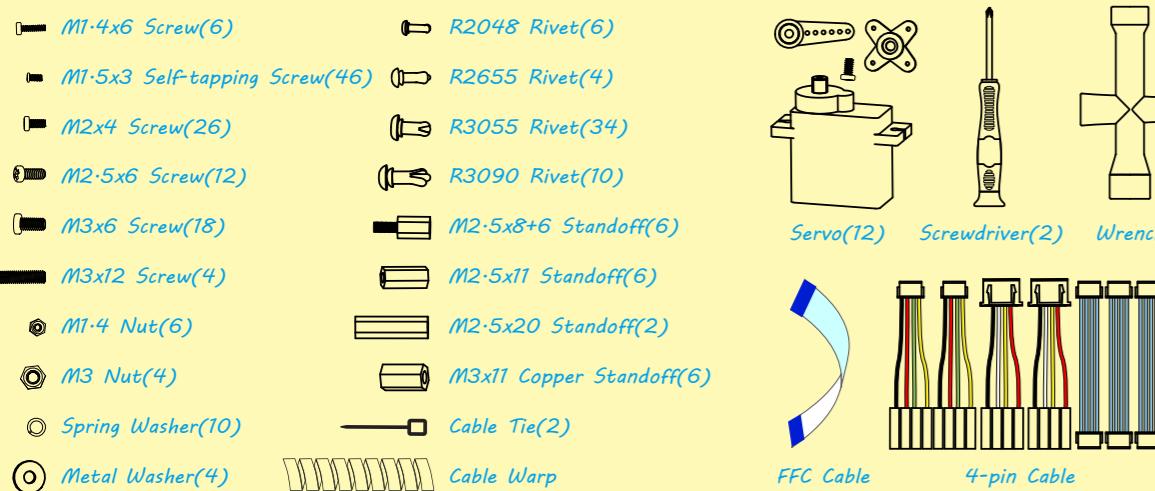
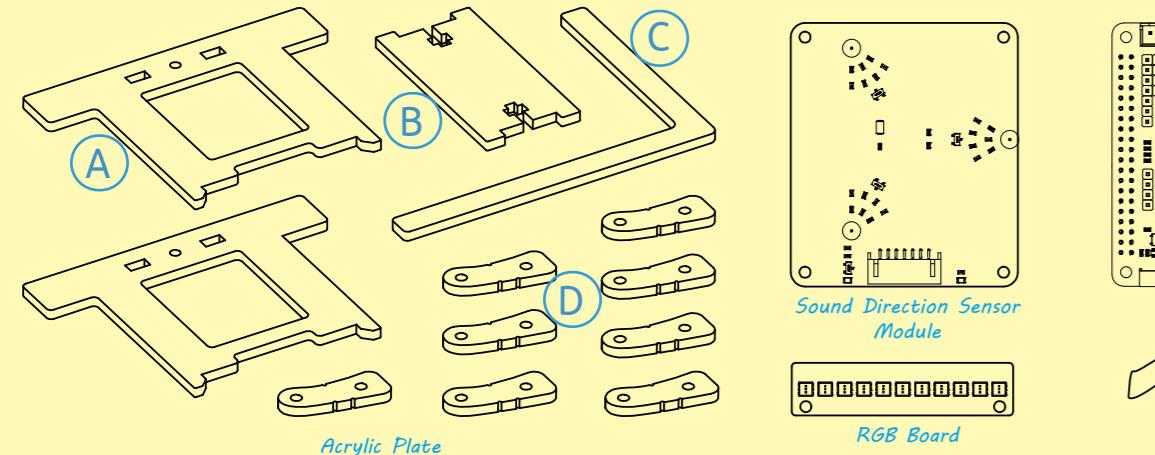
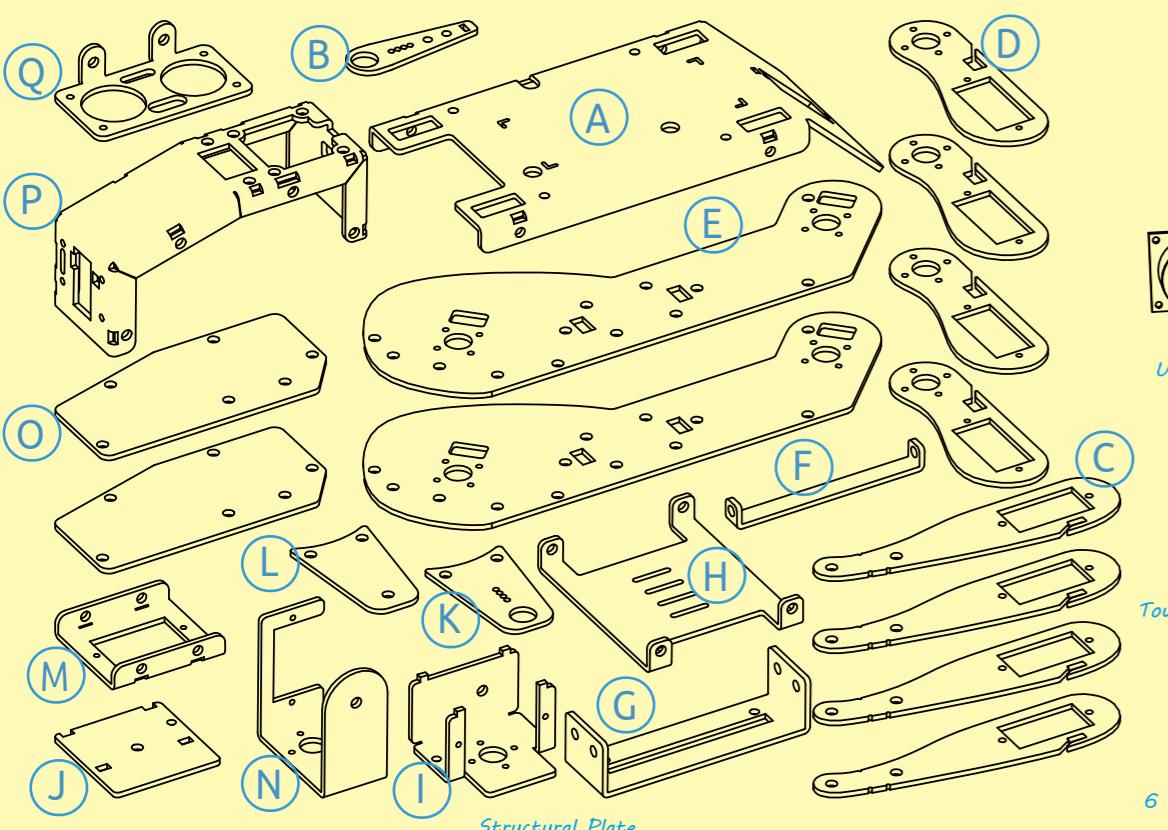


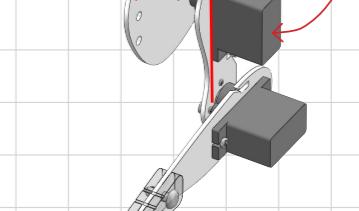
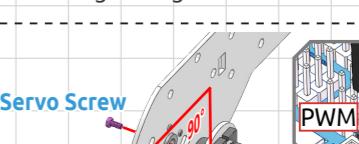

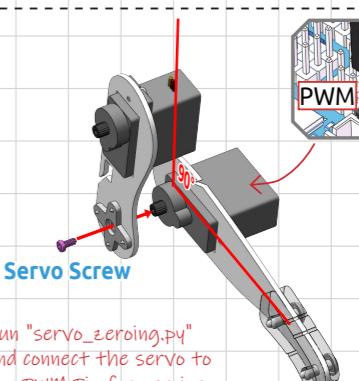

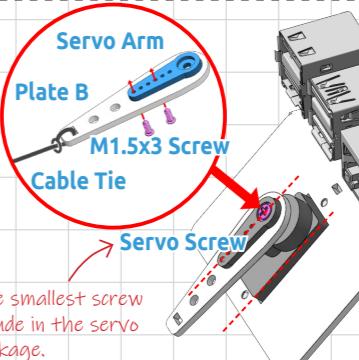

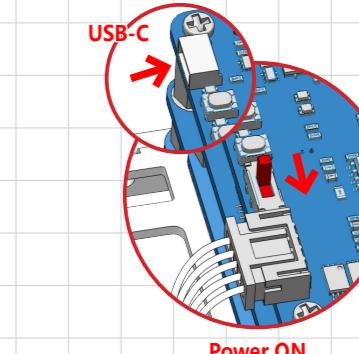
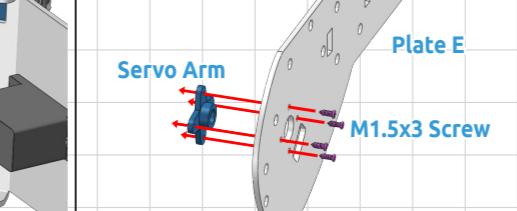
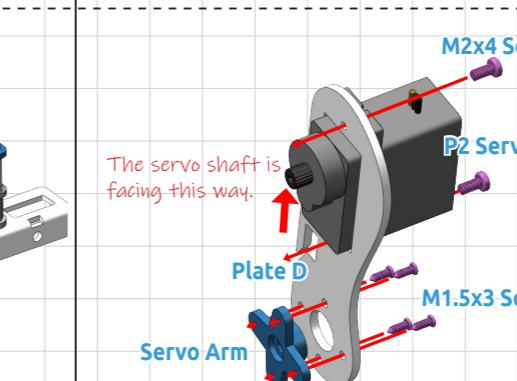
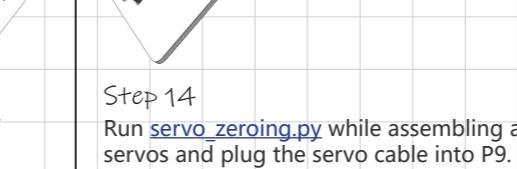
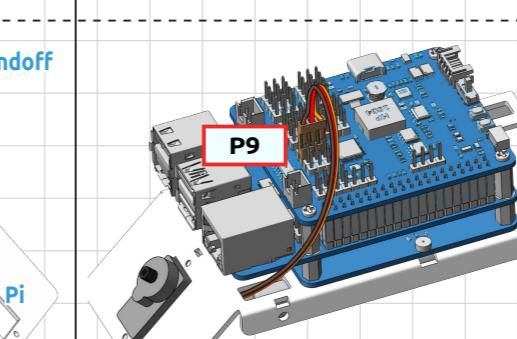

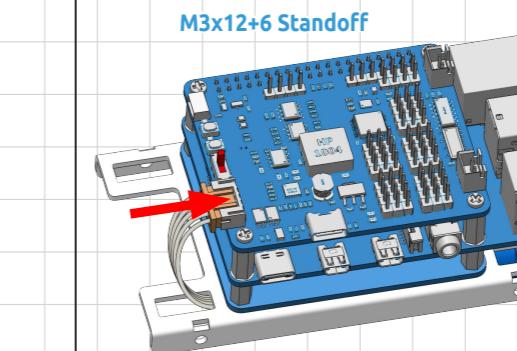

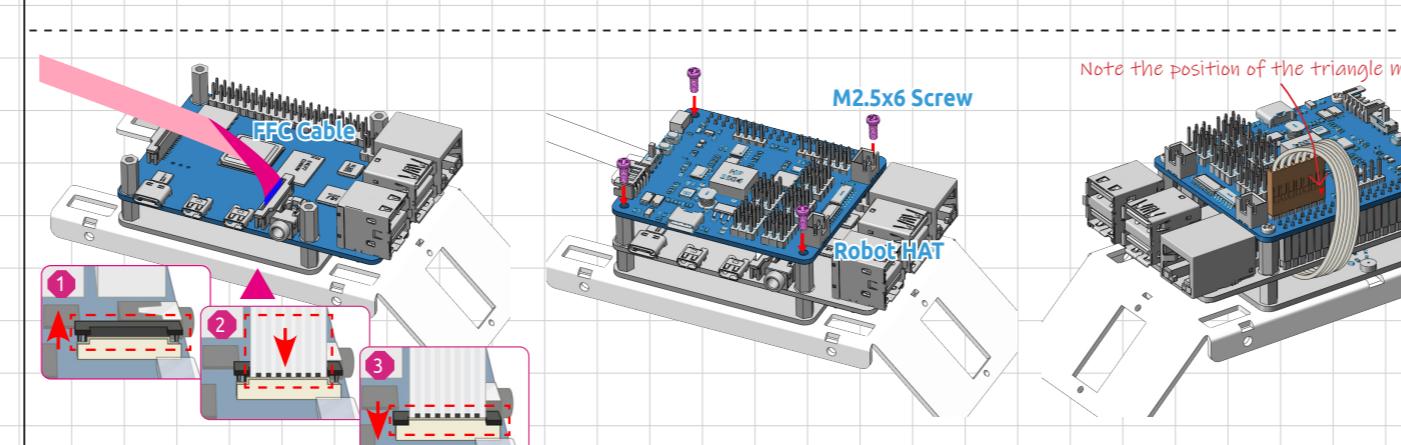

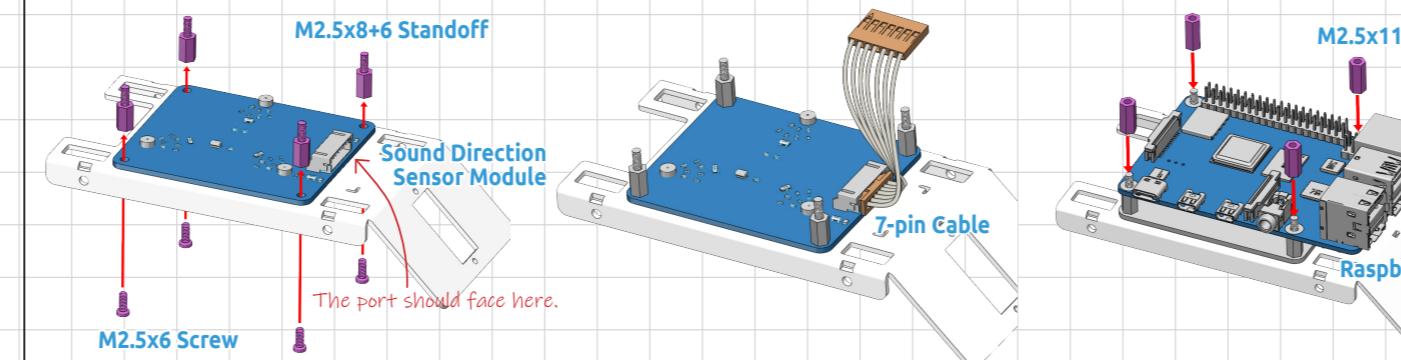


SUNFOUNDER PiDOG KIT

Get tutorial at: pidog.rtfd.io



ASSEMBLY

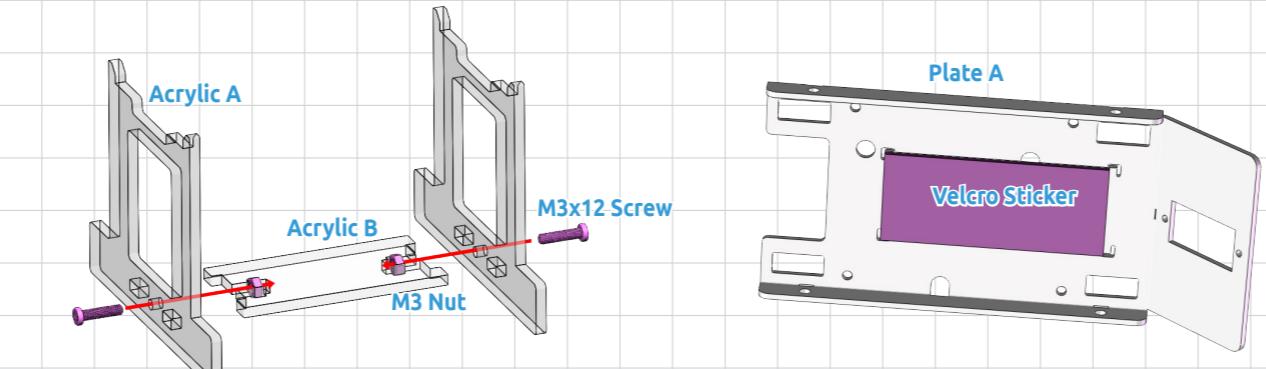

The next steps need to adjust the servos to 0 degrees, please enter the online tutorial (pidog.rtfd.io), complete the "Quick Guide on Python" or "Quick Guide on Eblock" chapter to continue the assembly.

