











SUNFOUNDER ZEUS CAR KIT

Get tutorial at: zeus-car.rtfd.io






Z0110V10

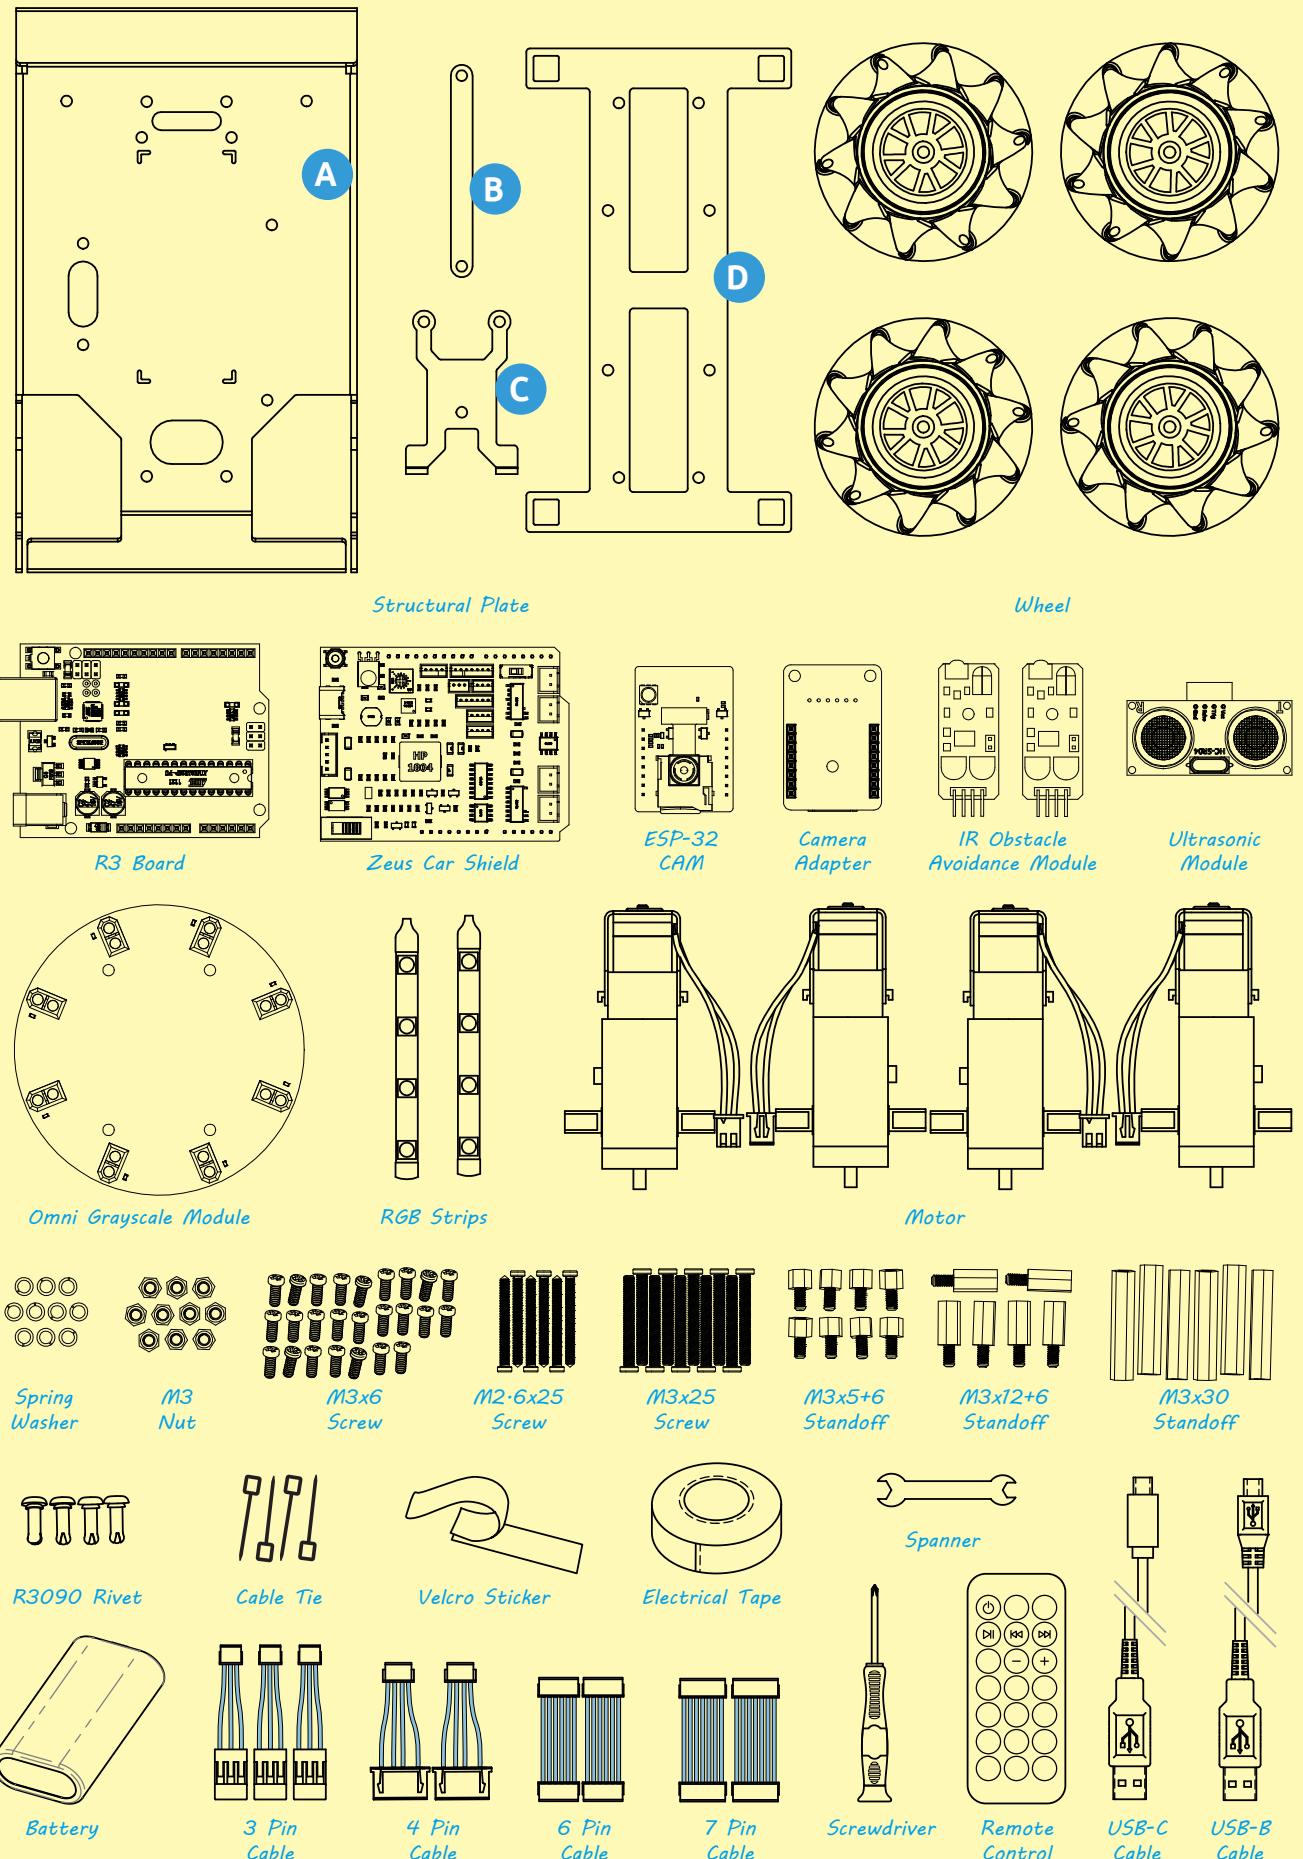

ASSEMBLE

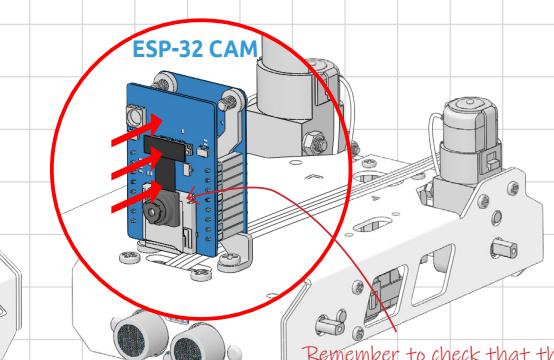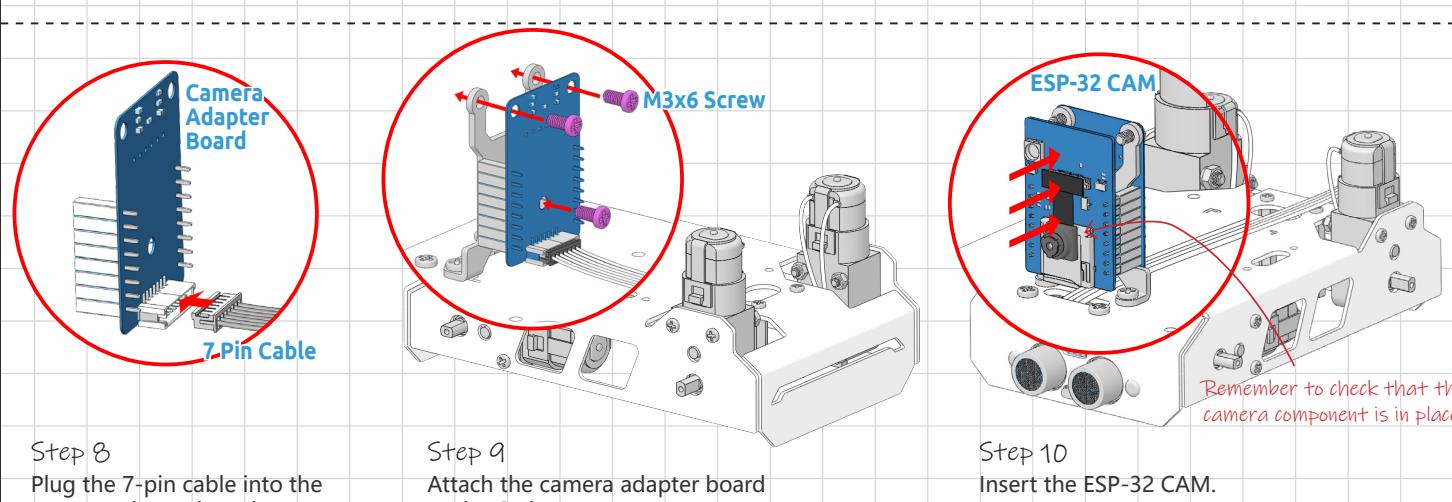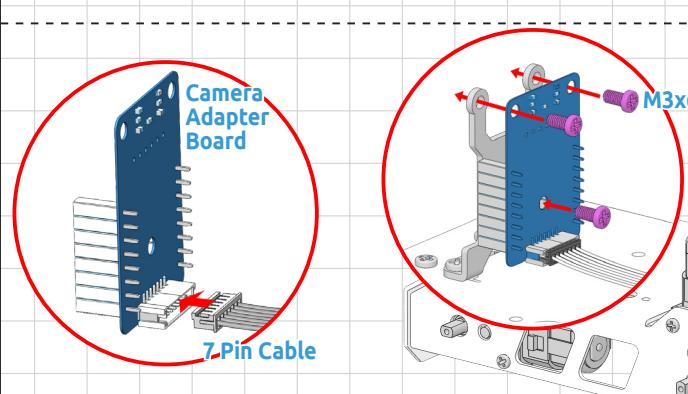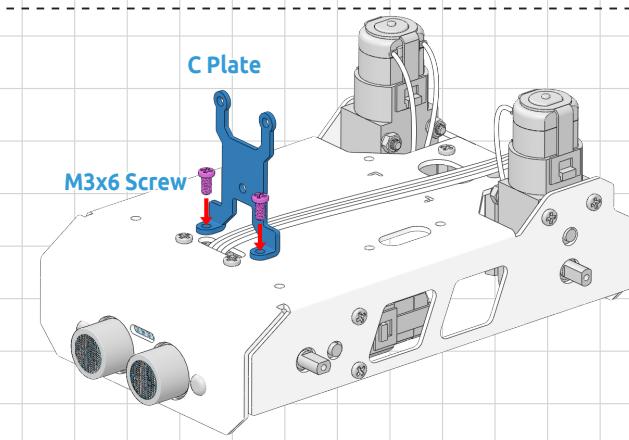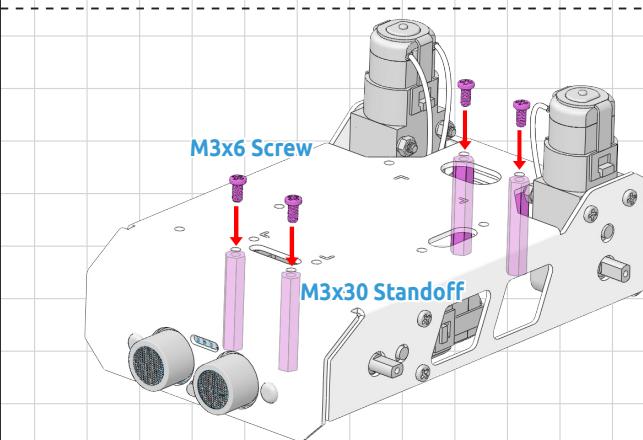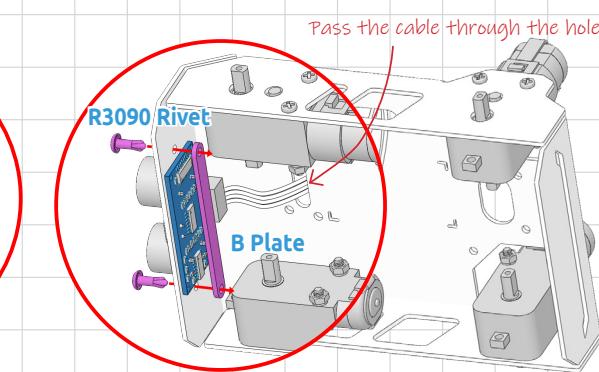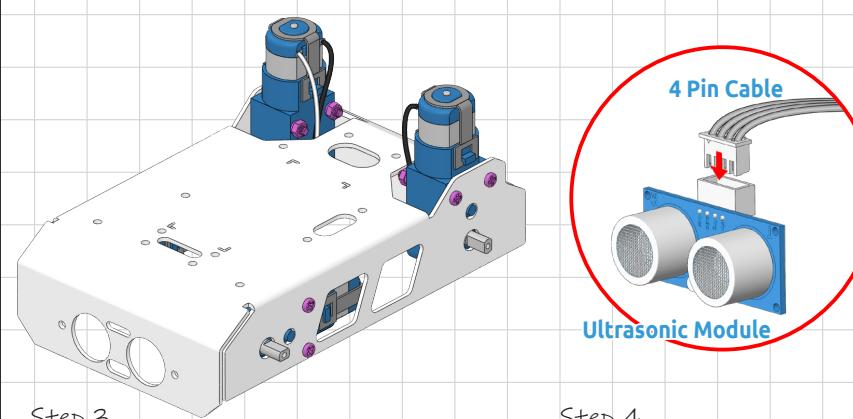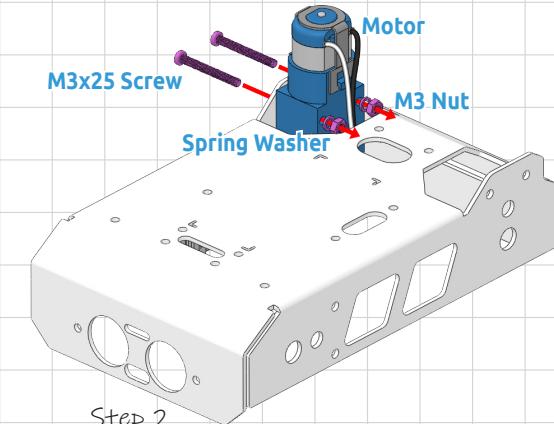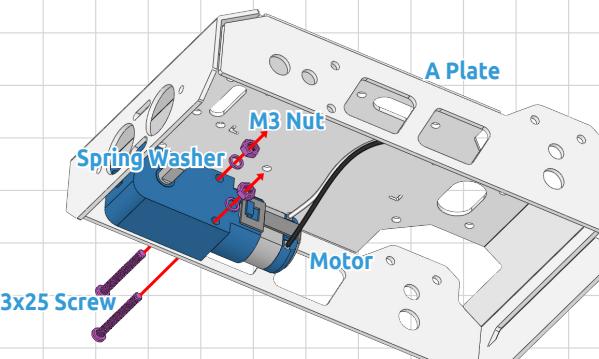

Remember to check that this camera component is in place.

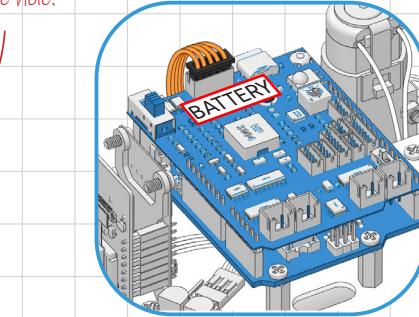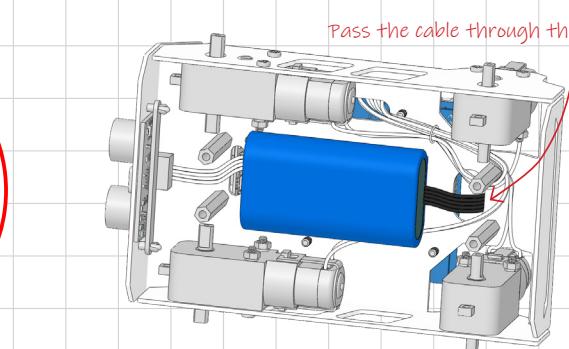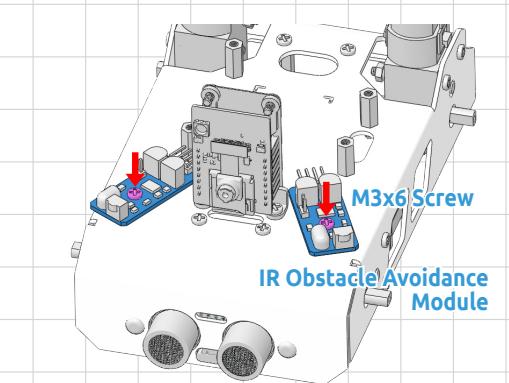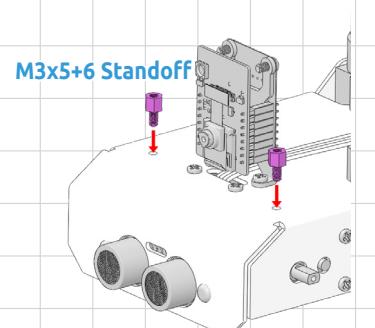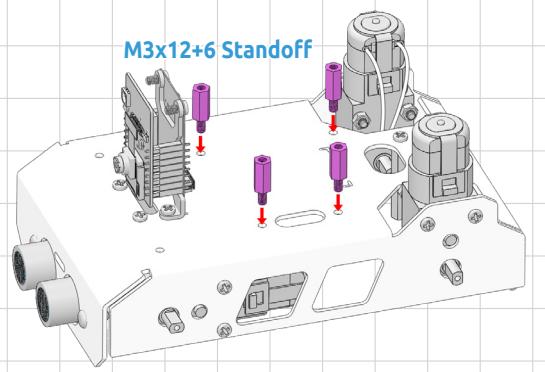

Step 23: Attach the other side of the velcro to the battery.

Step 24: Now you can stick the battery on.

Step 25: Ensure that the battery cable is plugged in.

