



# SUNFOUNDER PIRONMAN CASE

Get tutorial at: [pironman.rtfd.io](http://pironman.rtfd.io)

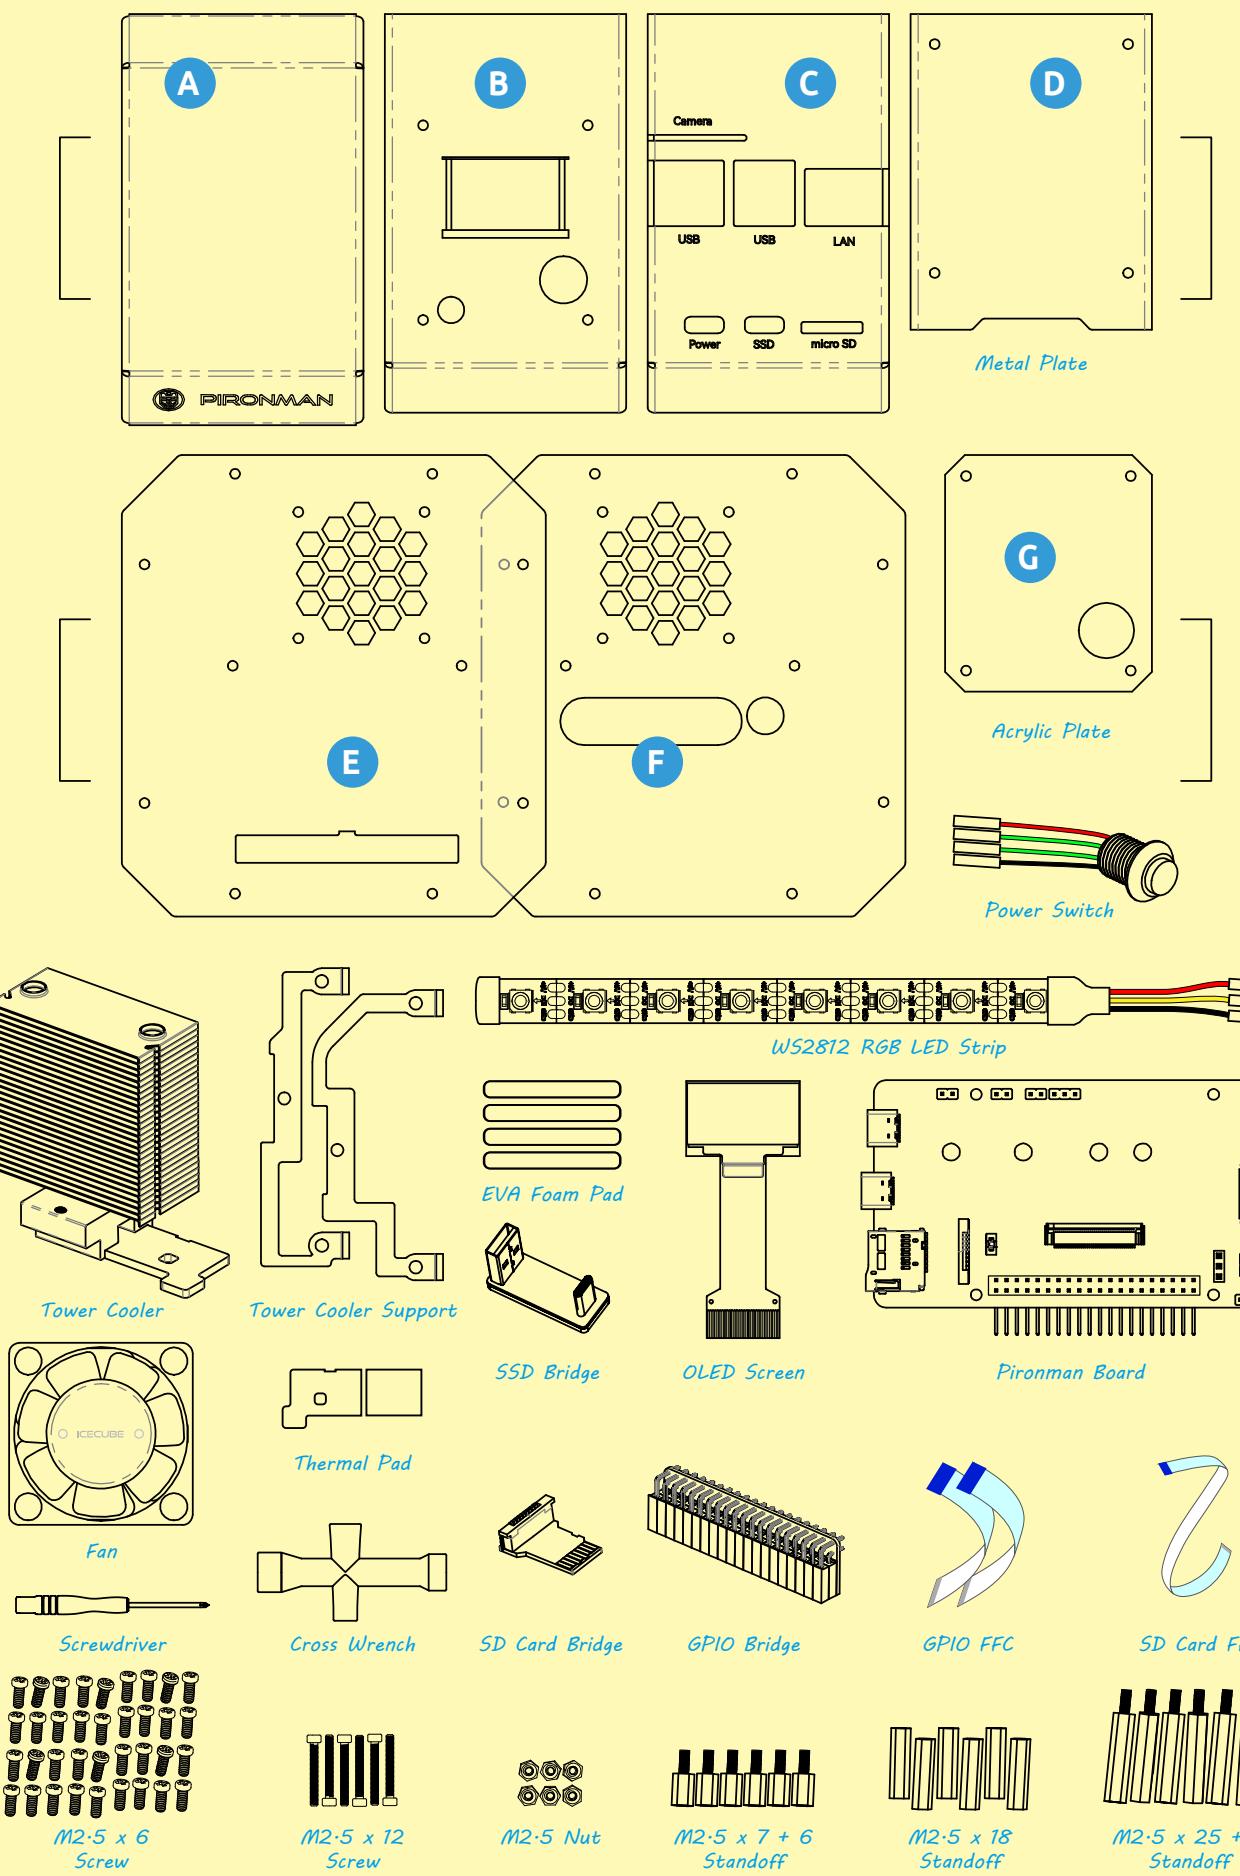


## ASSEMBLE

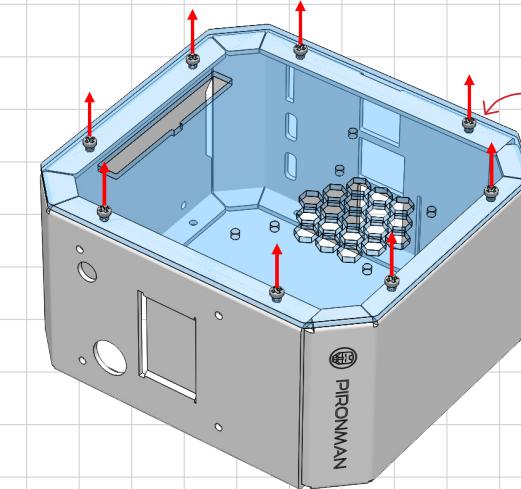


### Step 1

After unboxing, you'll find that part of the Pironman Case is already assembled, and you'll need to take it apart.

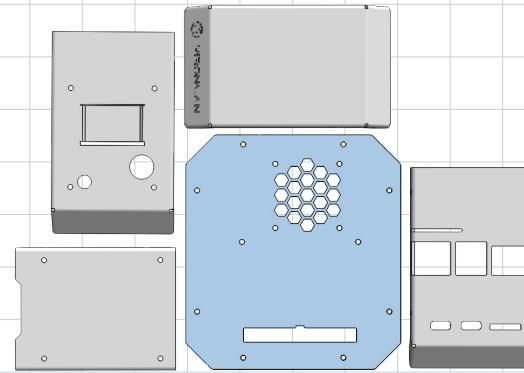


### Step 2

### M2.5 x 25 + 6 Standoff

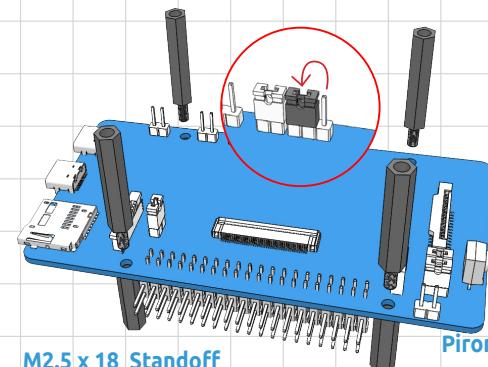

### Step 3

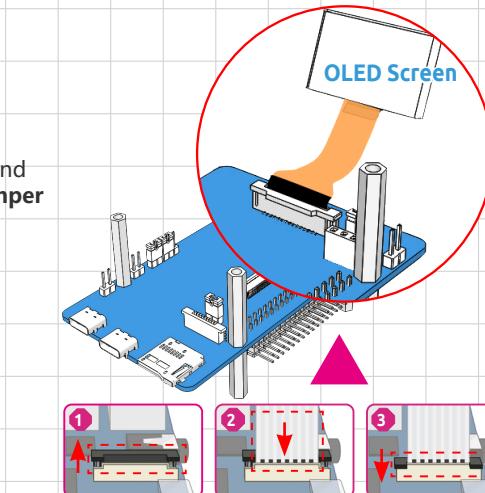


Step 4

The steps are:


- 1) Pull up the black connector.
- 2) Insert the FPC cable.
- 3) Push to fasten.

### M2.5 x 18 Standoff

### Pironman Board

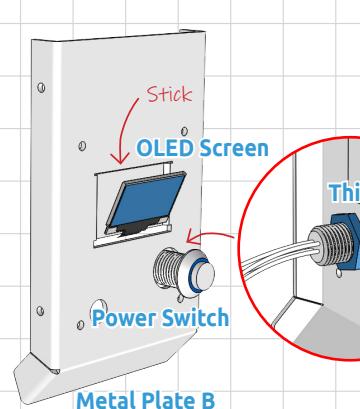

### Step 5

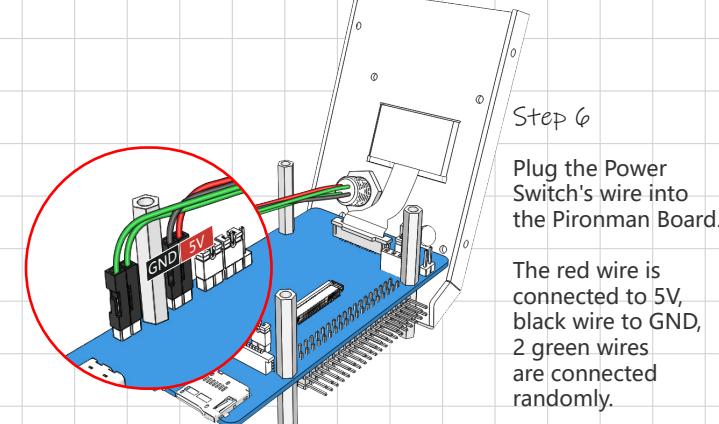

### Step 6

