
<- must measure 50 mm


VARUNA AI Pod

600 x 300 mm thermocol boat | Your design, upgraded

PLAN (from above), scale 1:5

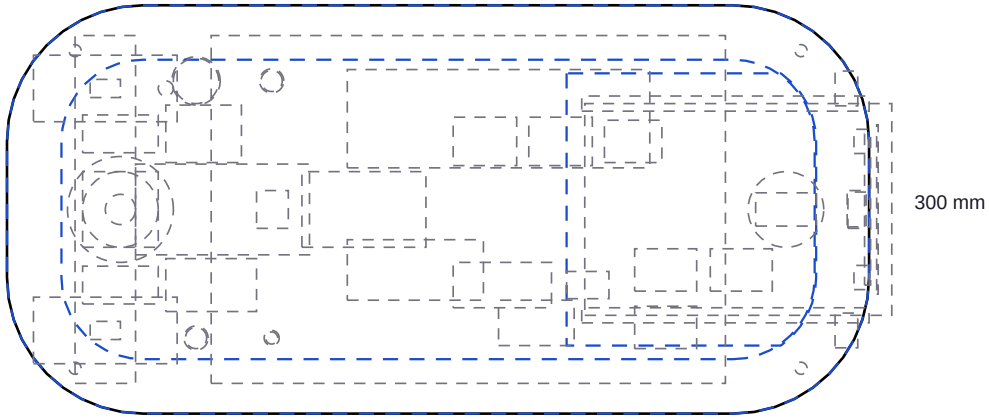

SIDE, scale 1:5

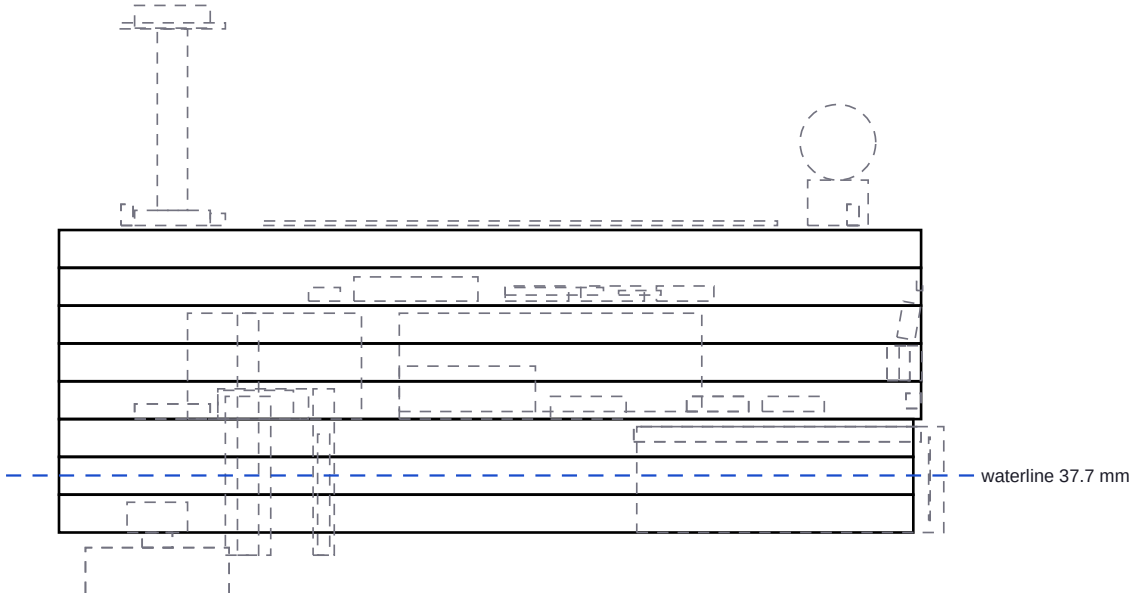

Size	600 x 300 mm, hull 200 mm tall, 348 mm to GPS top
Weight	4184 g empty, 4565 g with 381 g of plastic
Draft	37.7 mm empty, 40.9 mm full
Reserve buoyancy	10.5 kg before the deck goes under
Stability (GM)	104 mm: very stable
Trim	bow 2.6 mm higher than stern empty; slide the battery to level
Collection	1.9 L pull-out drawer
Camera	102 mm above water, tilted 10 deg down
Battery	Li-ion 3S6P 20 Ah (222 Wh), about 4.4 h
Thermocol	8 sheets 1000 x 500, or 3 sheets 2 x 3 ft (610 x 915)

How to use these templates

1. Print at 100% / Actual size. Check the 50 mm bar with a ruler.
2. Join tiles by matching the grey 50 mm grid and the tile letters.
3. Stick the paper on thermocol with a glue stick.
4. Cut with a hot-wire cutter or a new snap-off blade, held upright.
5. Stack layers on skewers through the + holes. Glue with Fevicol SH.
6. Never use Fevikwik, spray paint or solvent glue: they melt thermocol.
7. Sand the bow steps smooth, coat with PVA + tissue or packing tape, then water-based acrylic paint.
8. Float-test in a tub before fitting the electronics.

cut line

cut out (window / pocket)


fold / glue line

placement guide, do not cut

skewer hole: lines up the layers


VARUNA AI Pod | Base layer 1 - tile A1 of B3 (25 mm thermocol)

<- must measure 50 mm

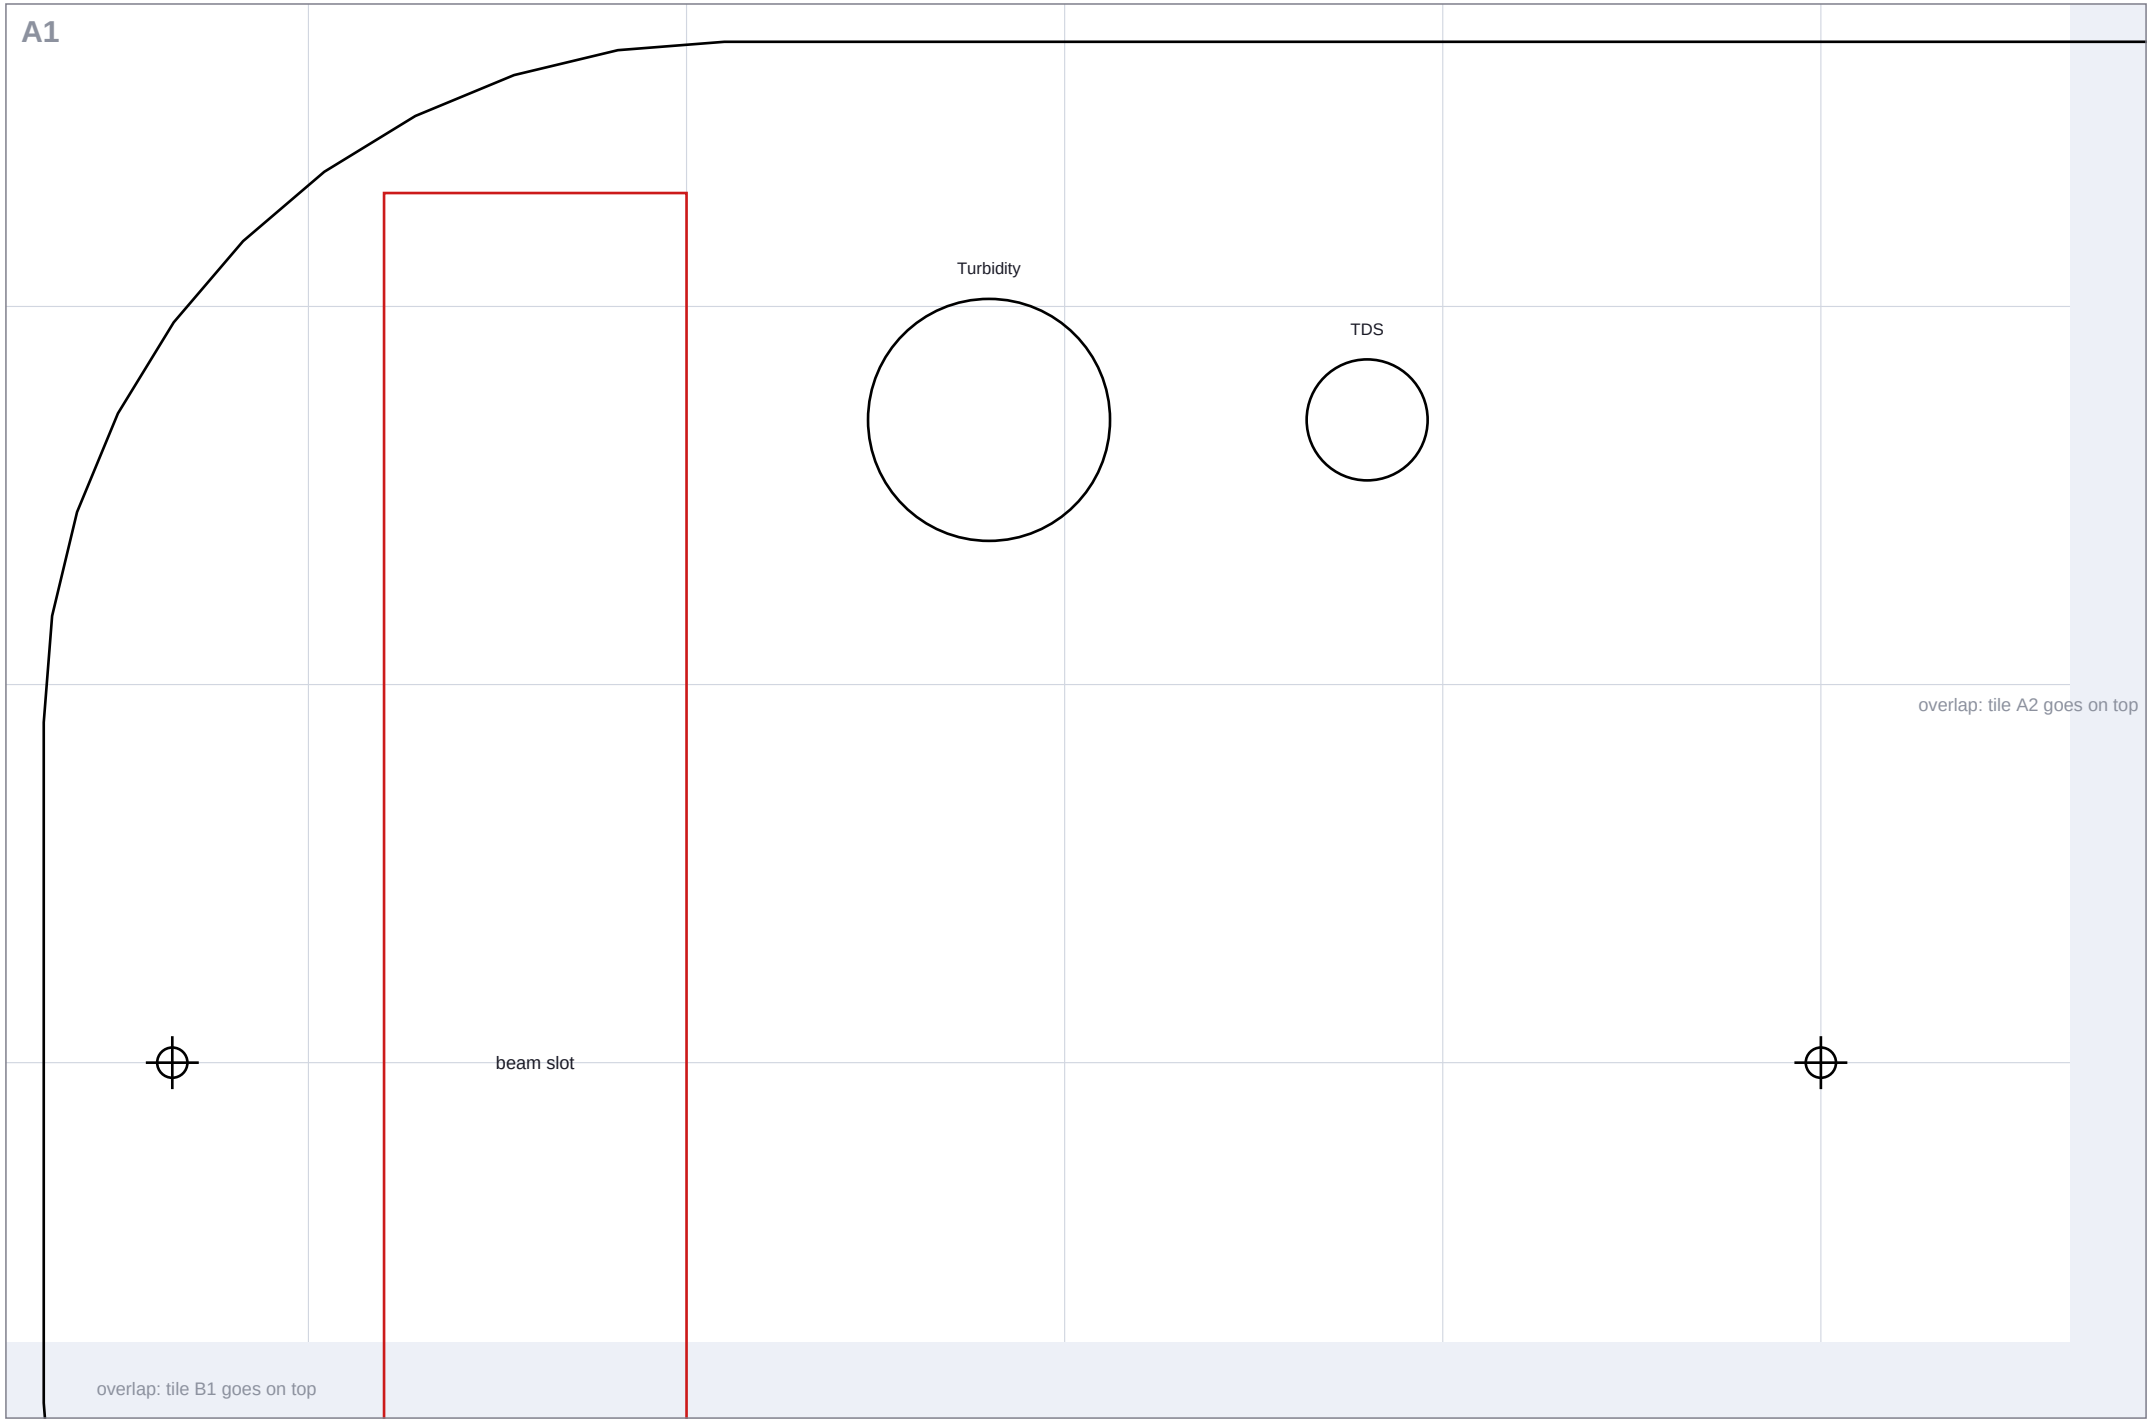

VARUNA AI Pod | Base layer 1 - tile A2 of B3 (25 mm thermocol)

<- must measure 50 mm

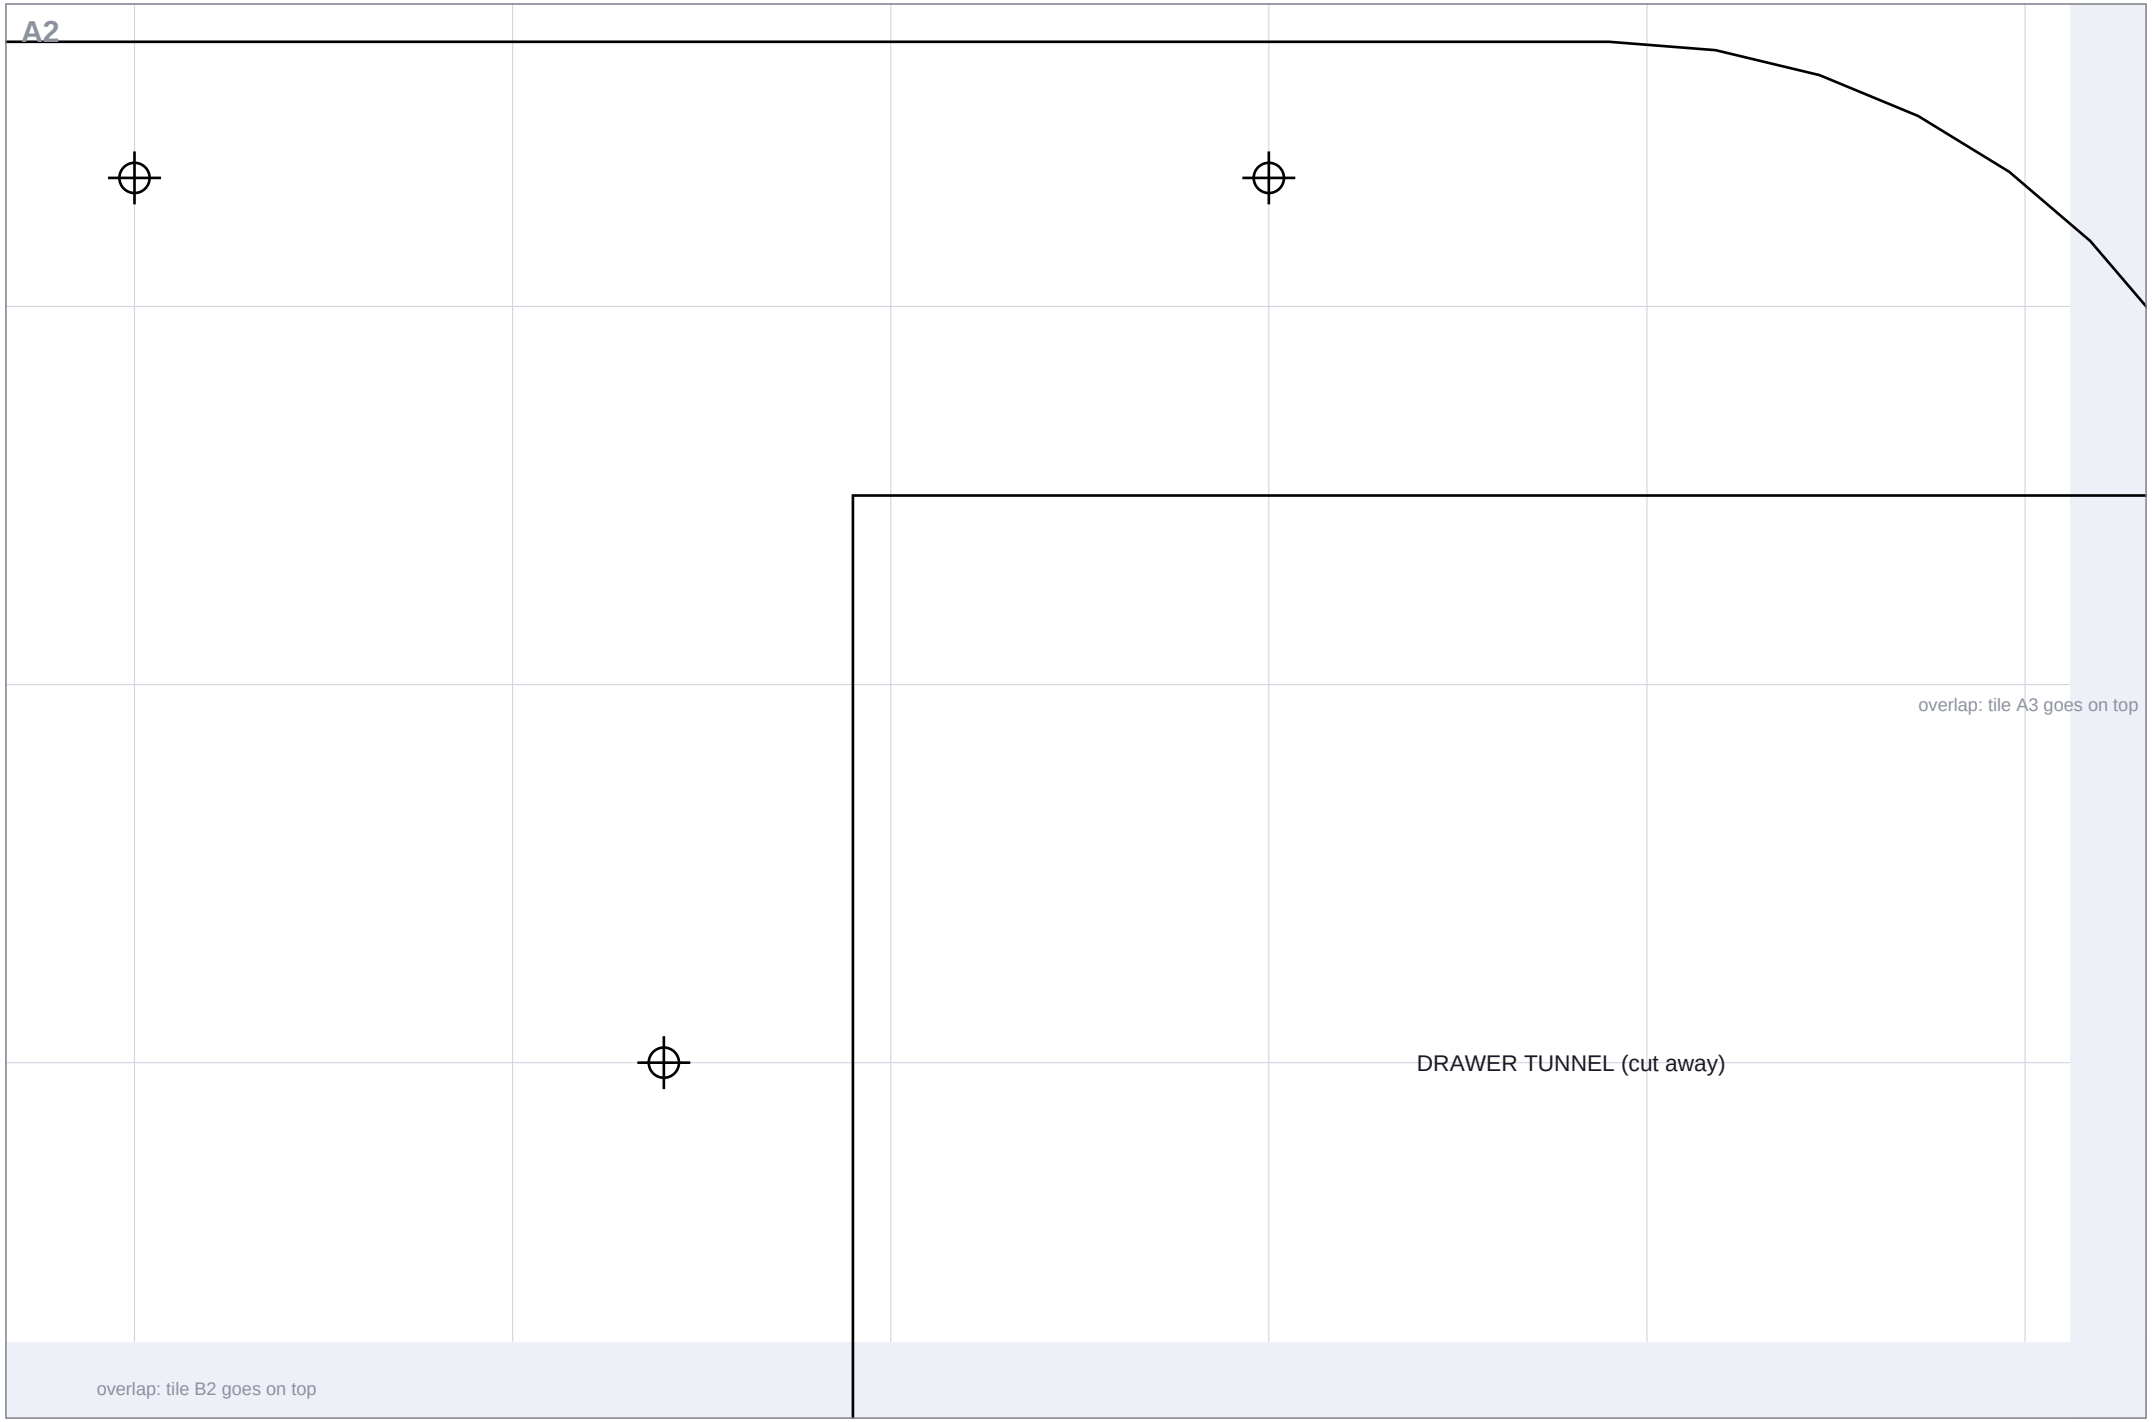

VARUNA AI Pod | Base layer 1 - tile A3 of B3 (25 mm thermocol)

<- must measure 50 mm


A3



overlap: tile B3 goes on top


VARUNA AI Pod | Base layer 1 - tile B1 of B3 (25 mm thermocol)

<- must measure 50 mm

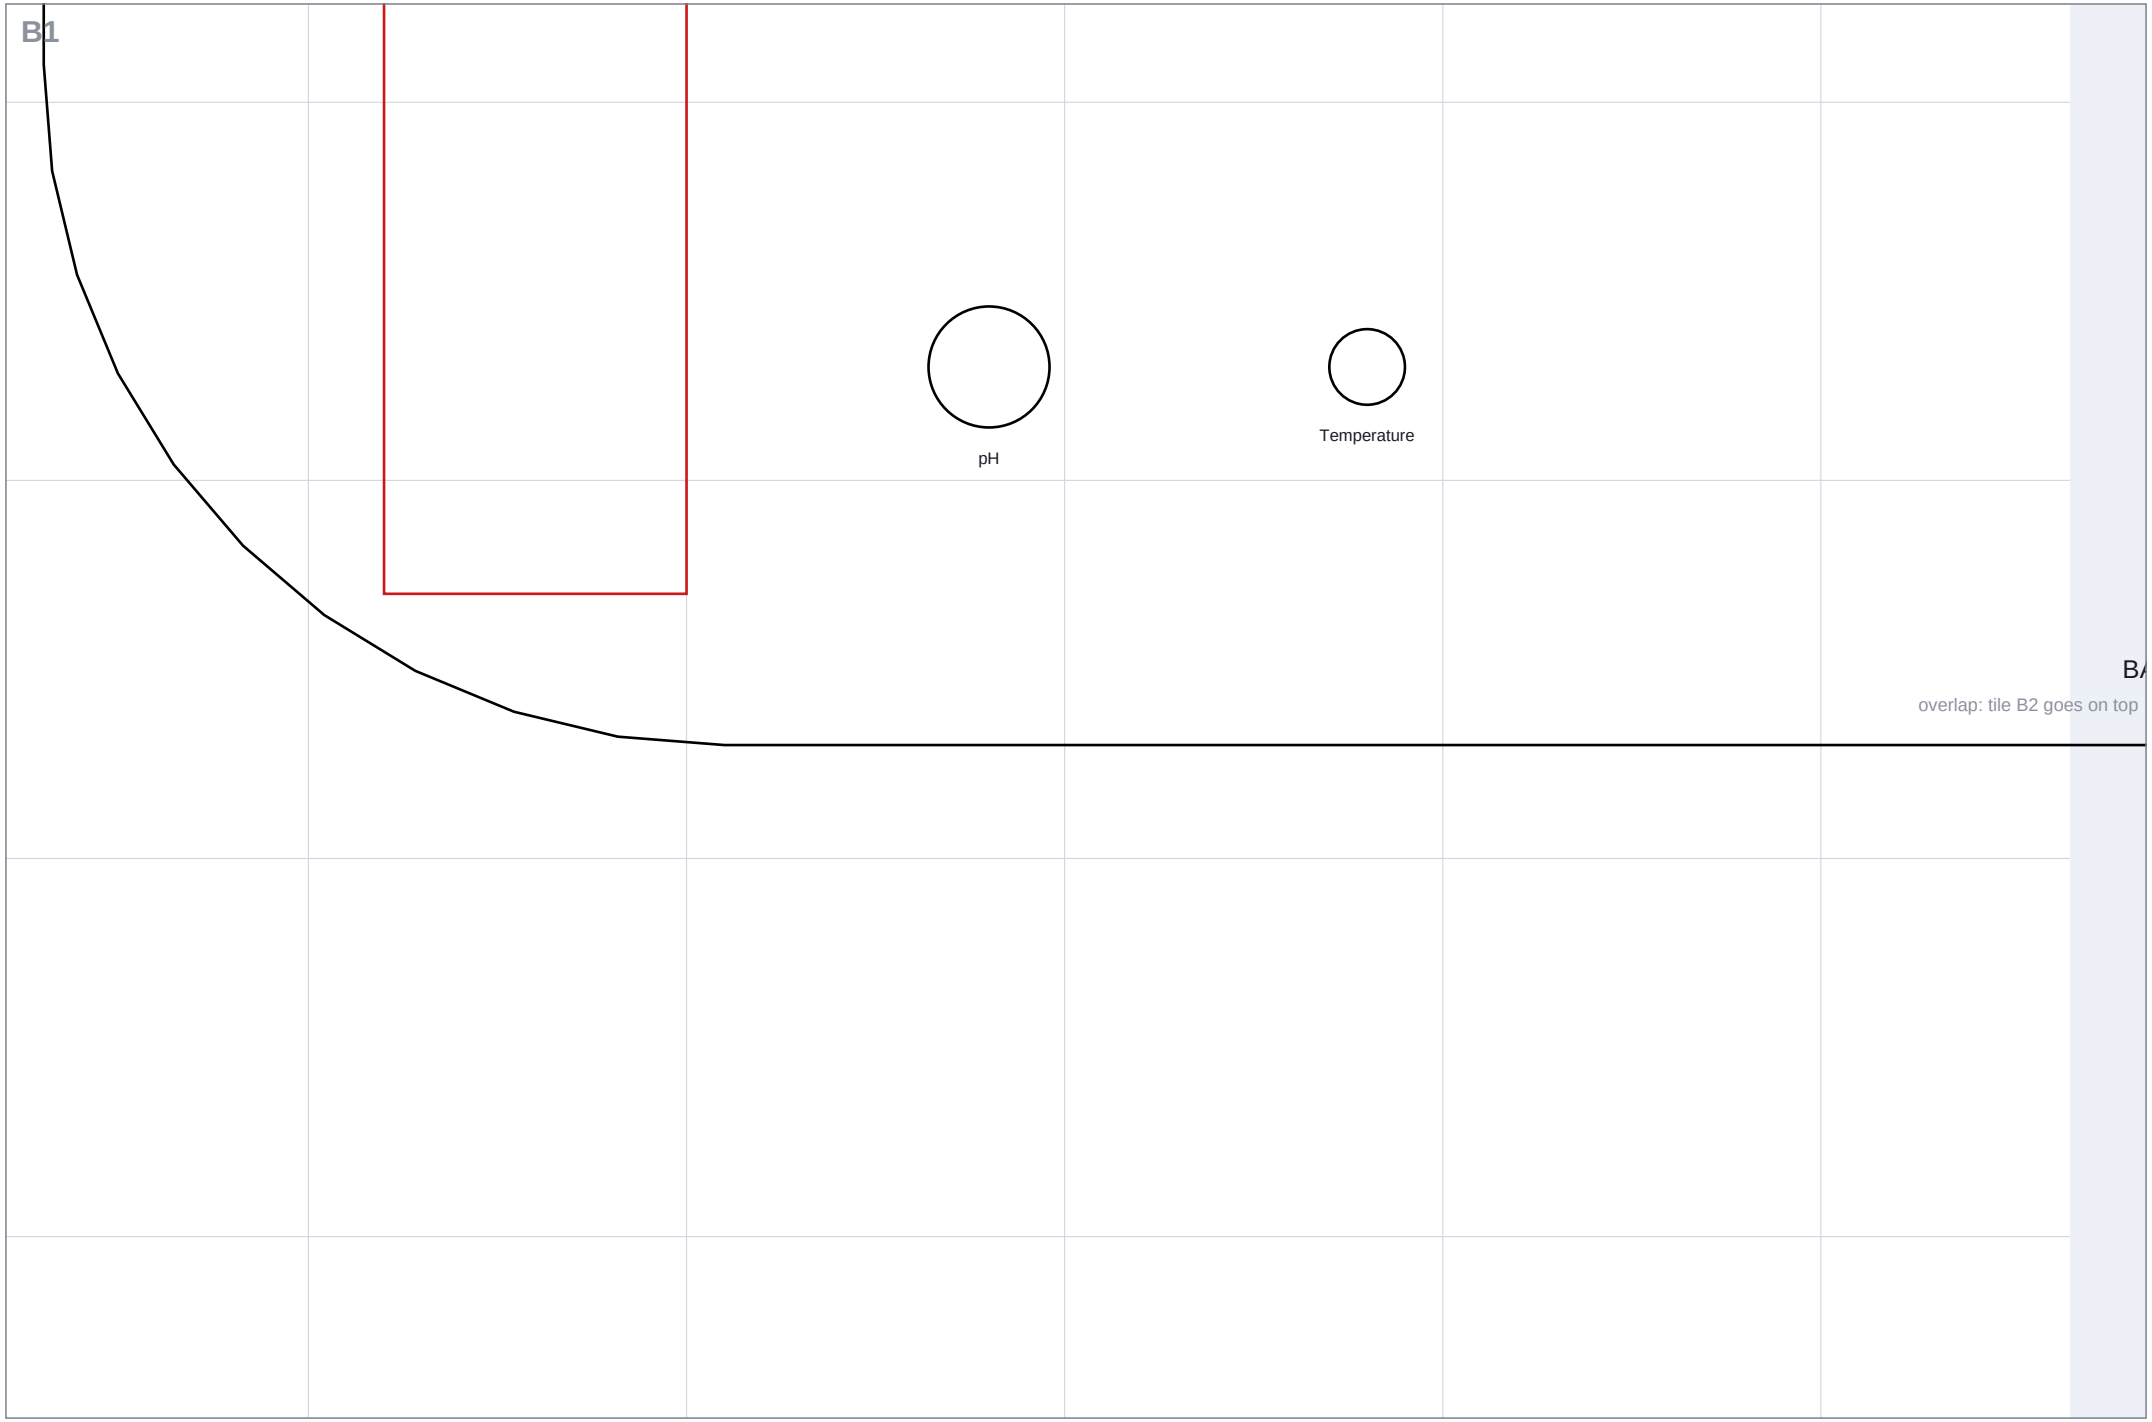

VARUNA AI Pod | Base layer 1 - tile B2 of B3 (25 mm thermocol)

<- must measure 50 mm

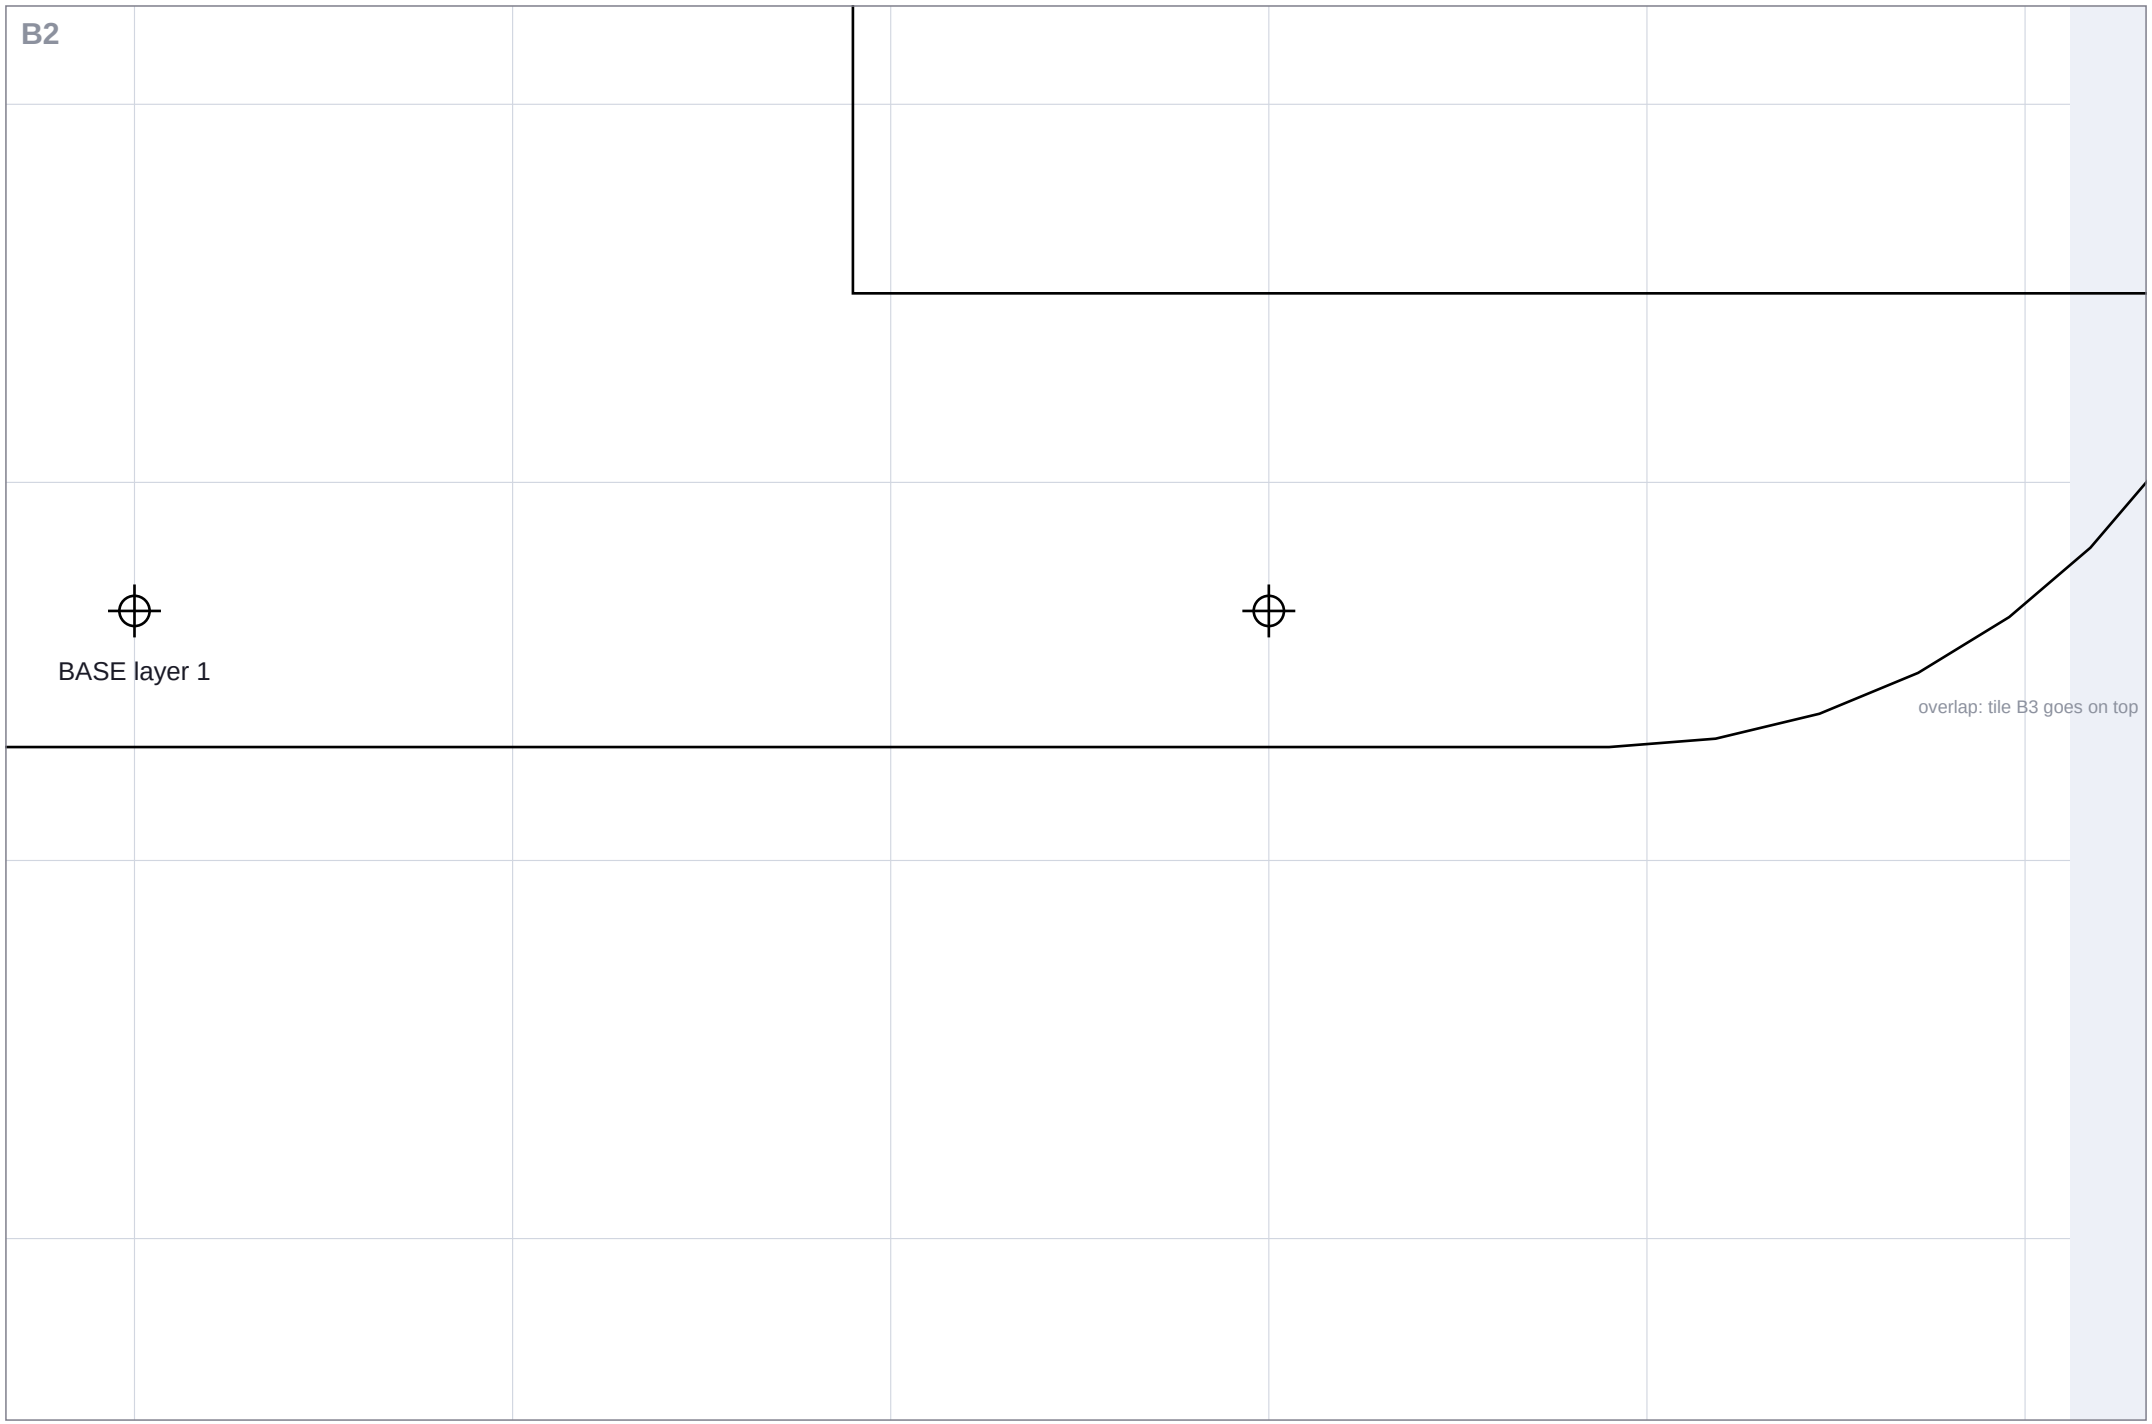

VARUNA AI Pod | Base layer 1 - tile B3 of B3 (25 mm thermocol)


<- must measure 50 mm

B3




VARUNA AI Pod | Base layer 2 - tile A1 of B3 (25 mm thermocol)

<- must measure 50 mm

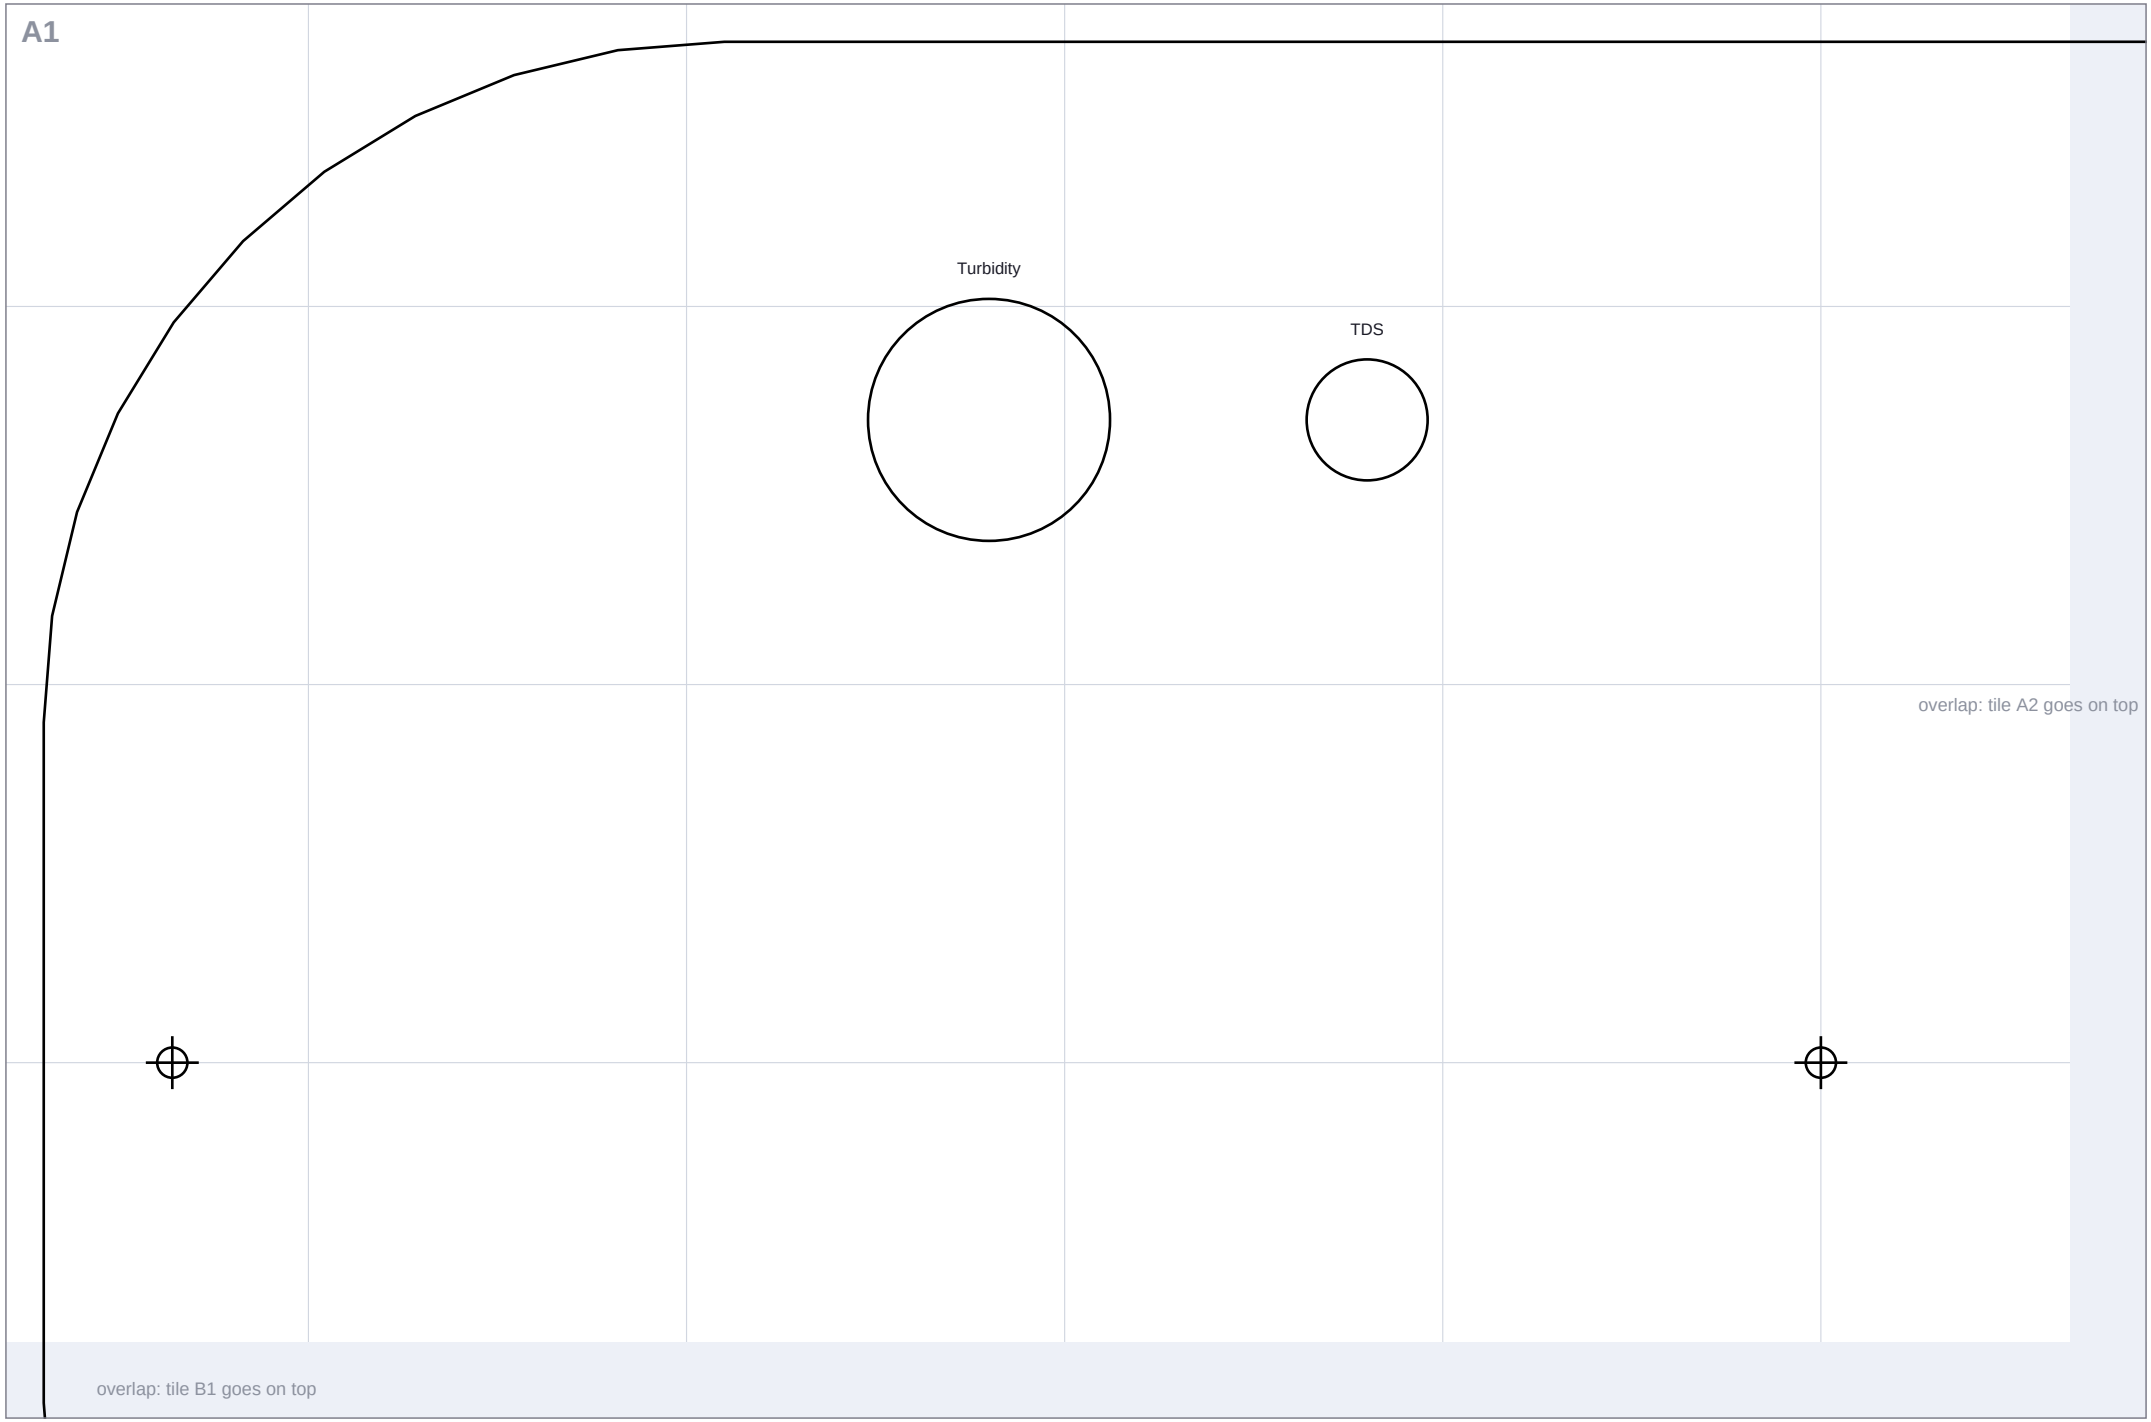

VARUNA AI Pod | Base layer 2 - tile A2 of B3 (25 mm thermocol)

<- must measure 50 mm

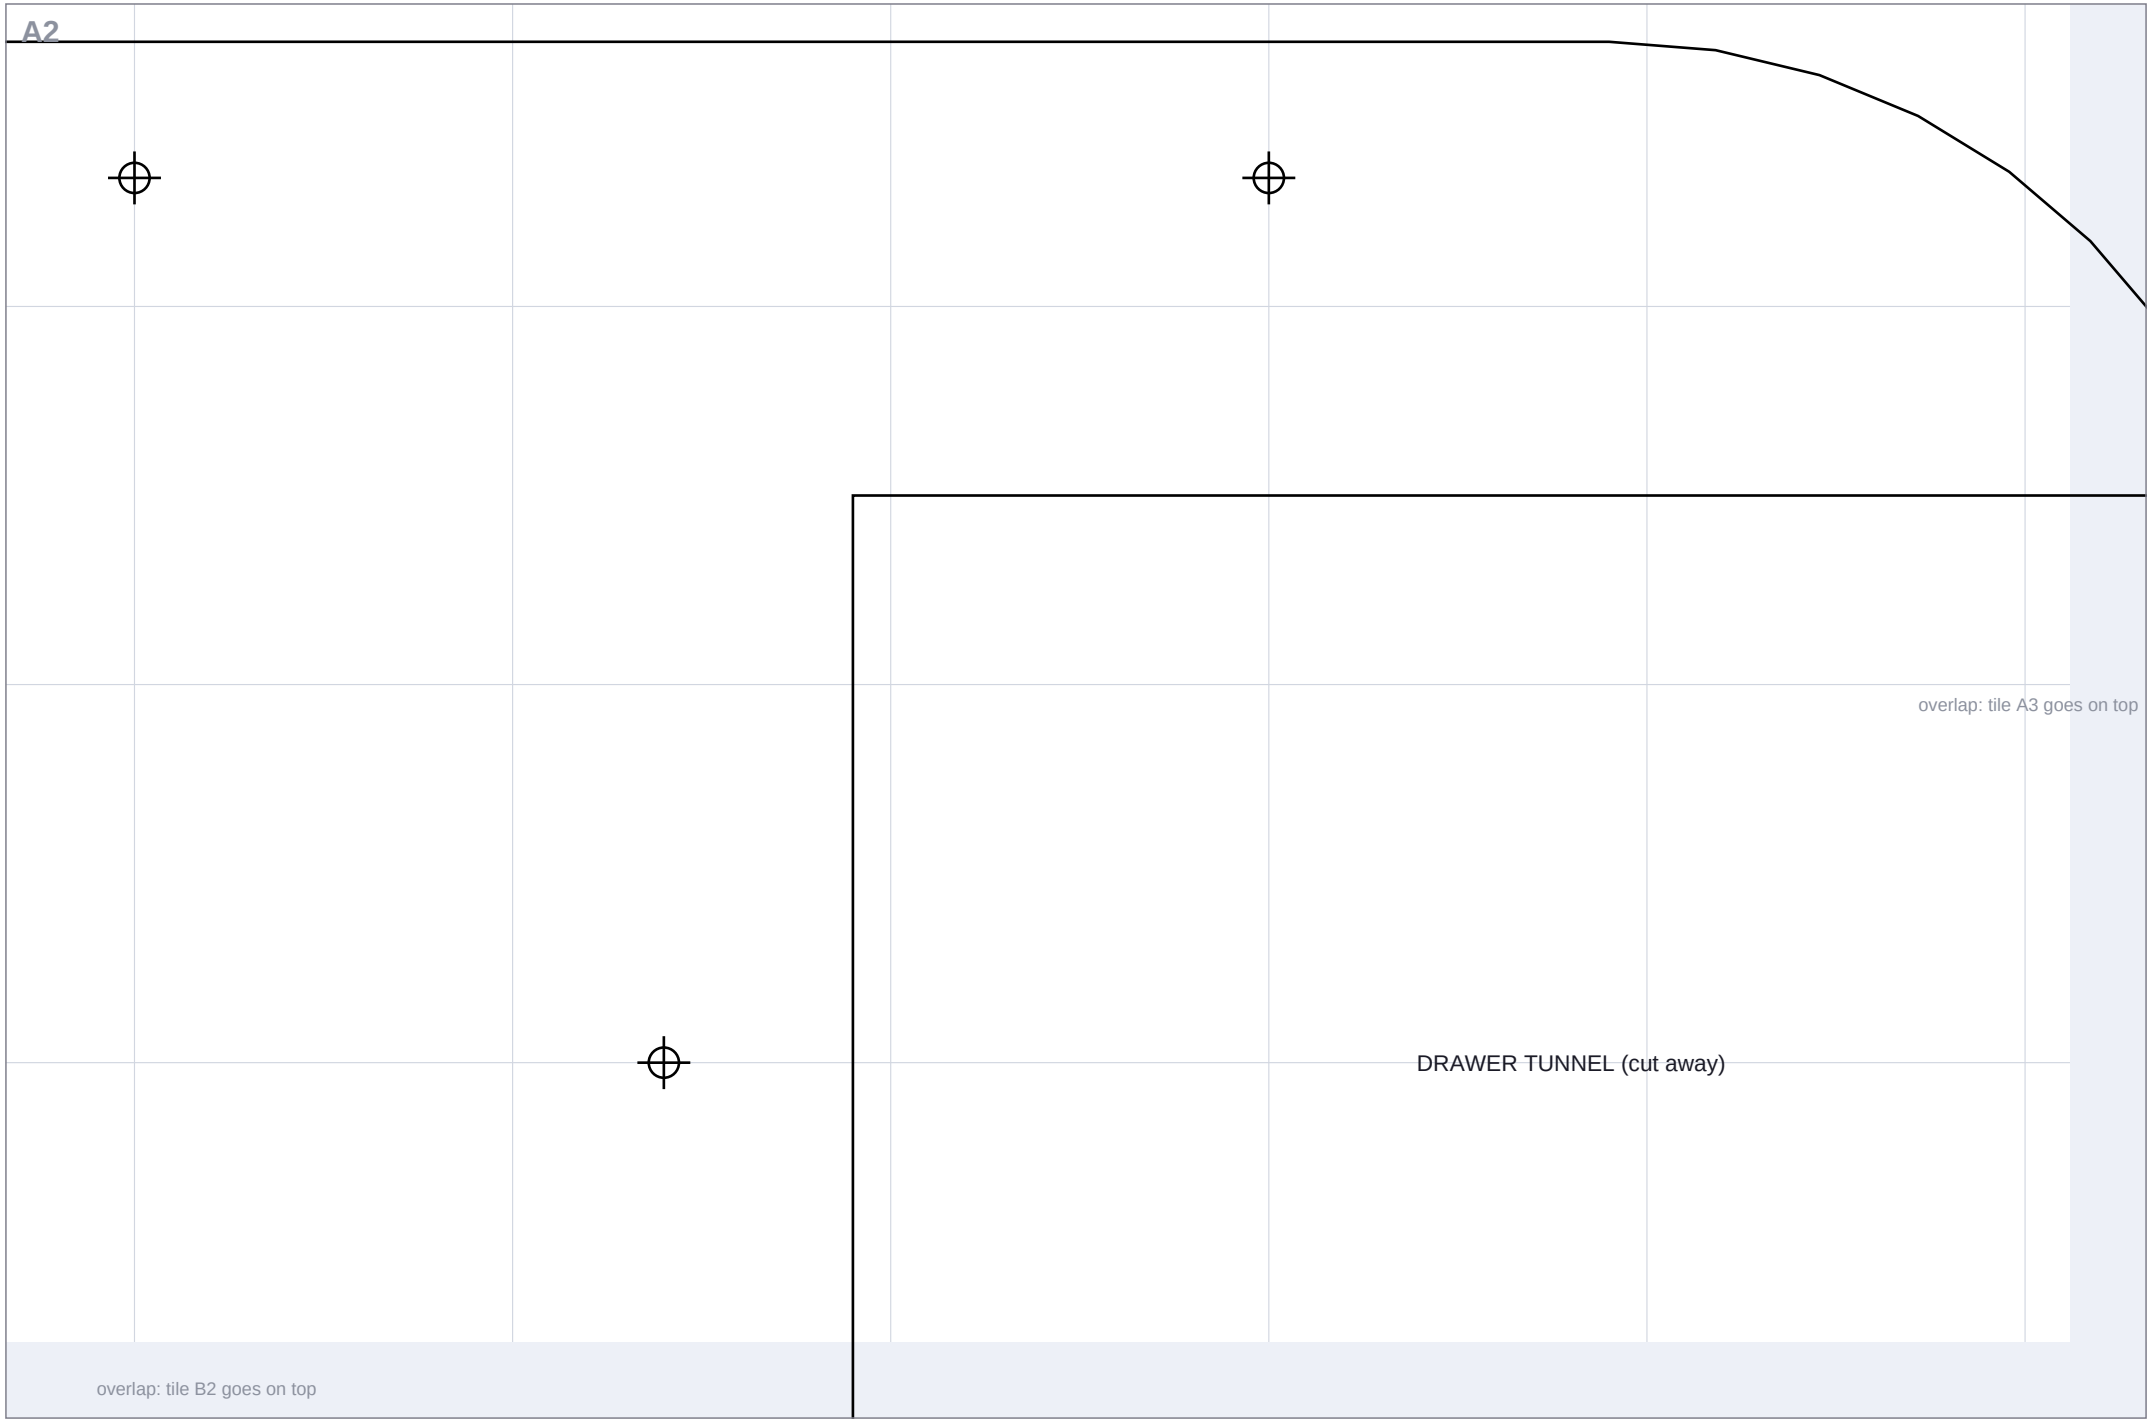

VARUNA AI Pod | Base layer 2 - tile A3 of B3 (25 mm thermocol)

<- must measure 50 mm


A3




overlap: tile B3 goes on top

VARUNA AI Pod | Base layer 2 - tile B1 of B3 (25 mm thermocol)

<- must measure 50 mm

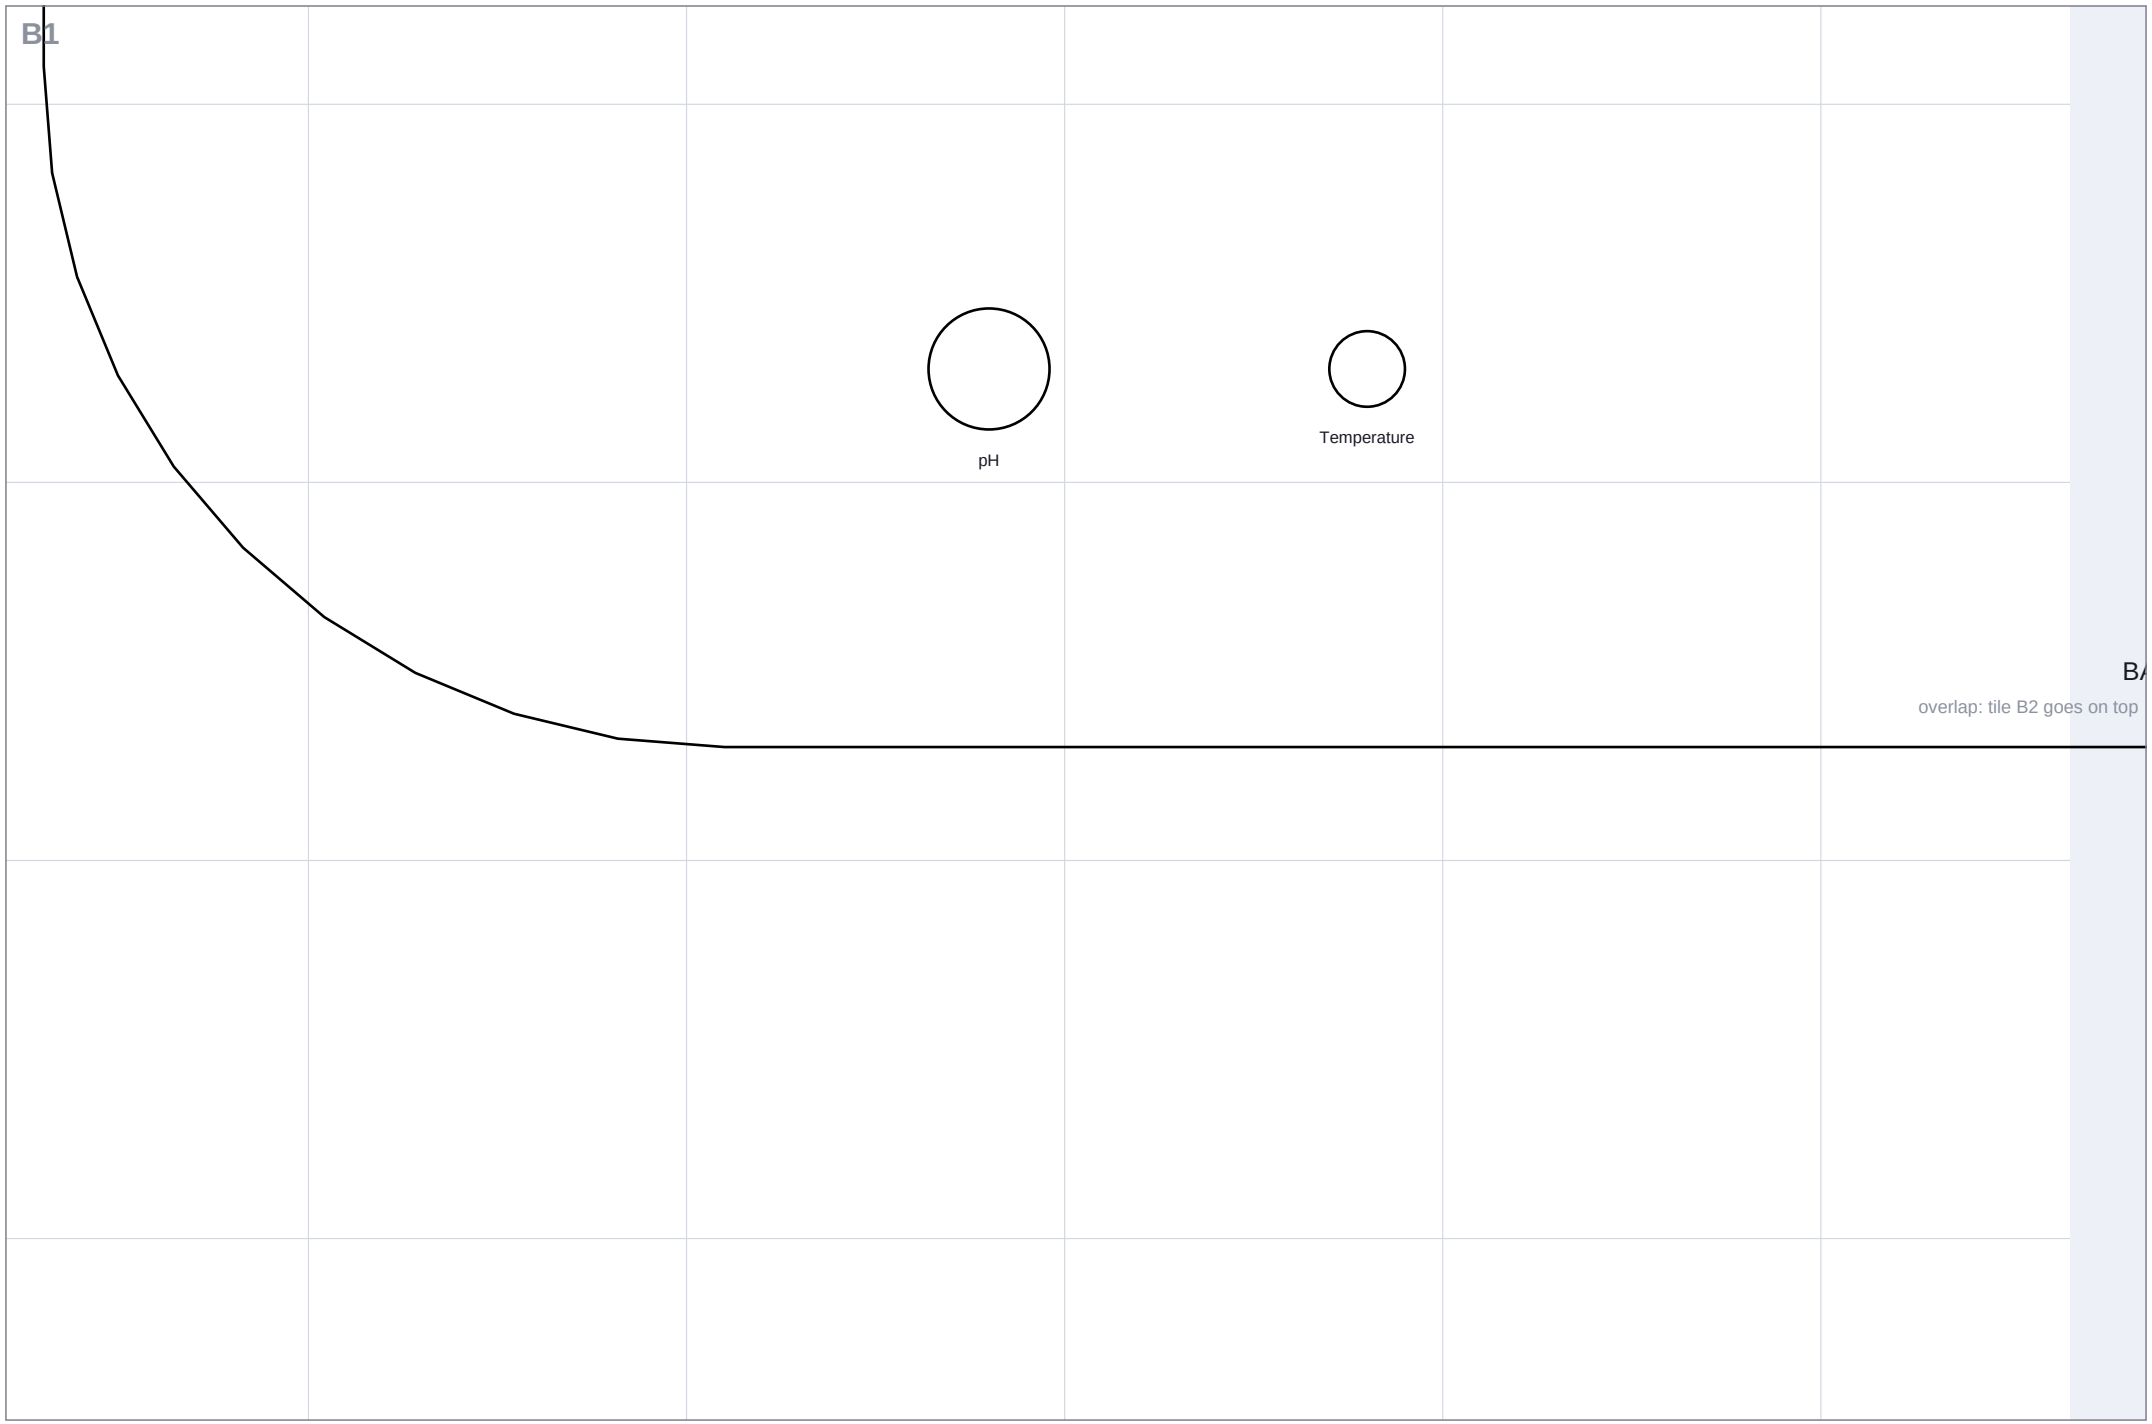

VARUNA AI Pod | Base layer 2 - tile B2 of B3 (25 mm thermocol)

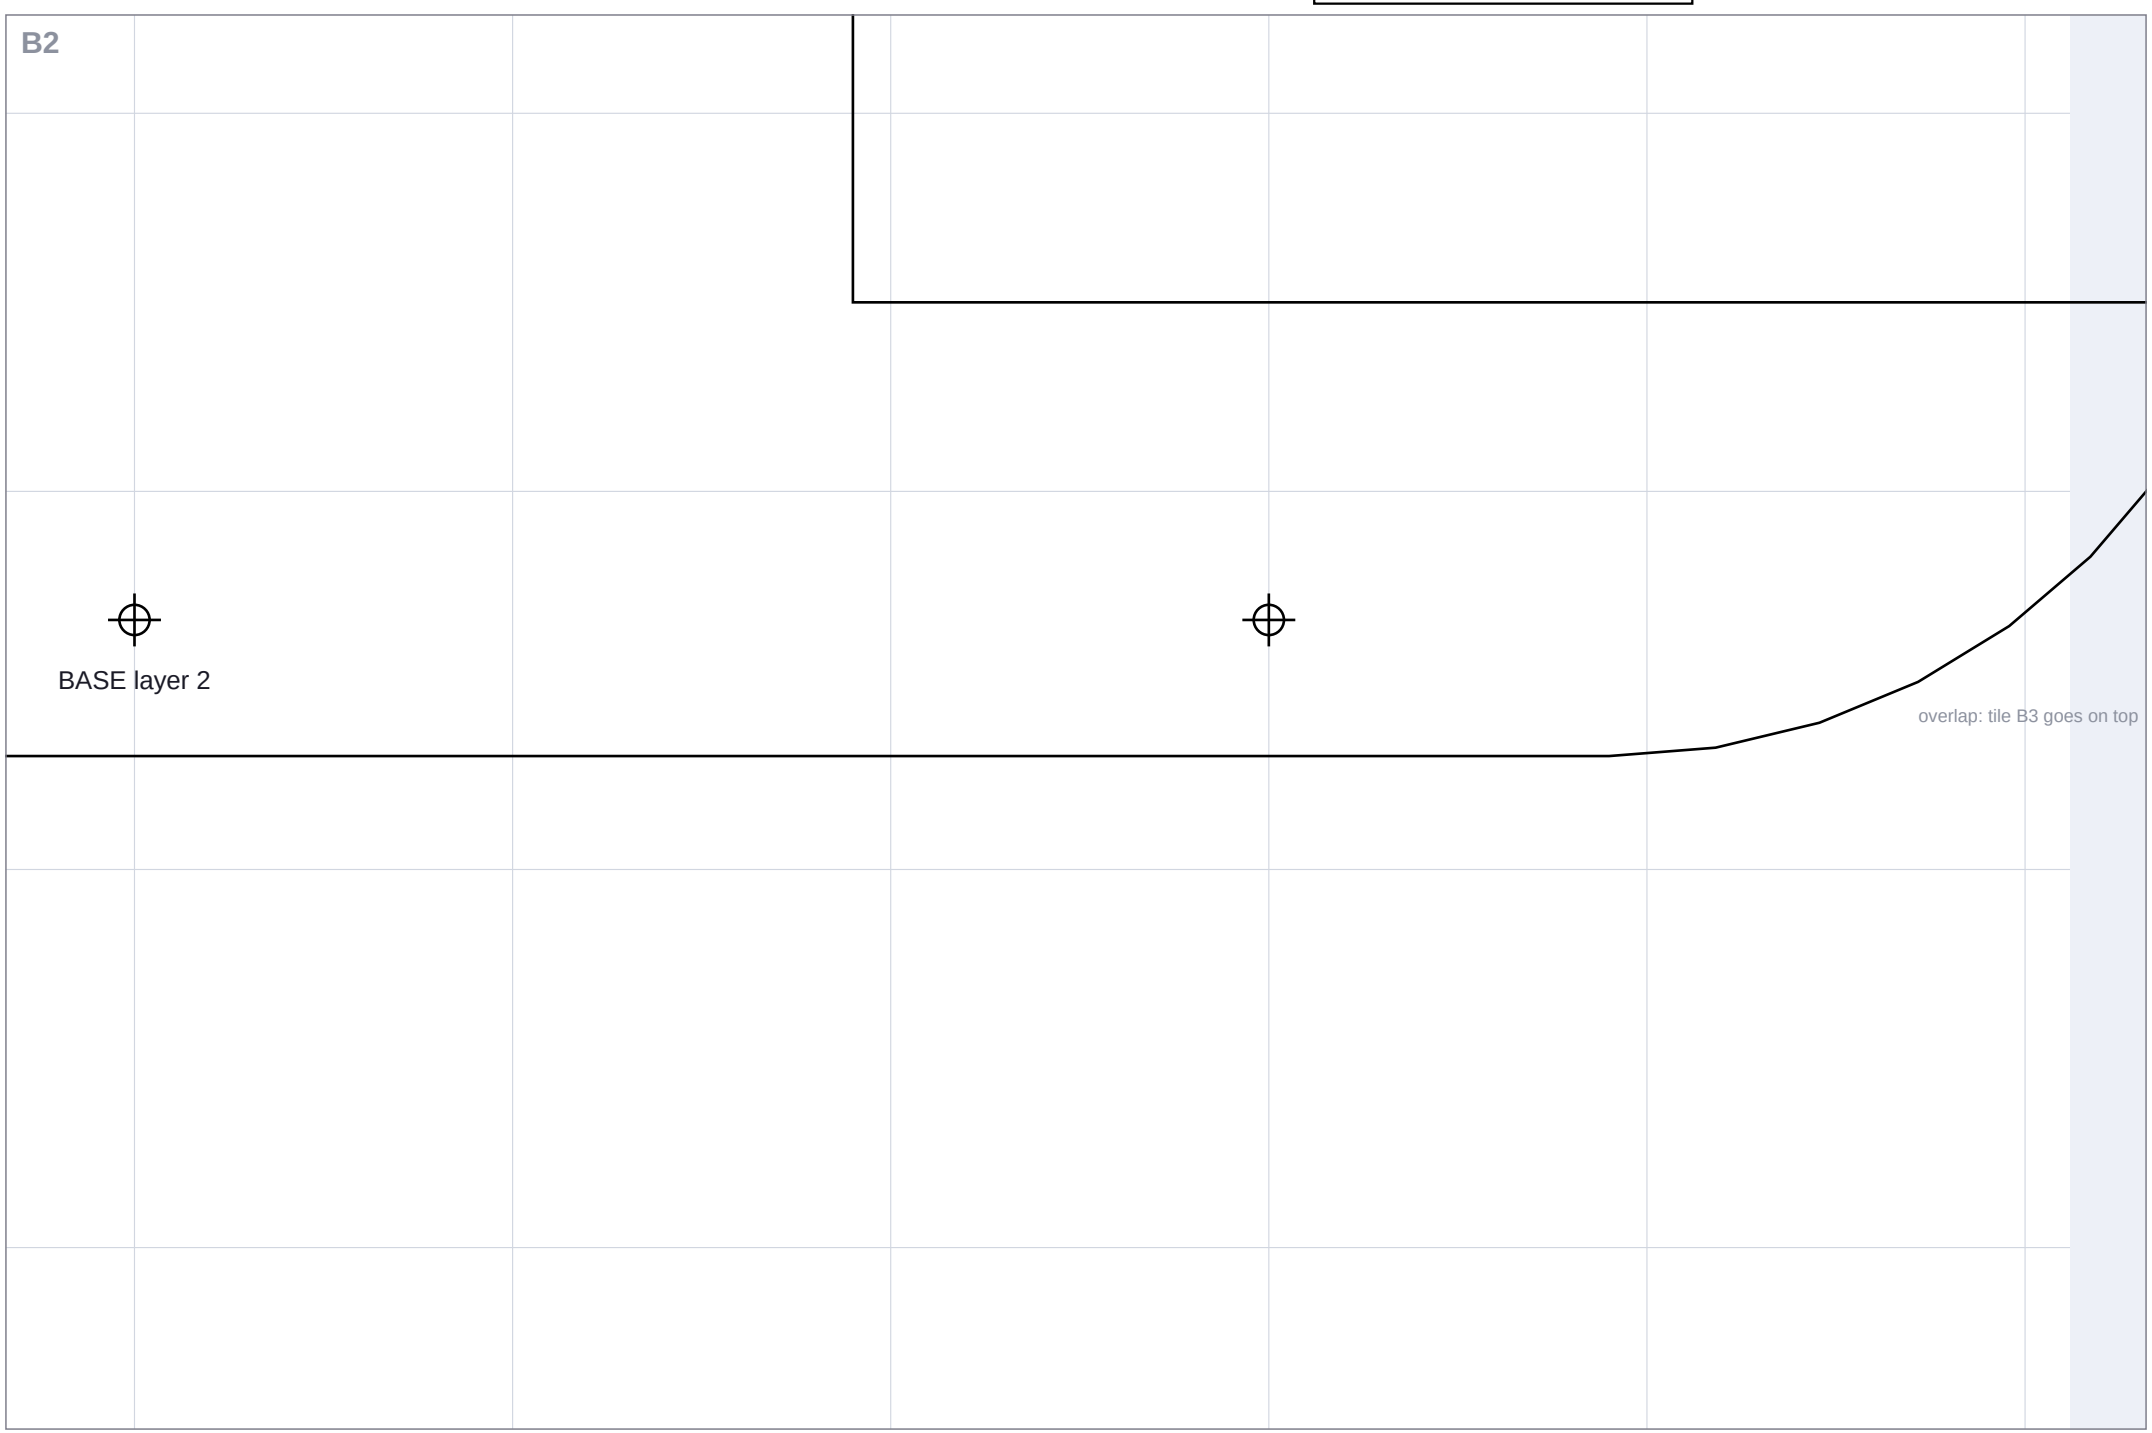


VARUNA AI Pod | Base layer 2 - tile B3 of B3 (25 mm thermocol)

<- must measure 50 mm

B3




<- must measure 50 mm

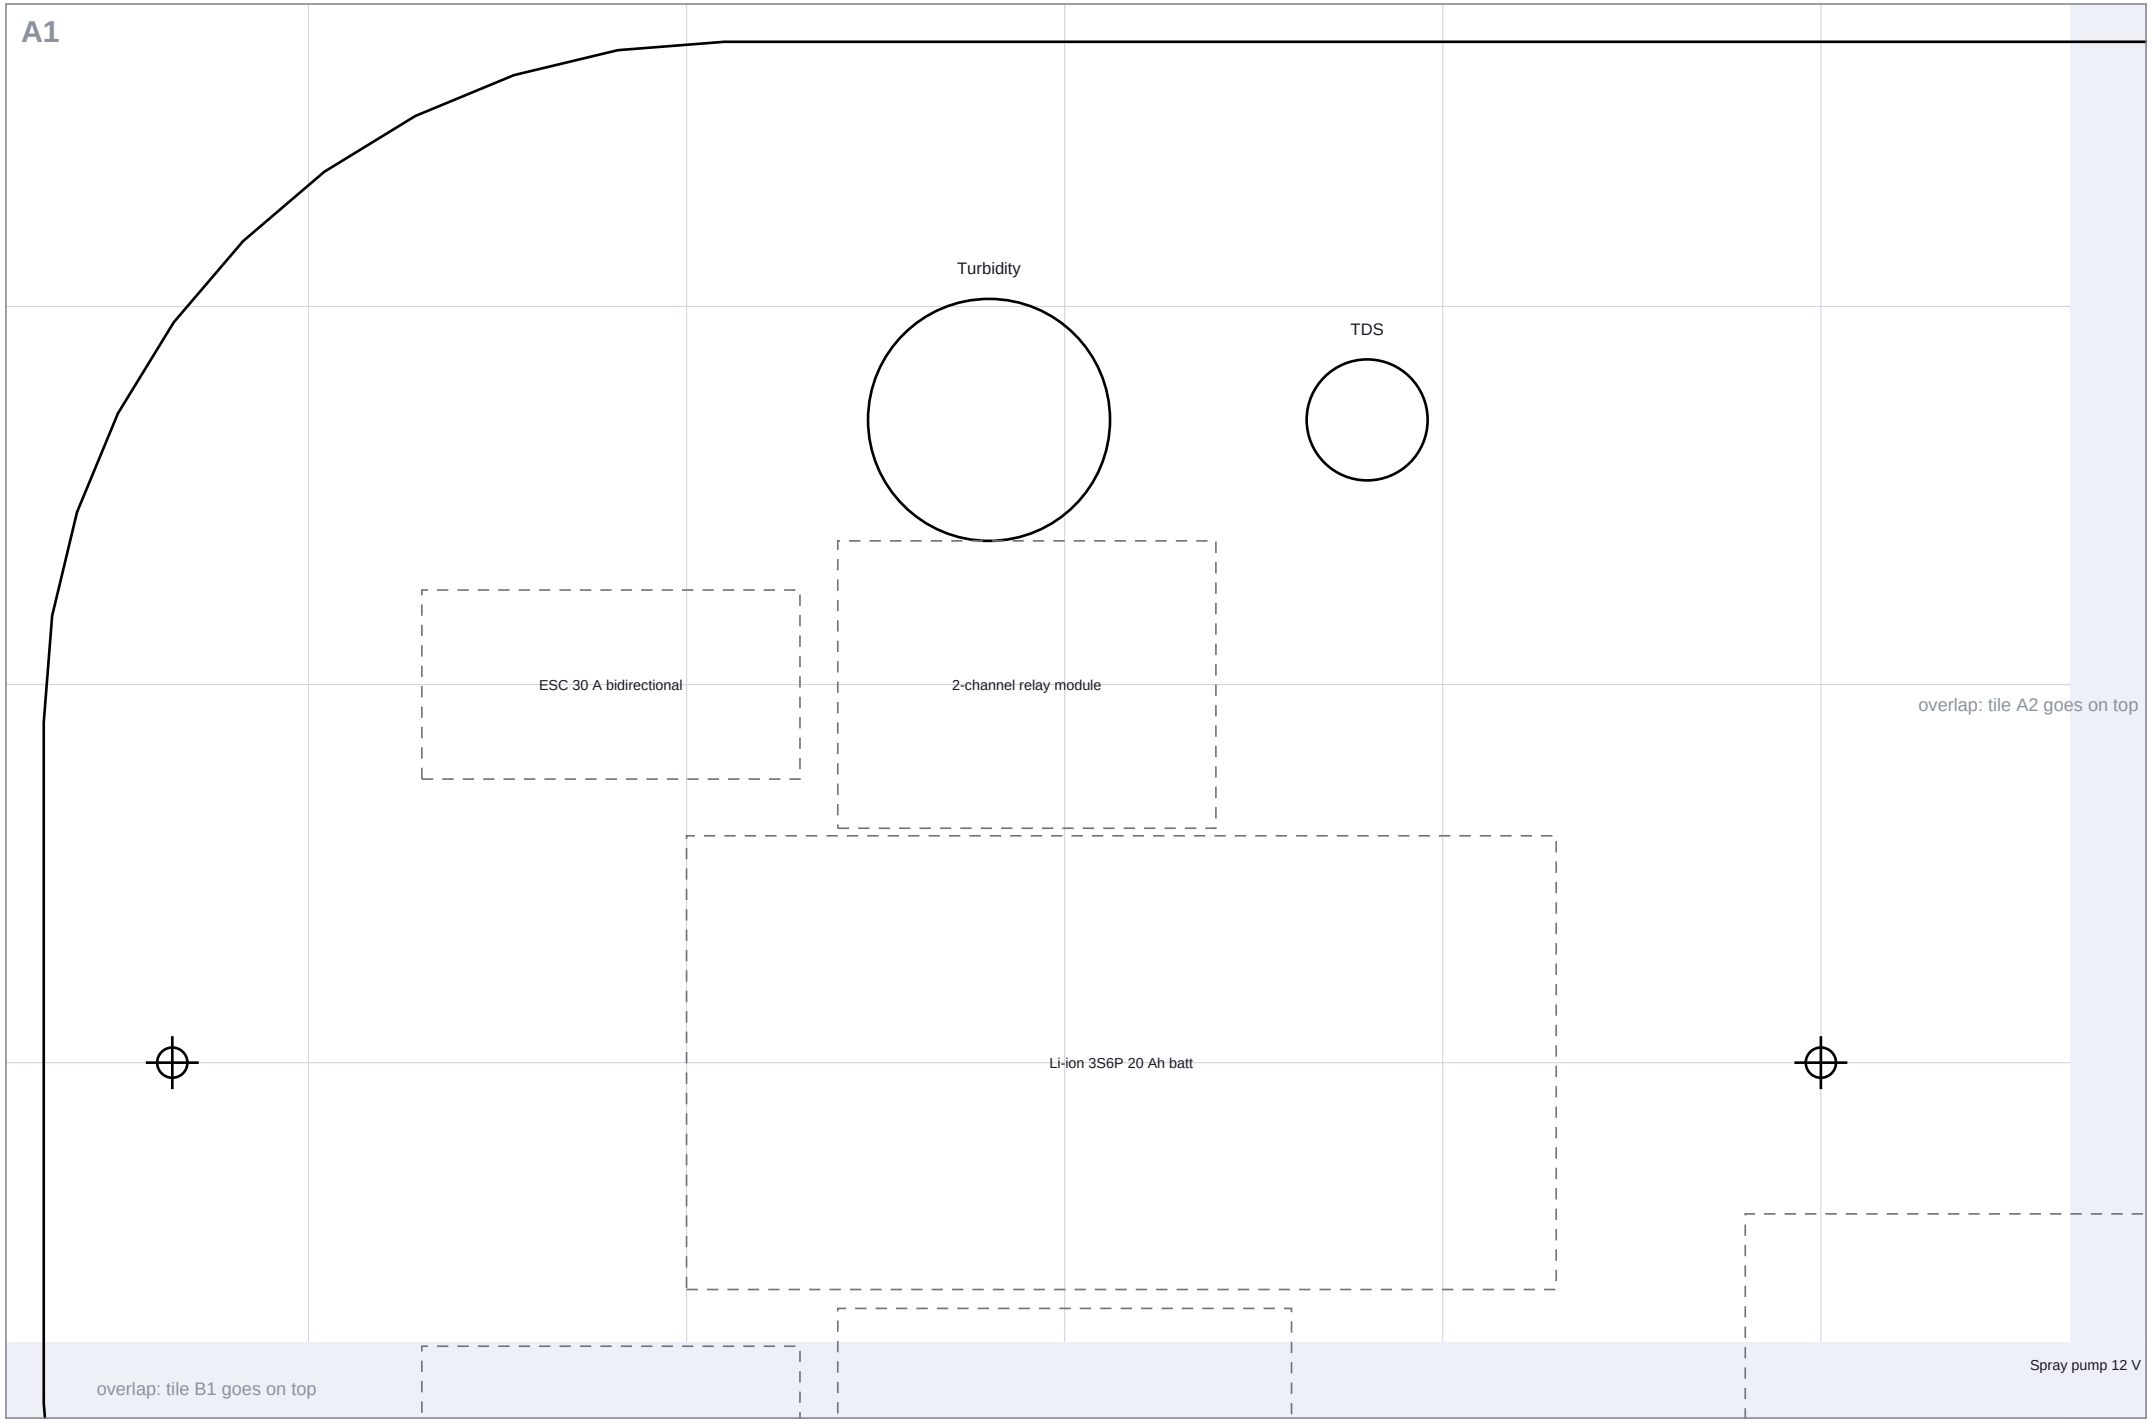

VARUNA AI Pod | Base layer 3 - tile A2 of B3 (25 mm thermocol)

<- must measure 50 mm

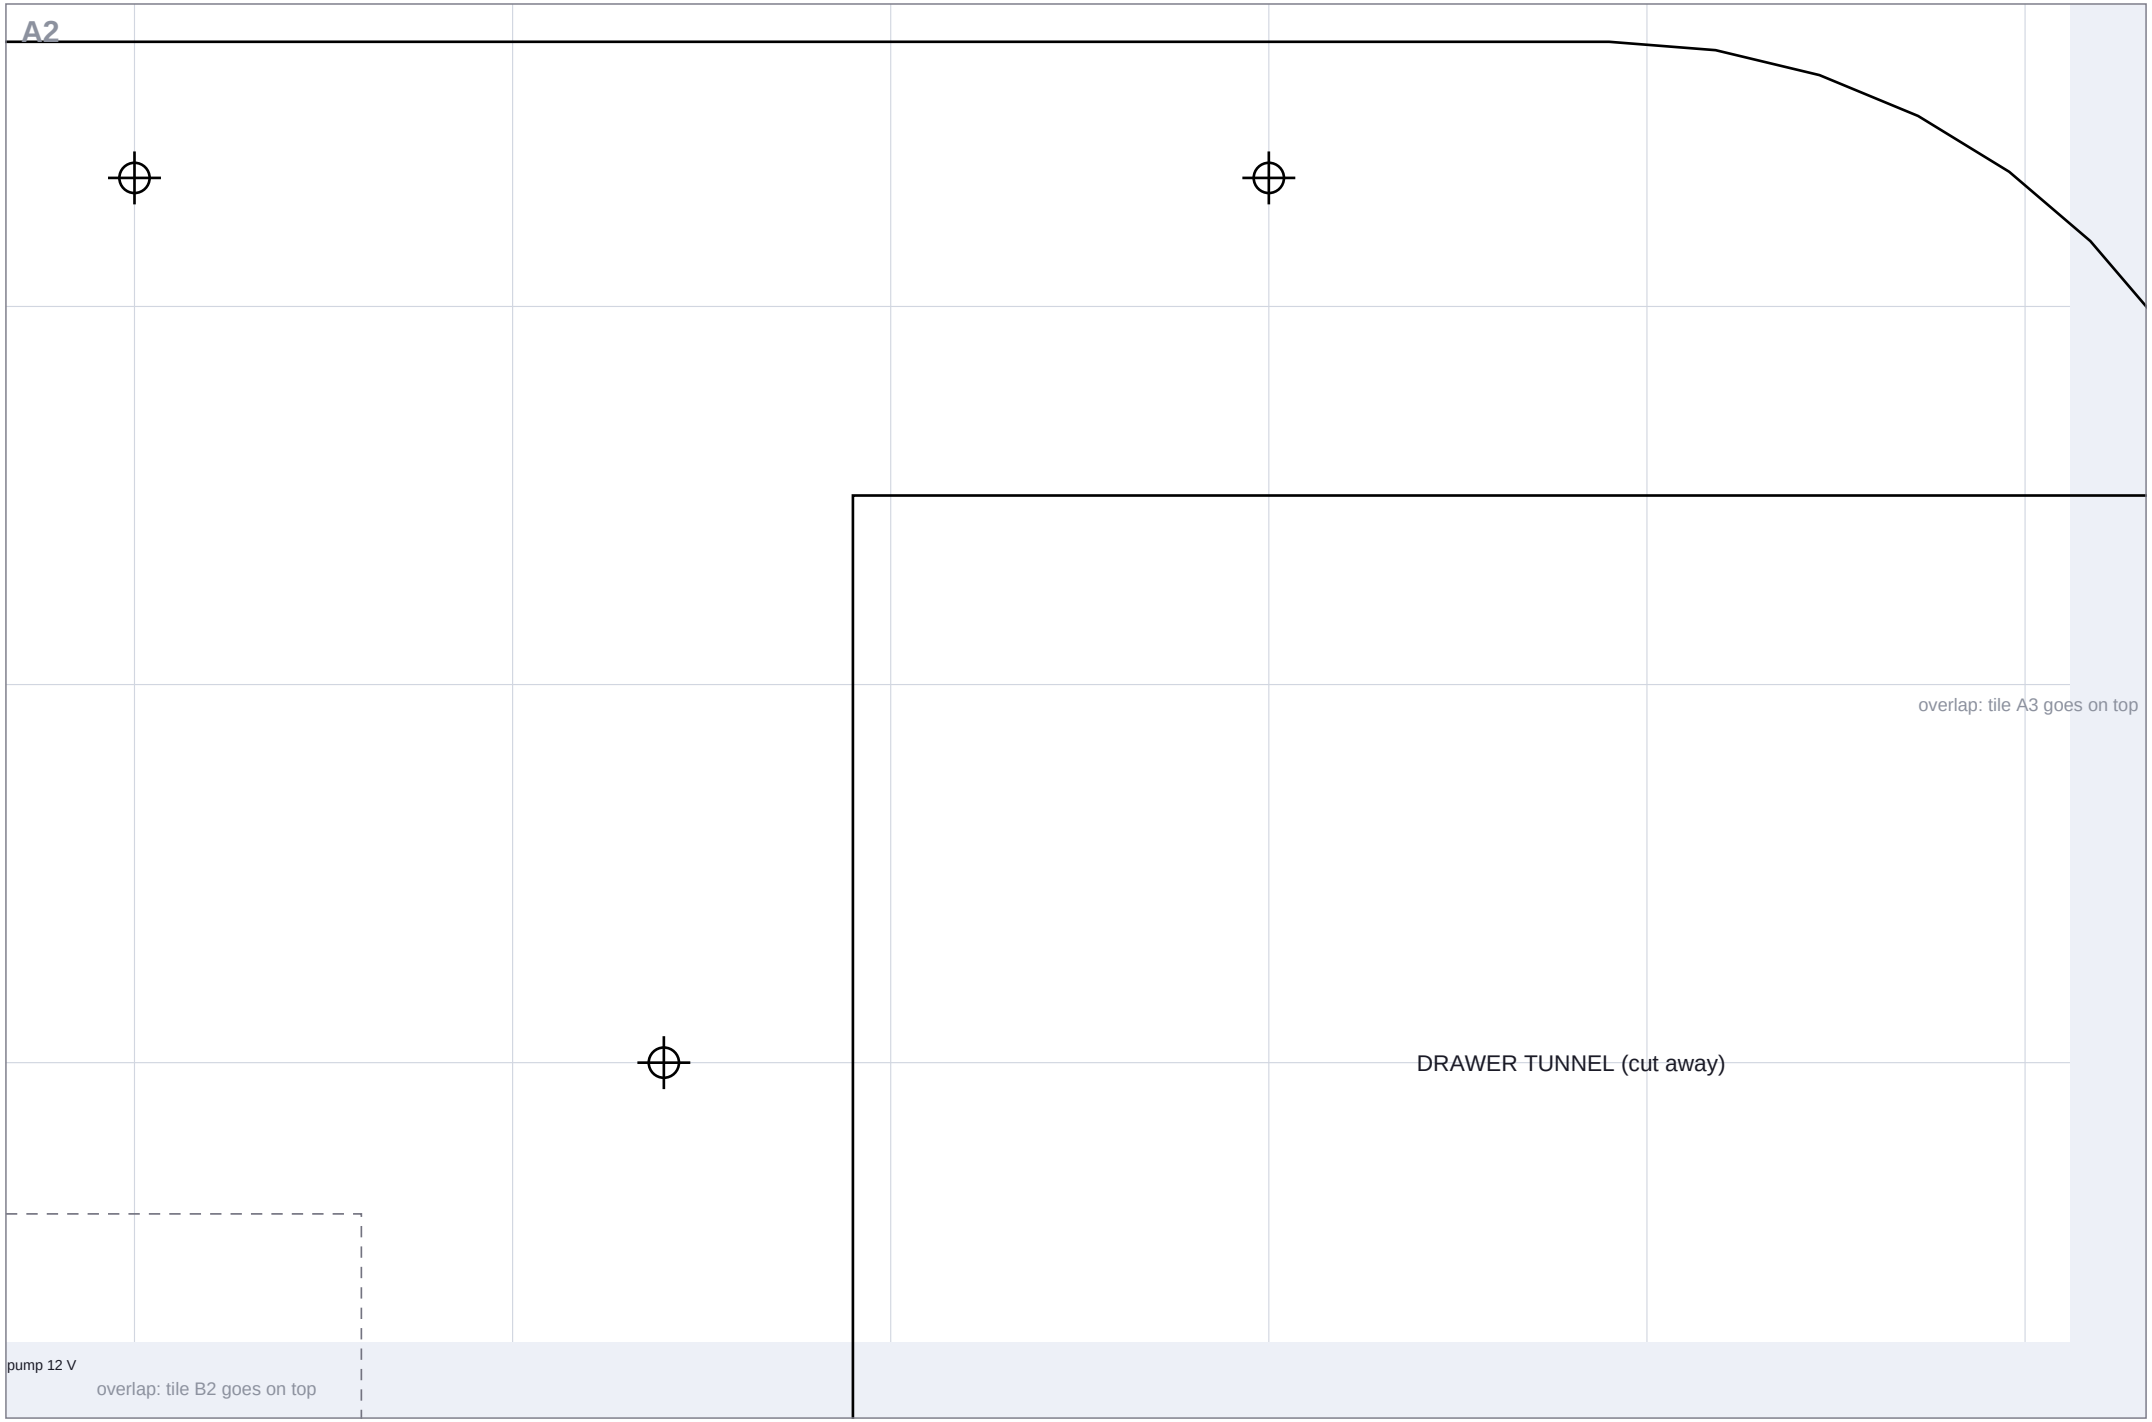

VARUNA AI Pod | Base layer 3 - tile A3 of B3 (25 mm thermocol)


<- must measure 50 mm

A3




overlap: tile B3 goes on top

VARUNA AI Pod | Base layer 3 - tile B1 of B3 (25 mm thermocol)

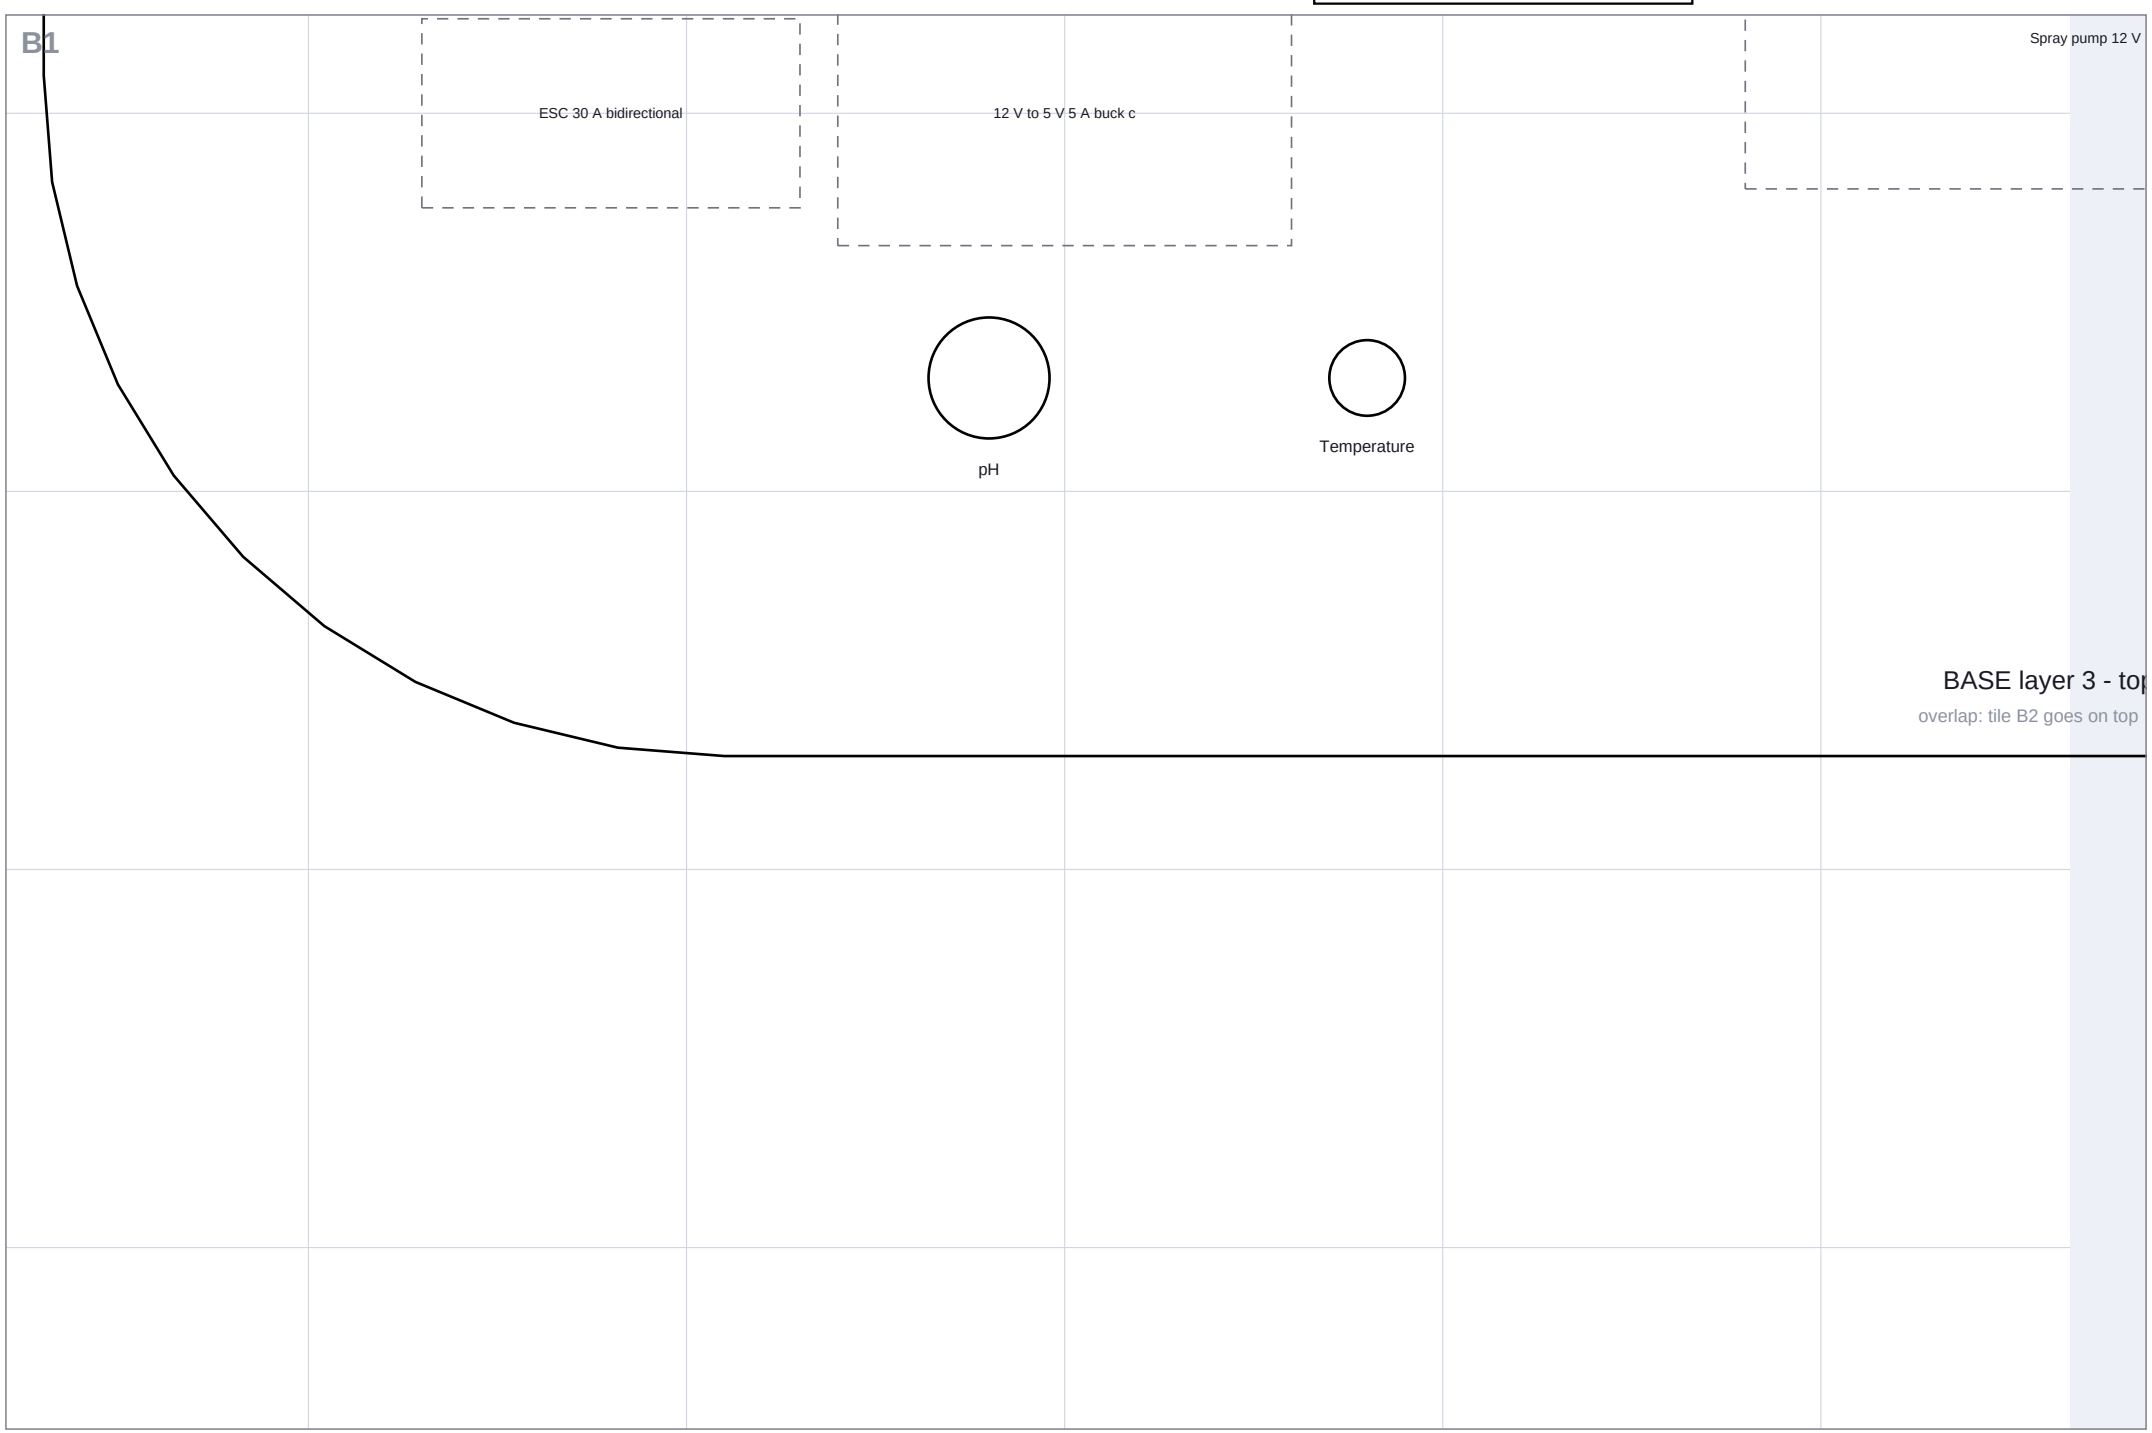

VARUNA AI Pod | Base layer 3 - tile B2 of B3 (25 mm thermocol)

<- must measure 50 mm

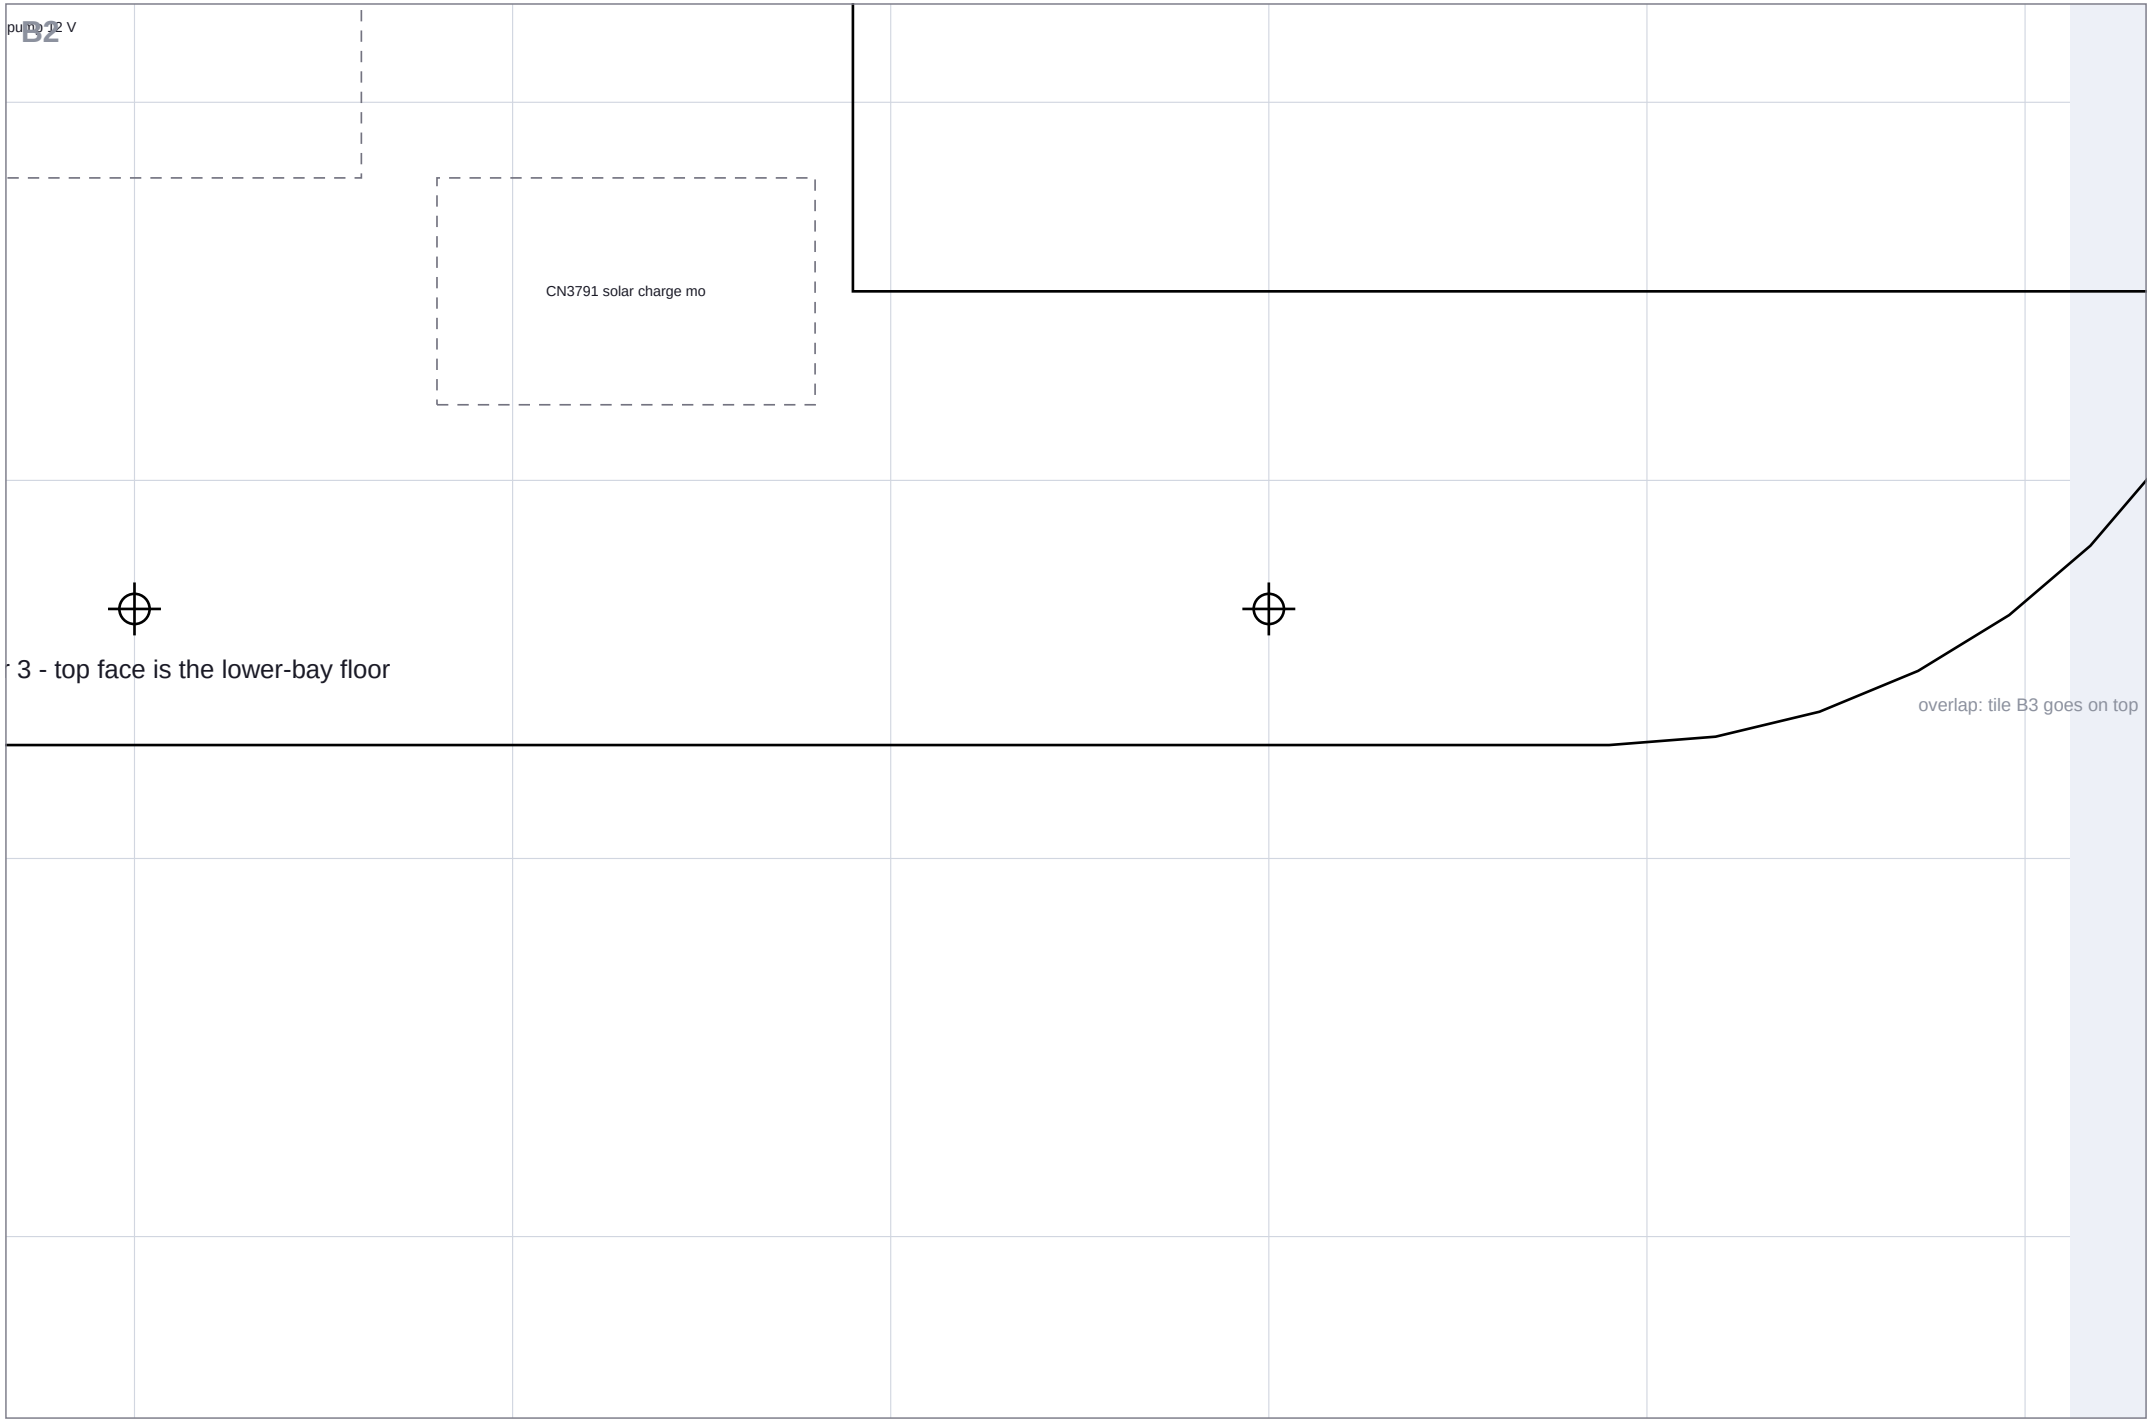


VARUNA AI Pod | Base layer 3 - tile B3 of B3 (25 mm thermocol)

<- must measure 50 mm


B3




<- must measure 50 mm

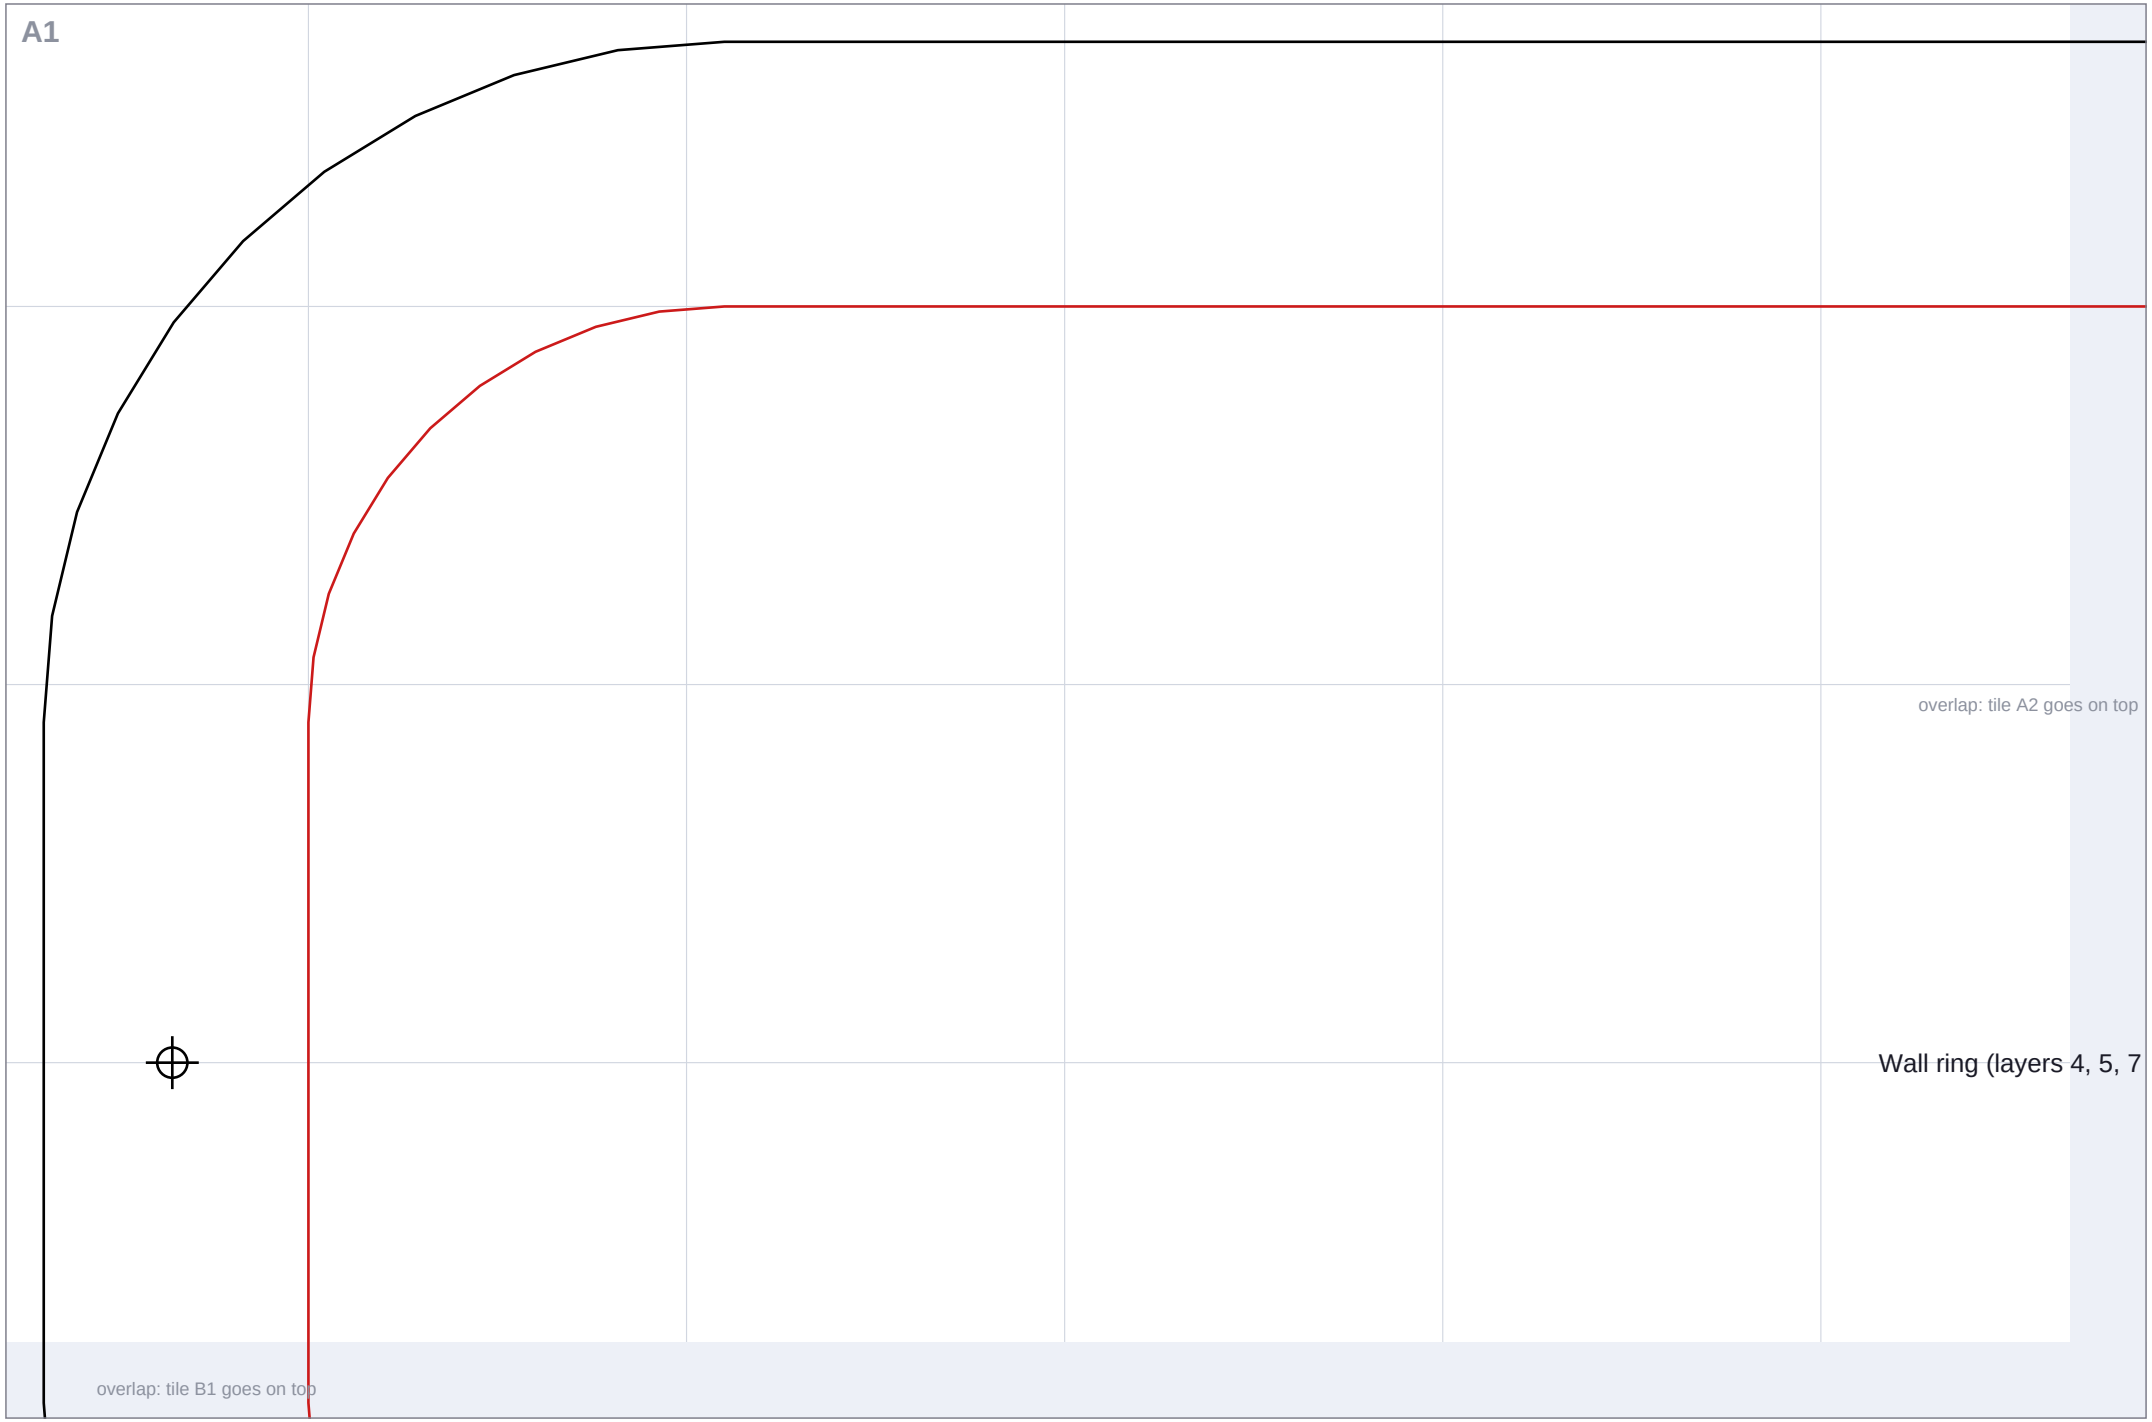


<- must measure 50 mm

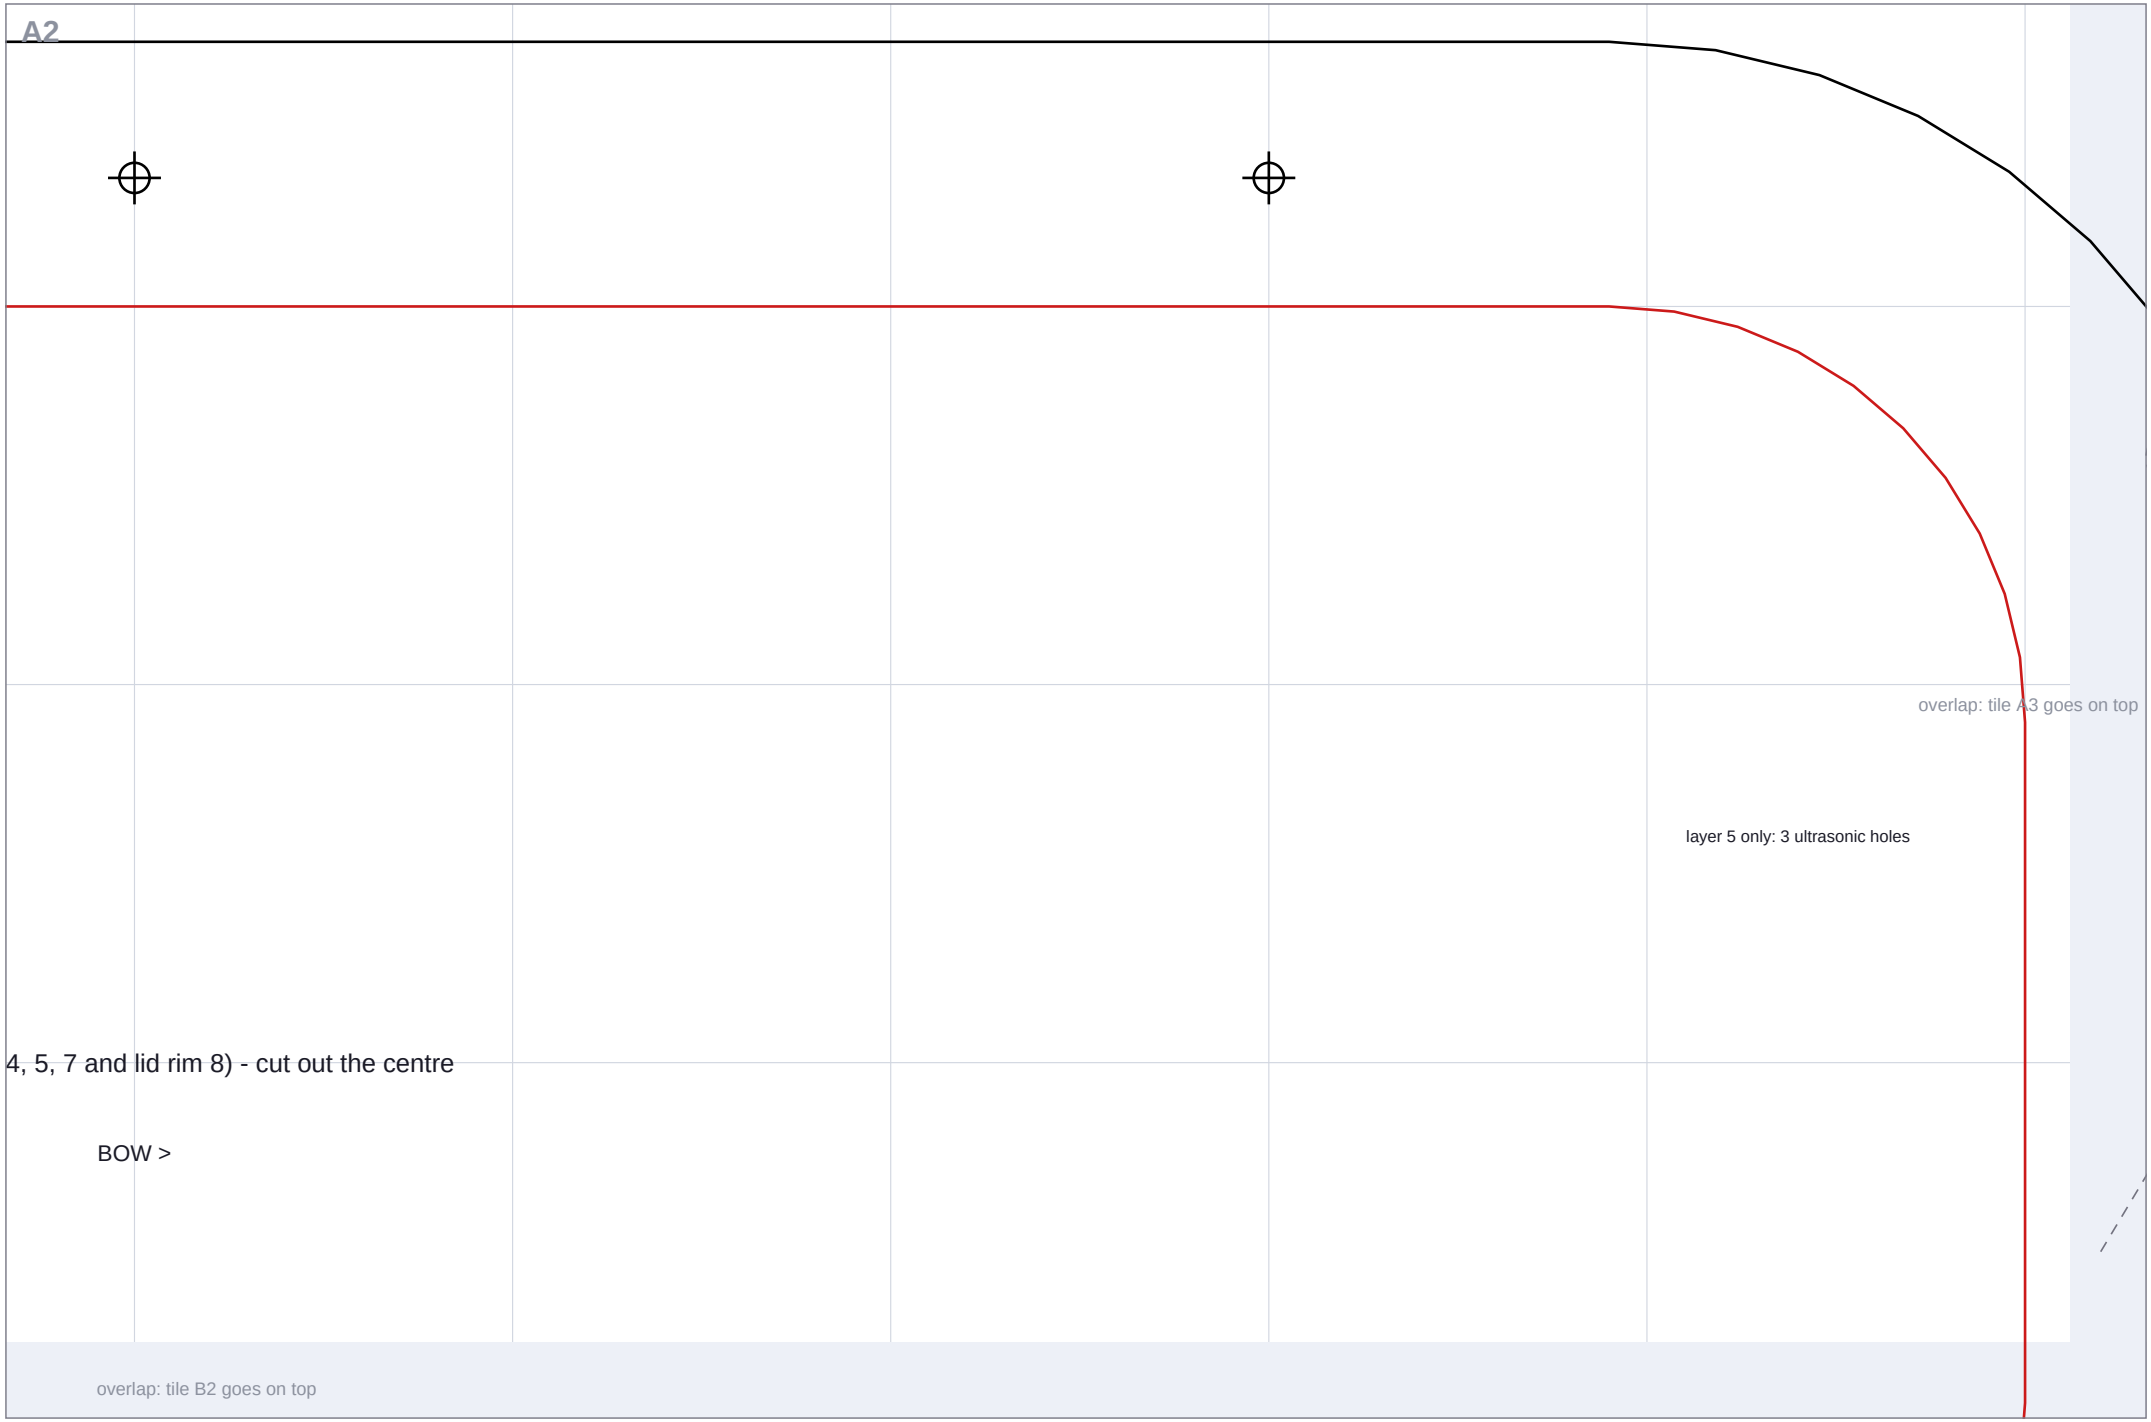


<- must measure 50 mm

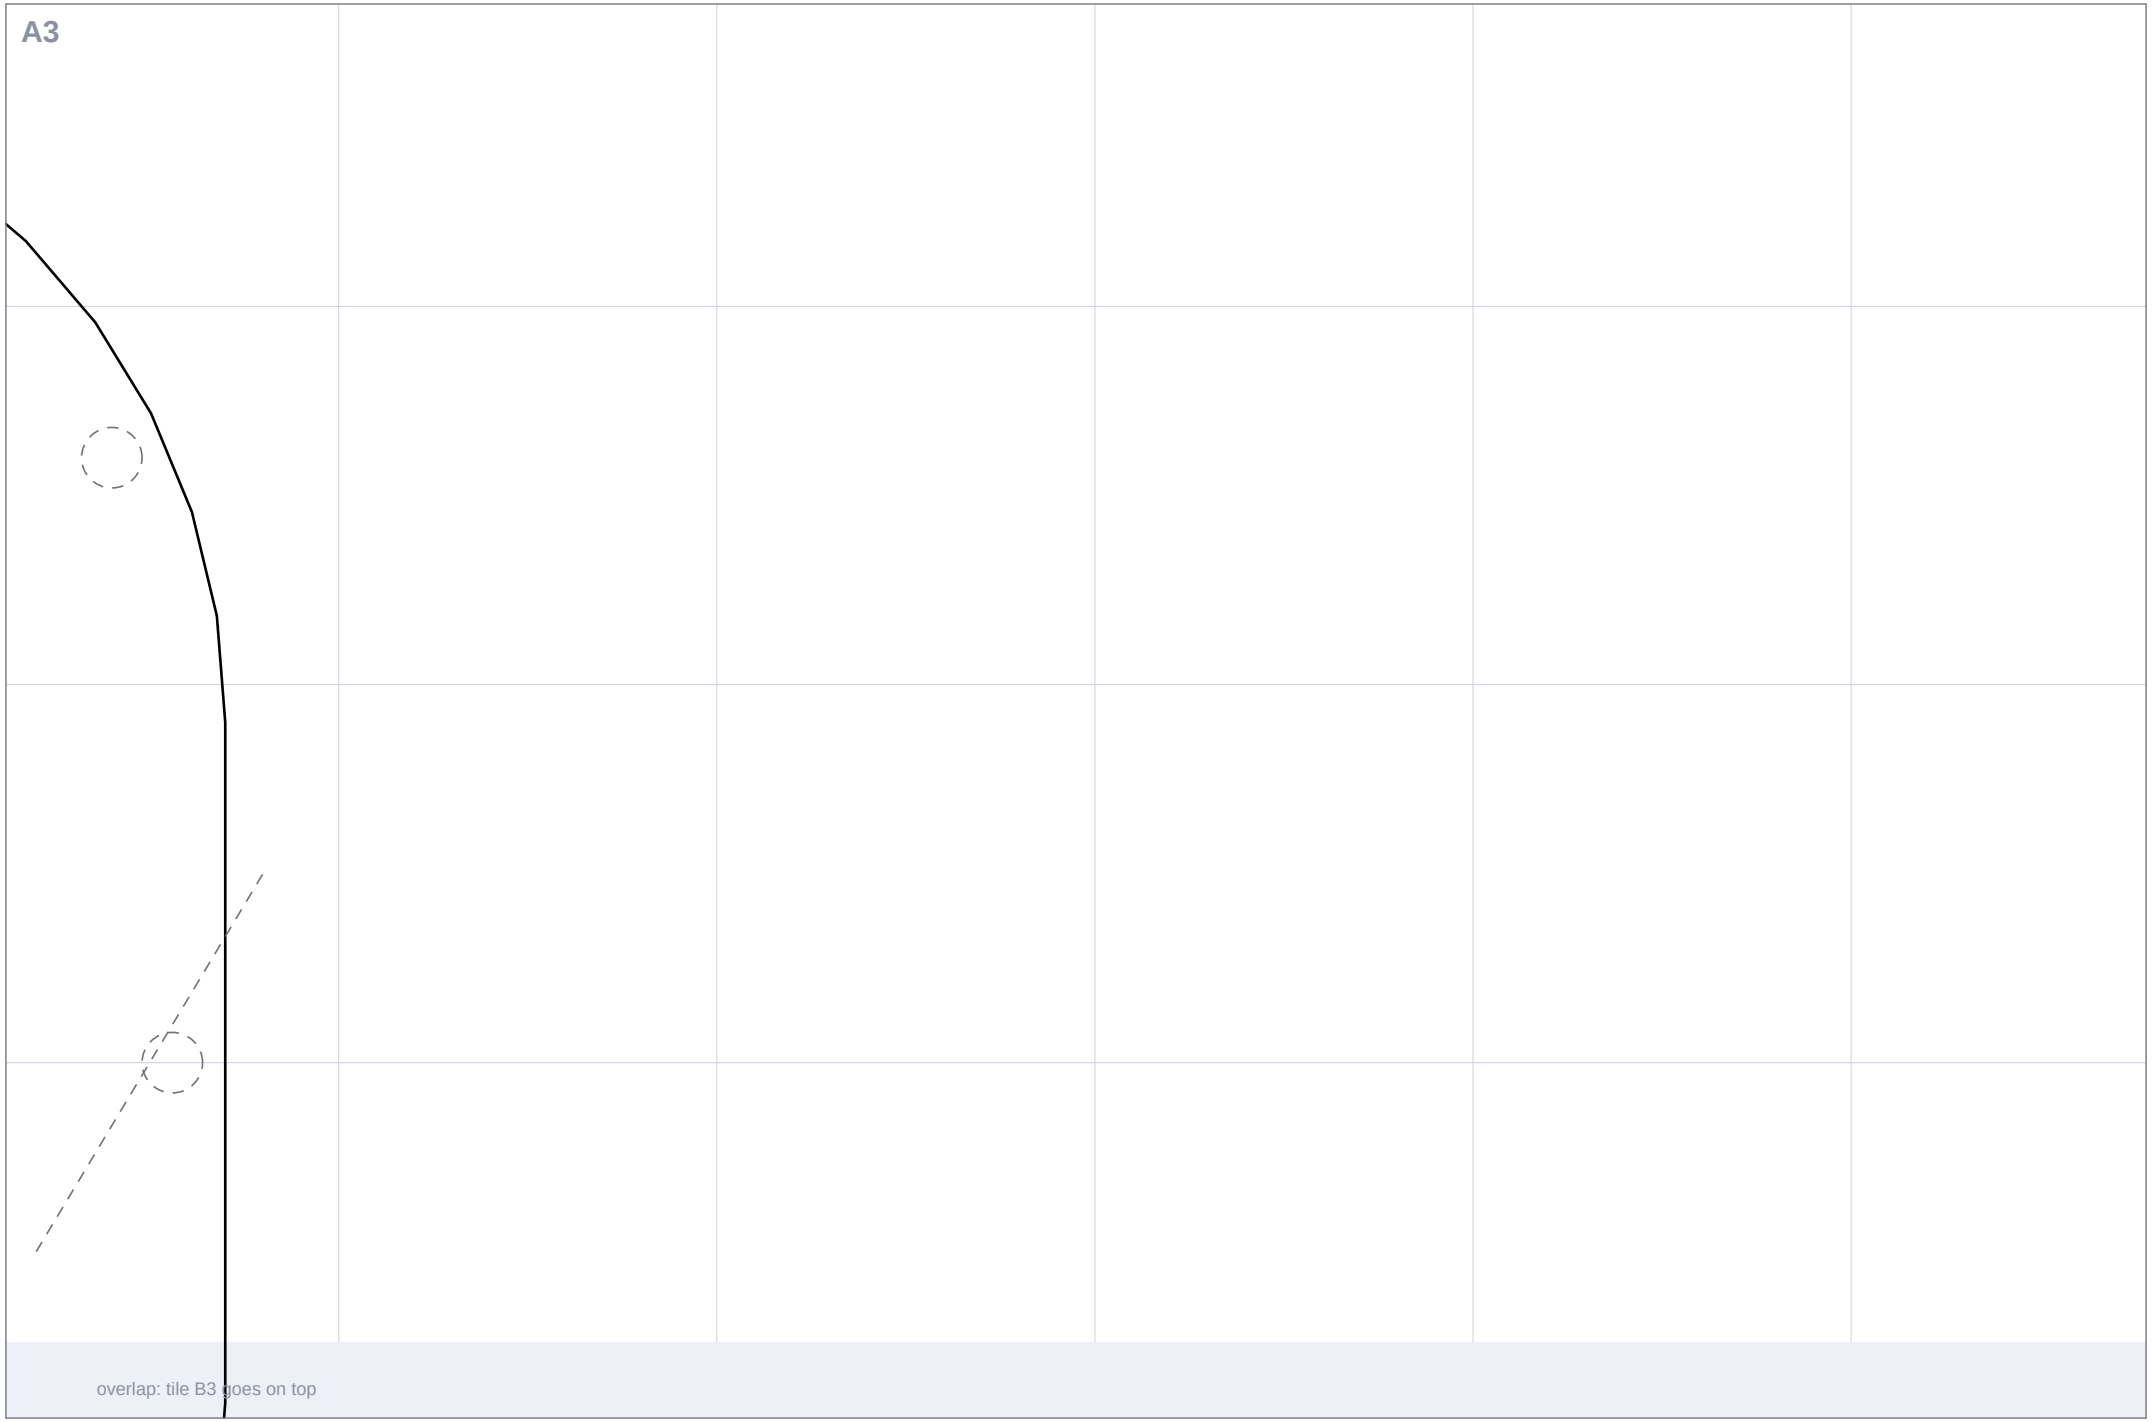

<- must measure 50 mm

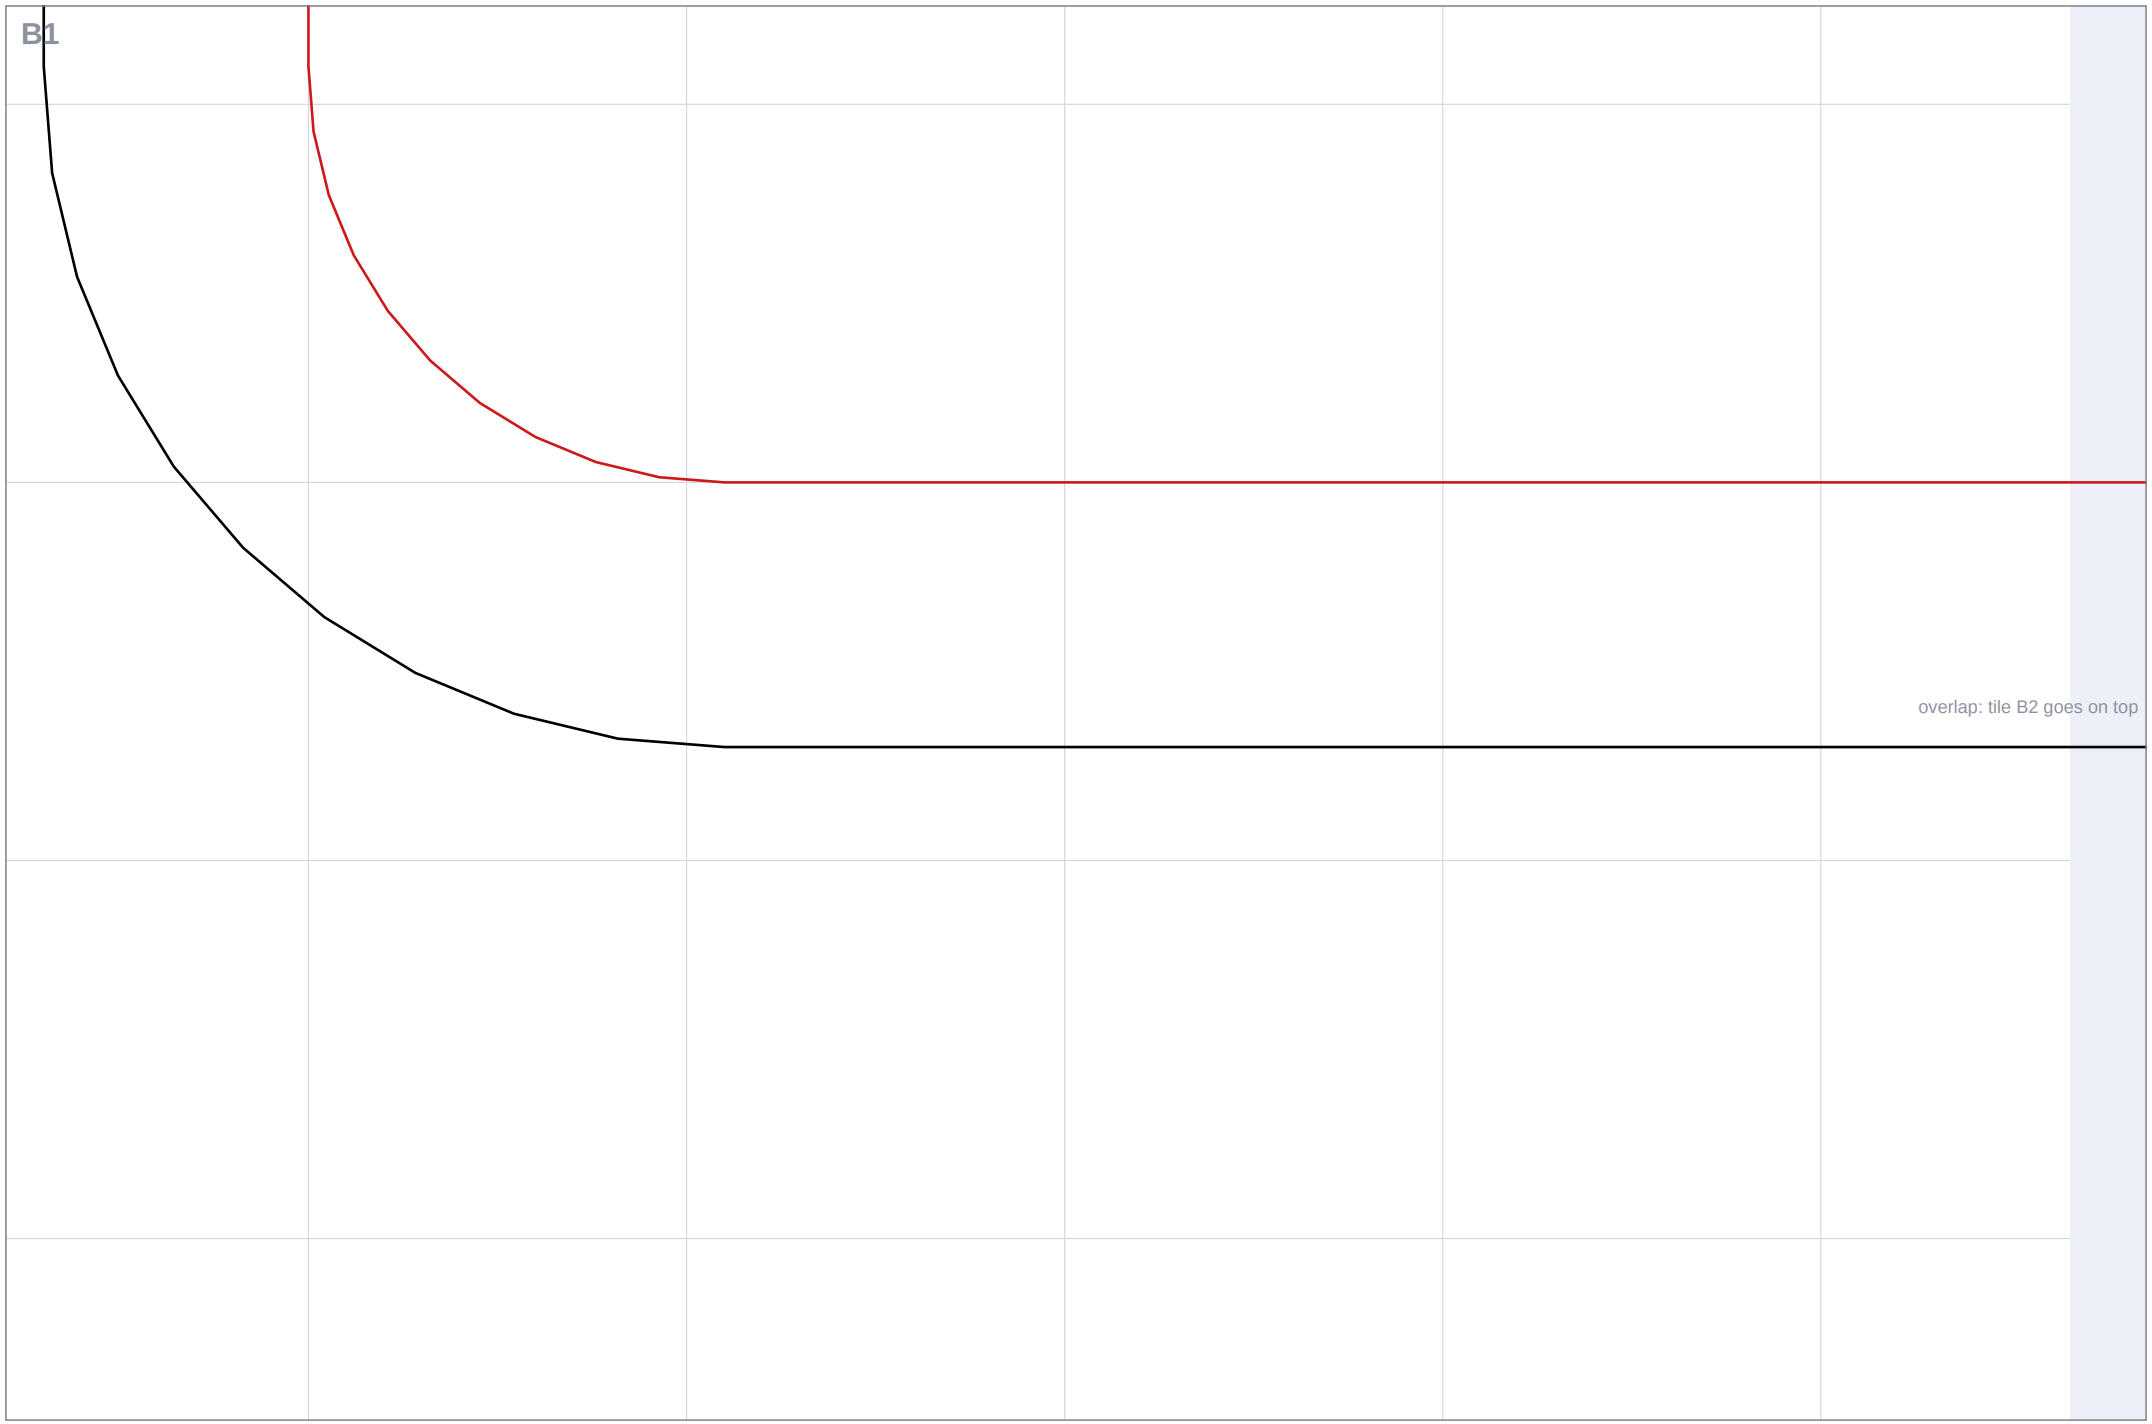


<- must measure 50 mm

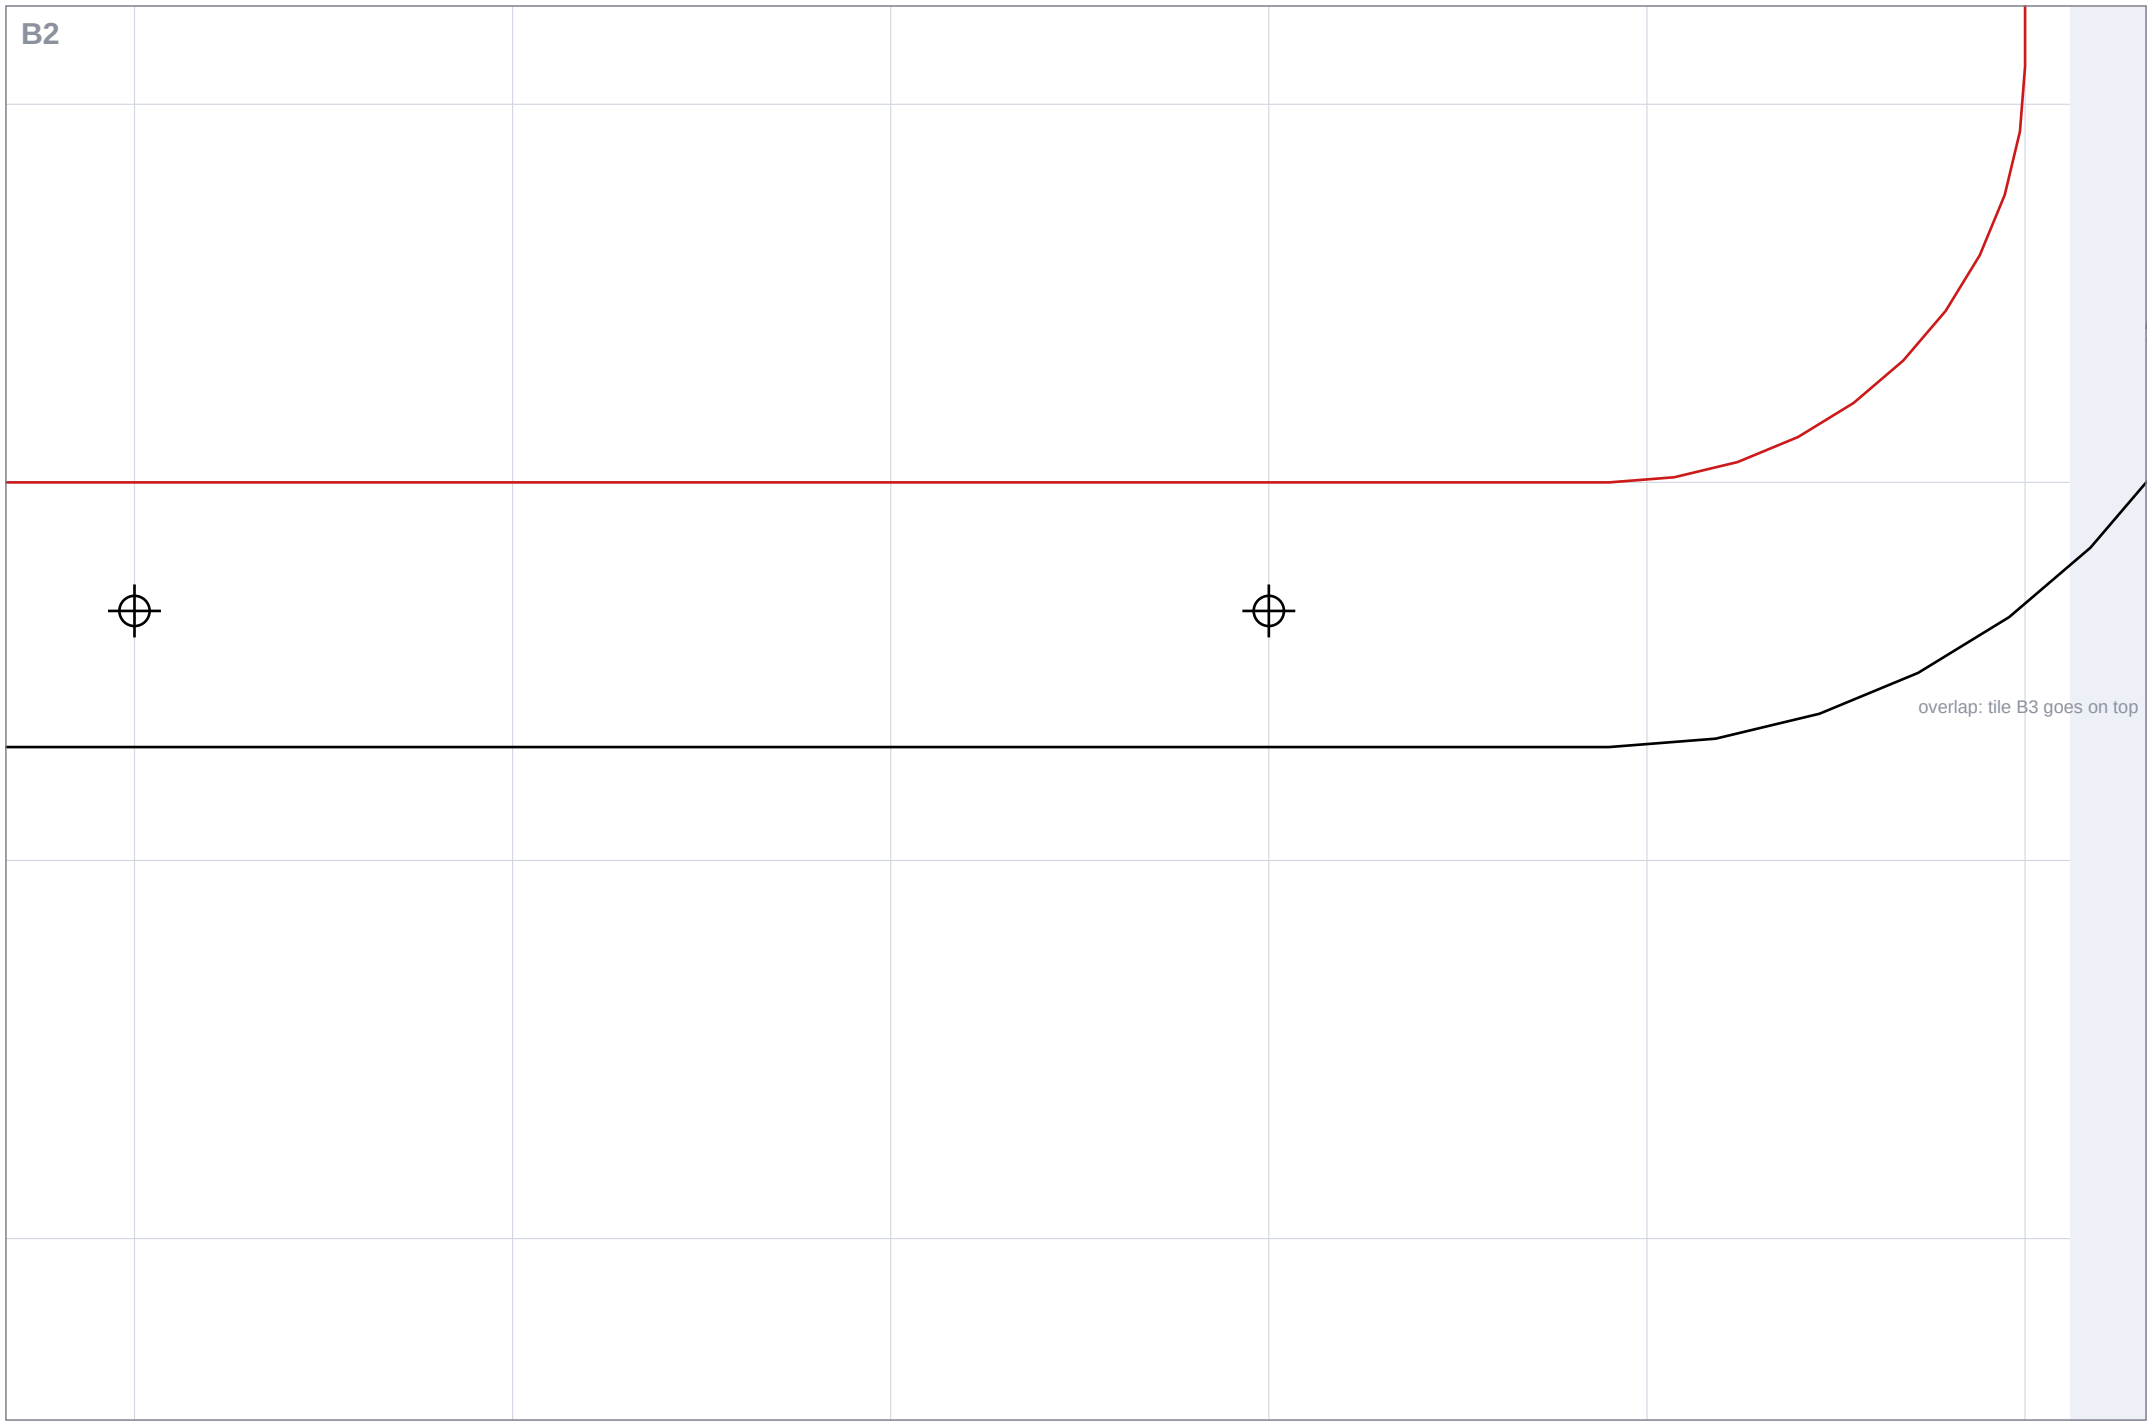


VARUNA AI Pod | Wall ring (layers 4, 5, 7 and lid rim 8) - tile B3 of B3 (25 mm thermocol) PRINT 4 COPIES

<- must measure 50 mm

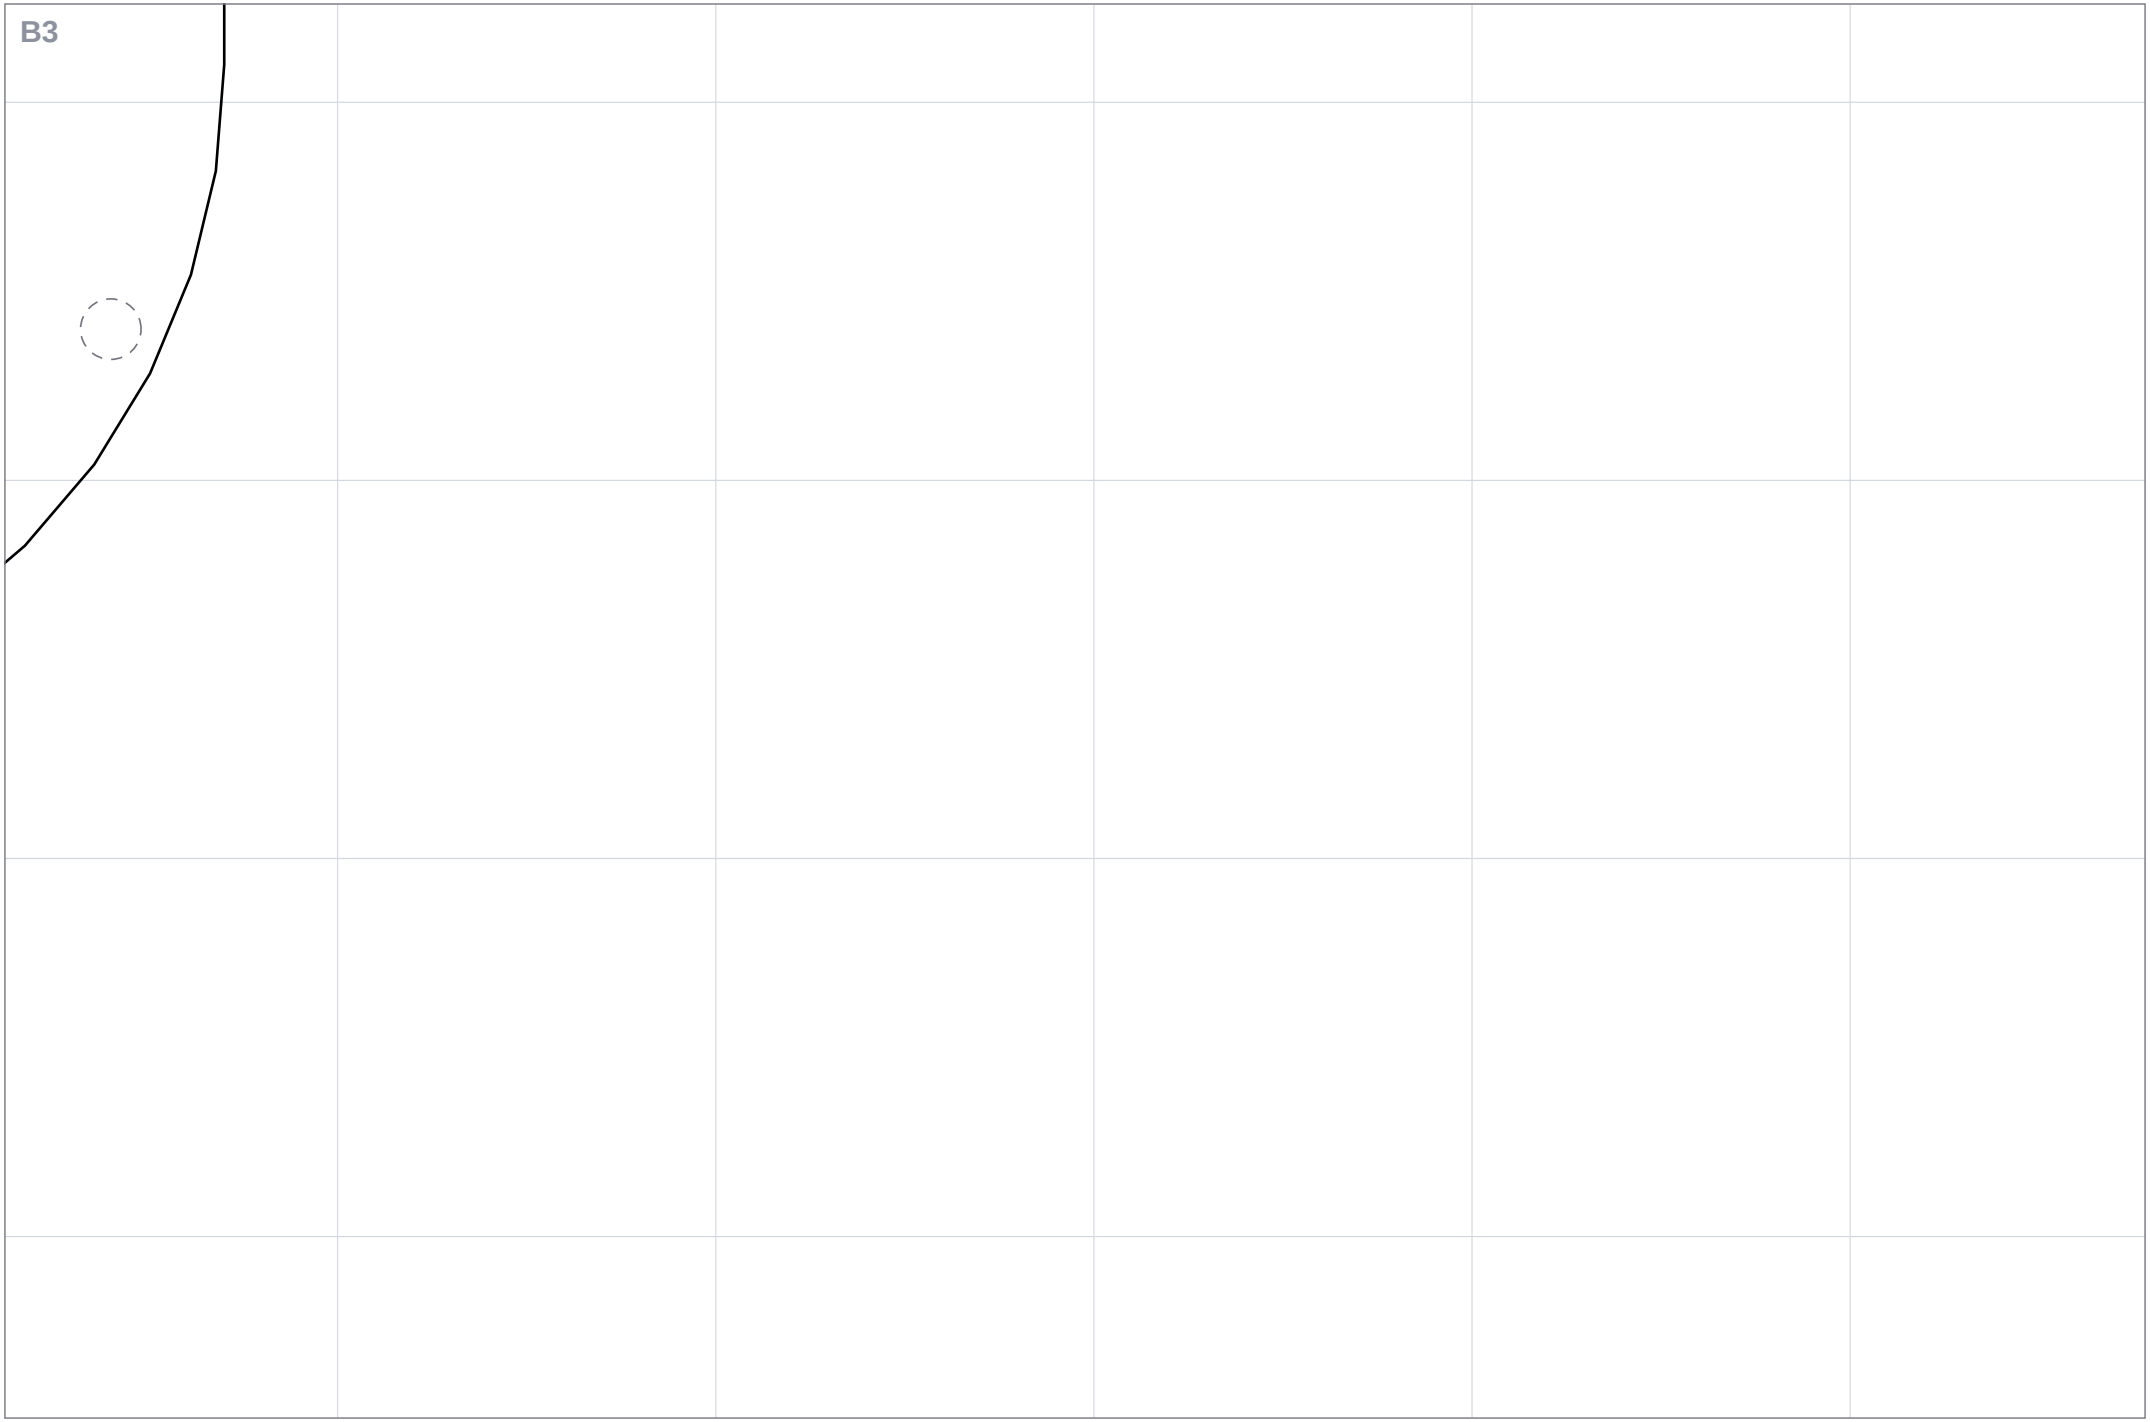


VARUNA AI Pod | Ledge ring (layer 6) - tile A1 of B3 (25 mm thermocol)

<- must measure 50 mm

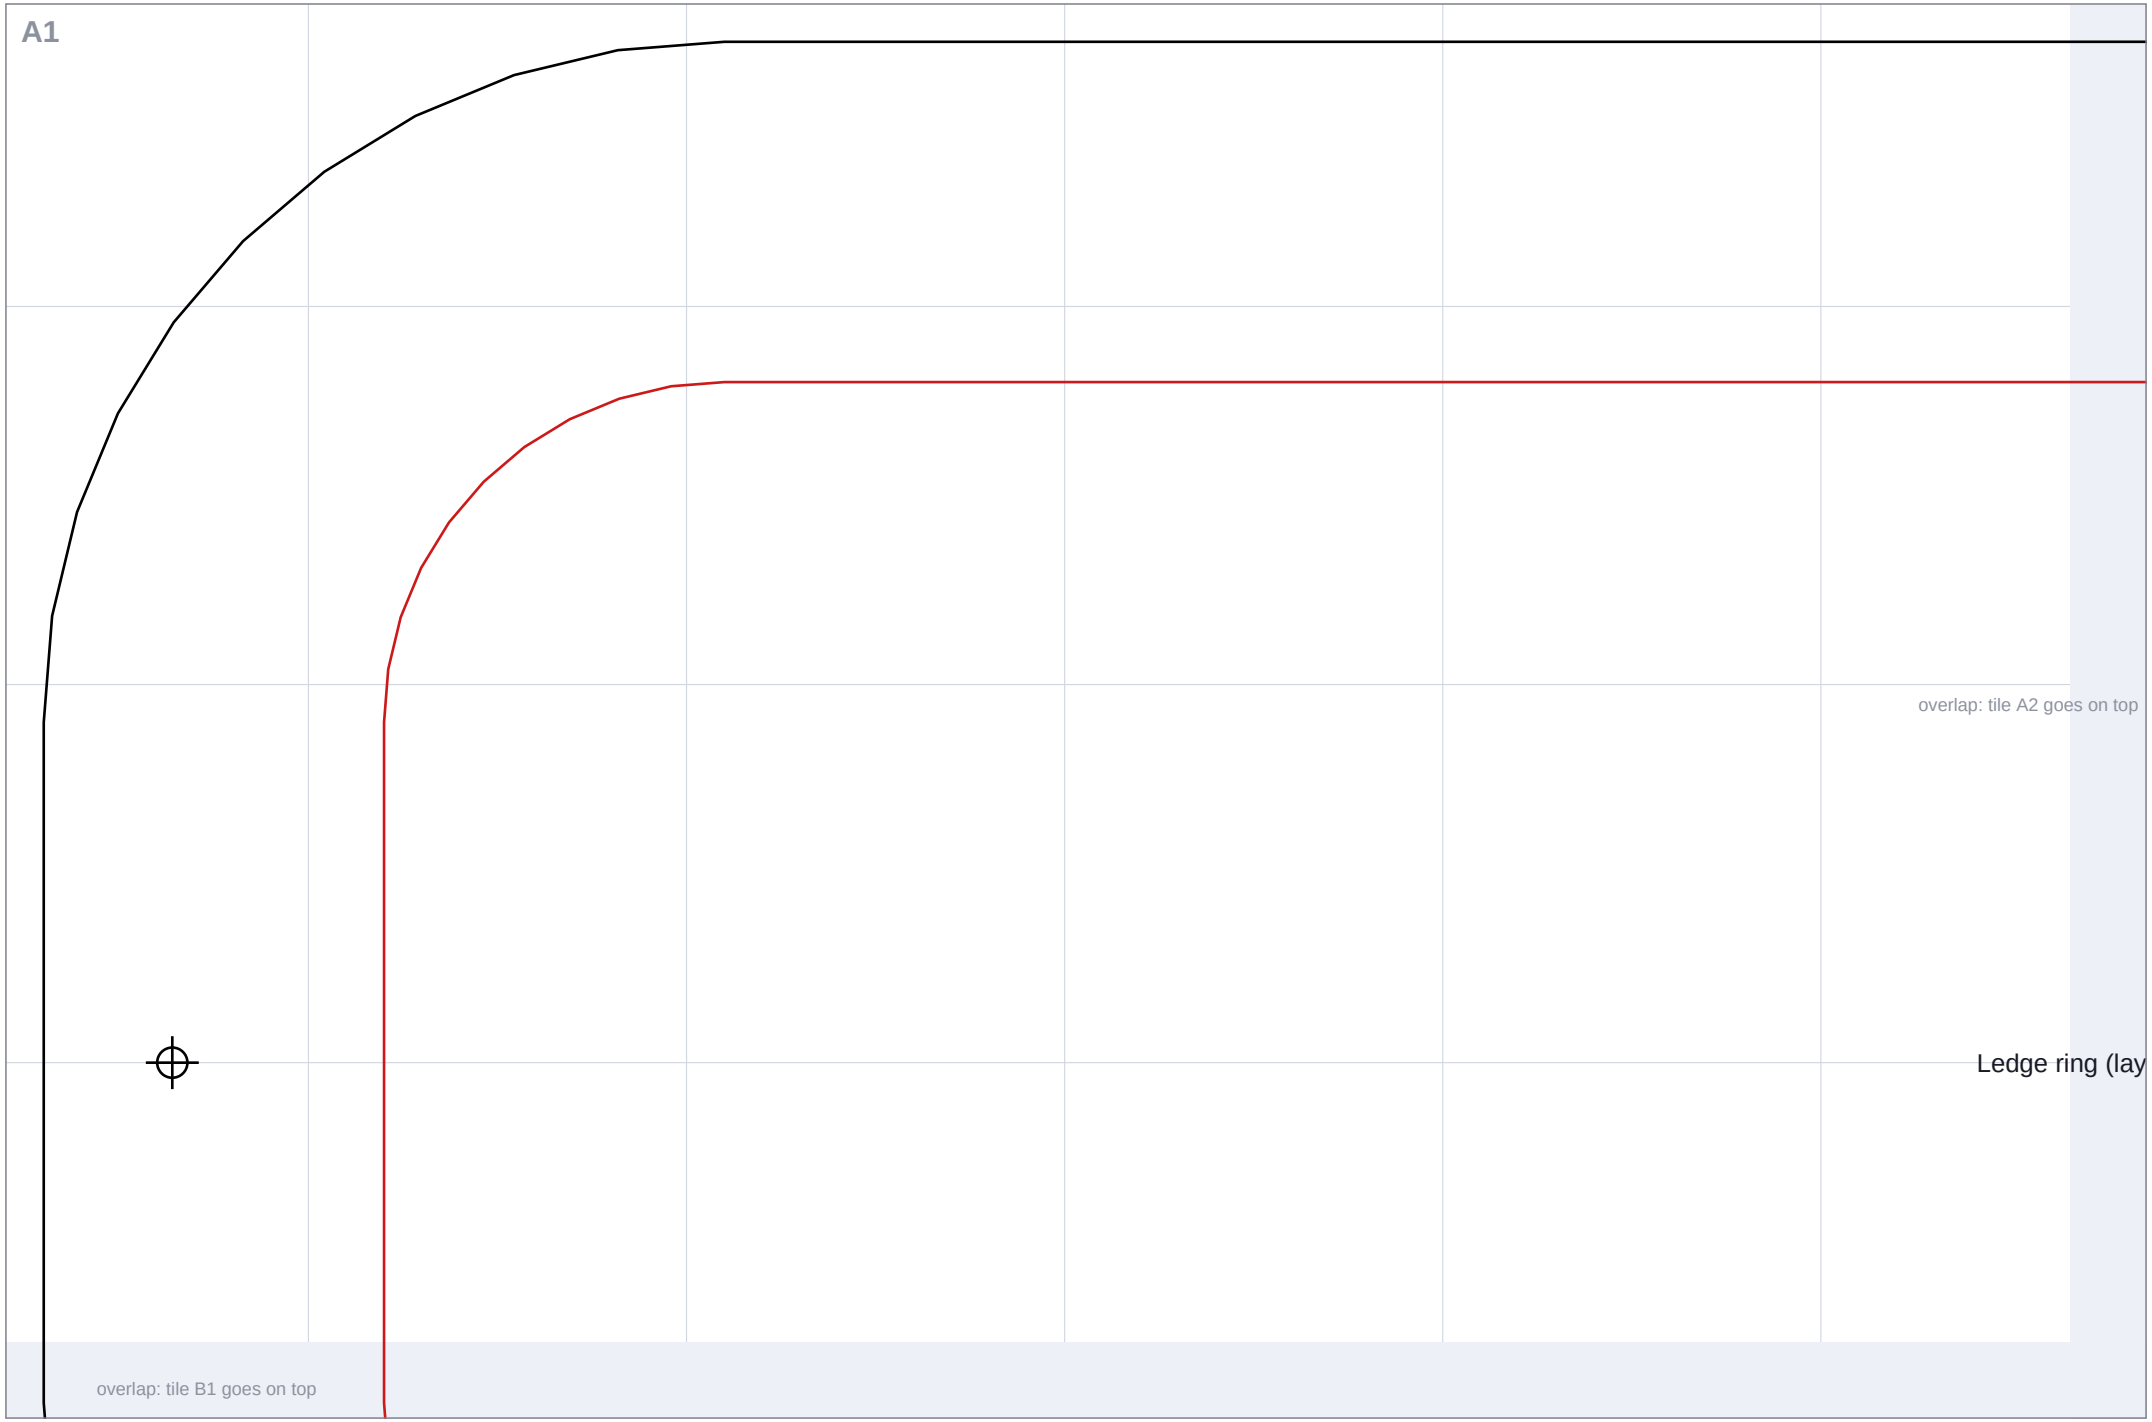


<- must measure 50 mm

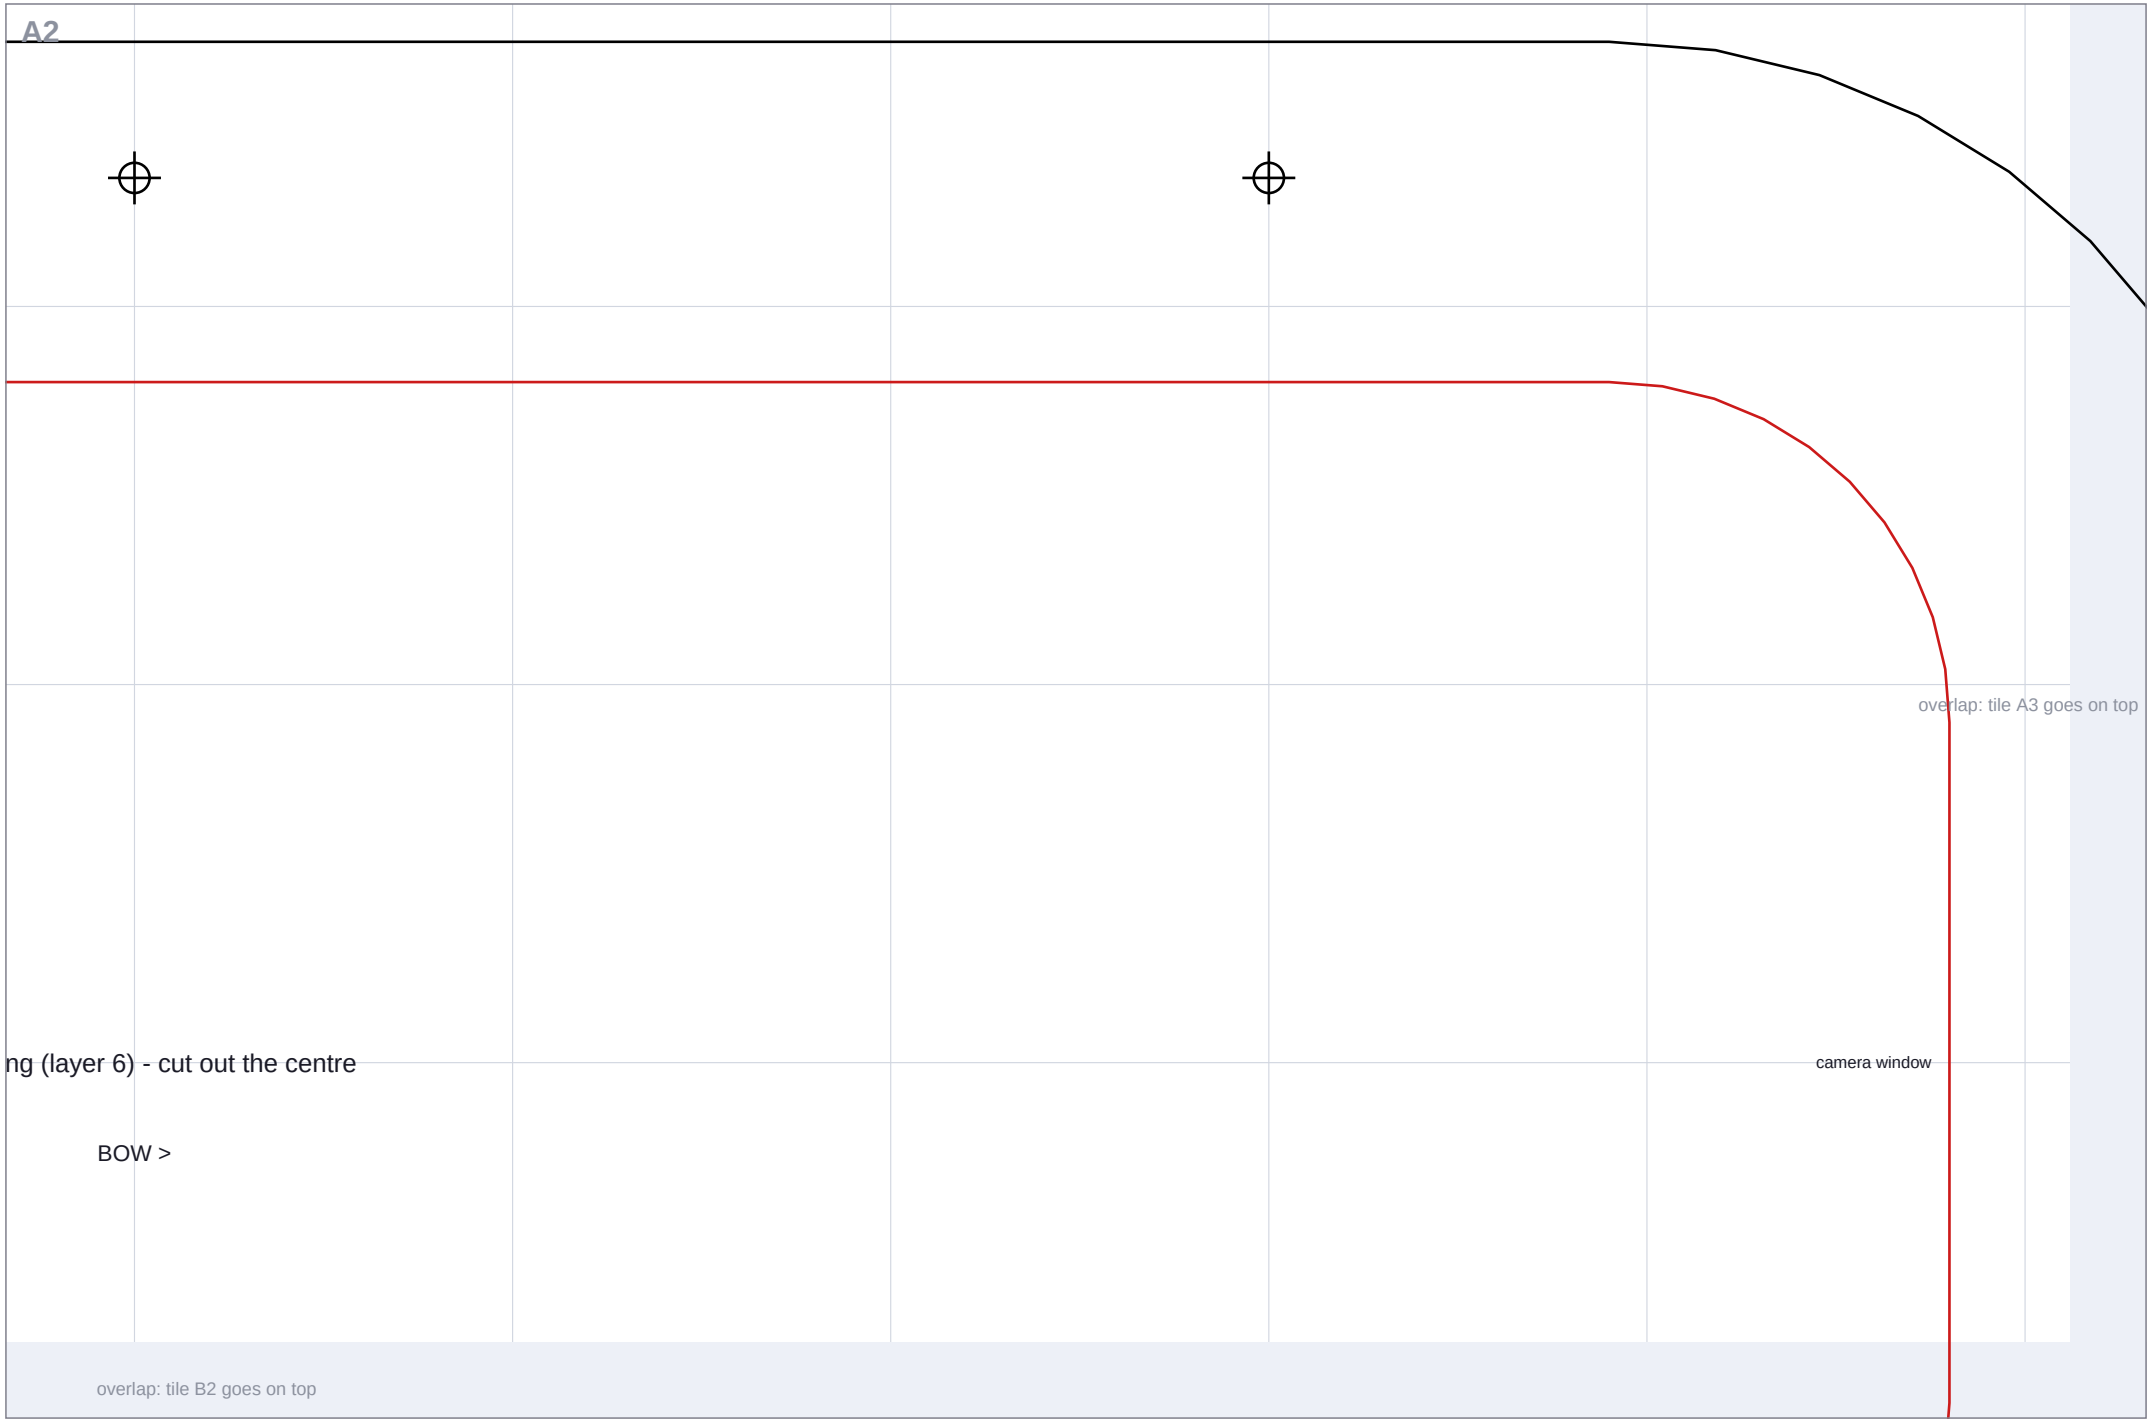


VARUNA AI Pod | Ledge ring (layer 6) - tile A3 of B3 (25 mm thermocol)

<- must measure 50 mm

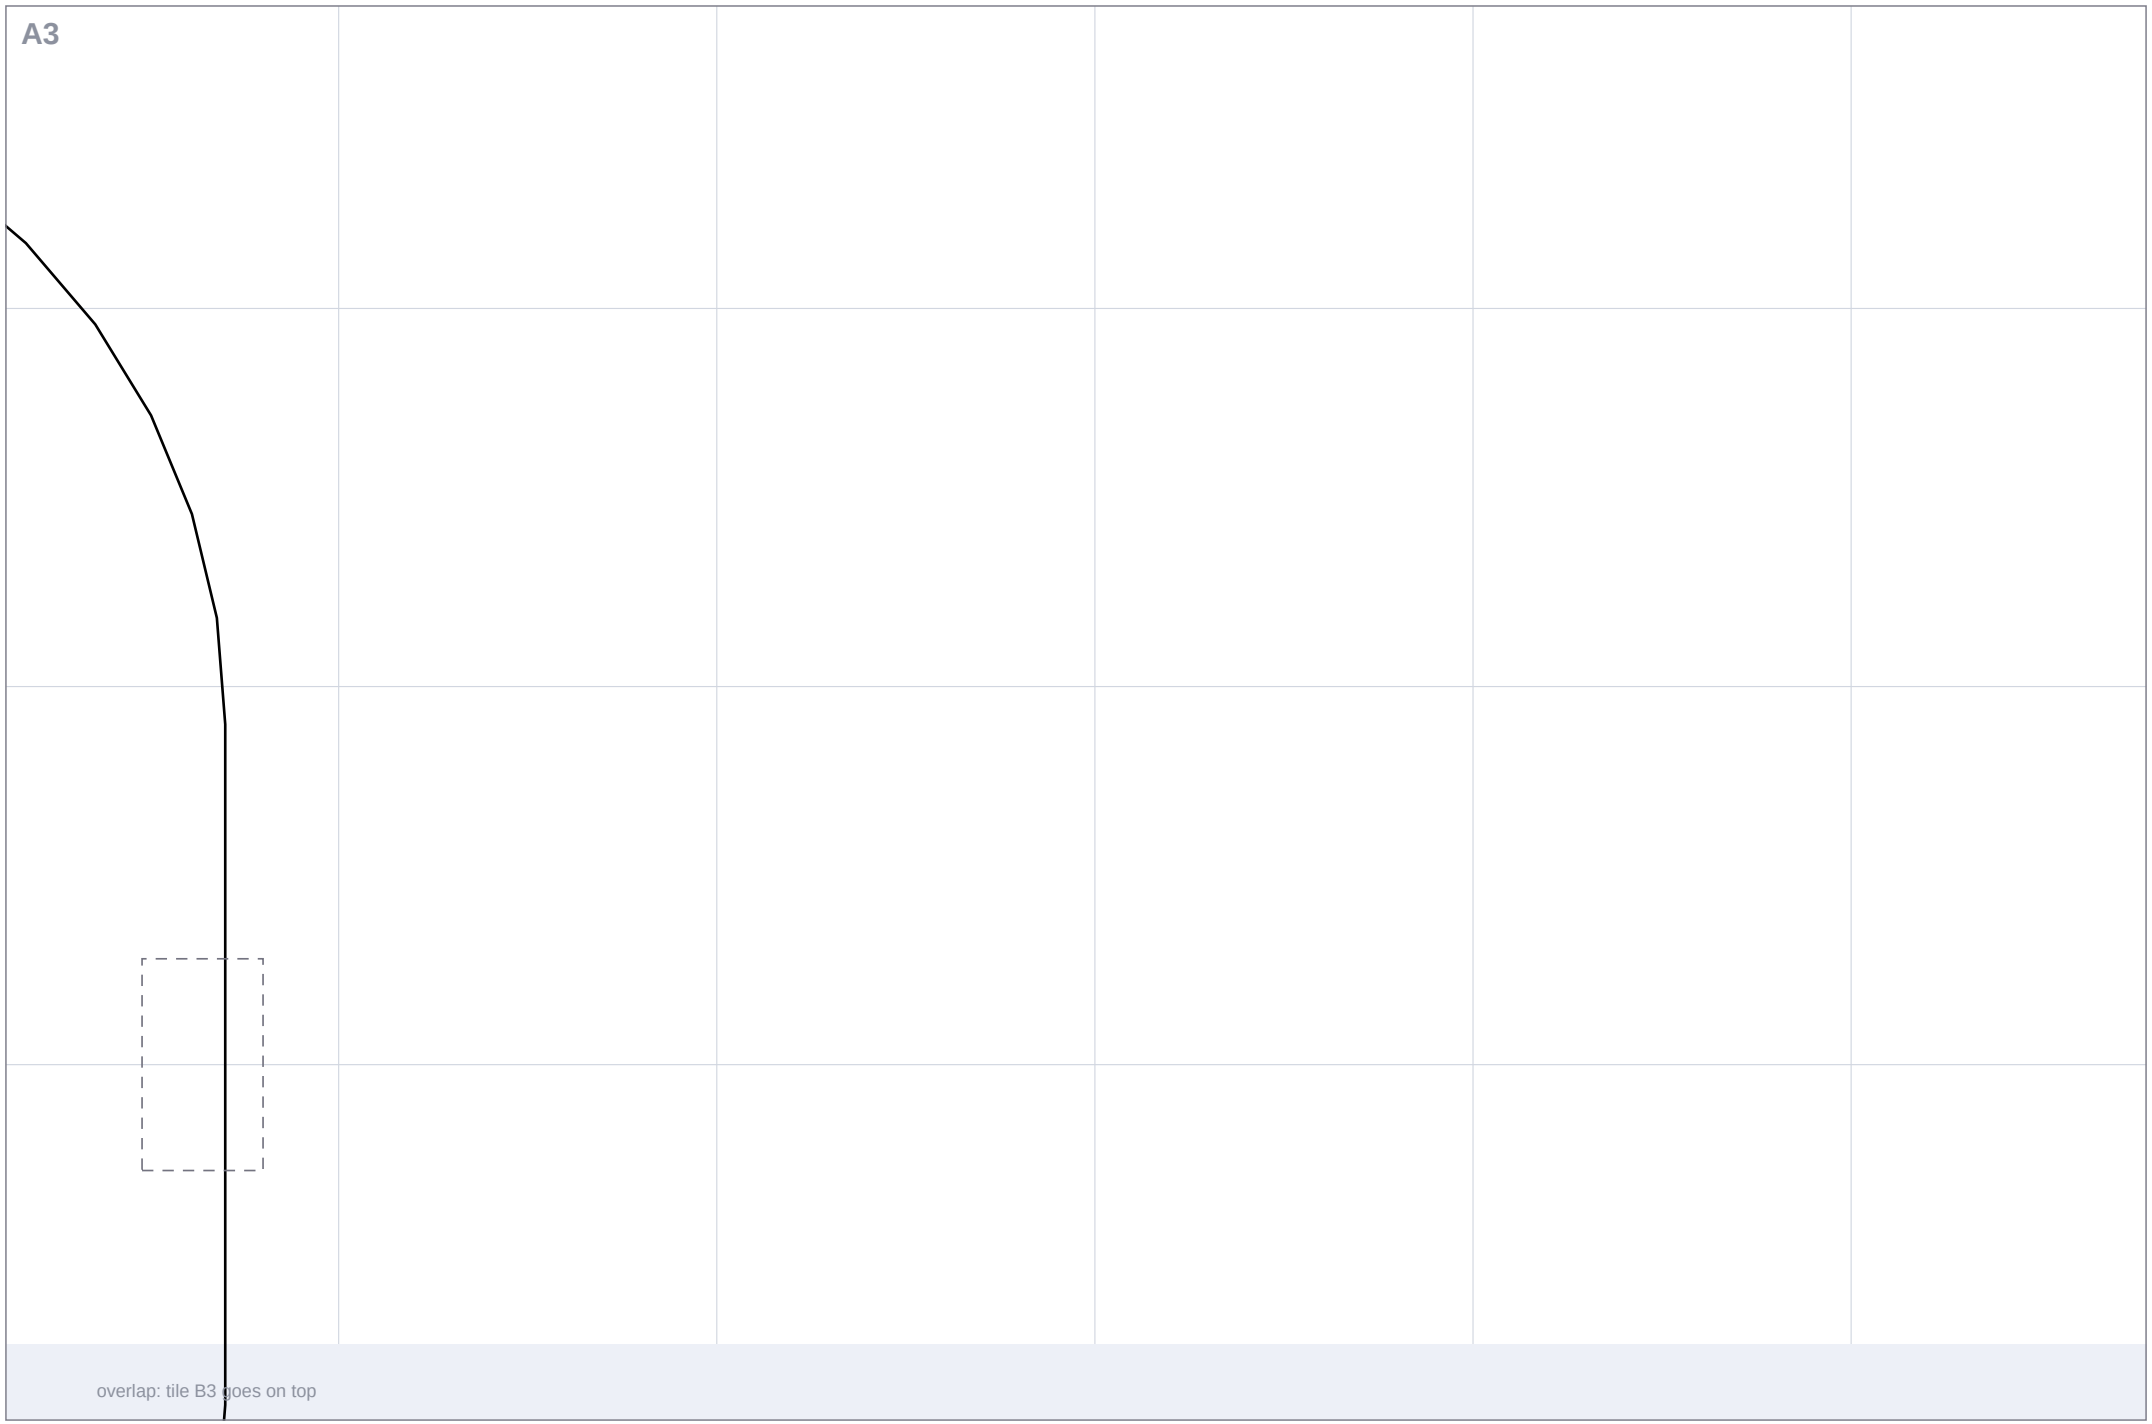


VARUNA AI Pod | Ledge ring (layer 6) - tile B1 of B3 (25 mm thermocol)

<- must measure 50 mm

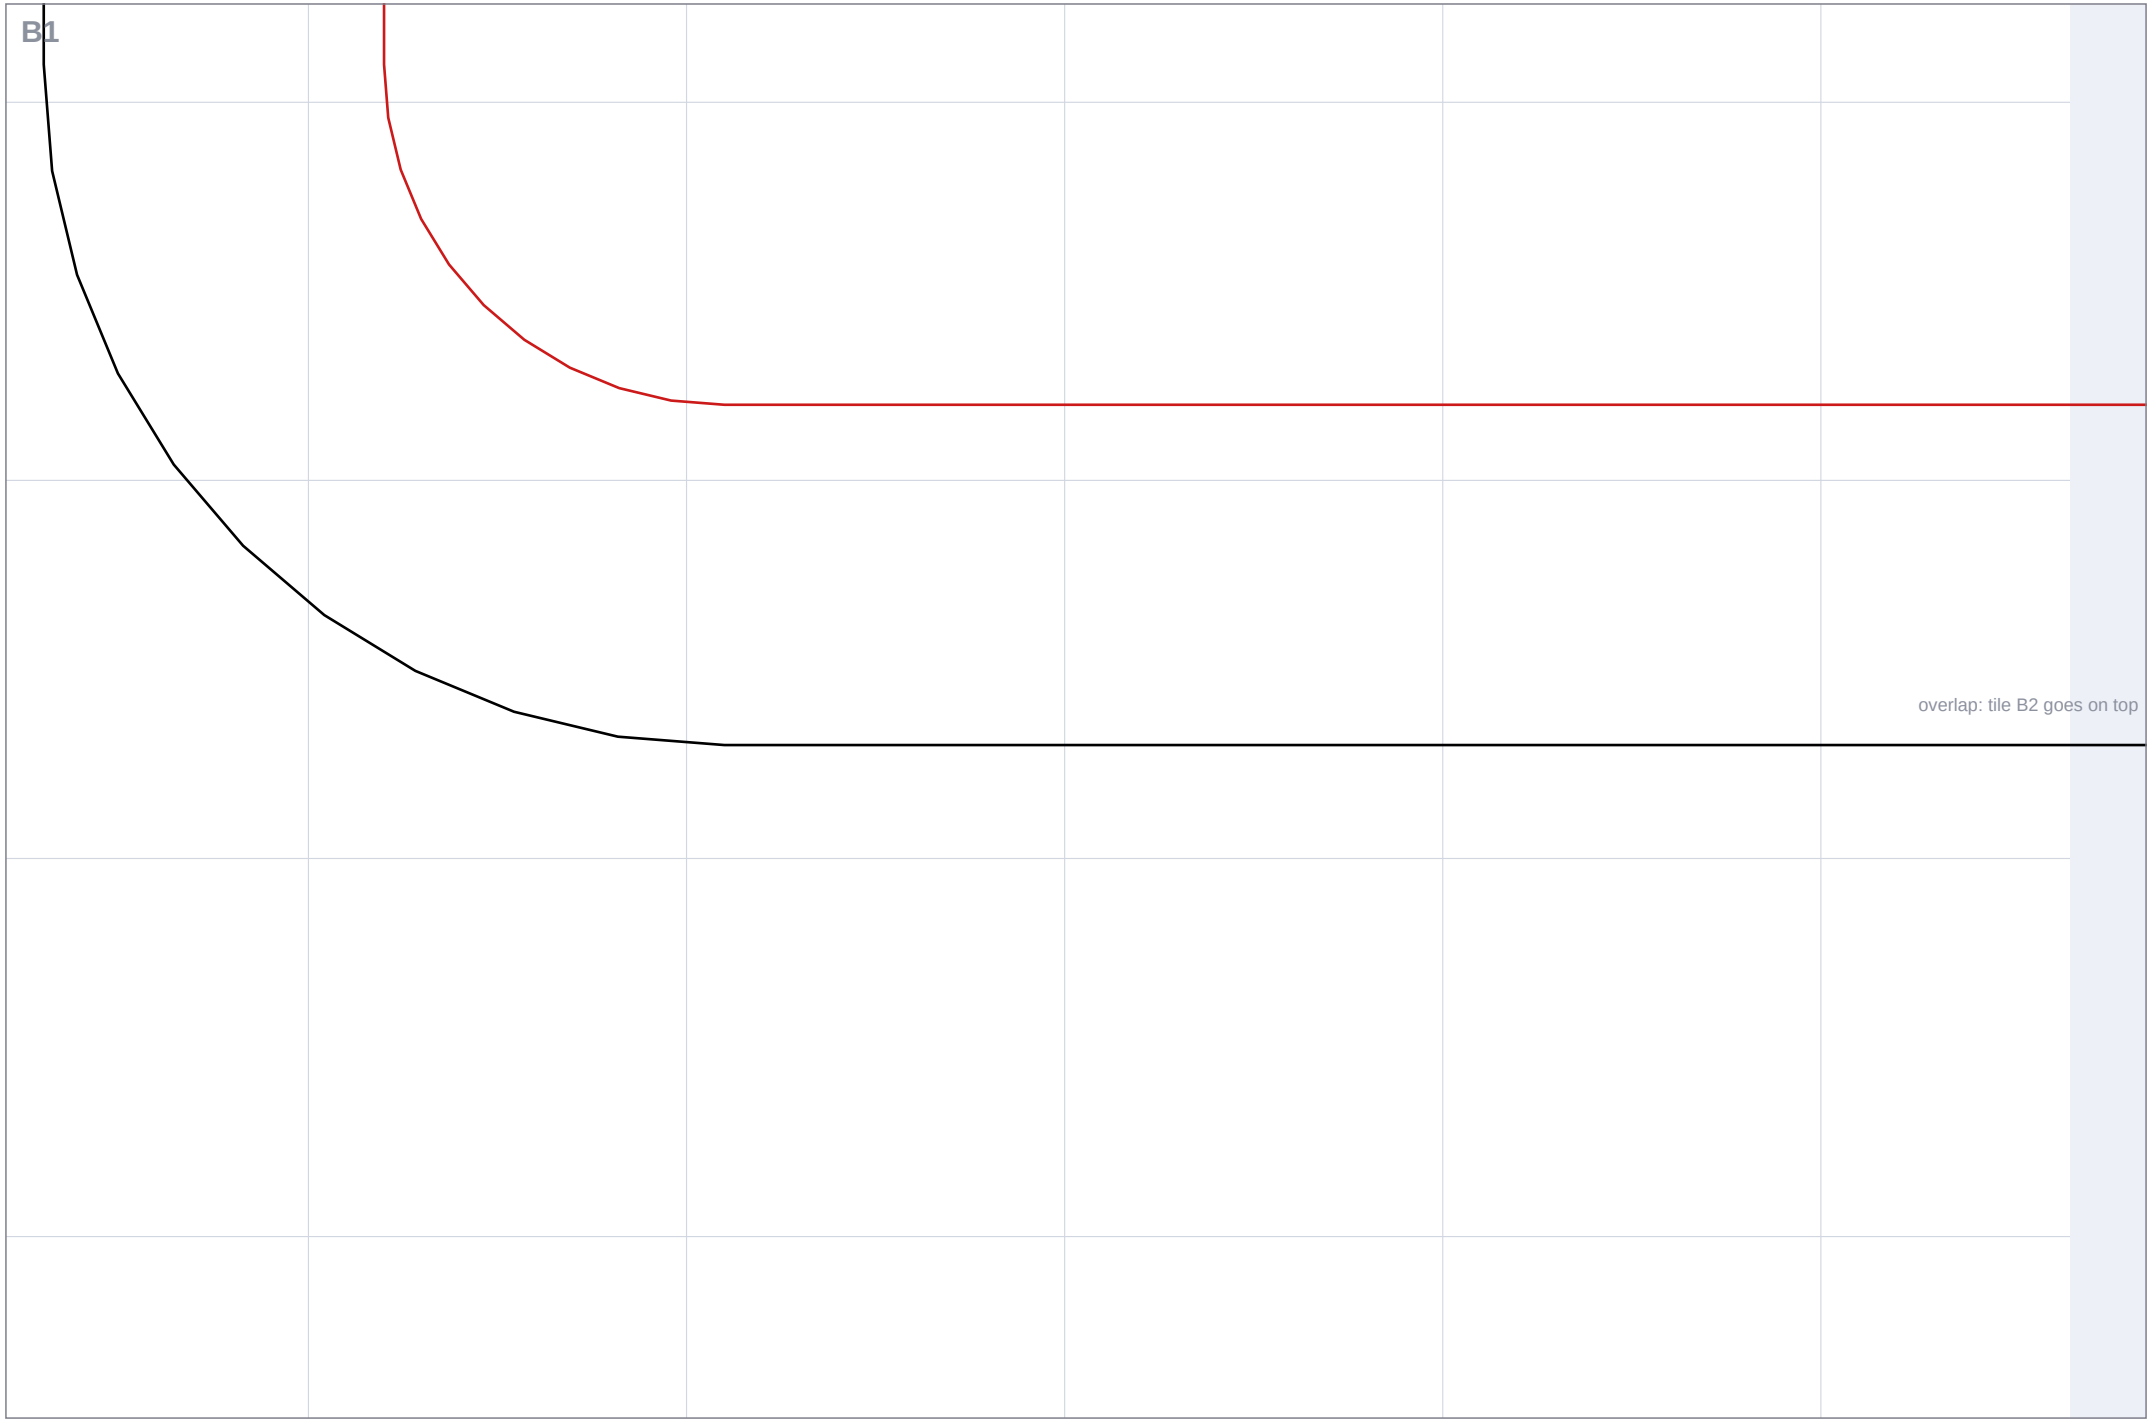


VARUNA AI Pod | Ledge ring (layer 6) - tile B2 of B3 (25 mm thermocol)

<- must measure 50 mm

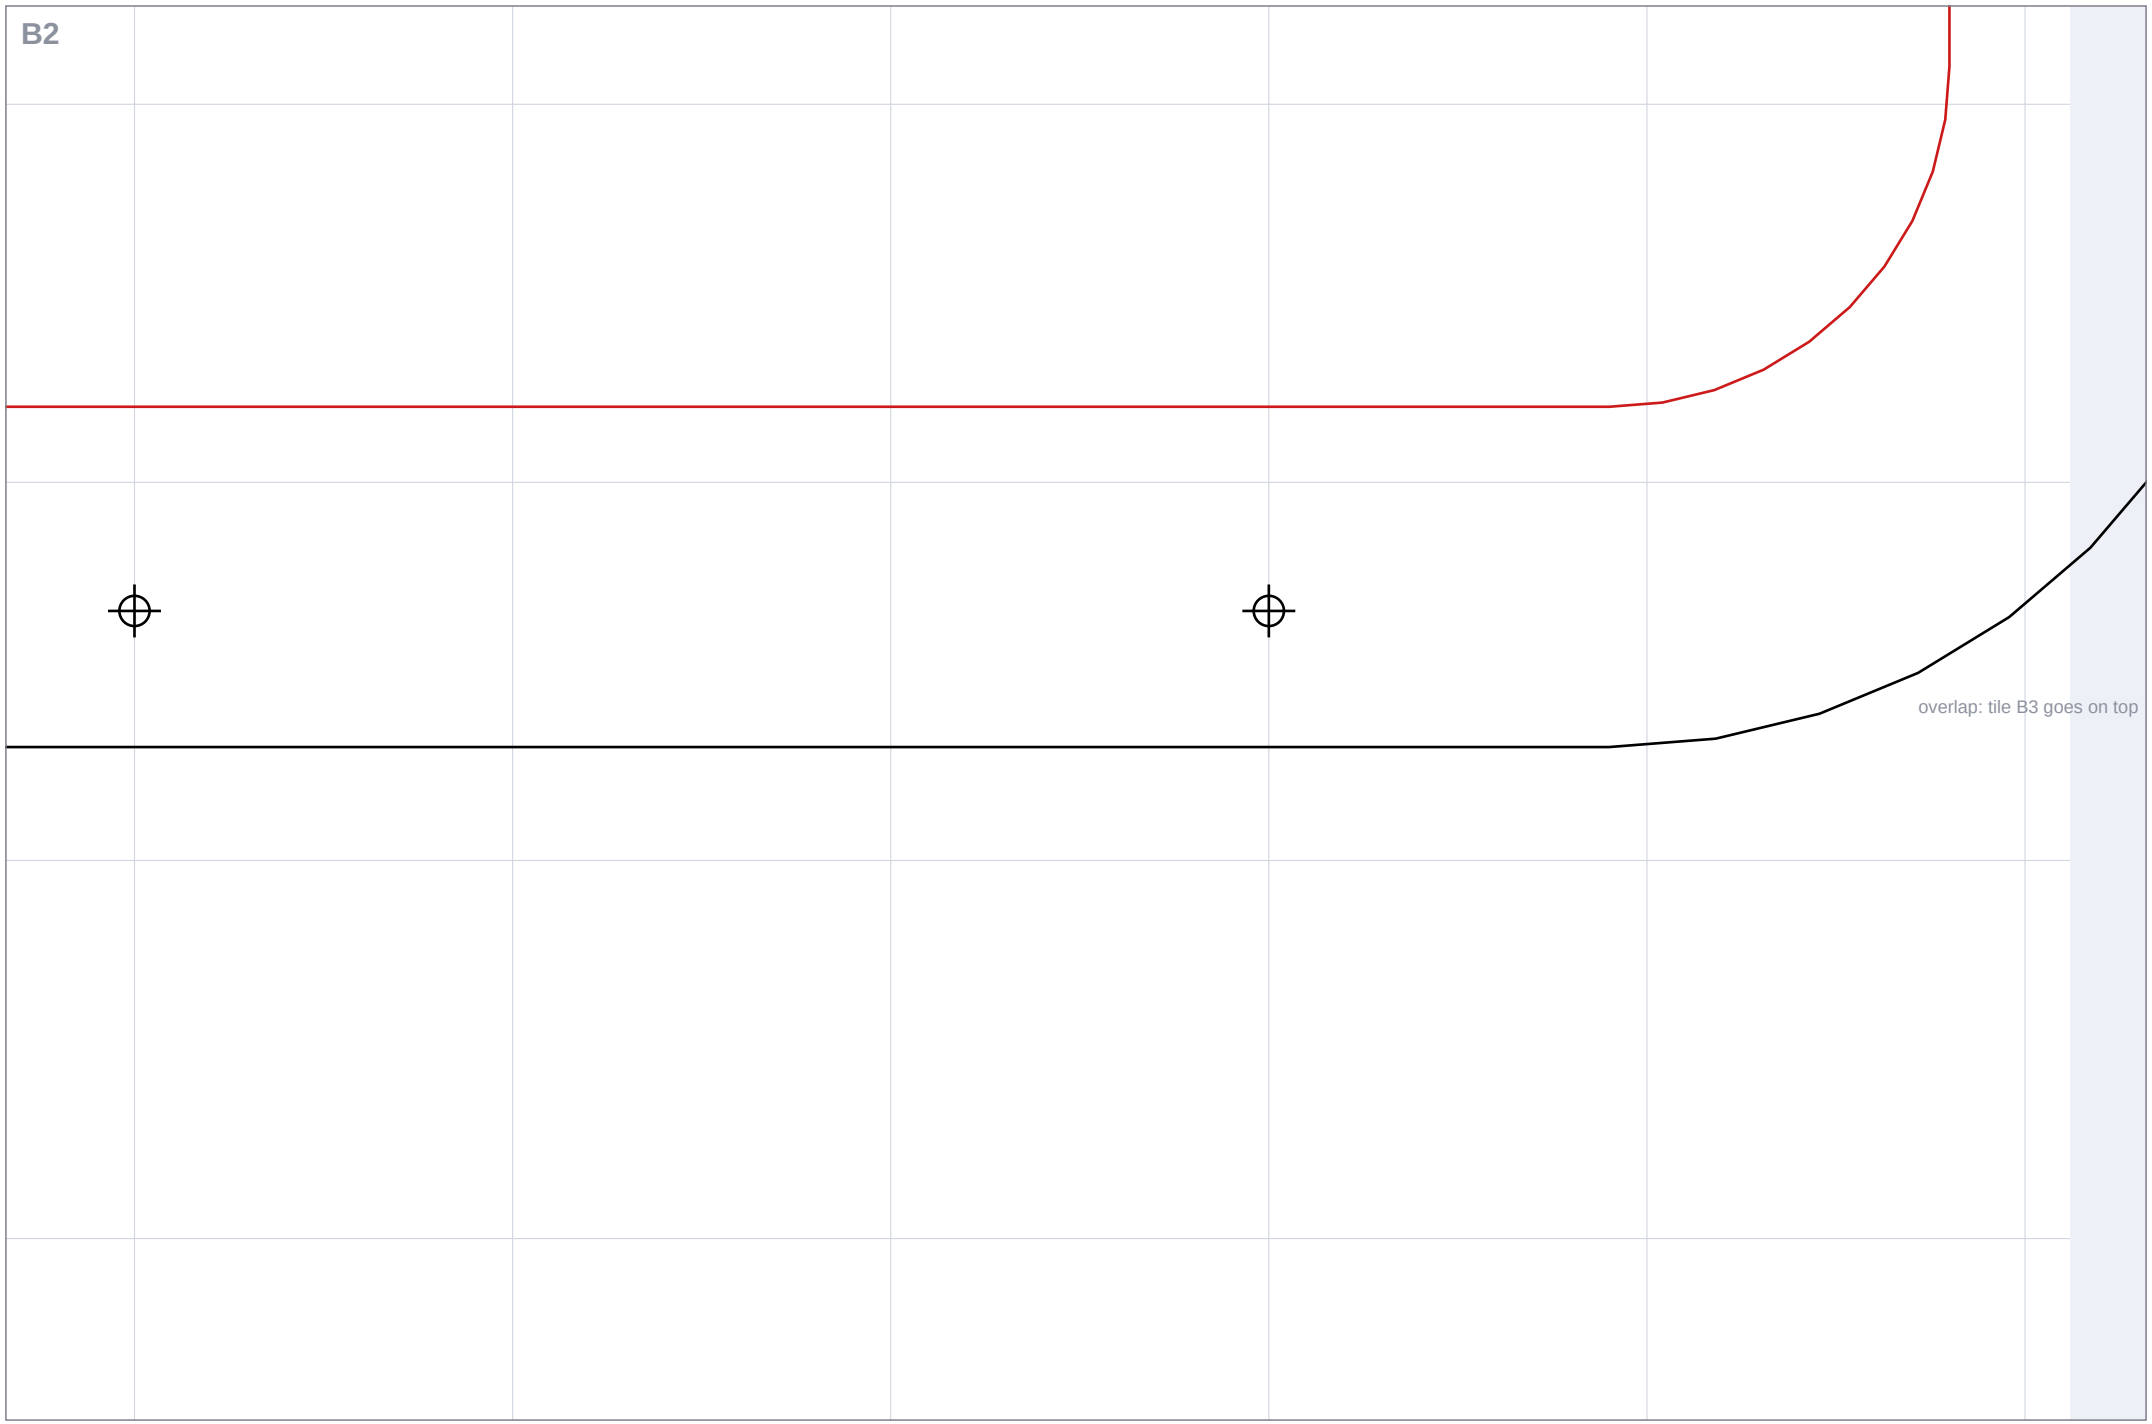


VARUNA AI Pod | Ledge ring (layer 6) - tile B3 of B3 (25 mm thermocol)

<- must measure 50 mm

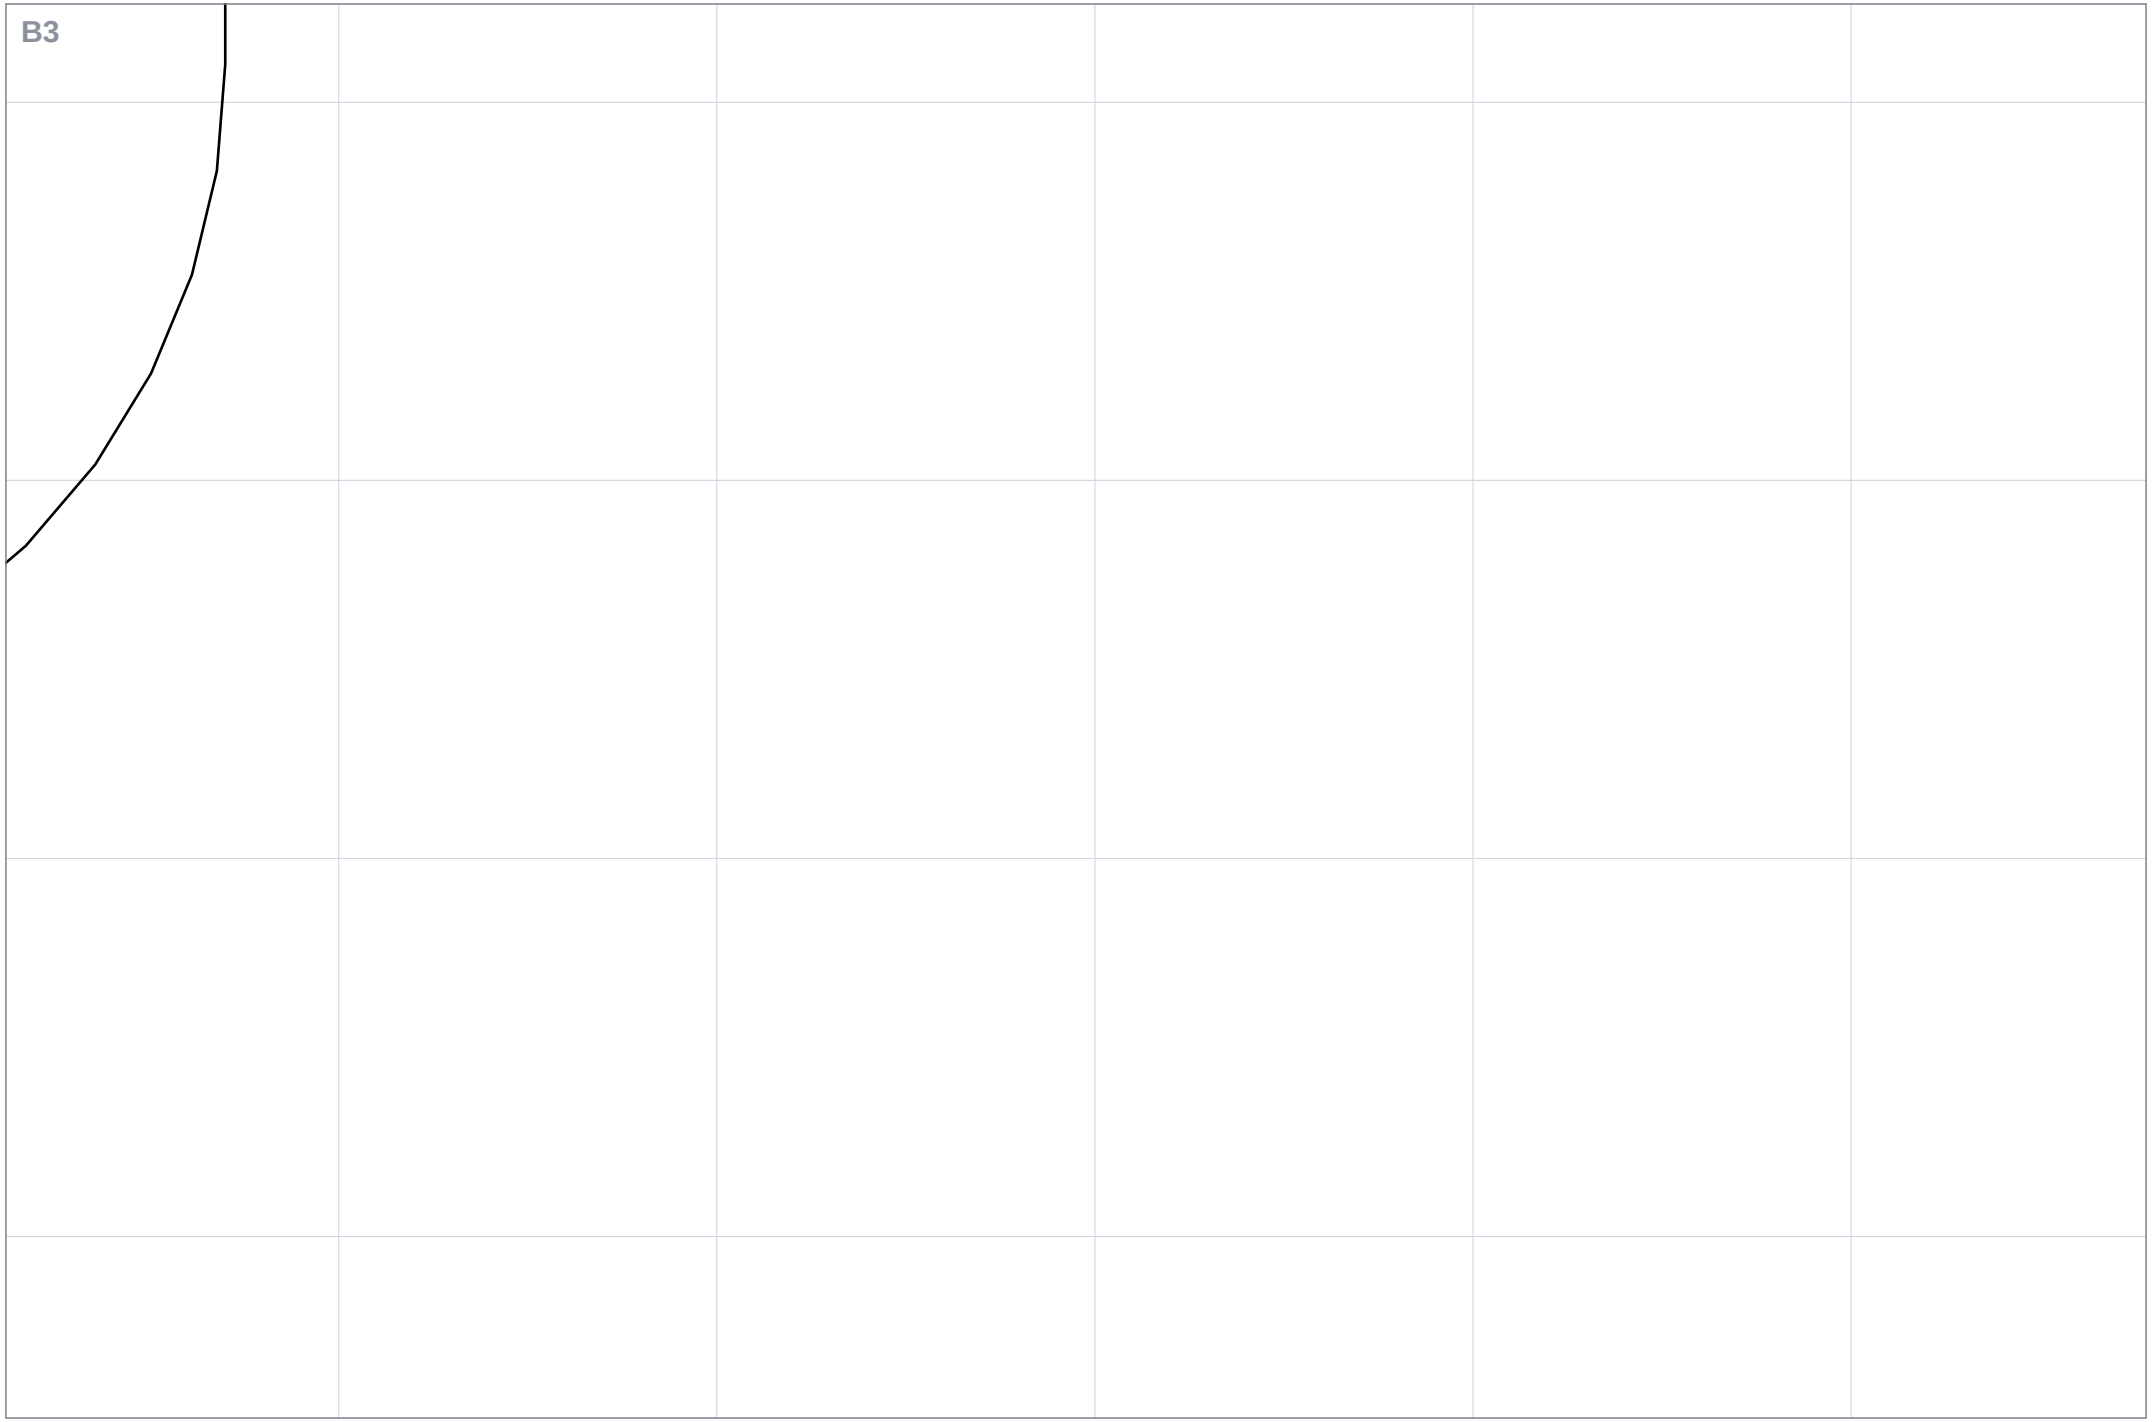


VARUNA AI Pod | Lid top - tile A1 of B3 (3 mm sunboard)

<- must measure 50 mm

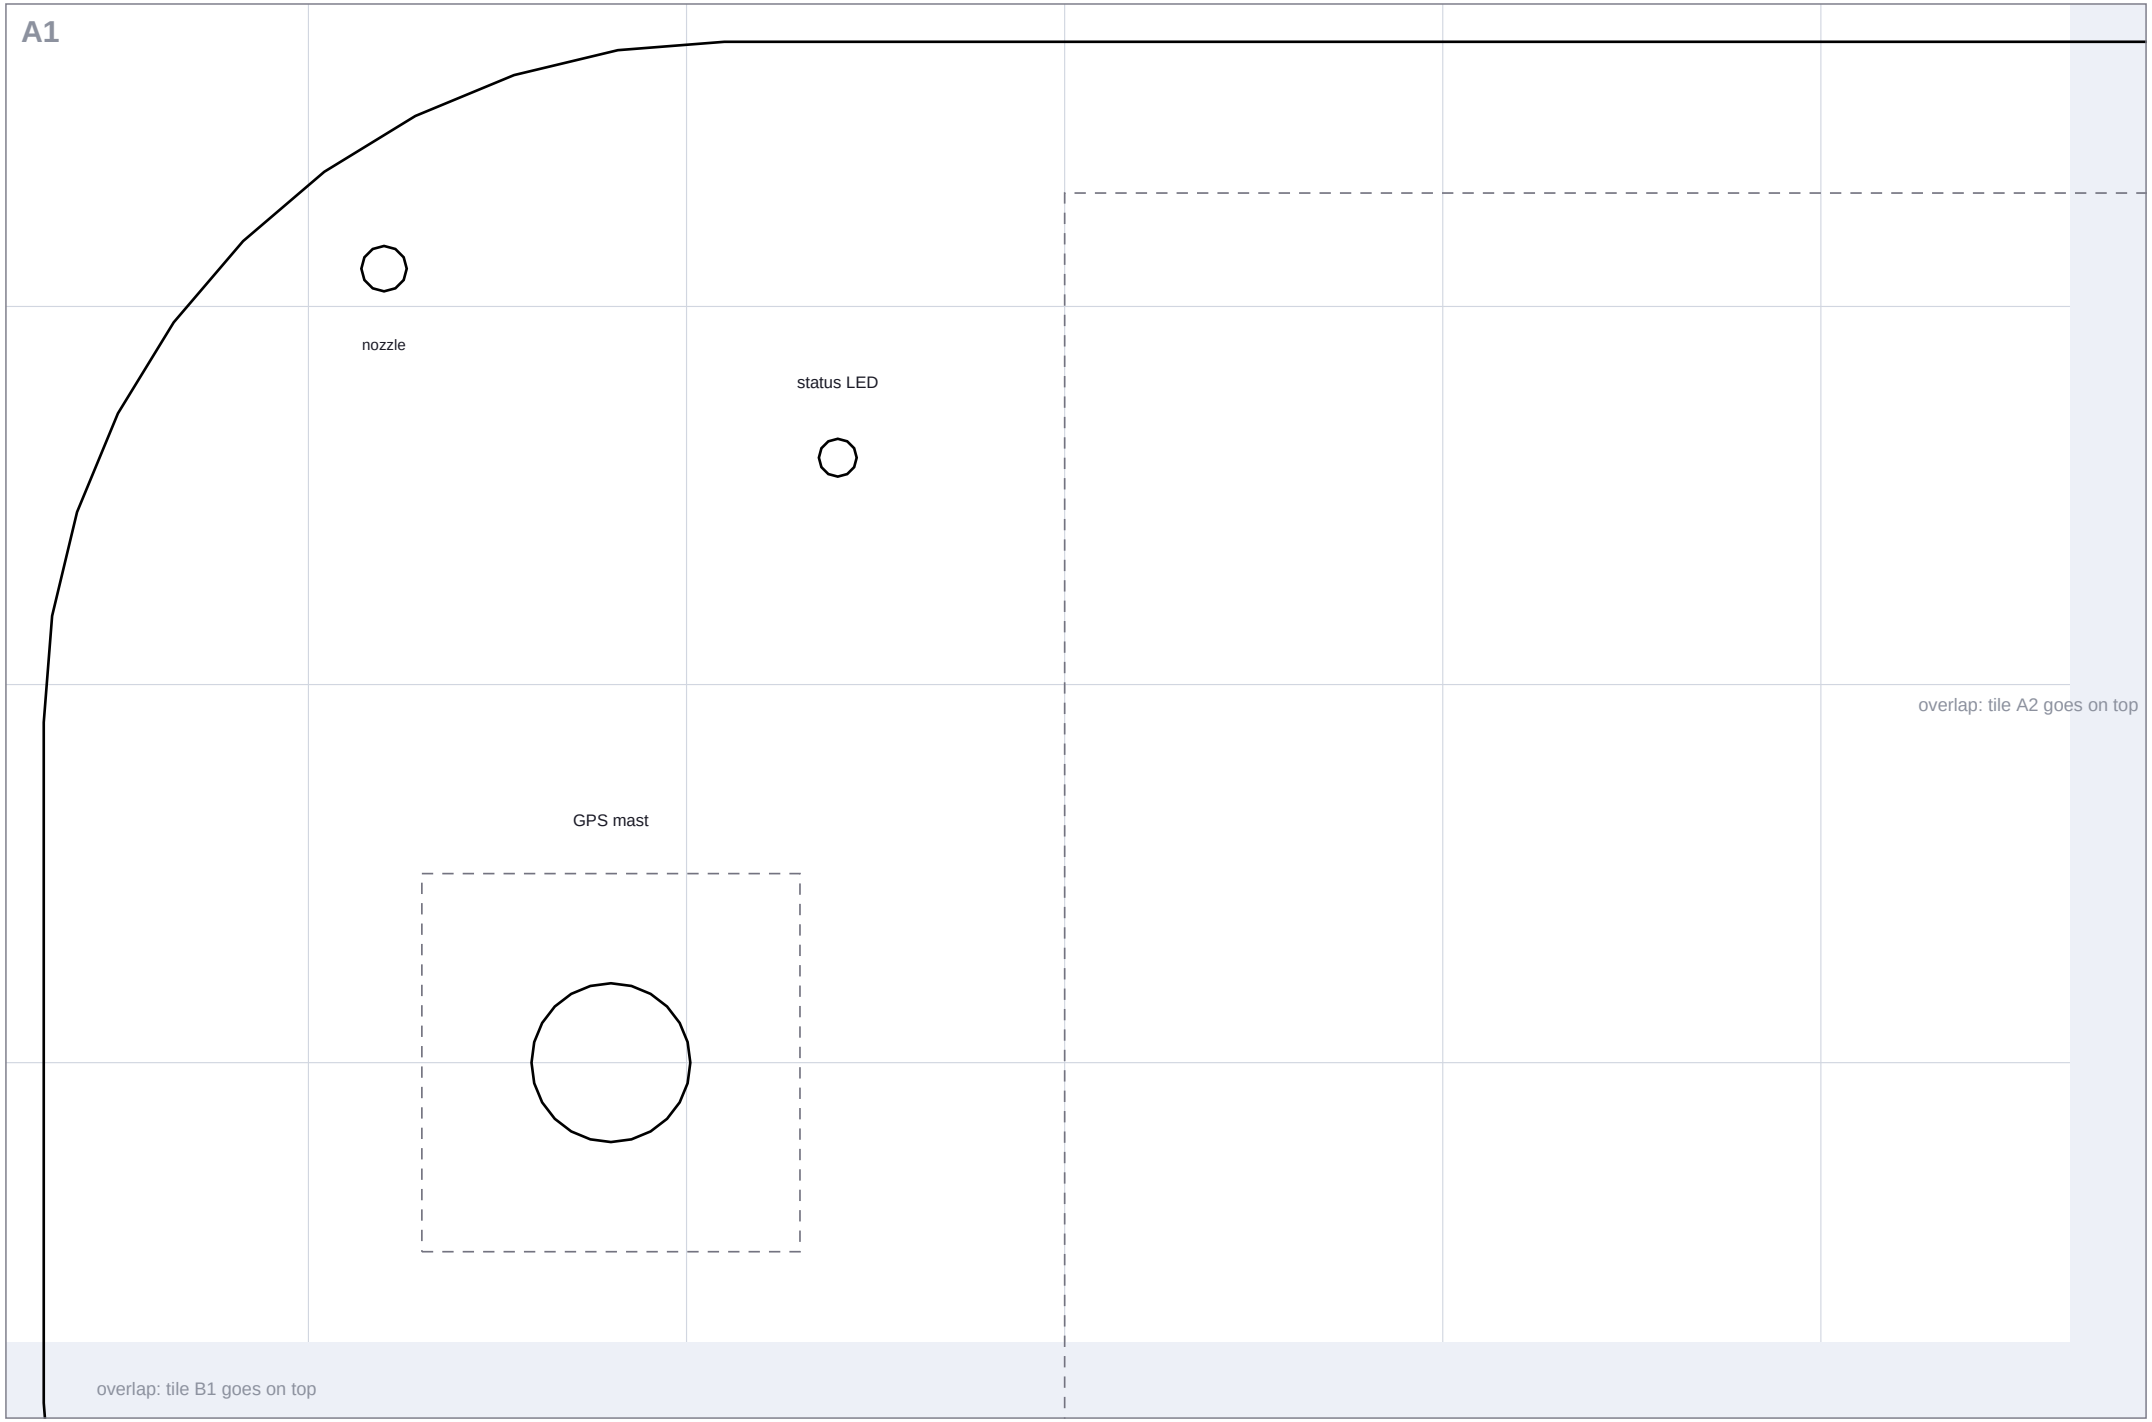


VARUNA AI Pod | Lid top - tile A2 of B3 (3 mm sunboard)

<- must measure 50 mm

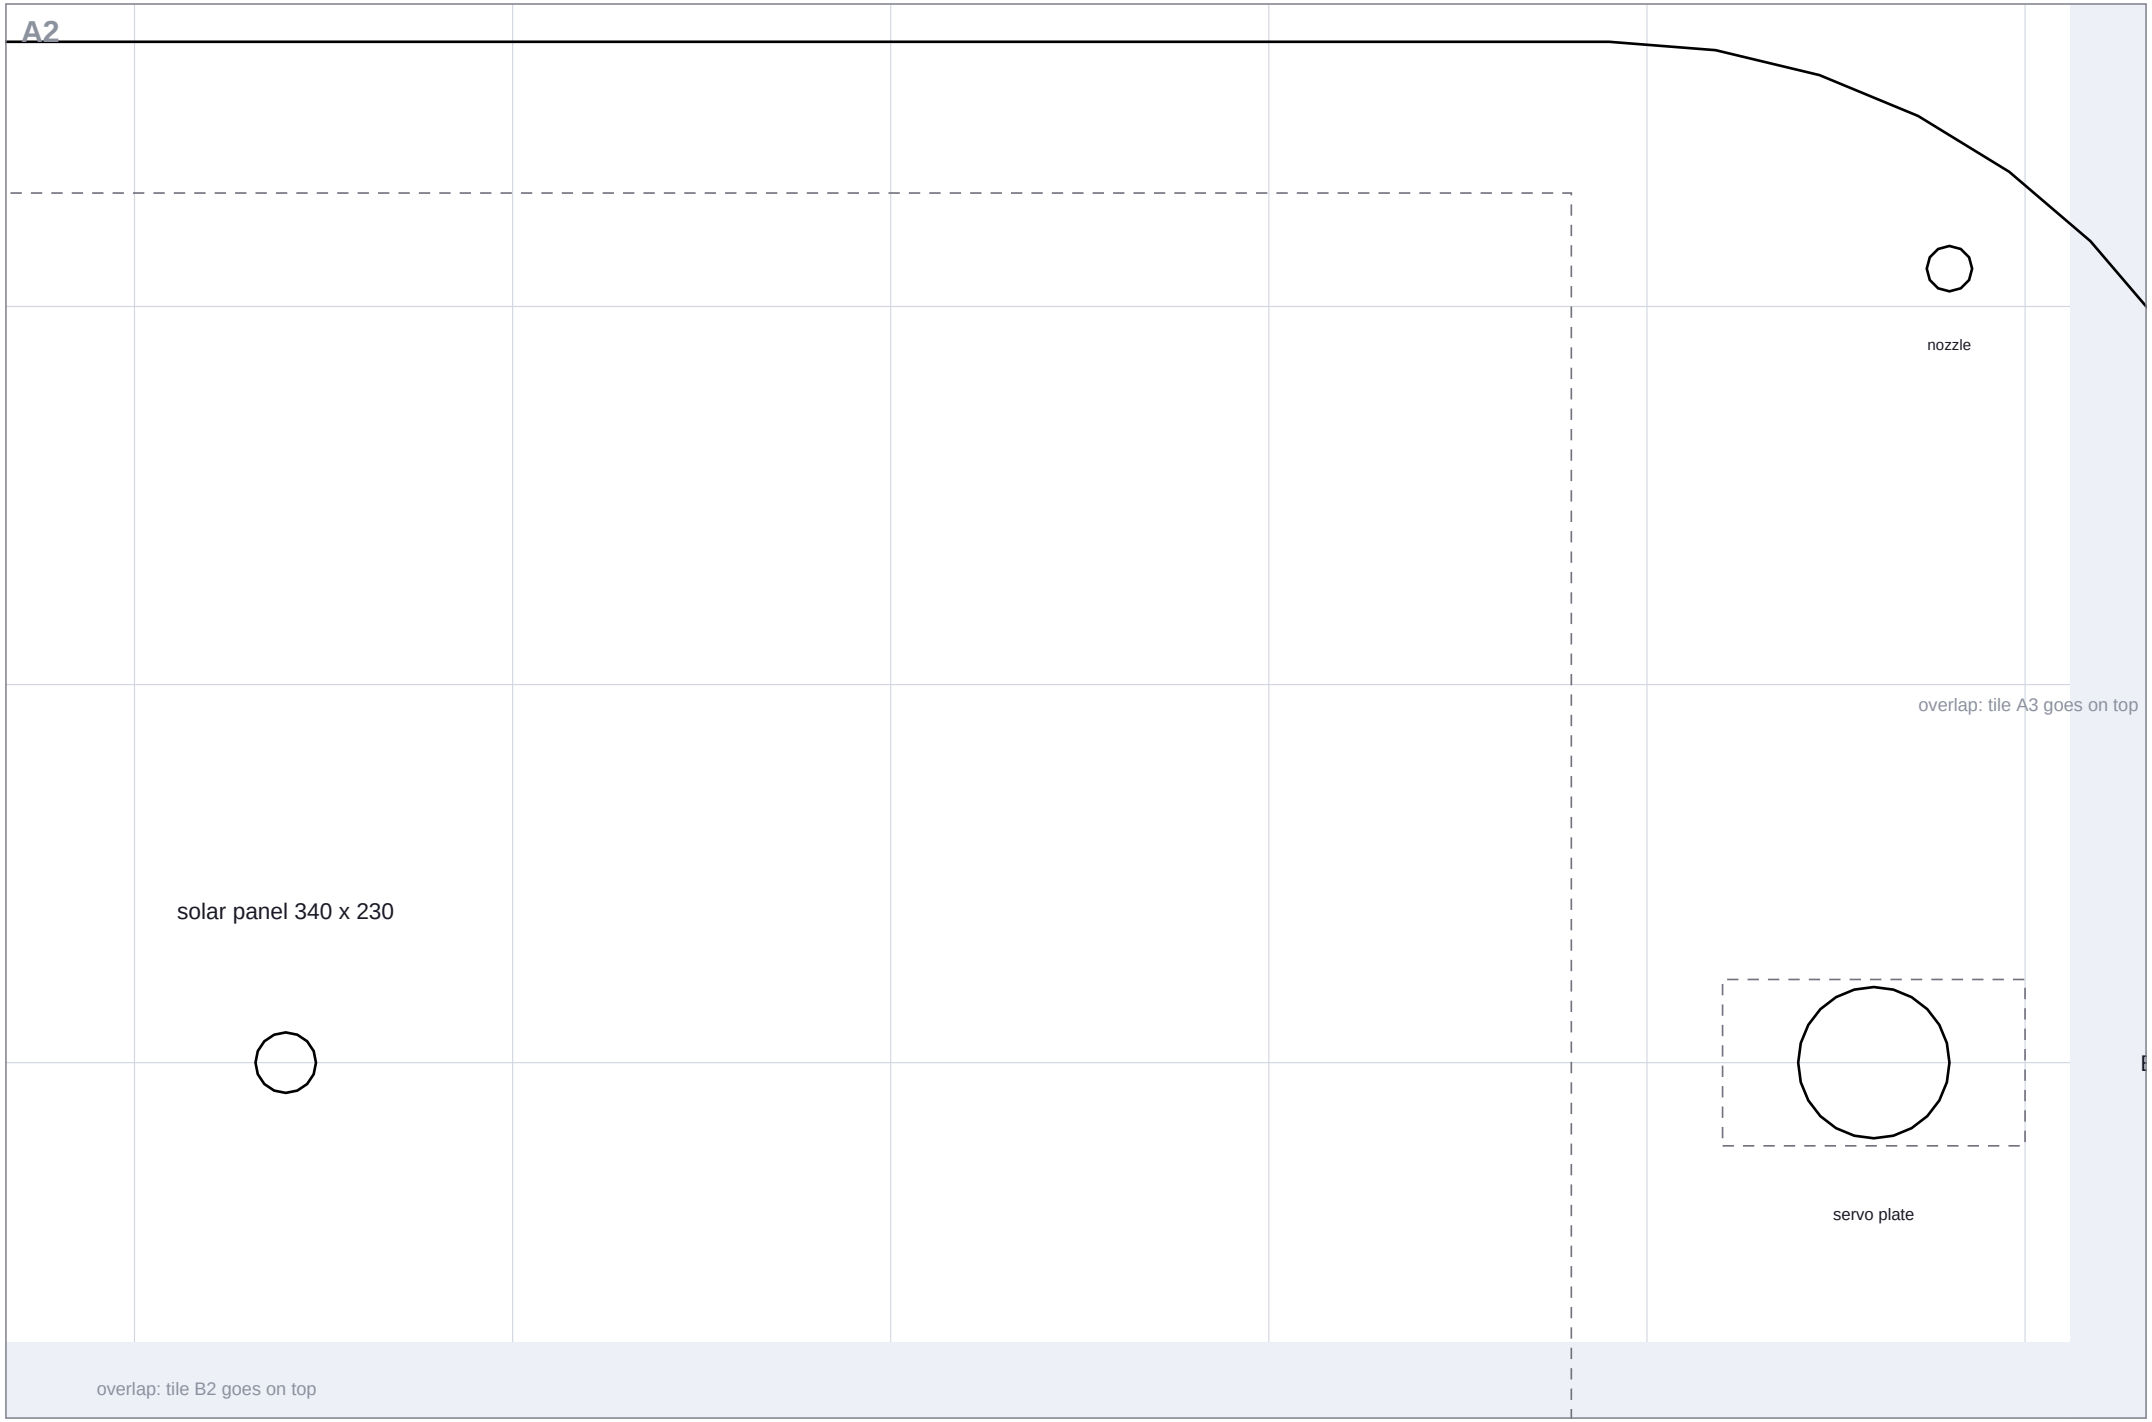


VARUNA AI Pod | Lid top - tile A3 of B3 (3 mm sunboard)

<- must measure 50 mm

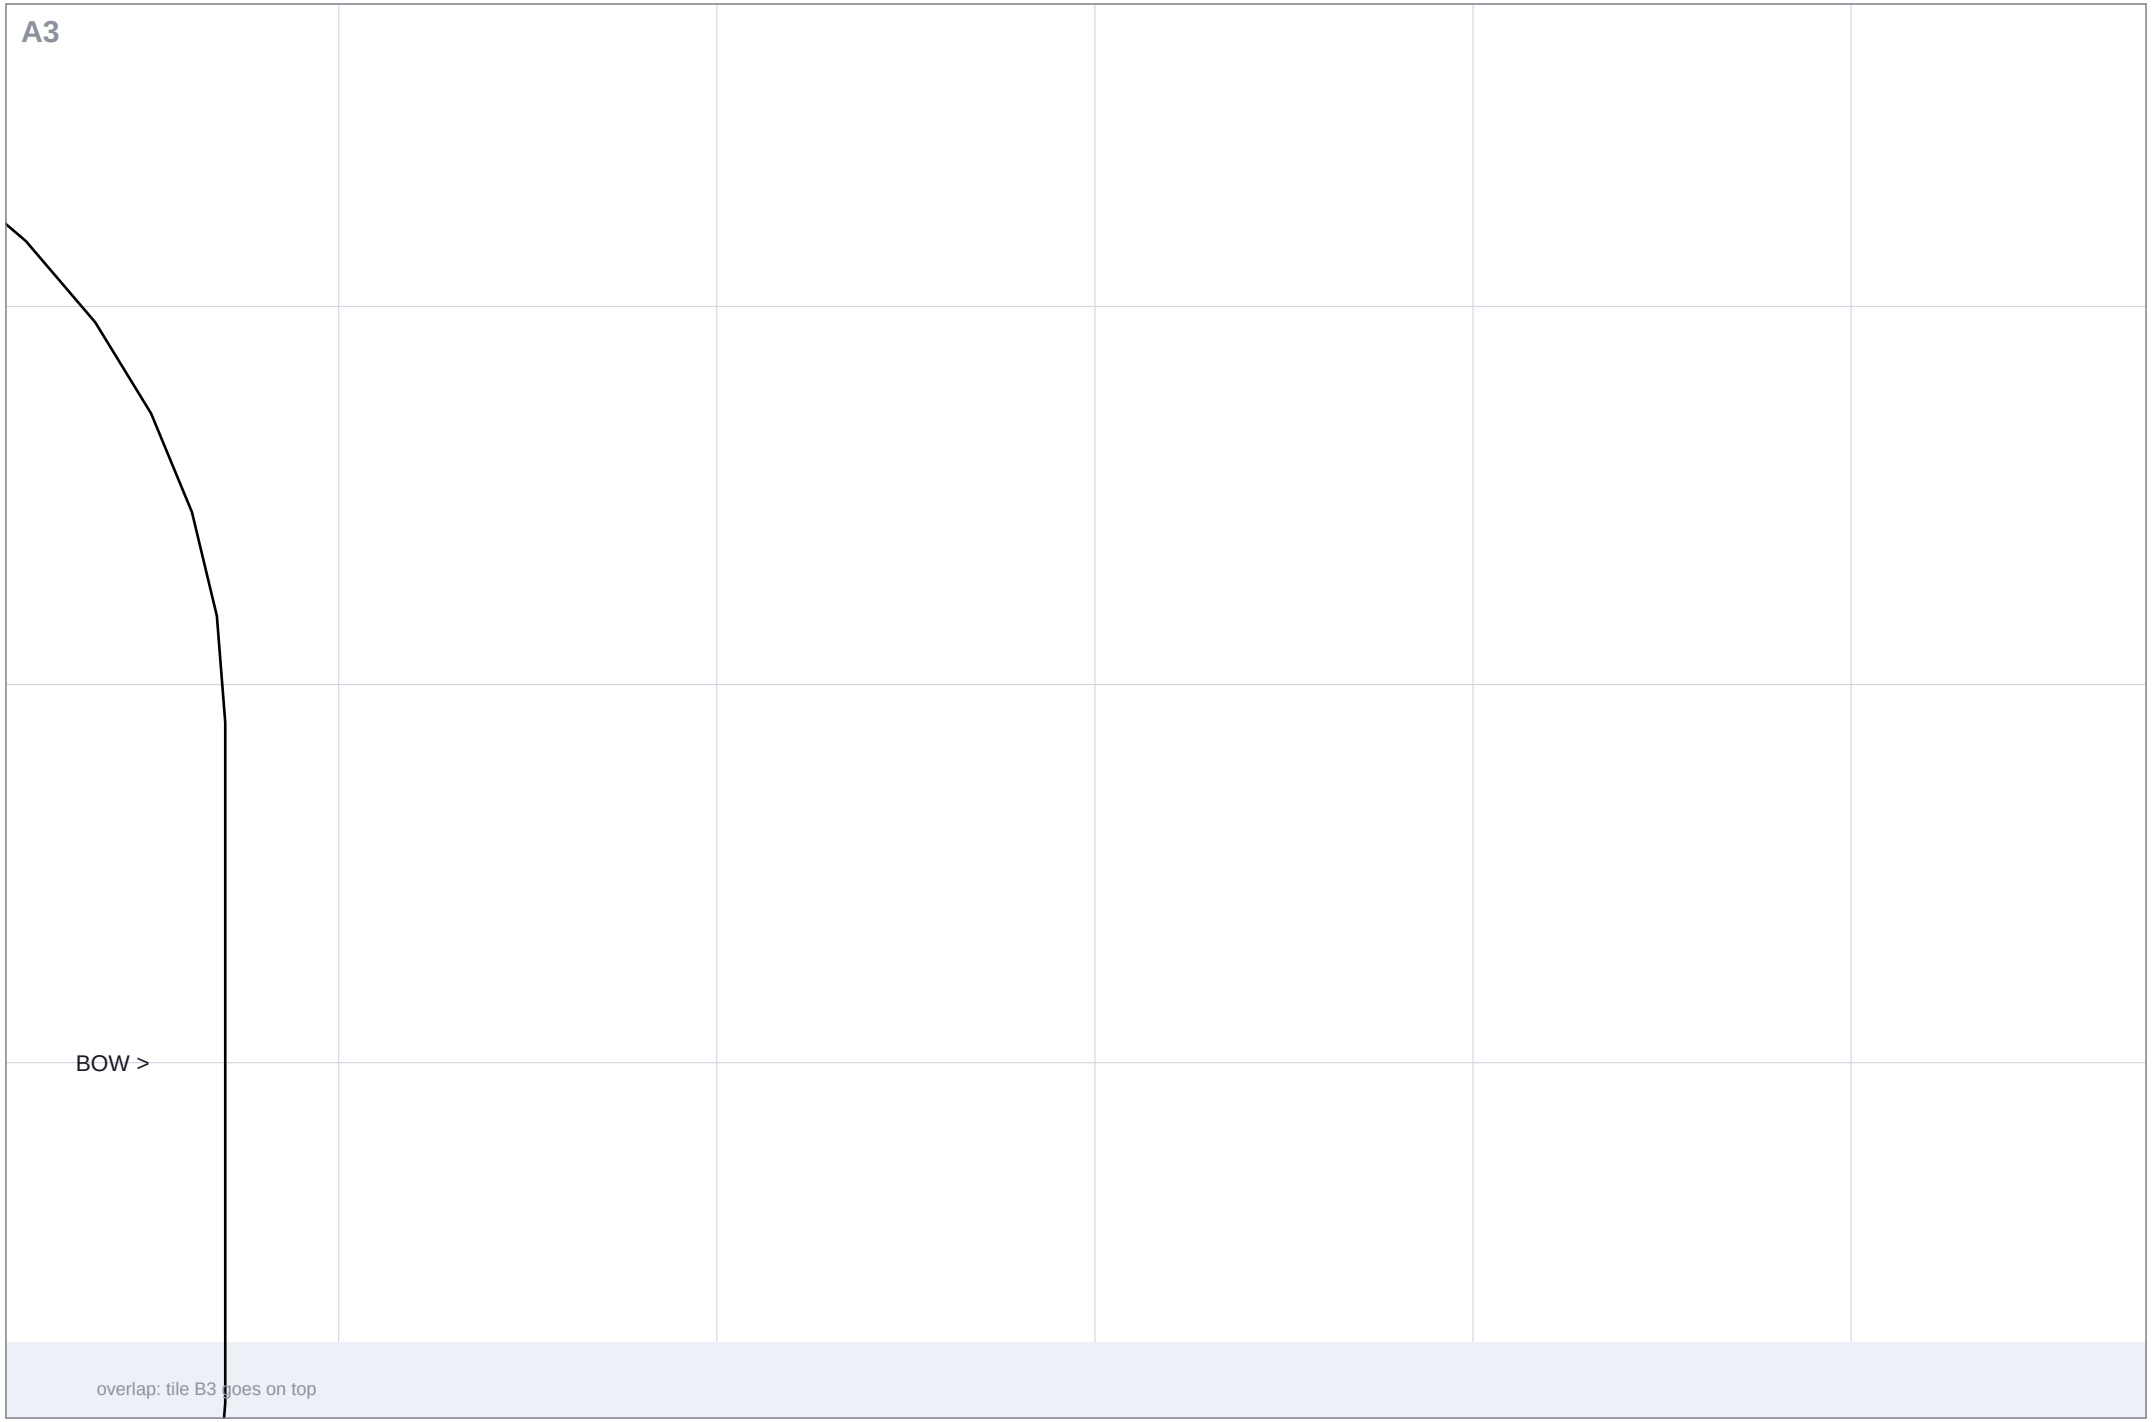


VARUNA AI Pod | Lid top - tile B1 of B3 (3 mm sunboard)

<- must measure 50 mm

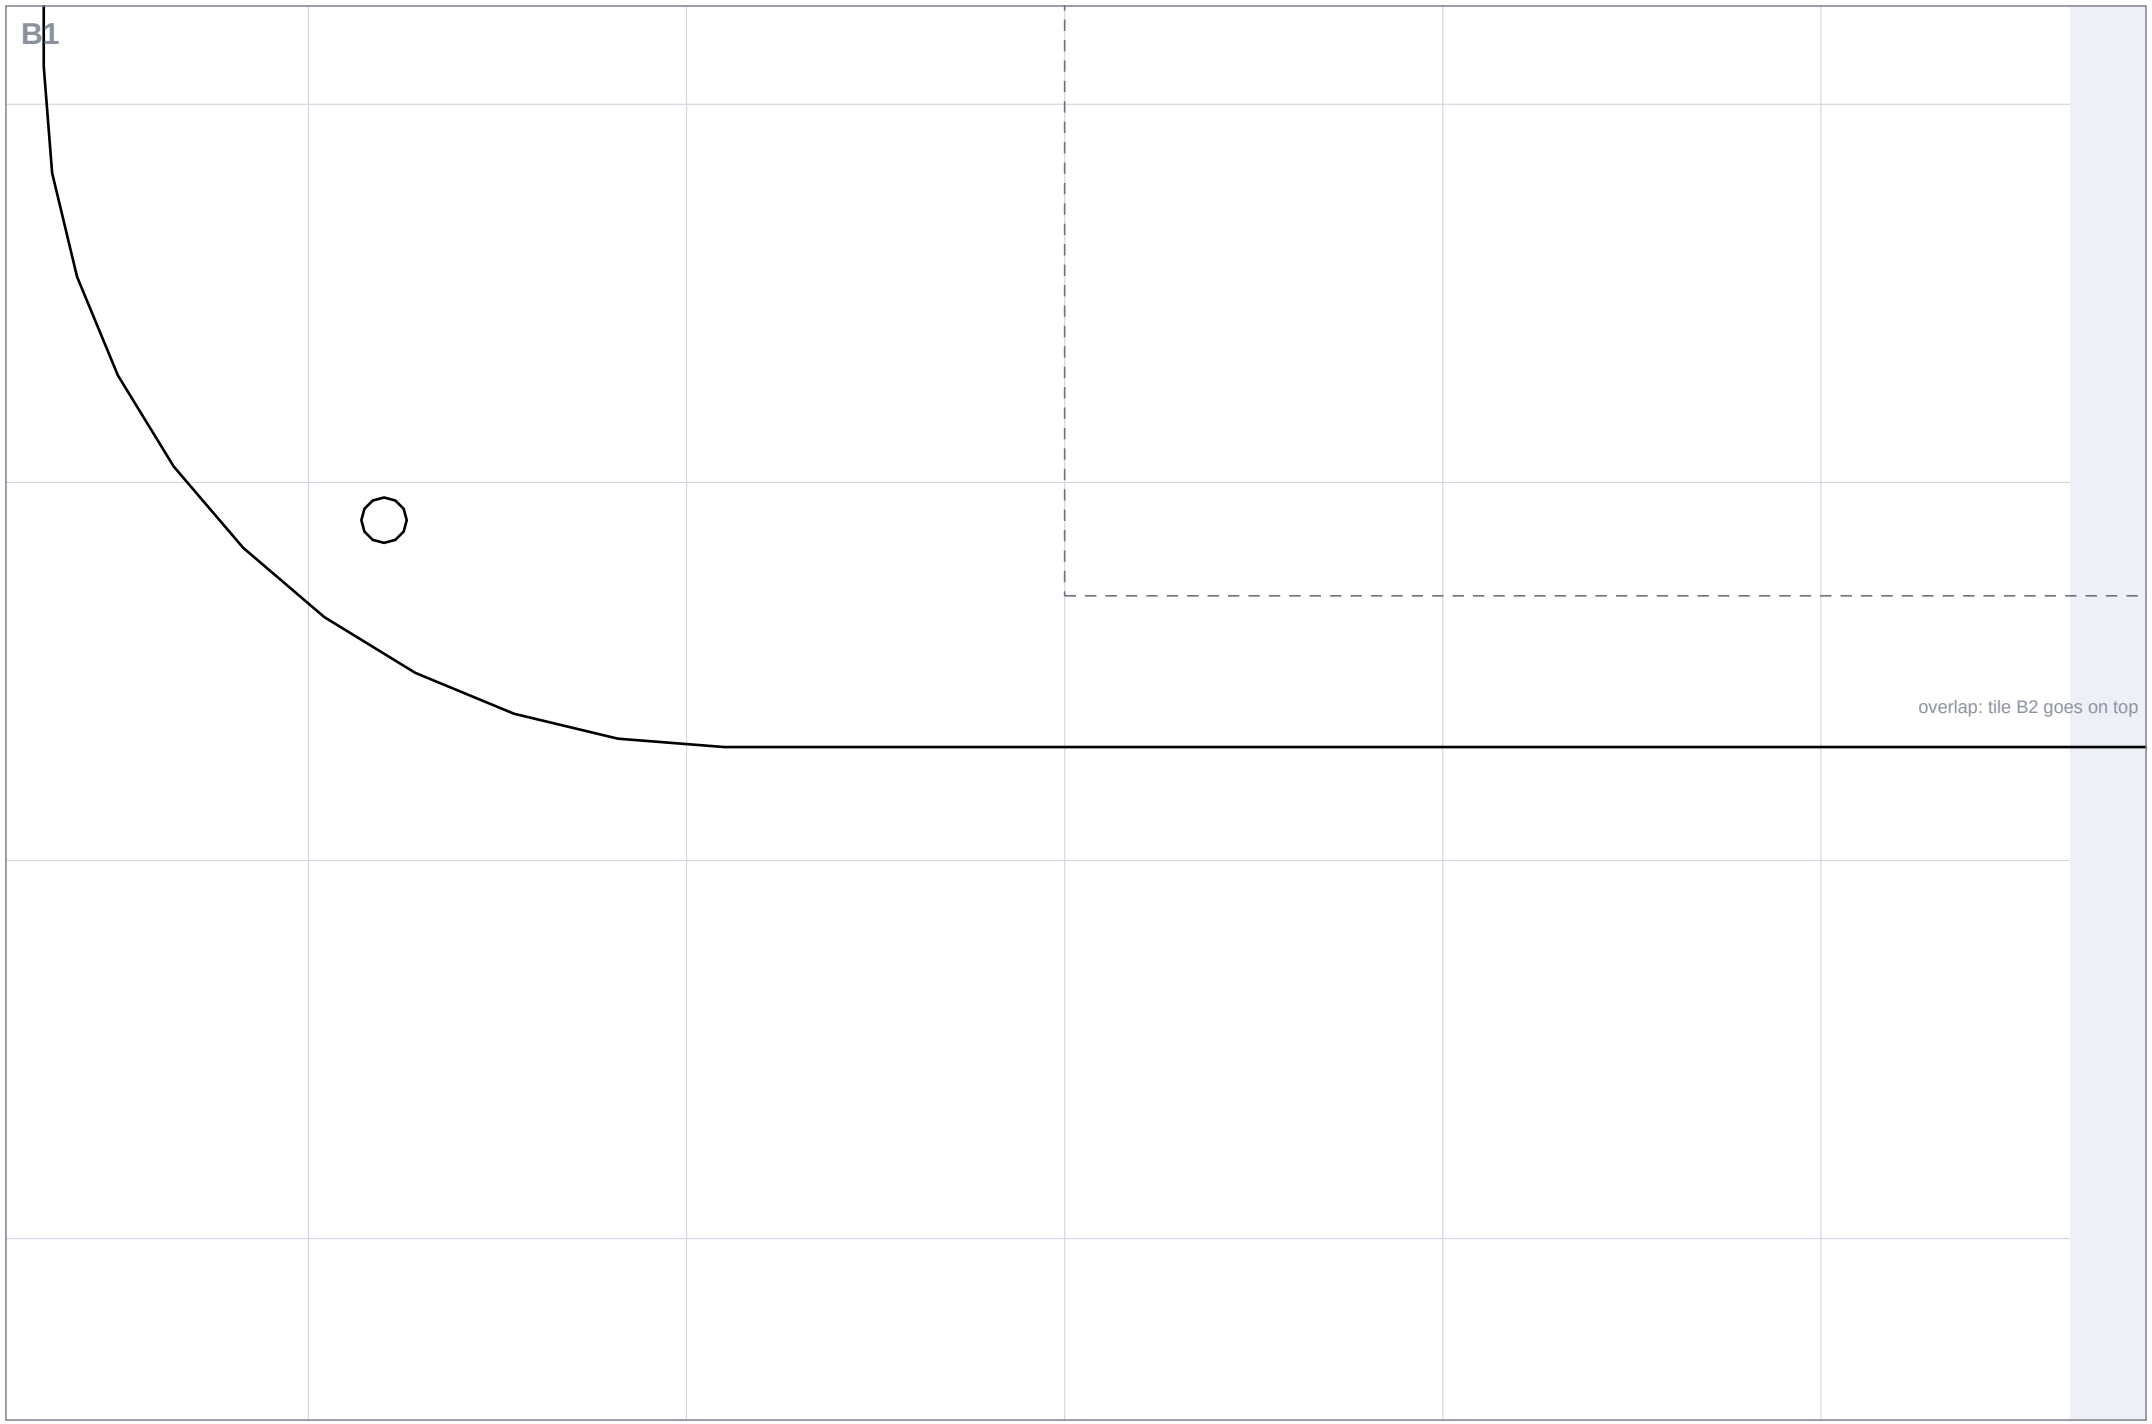


VARUNA AI Pod | Lid top - tile B2 of B3 (3 mm sunboard)

<- must measure 50 mm

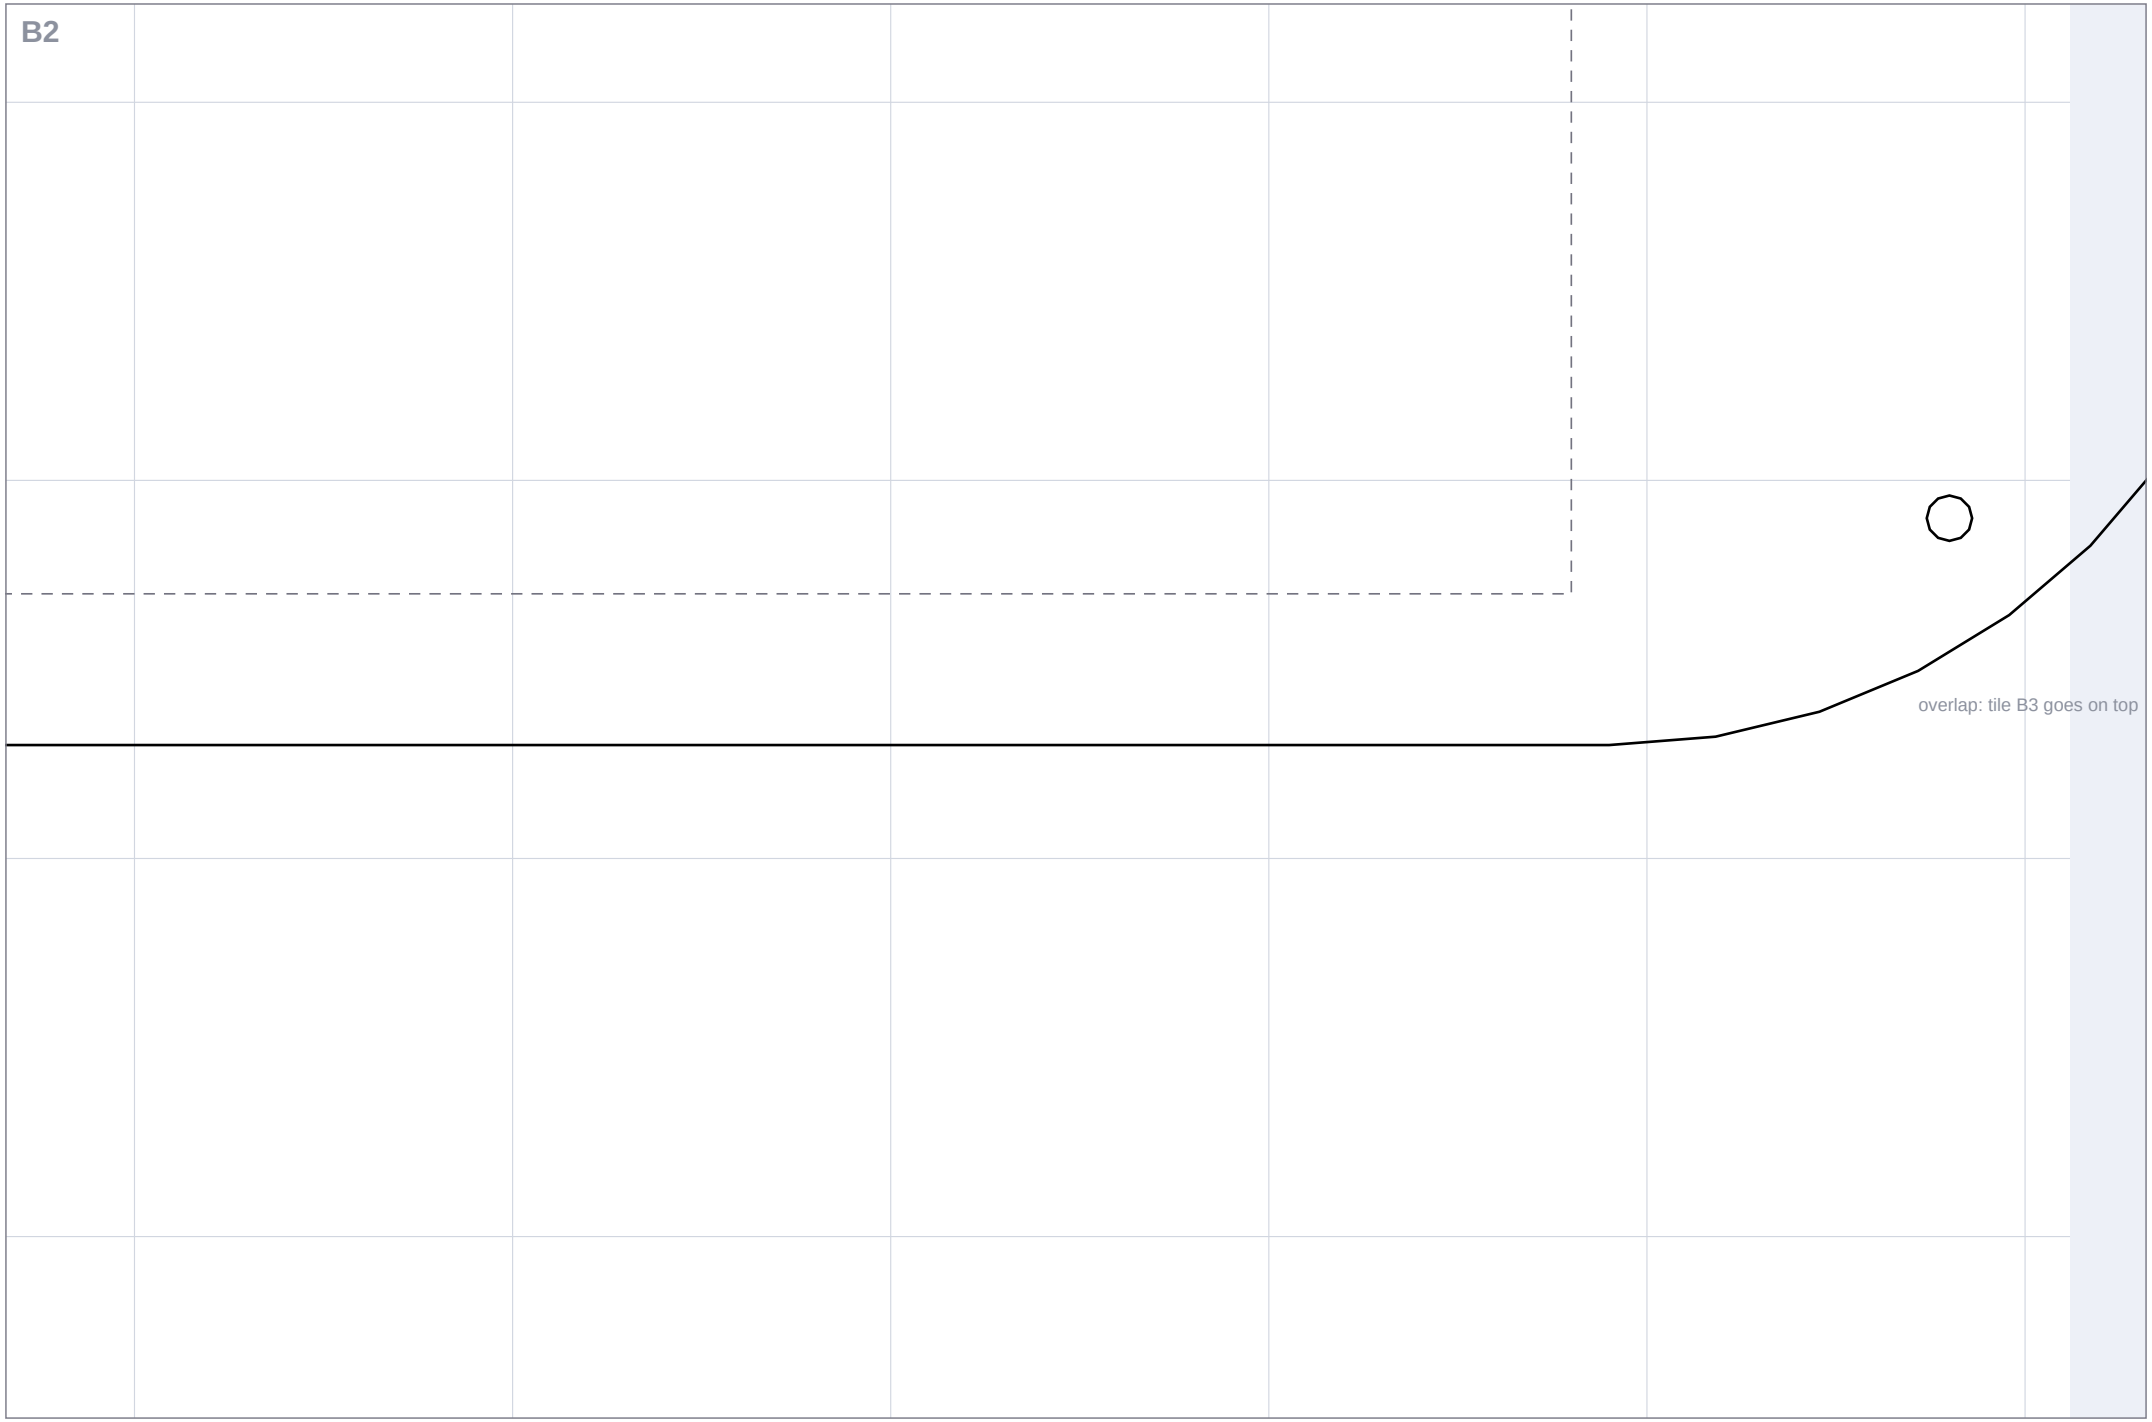


VARUNA AI Pod | Lid top - tile B3 of B3 (3 mm sunboard)

<- must measure 50 mm

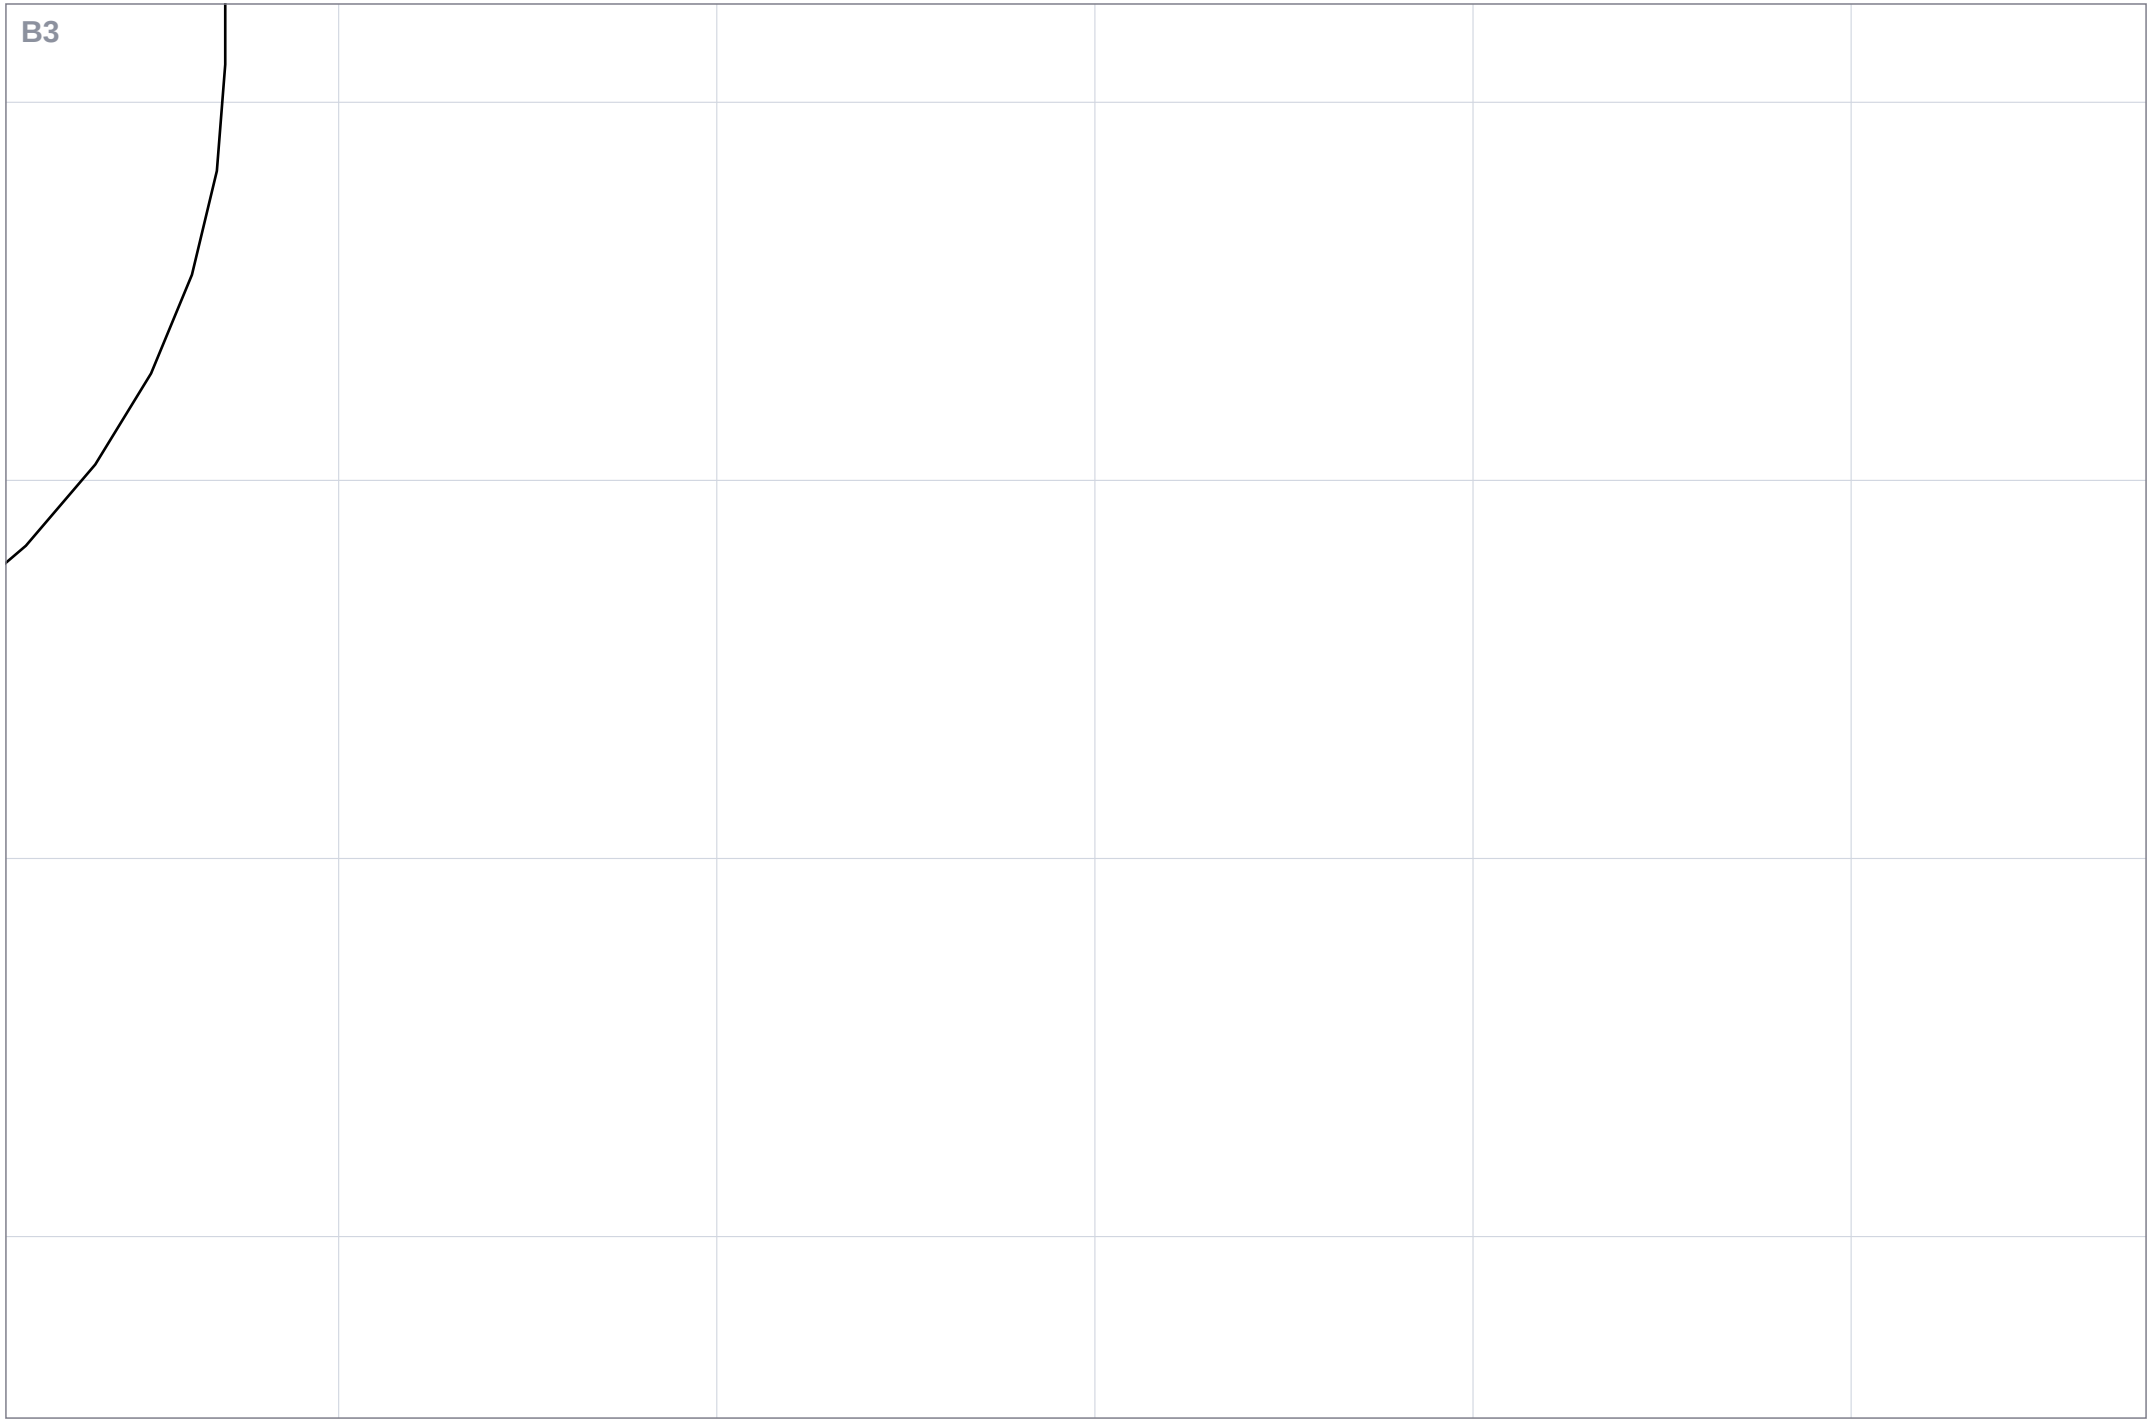


VARUNA AI Pod | Shelf - tile A1 of B2 (3 mm sunboard)

<- must measure 50 mm

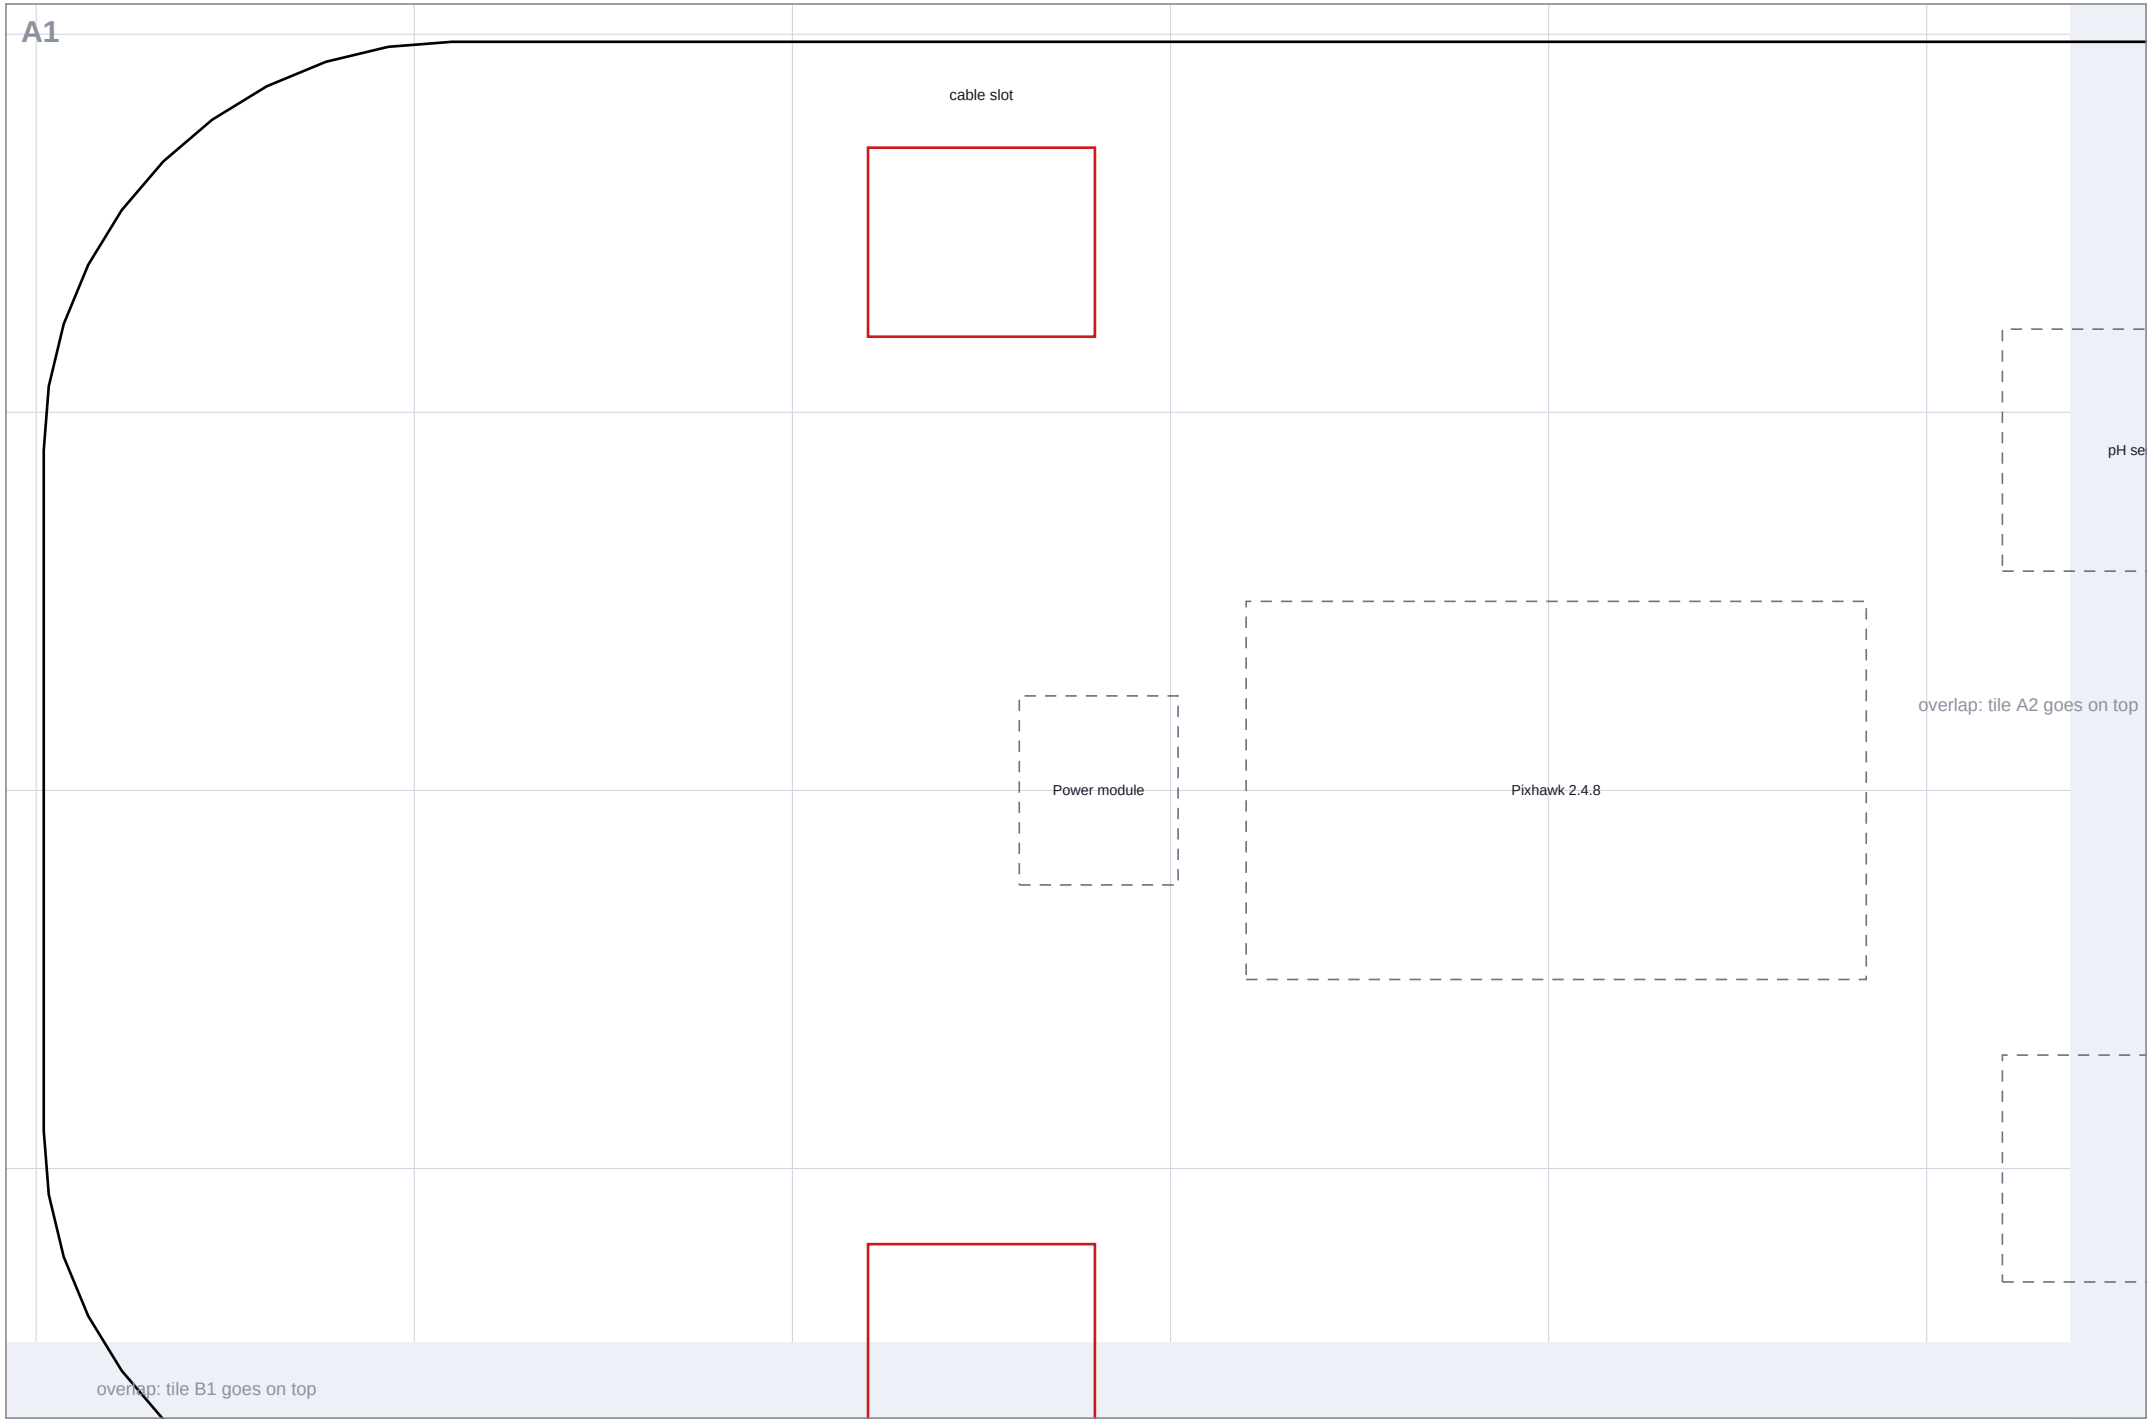

VARUNA AI Pod | Shelf - tile A2 of B2 (3 mm sunboard)

<- must measure 50 mm

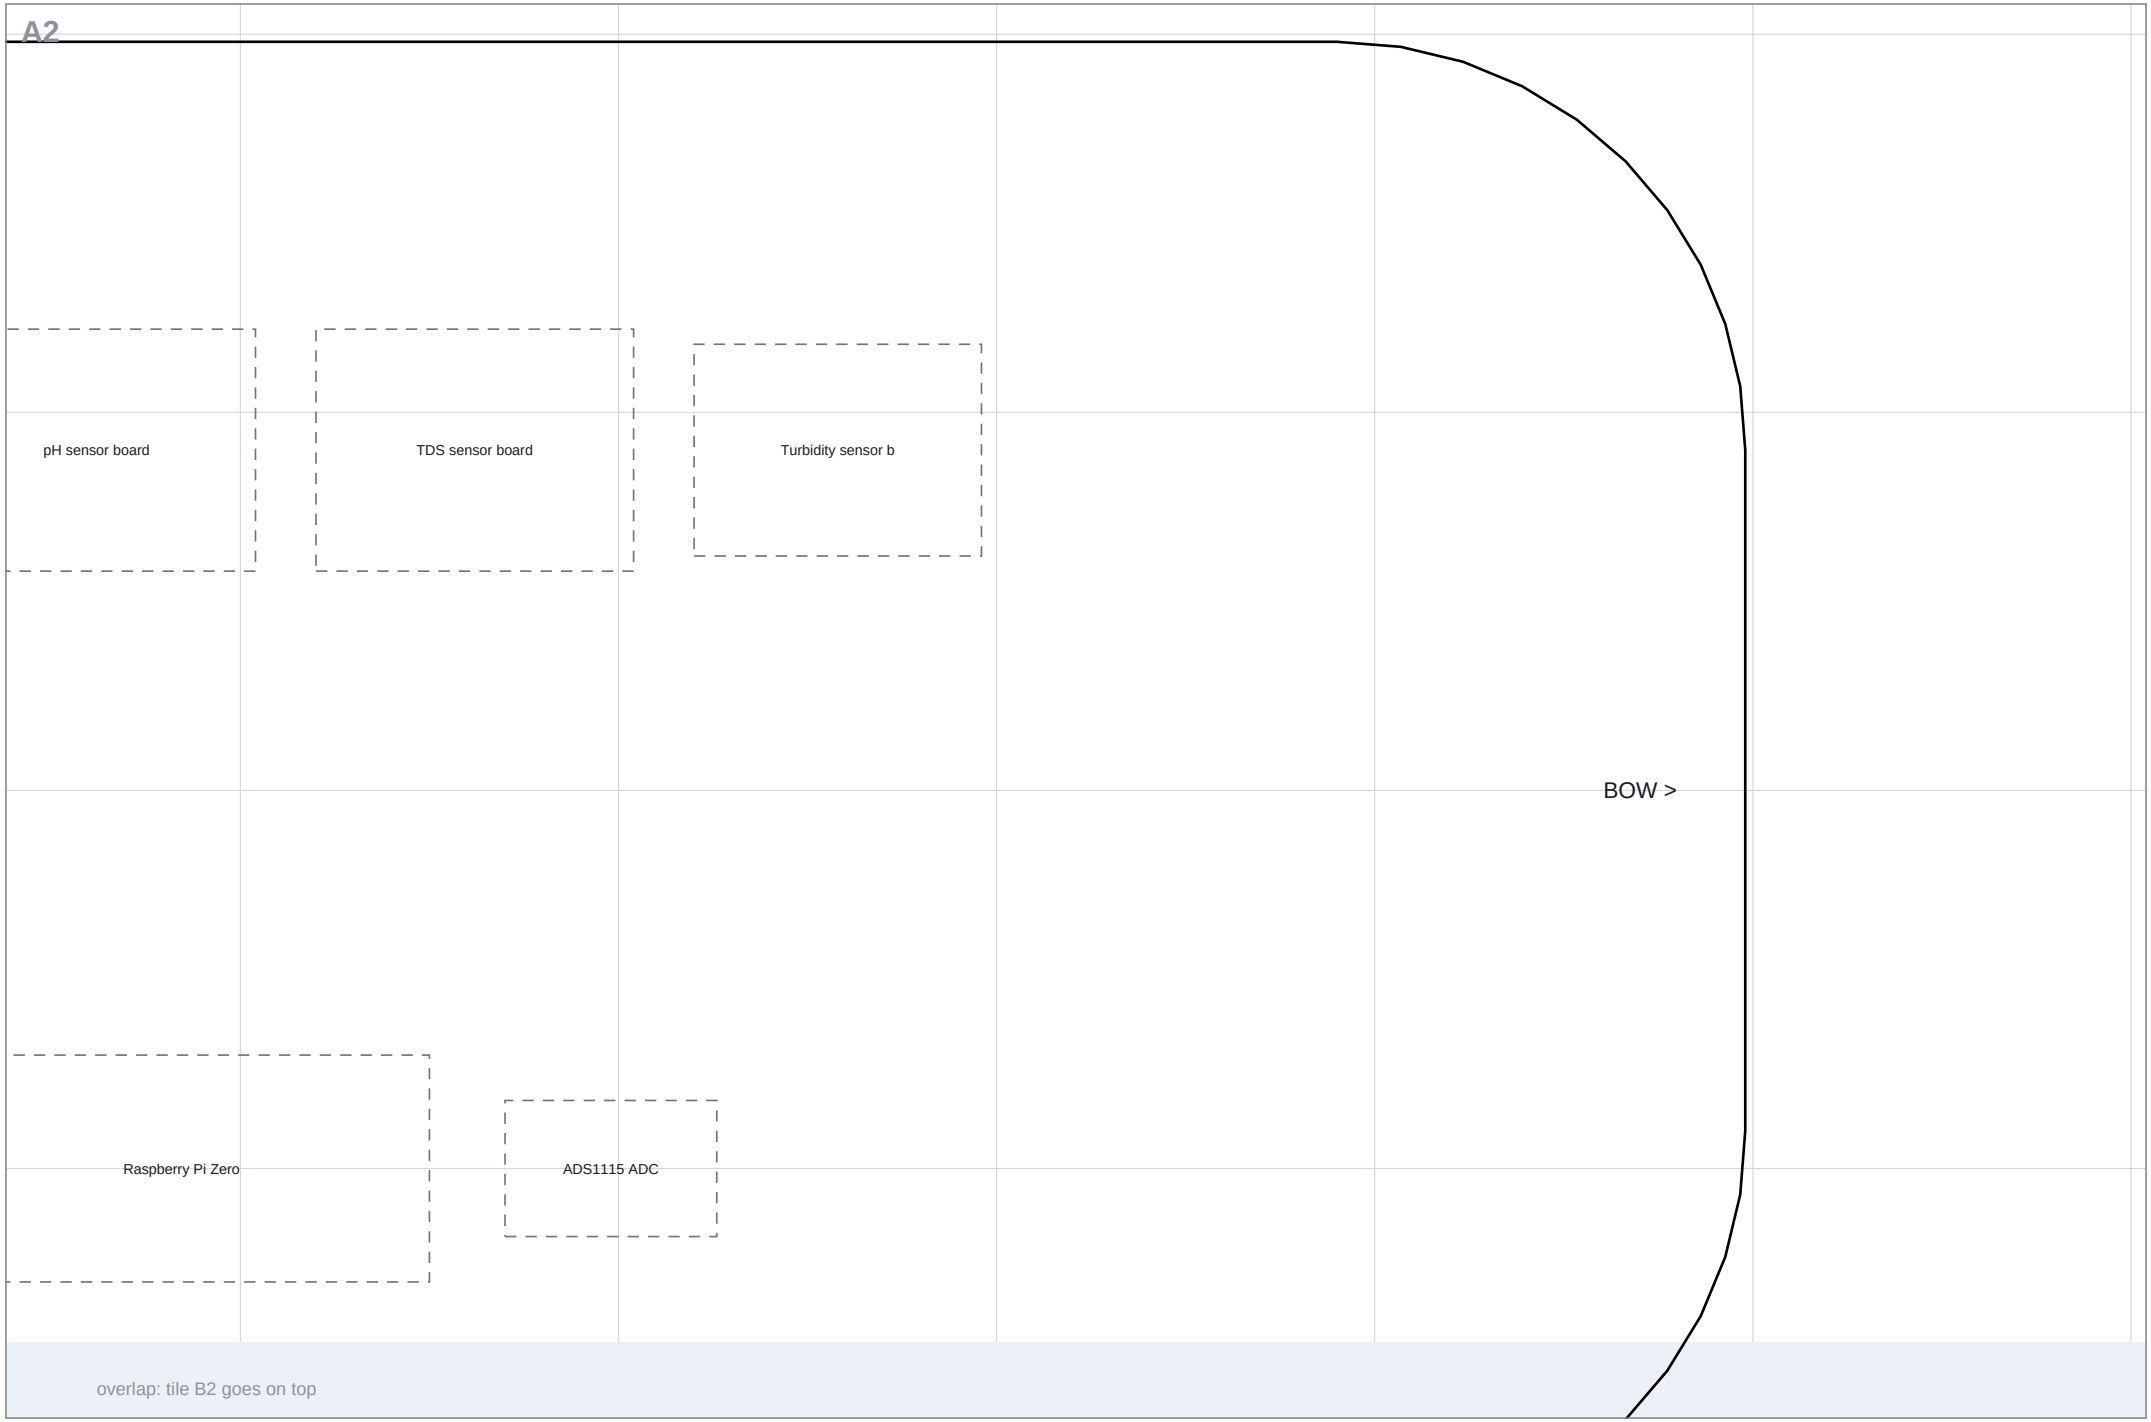


VARUNA AI Pod | Shelf - tile B1 of B2 (3 mm sunboard)

<- must measure 50 mm




<- must measure 50 mm

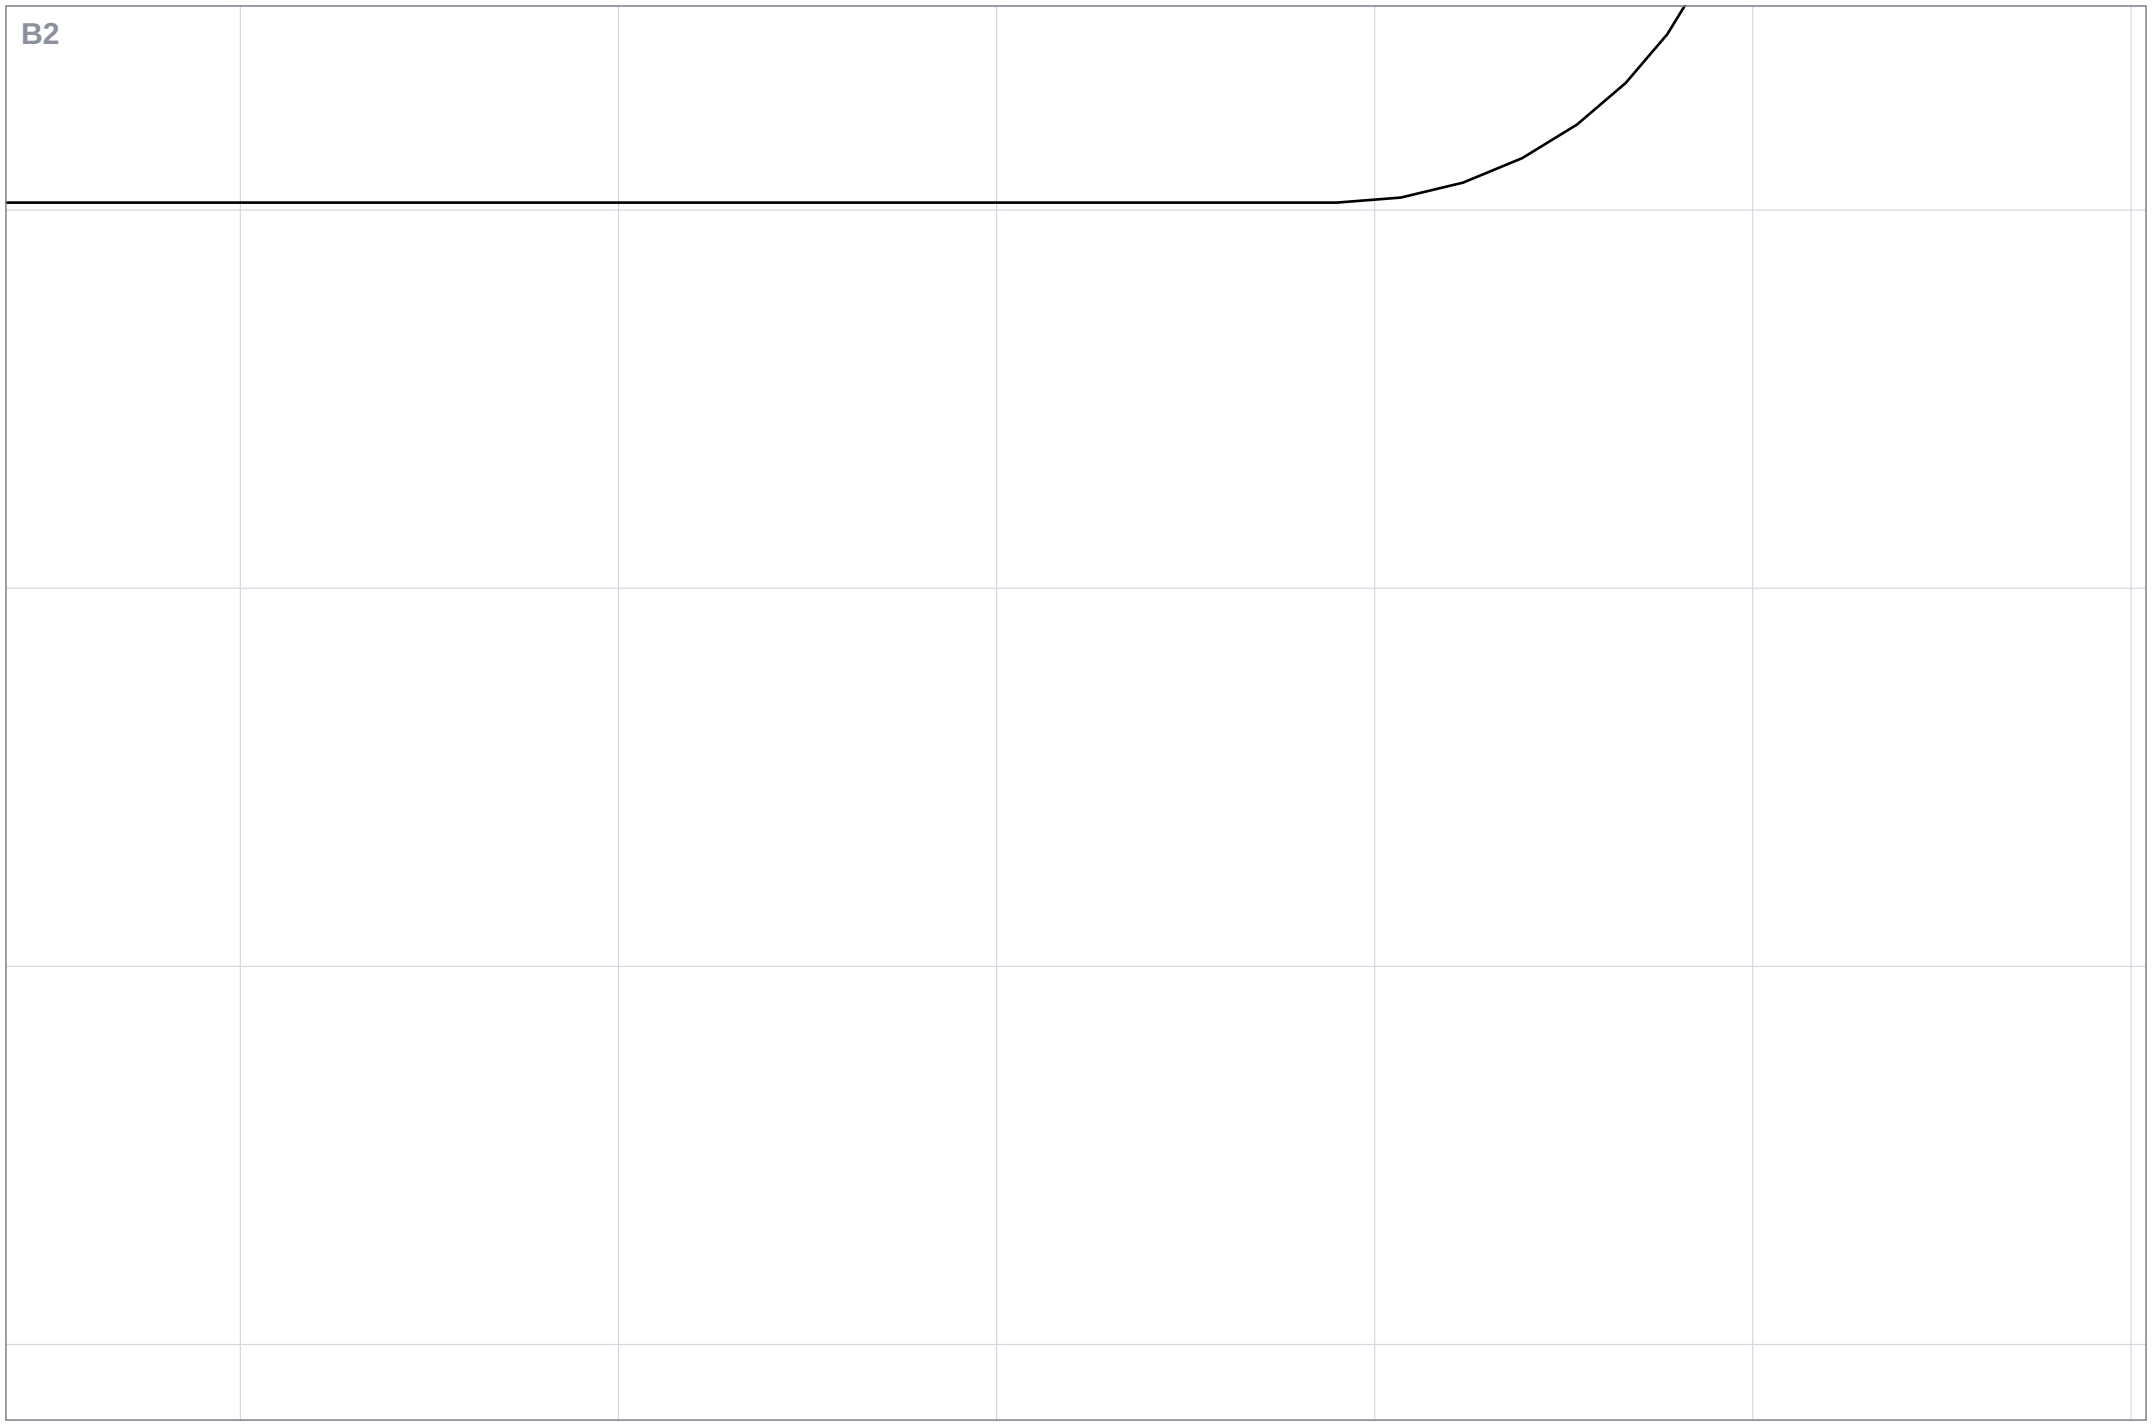

<- must measure 50 mm

Drawer tunnel roof
5 mm sunboard

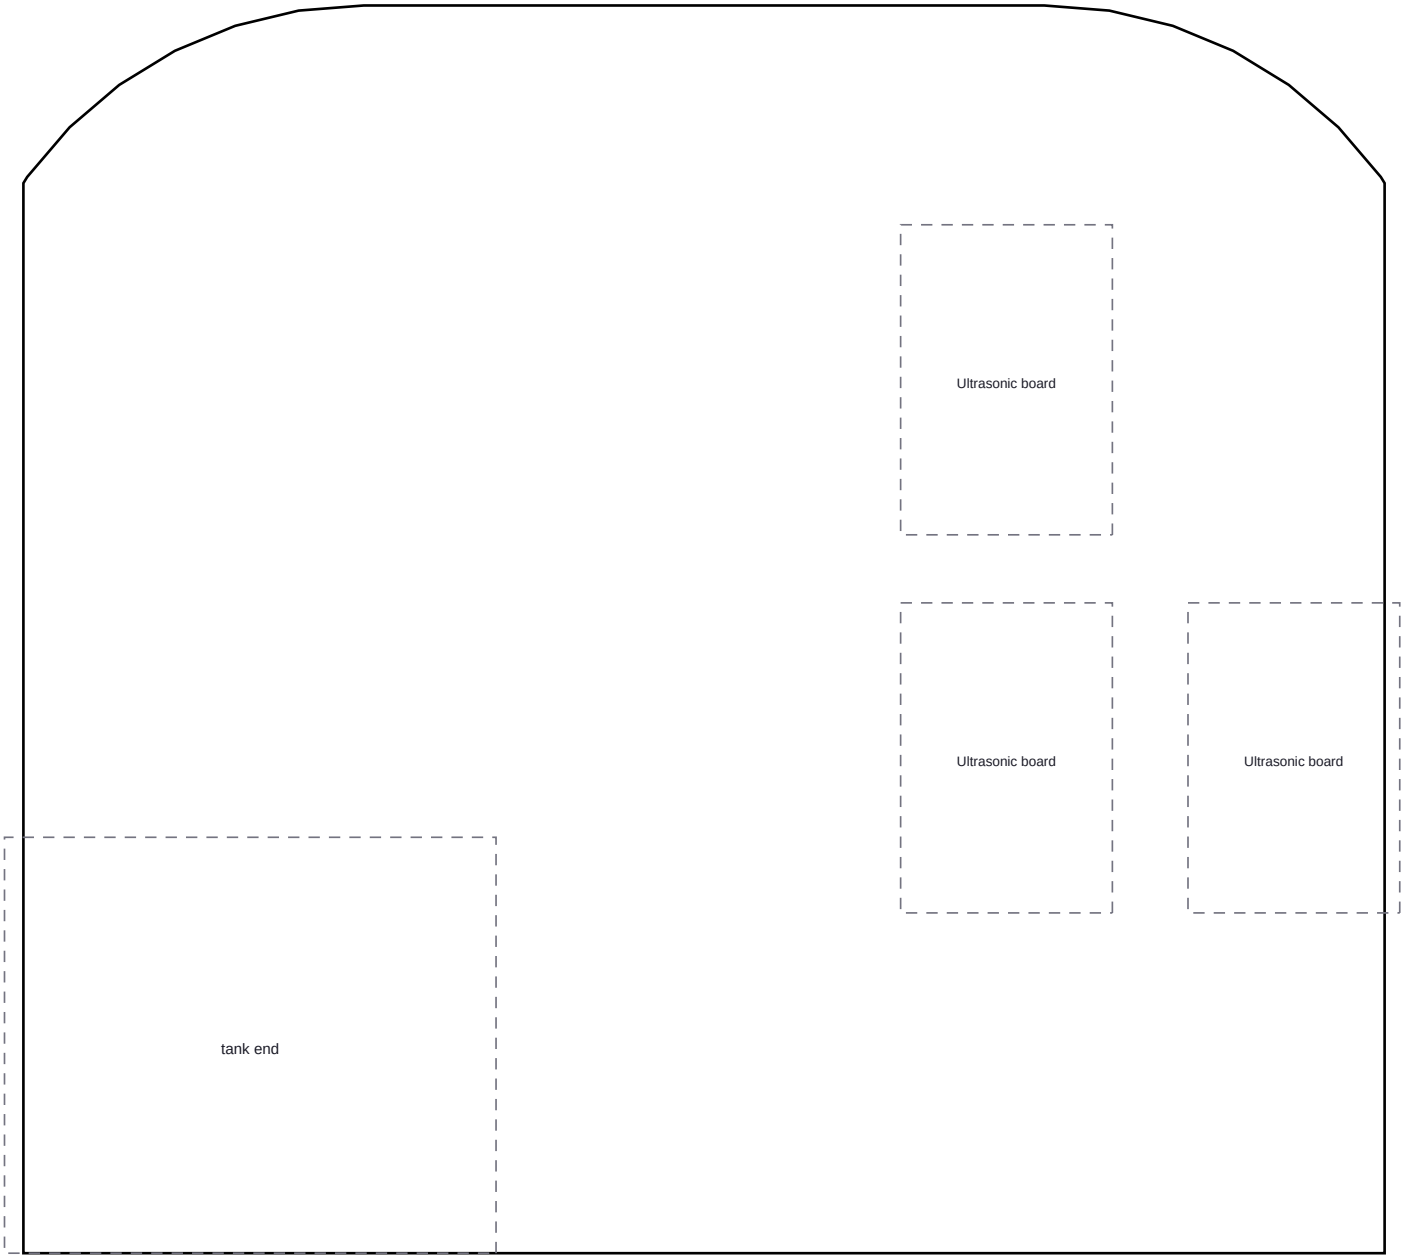


<- must measure 50 mm

Drawer bottom


3 mm sunboard






<- must measure 50 mm

Drawer front (entrance + handle)
3 mm sunboard

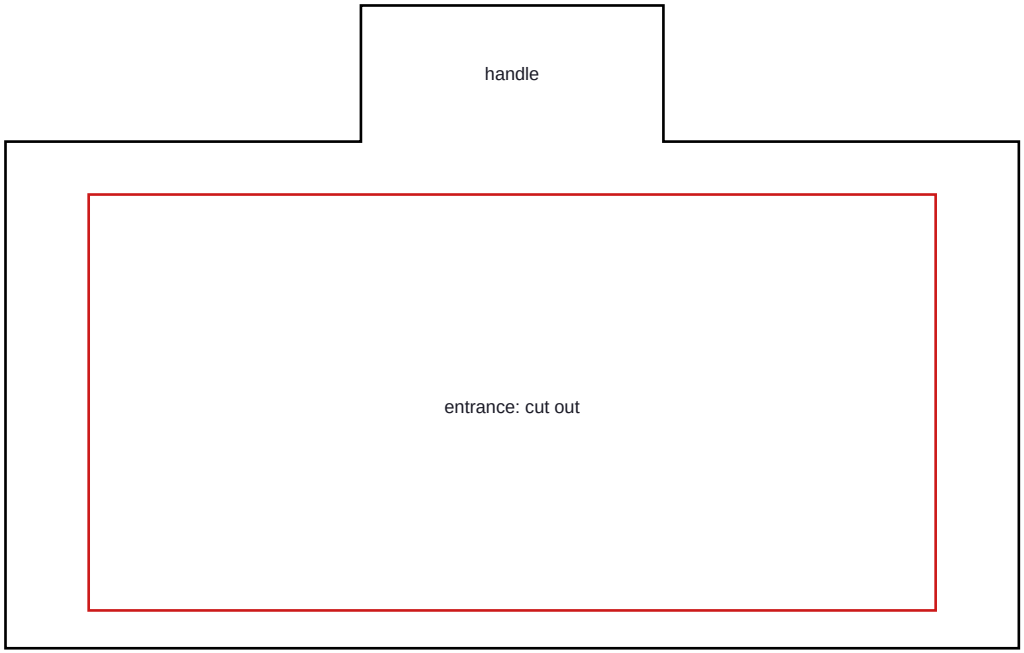


Drawer side (left)
3 mm sunboard

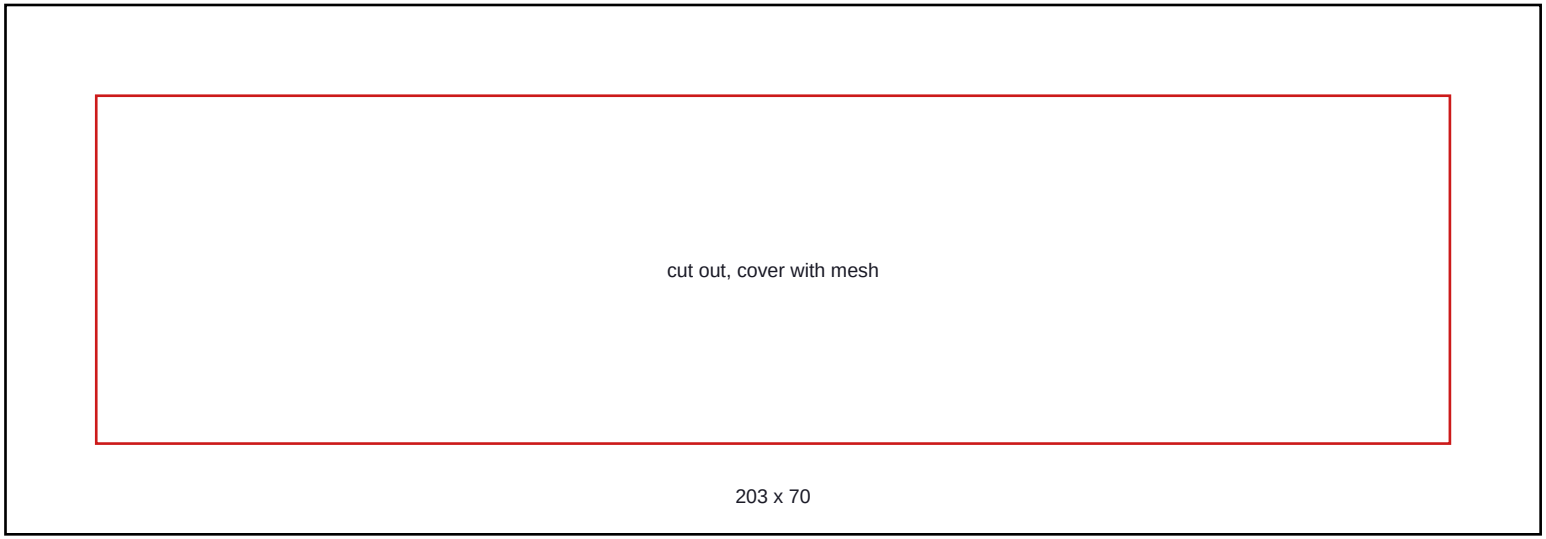


<- must measure 50 mm


Drawer side (right)
3 mm sunboard

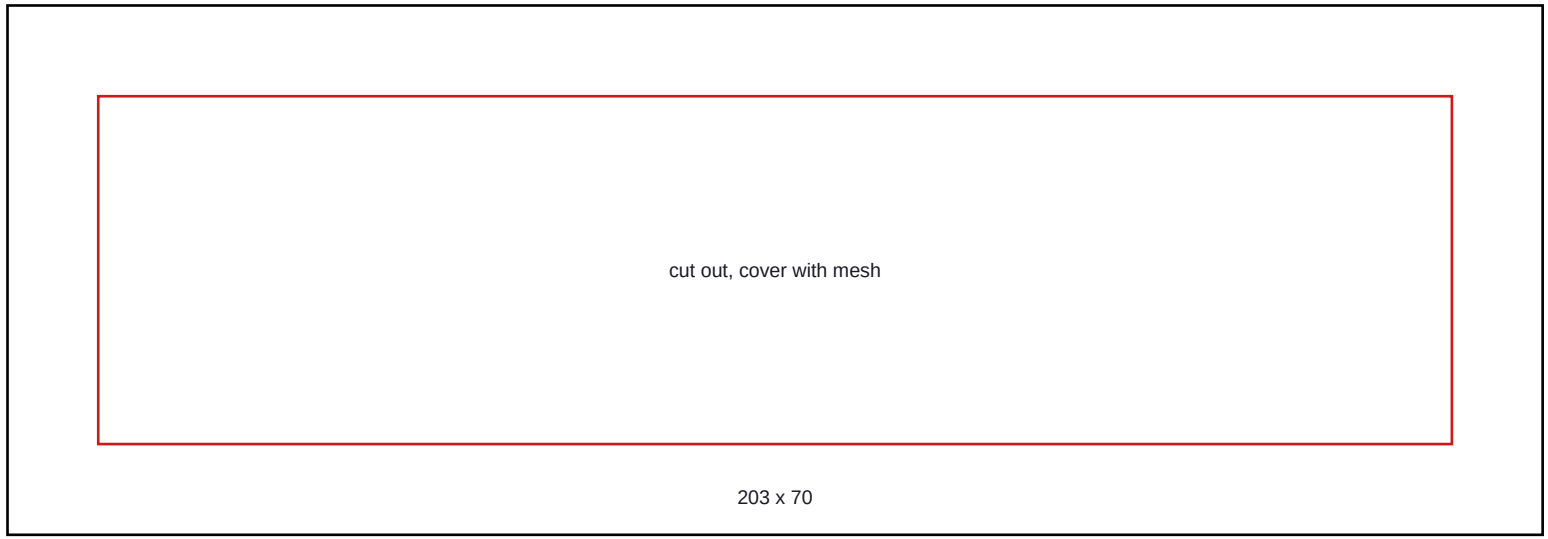


GPS disc
5 mm sunboard

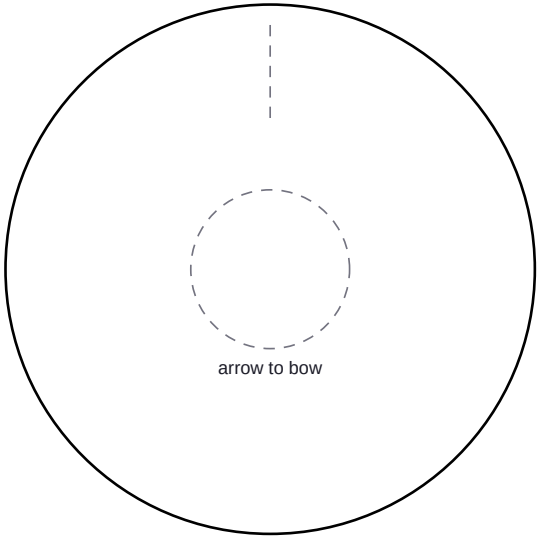

Drawer back
3 mm sunboard

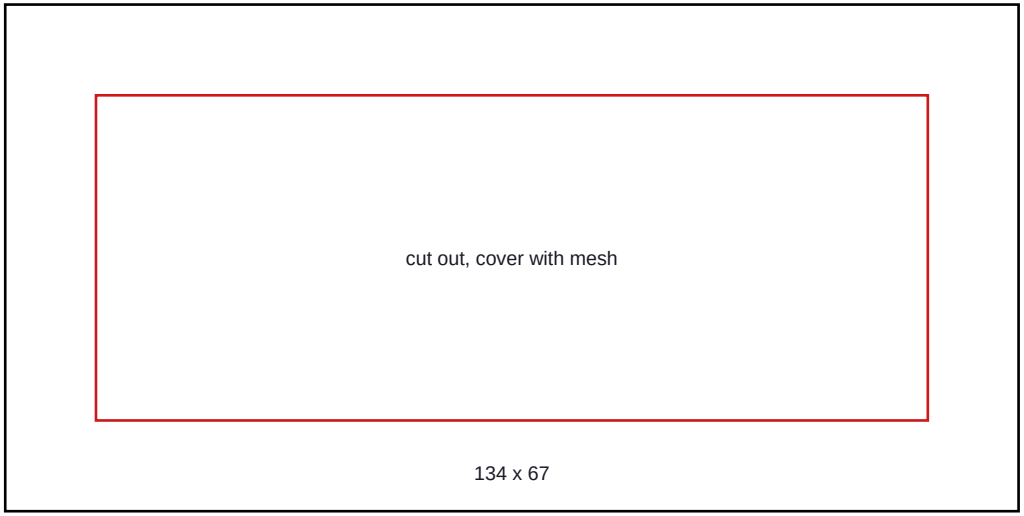


VARUNA AI Pod | small parts 5 of 5




<- must measure 50 mm


One-way flap
PET sheet




Servo plate
3 mm sunboard

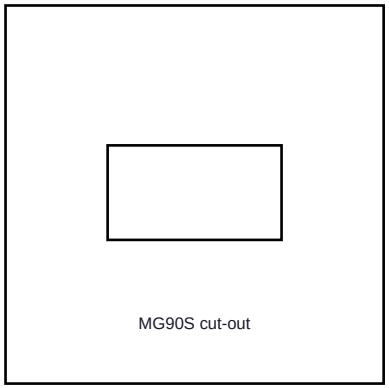


Mast socket layer
5 mm sunboard (cut 2, top one with hole)

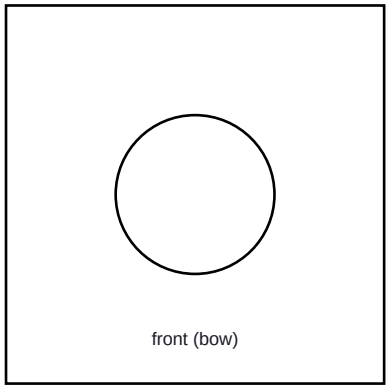

Mast socket layer
5 mm sunboard (cut 2, top one with hole)

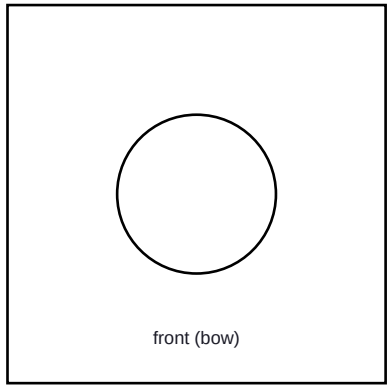

Camera plate
3 mm sunboard

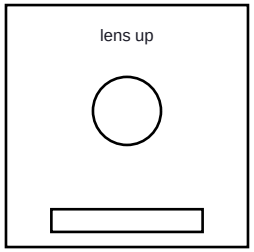

Camera wedge side (10 deg)
3 mm sunboard



Camera wedge side (10 deg)
3 mm sunboard

