



TrackLight VT1611

100% COVERT GPS TRAILER TRACKER

Installation Guide



Copyright © 2021 by Anytrek Corporation All Rights Reserved. No part of this document may be reproduced, copied, translated, or incorporated in any other material in any form or by any means, whether manual, graphic, electronic, mechanical, or otherwise, without the prior written consent of Anytrek Corporation.

Trademark



The Anytrek logo and ThermoTrack brand are trademarks of Anytrek Corporation.

Statement Disclaimer

You are welcome to use the products of Anytrek Corporation. (Hereinafter referred to as Anytrek). This document is intended to help you understand and use the product. For accuracy and reliability, Anytrek may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact info provided in this document. We will do our best to resolve any issues, as well as evaluate and implement any suggestions.




Remove Existing Equipment









Method 1: VT1611, Elastic pad(EVA) Flange(LA17031)

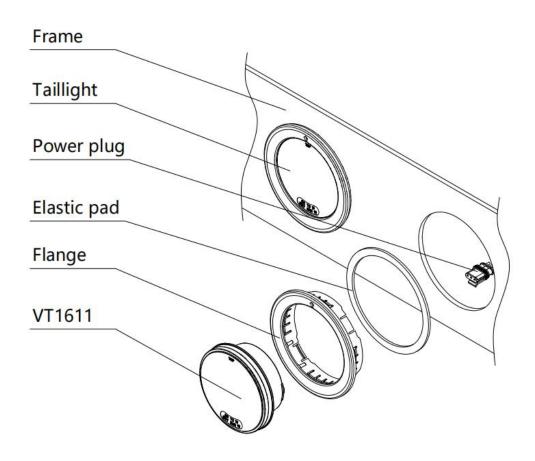


Step 1: Put elastic pad(EVA) on the flange, and install VT1611 device into the flange.

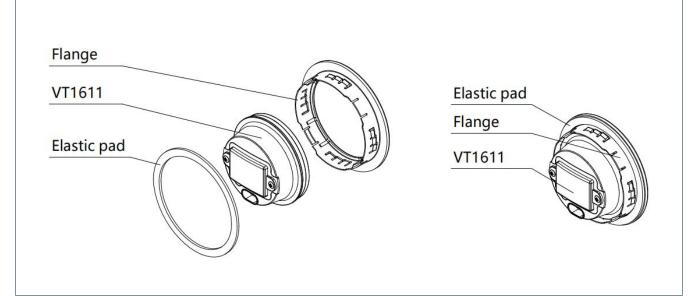



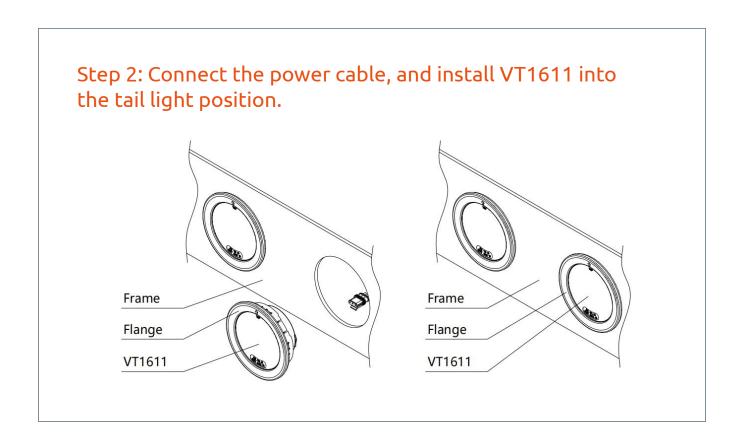


Method 2: VT1611, Flange(LA17081), Rivets

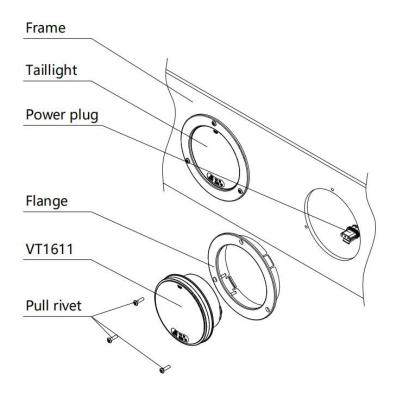





Step 1: Install VT1611 device into the flange.

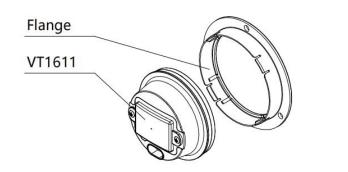





Step 2: Connect the power cable, and install VT1611 into the tail light position.

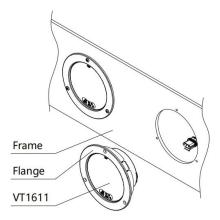

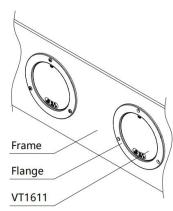

Step 3: Pull rivets

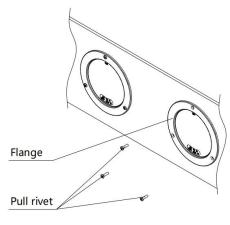

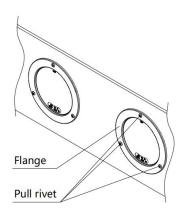

USA Offices

West Coast: 4405 E. Airport Dr., Suite 106, Ontario, CA 91761


East Coast: 1554 B, Hwy. 80 East, Pooler, GA 31322

1 +1 (844) 872-6987

info@anytrek.com

Canada Office

11535 1st Avenue, Suite 309, Saint-Georges, Québec, G5Y 7X3



info@anytrek.ca

Mexico Office

Salamanca Juventino Rossas KM 0.5 C, Salamanca GTO, CP 36750











