



# TrackLight VT2211

100% COVERT GPS TRAILER TRACKER

# Installation Guide



Copyright © 2021 by Anytrek Corporation All Rights Reserved. No part of this document may be reproduced, copied, translated, or incorporated in any other material in any form or by any means, whether manual, graphic, electronic, mechanical, or otherwise, without the prior written consent of Anytrek Corporation.

### **Trademark**



The Anytrek logo and ThermoTrack brand are trademarks of Anytrek Corporation.

### **Statement Disclaimer**

You are welcome to use the products of Anytrek Corporation. (Hereinafter referred to as Anytrek). This document is intended to help you understand and use the product. For accuracy and reliability, Anytrek may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact info provided in this document. We will do our best to resolve any issues, as well as evaluate and implement any suggestions.




## **Remove Existing Equipment**







## Method 1: VT2211, Elastic pad(EVA) Flange(LA17031)

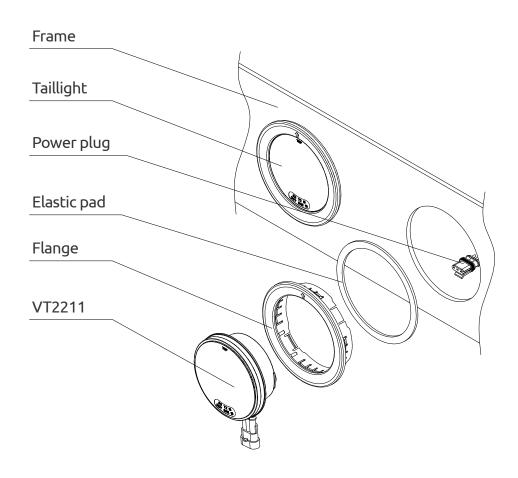

Step 1: Put elastic pad(EVA) on the flange, and install VT2211 device into the flange.

Flange

VT2211


Elastic pad

Flange


VT2211

Step 1



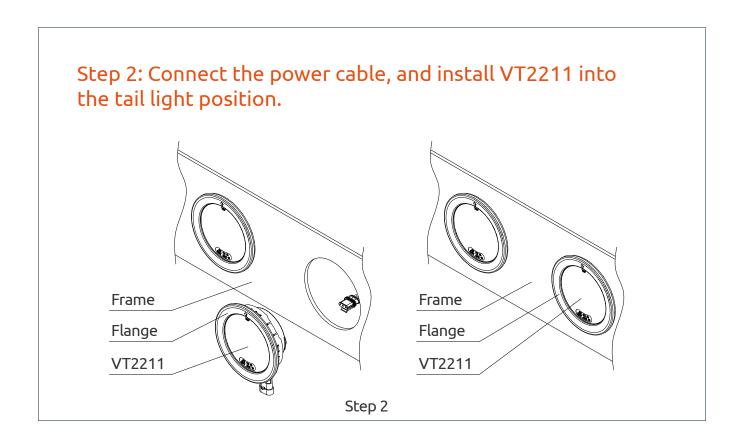


## Method 2: VT2211, Flange(LA17081), Rivets

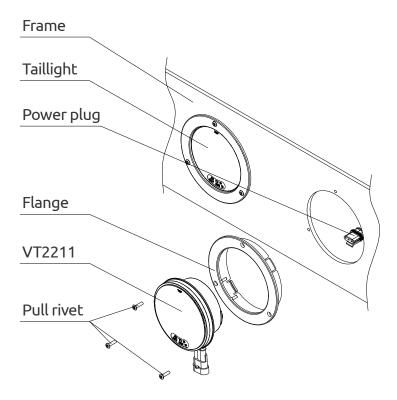







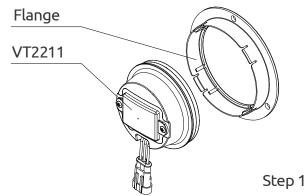





Step 2: Connect the power cable, and install VT2211 into the tail light position.

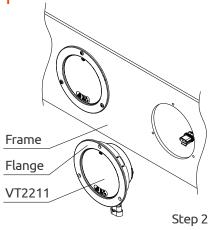

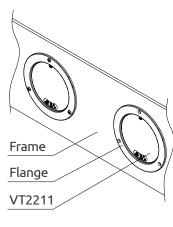

Step 3: Pull rivets

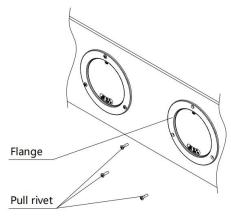

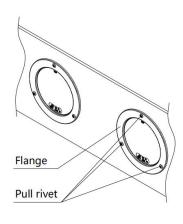

### **USA Offices**

West Coast: 4405 E. Airport Dr., Suite 106, Ontario, CA 91761

East Coast: 1554 B, Hwy. 80 East, Pooler, GA 31322



**1** +1 (844) 872-6987




### Canada Office

11535 1st Avenue, Suite 309, Saint-Georges, Québec, G5Y 7X3



**1** +1 (418) 425-3535



### **Mexico Office**

Salamanca Juventino Rossas KM 0.5 C, Salamanca GTO, CP 36750











