




Sven Petersen	DocNo.: 163-2-01-00				
2020	Cu:	$35\mu m$	Cu-La	yers: 2	2
PET_Diag_Clip					
29.10.2020 23:38			Rev.:	0	
placement component	side				

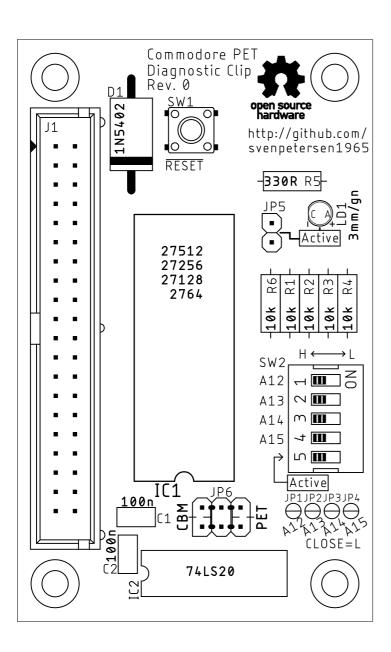


Sven Petersen	DocNo.: 163-2-01-00			
2020	Cu:	$35\mu m$	Cu-La	yers: 2
PET_Diag_Clip				
29.10.2020 23:38			Rev.:	0
placement component	side			

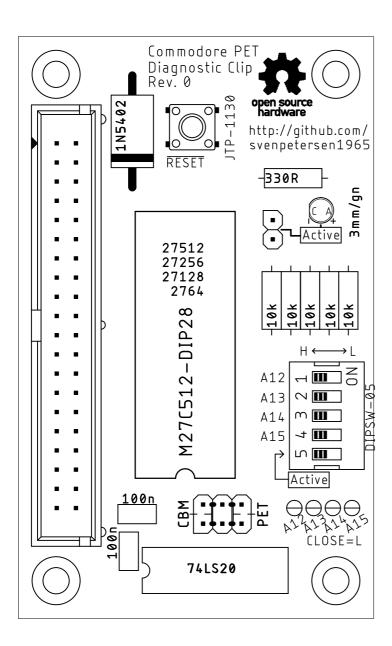


Sven Petersen	DocNo.: 163-2-01-00			
2020	Cu:	35µm	Cu-La	yers: 2
PET_Diag_Clip				
29.10.2020 23:38			Rev.:	0
top				

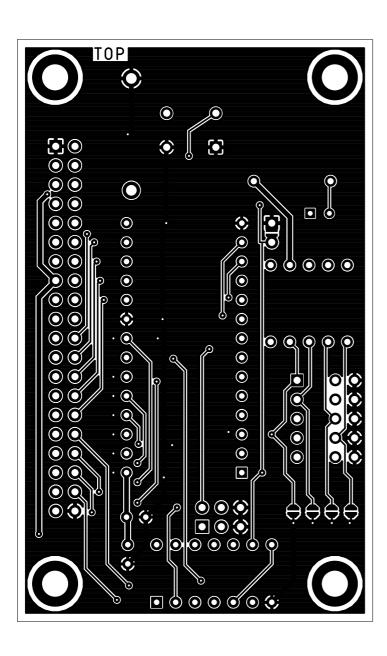


Sven Petersen	DocNo.: 163-2-01-00			
2020	Cu:	35µm	Cu-La	yers: 2
PET_Diag_Clip				
29.10.2020 23:38			Rev.:	0
bottom				

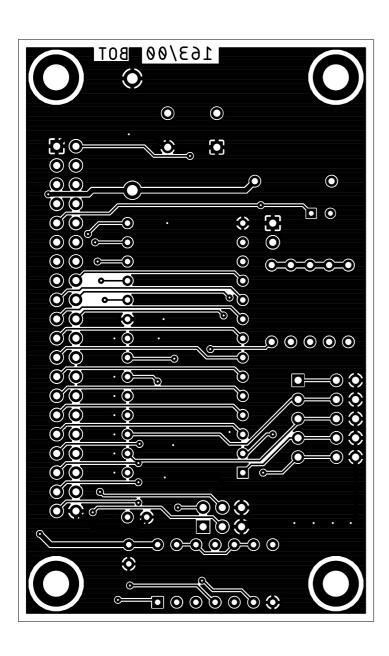

Sven Petersen	DocNo.: 163-2-01-00				
2020	Cu:	$35\mu m$	Cu-La	yers: 2	
PET_Diag_Clip					
29.10.2020 23:38			Rev.:	0	
stopmask component	side				

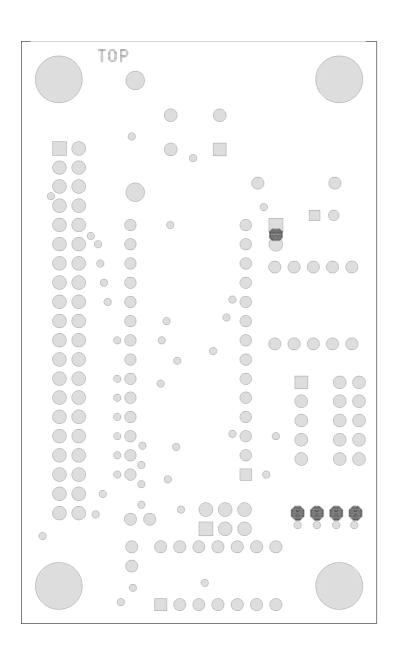

Sven Petersen	DocNo.: 163-2-01-00			
2020	Cu:	$35\mu m$	Cu-La	yers: 2
PET_Diag_Clip				
29.10.2020 23:38			Rev.:	0
stopmask solder side				

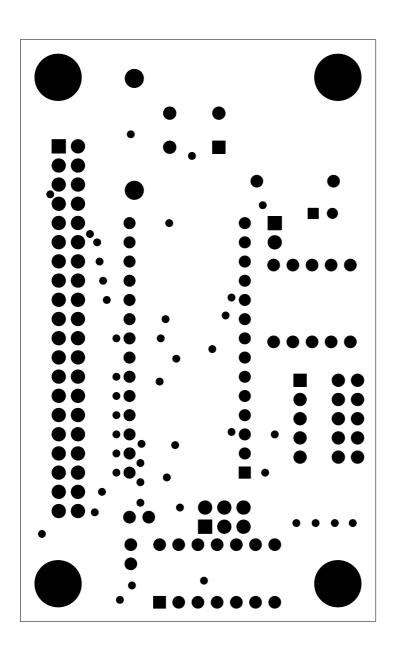

Sven Petersen	DocNo.: 163-2-01-00				
2020	Cu:	$35\mu m$	Cu-La	yers:	2
PET_Diag_Clip					
28.10.2020 12:09			Rev.:	0	
placement component	side	mea	sures		

