How to use Blackbox in LTSpice

[NOTE: keep all files and schematic under same folder. Keeping files in diffferent location may cause errors]

1) Download the .asy file and .lib file and store them under the same folder as your project (schematic)

2) Go to file>spice directive. Select spice directive and enter the following command .include composite_blackbox.lib and click ok.

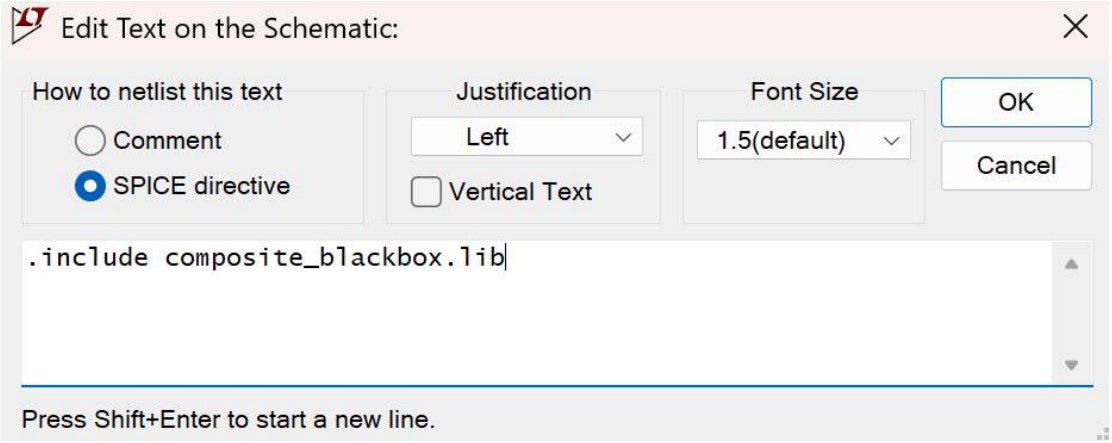

3) Go to edit>component and in show, select your folder. Click on refresh and then a component COMPOSITE_SRC will appear. Select that and click ok and place it on the schematic.

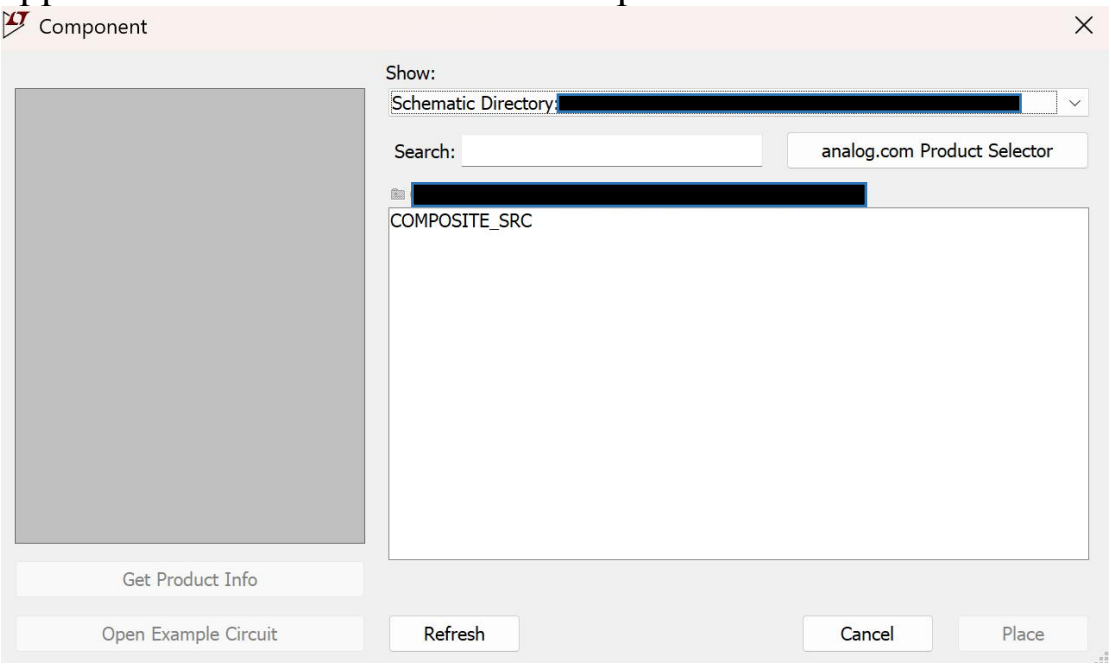

4) There are 2 pins, OUT pin is your input and GND pin is grounded.

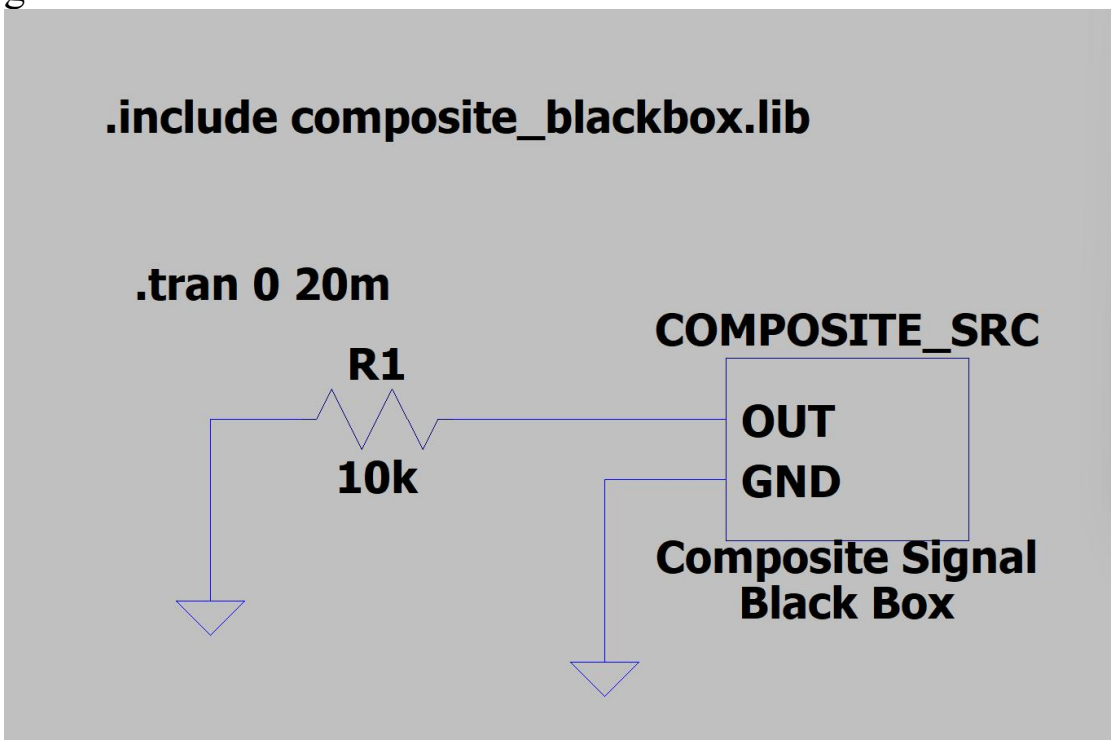

5) For verifying if you are getting the input signal do the following:

a) Go to simulate>configure analysis
b) Go to transient and type the following: .tran 0 20m and select ok
c) Run the simulation and view plot. You should get the following output

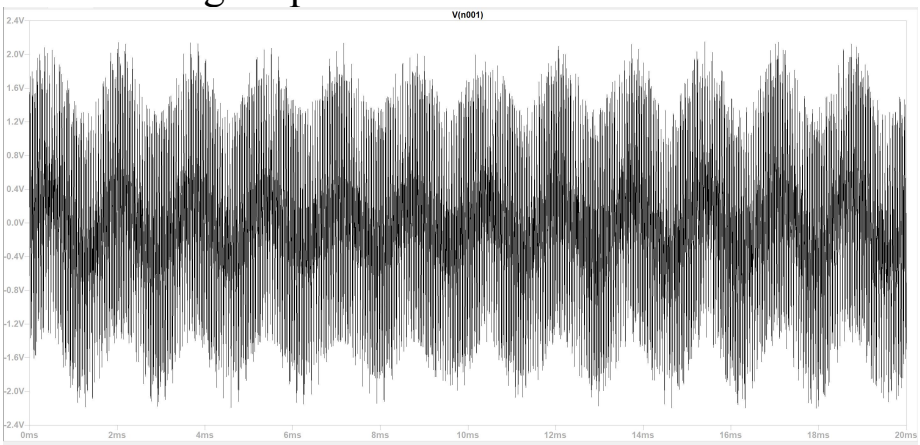

This is your input signal.