Introduction to URDF: Mobile Robot Design and Control

Install the necessary packages required Execute in Terminal #1

sudo apt-get install ros-foxy-teleop-twist-keyboard sudo apt-get install ros-foxy-joint-state-publisher* sudo apt install gazebo11 libgazebo11-dev sudo apt install ros-foxy-gazebo-ros-pkgs sudo apt install ros-foxy-robot-state-publisher*

Execute in Terminal #1

```
cd ros2_ws/src
ros2 pkg create lab4 --build-type ament python --dependencies rclpy
cd src/lab4/
mkdir urdf
mkdir launch
cd urdf
touch three_wheeled_robot.urdf
<?xml version="1.0" ?>
<robot name = "three_wheeled_robot">
  k name="base">
     <visual>
     <geometry>
       <br/>
<br/>
dox size="0.75 0.4 0.1"/>
     </geometry>
     <material name="gray">
       <color rgba=".2 .2 .2 1" />
     </material>
     </visual>
     <inertial>
       <mass value="1" />
        <inertia ixx="0.01" ixy="0.0" ixz="0" iyy="0.01" iyz="0" izz="0.01" />
     </inertial>
     <collision>
     <geometry>
       <br/><box size="0.75 0.4 0.1"/>
     </geometry>
     </collision>
```

```
</link>
<link name="wheel_right_link">
  <inertial>
       <mass value="2" />
       <inertia ixx="0.01" ixy="0.0" ixz="0"
       iyy="0.01" iyz="0" izz="0.01" />
  </inertial>
  <visual>
     <geometry>
      <cylinder radius="0.15" length="0.1"/>
     </geometry>
     <material name="white">
     <color rgba="1 1 1 1"/>
     </material>
  </visual>
  <collision>
     <geometry>
      <cylinder radius="0.15" length="0.1"/>
     </geometry>
    <contact_coefficients mu="1" kp="1e+13" kd="1.0"/>
  </collision>
</link>
<joint name="wheel_right_joint" type="continuous">
  <origin xyz="0.2 0.25 0.0" rpy="1.57 0.0 0.0"/>
  <parent link="base"/>
  <child link="wheel_right_link"/>
  <axis xyz="0.0 0.0 1.0"/>
</joint>
k name="wheel left link">
  <inertial>
     <mass value="2" />
     <inertia ixx="0.01" ixy="0.0" ixz="0"</pre>
       iyy="0.01" iyz="0" izz="0.01" />
  </inertial>
  <visual>
    <geometry>
      <cylinder radius="0.15" length="0.1"/>
   </geometry>
   <material name="white">
     <color rgba="1 1 1 1"/>
    </material>
  </visual>
  <collision>
```

```
<geometry>
      <cylinder radius="0.15" length="0.1"/>
    </geometry>
    <contact_coefficients mu="1" kp="1e+13" kd="1.0"/>
  </collision>
</link>
<joint name="wheel_left_joint" type="continuous">
  <origin xyz="0.2 -0.25 0.0" rpy="1.57 0.0 0.0"/>
  <parent link="base"/>
  <child link="wheel_left_link"/>
  <axis xyz="0.0 0.0 1.0"/>
</ioint>
link name="caster">
  <inertial>
       <mass value="1" />
       <inertia ixx="0.01" ixy="0.0" ixz="0"
       iyy="0.01" iyz="0" izz="0.01" />
  </inertial>
  <visual>
   <geometry>
     <sphere radius=".08" />
    </geometry>
    <material name="white" />
  </visual>
  <collision>
   <origin/>
   <geometry>
     <sphere radius=".08" />
    </geometry>
  </collision>
</link>
<joint name="caster_joint" type="continuous">
  <origin xyz="-0.3 0.0 -0.07" rpy="0.0 0.0 0.0"/>
  <axis xyz="0 0 1" />
  <parent link="base"/>
  <child link="caster"/>
</joint>
link name="camera">
  <inertial>
       <mass value="0.1" />
       <inertia ixx="0.01" ixy="0.0" ixz="0"
       iyy="0.01" iyz="0" izz="0.01" />
  </inertial>
```

```
<visual>
    <geometry>
     <br/><box size="0.1 0.1 0.05"/>
    </geometry>
   <material name="white">
     <color rgba="1 1 1 1"/>
    </material>
  </visual>
  <collision>
    <geometry>
      <br/><box size="0.1 0.1 0.05"/>
    </geometry>
  </collision>
</link>
<joint name="camera_joint" type="fixed">
  <origin xyz="-0.35 0 0.01" rpy="0 0.0 3.14"/>
  <parent link="base"/>
  <child link="camera"/>
  <axis xyz="0.0 0.0 1.0"/>
</joint>
k name="lidar">
  <inertial>
       <mass value="0.5" />
       <inertia ixx="0.01" ixy="0.0" ixz="0"
       iyy="0.01" iyz="0" izz="0.01" />
  </inertial>
  <visual>
    <geometry>
     <cylinder radius="0.1" length="0.05"/>
    </geometry>
    <material name="white">
     <color rgba="1 1 1 1"/>
    </material>
  </visual>
  <collision>
    <geometry>
      <br/><box size="0.1 0.1 0.1"/>
    </geometry>
  </collision>
</link>
<joint name="lidar_joint" type="fixed">
  <origin xyz="-0.285 0 0.075" rpy="0 0.0 1.57"/>
  <parent link="base"/>
  <child link="lidar"/>
  <axis xyz="0.0 0.0 1.0"/>
```

```
</joint>
<!--http://wiki.ros.org/simulator_gazebo/Tutorials/ListOfMaterials-->
<gazebo reference="base">
  <material>Gazebo/WhiteGlow</material>
</gazebo>
<gazebo reference="wheel_left_link">
  <material>Gazebo/SkyBlue</material>
</gazebo>
<gazebo reference="wheel_right_link">
  <material>Gazebo/SkyBlue </material>
</gazebo>
<gazebo reference="caster">
  <material>Gazebo/Grey</material>
</gazebo>
<gazebo reference="lidar">
  <material>Gazebo/Blue</material>
</gazebo>
<gazebo reference="camera">
  <material>Gazebo/Red</material>
</gazebo>
<!-- differential robot-->
<gazebo>
  <plugin filename="libgazebo_ros_diff_drive.so" name="gazebo_base_controller">
   <odometry_frame>odom</odometry_frame>
   <commandTopic>cmd_vel</commandTopic>
   <publish_odom>true</publish_odom>
   <publish odom tf>true</publish odom tf>
   <update_rate>15.0</update_rate>
   <left_joint>wheel_left_joint</left_joint>
   <right_joint>wheel_right_joint</right_joint>
   <wheel_separation>0.5</wheel_separation>
   <wheel diameter>0.3</wheel diameter>
   <max wheel_acceleration>0.7</max_wheel_acceleration>
   <max_wheel_torque>8</max_wheel_torque>
   <robotBaseFrame>base</robotBaseFrame>
  </plugin>
</gazebo>
<!-- camera plugin-->
<gazebo reference="camera">
 <sensor type="camera" name="camera1">
  <visualize>true</visualize>
  <update_rate>30.0</update_rate>
  <camera name="head">
   <horizontal fov>1.3962634</horizontal fov>
   <image>
```


```
<width>800</width>
       <height>800</height>
       <format>R8G8B8</format>
     </image>
     <clip>
       <near>0.02</near>
       <far>300</far>
     </clip>
    </camera>
    <plugin name="camera_controller" filename="libgazebo_ros_camera.so">
     <alwaysOn>true</alwaysOn>
     <updateRate>60.0</updateRate>
     <cameraName>/camera1</cameraName>
     <imageTopicName>image_raw</imageTopicName>
     <cameraInfoTopicName>info_camera</cameraInfoTopicName>
     <frameName>camera</frameName>
     <hackBaseline>0.07</hackBaseline>
    </plugin>
   </sensor>
  </gazebo>
  <!--lidar plugin-->
  <gazebo reference="lidar">
   <sensor name="lidar" type="ray">
    <visualize>true</visualize>
    <update_rate>12.0</update_rate>
    <plugin filename="libgazebo_ros_ray_sensor.so" name="gazebo_lidar">
    <output_type>sensor_msgs/LaserScan</output_type>
    <frame_name>lidar</frame_name>
    </plugin>
    <ray>
     <scan>
       <horizontal>
        <samples>360</samples>
        <resolution>1</resolution>
        <min_angle>0.00</min_angle>
        <max_angle>3.14</max_angle>
       </horizontal>
     </scan>
     <range>
       <min>0.120</min>
       <max>3.5</max>
       <resolution>0.015</resolution>
     </range>
    </ray>
   </sensor>
  </gazebo>
</robot>
cd ..
cd launch
```


touch gazebo.launch.py


```
from launch import LaunchDescription
from launch_ros.actions import Node
from launch.actions import ExecuteProcess
def generate_launch_description():
  urdf = '/home/asha/ros2_ws/src/lab4/urdf/three_wheeled_robot.urdf'
  return LaunchDescription([
     Node(
       package='robot_state_publisher',
       executable='robot state publisher',
       name='robot_state_publisher',
       output='screen',
       arguments=[urdf]),
     Node(
       package='joint_state_publisher',
       executable='joint_state_publisher',
       name='joint state publisher',
       arguments=[urdf]),
# Gazebo related stuff required to launch the robot in simulation
     ExecuteProcess(
       cmd=['gazebo', '--verbose', '-s', 'libgazebo_ros_factory.so'],
       output='screen'),
     Node(
       package='gazebo_ros',
       executable='spawn entity.pv',
       name='urdf_spawner',
       output='screen',
       arguments=["-topic", "/robot_description", "-entity", "lab4 "])
 1)
touch rviz.launch.py
from launch import Launch Description
from launch_ros.actions import Node
def generate launch description():
  urdf = '/home/asha/ros2_ws/src/lab4/urdf/three_wheeled_robot.urdf'
  # rviz_config_file=os.path.join(package_dir,'config.rviz')
  return LaunchDescription([
     Node(
       package='robot_state_publisher',
       executable='robot state publisher',
       name='robot_state_publisher',
       output='screen',
       arguments=[urdf]),
     Node(
       package='joint state publisher qui',
       executable='joint_state_publisher_qui',
```


```
name='joint_state_publisher_gui',
       arguments=[urdf]),
     Node(
     package='rviz2',
     executable='rviz2',
     name='rviz2',
     # arguments=['-d',rviz_config_file],
     output='screen'),
  1)
Edit the setup.py file as
from setuptools import setup
import os
from glob import glob
package name = 'lab4'
setup(
  name=package_name,
  version='0.0.0',
  packages=[package_name],
  data files=[
     ('share/ament_index/resource_index/packages',
       ['resource/' + package_name]),
     ('share/' + package_name, ['package.xml']),
       (os.path.join('share', package_name), glob('urdf/*')),
       (os.path.join('share', package_name), glob('launch/*'))
  ],
  install_requires=['setuptools'],
  zip safe=True,
  maintainer='asha',
  maintainer_email='asha@todo.todo',
  description='TODO: Package description',
  license='TODO: License declaration',
  tests_require=['pytest'],
  entry_points={
     'console_scripts': [
     ],
  },
Execute in Terminal #1
colcon build --packages-select lab4
ros2 launch lab4 rviz.launch.py
Execute in Terminal #2
killall gzserver
ros2 launch lab4 gazebo.launch.py
Execute in Terminal #3
ros2 run teleop_twist_keyboard teleop_twist_keyboard
```


Do these changes in the rviz window:

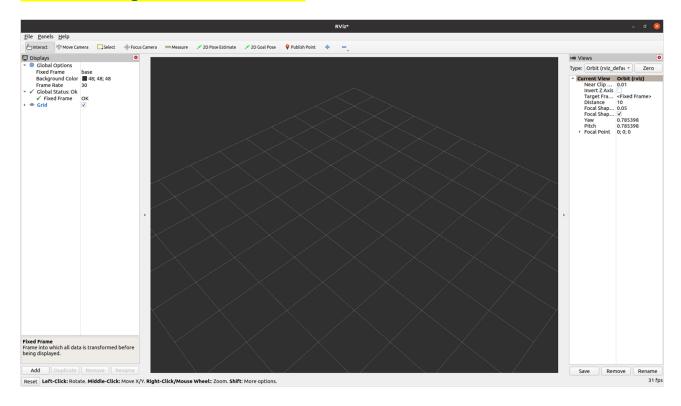


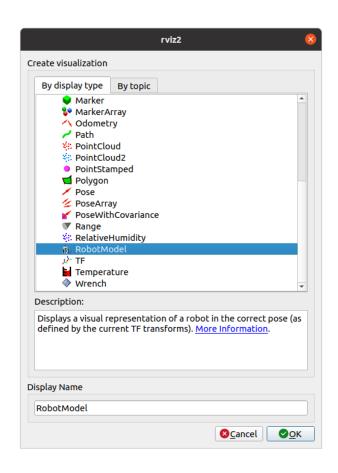


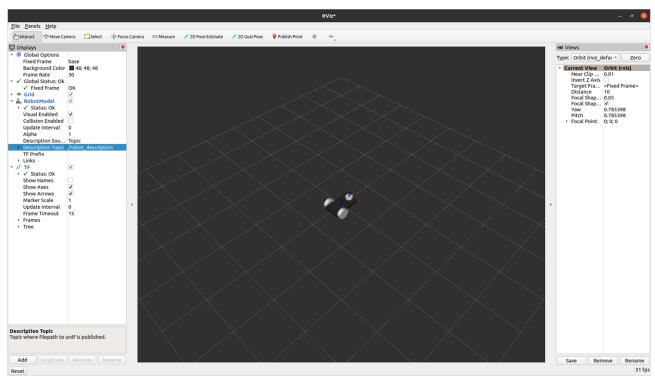


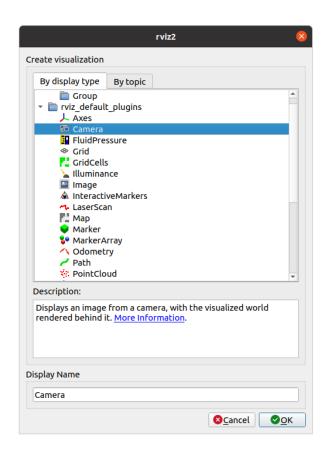


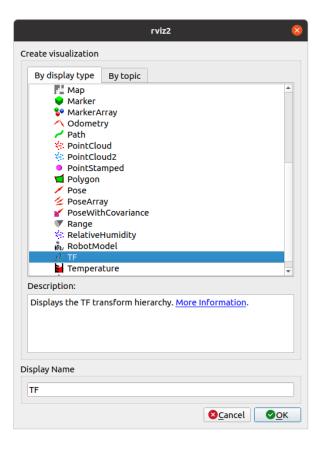

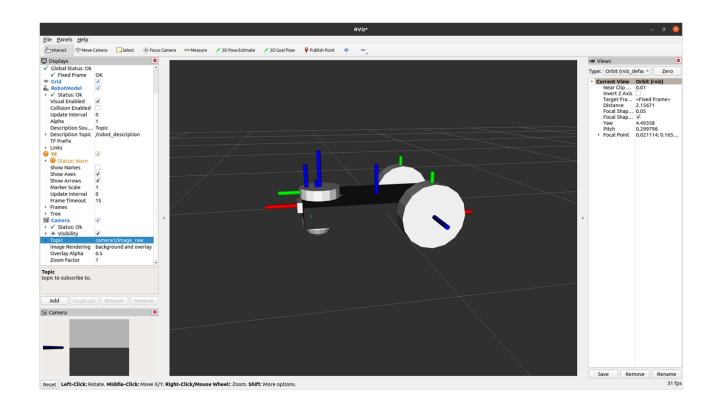

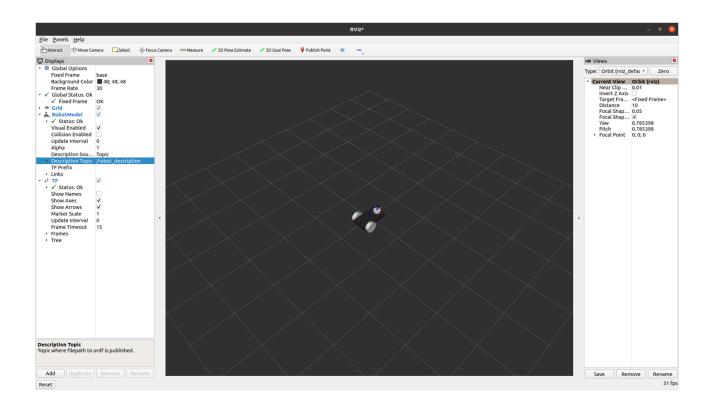

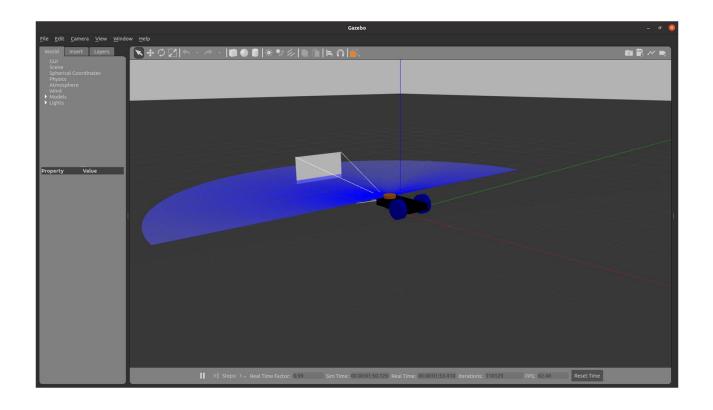

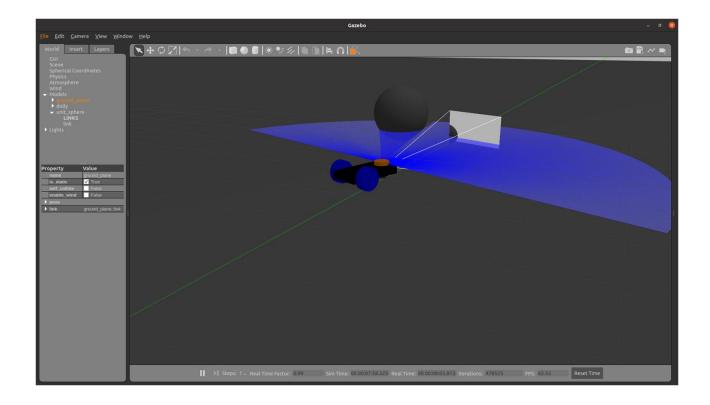

```
sudo apt-get install python3-pip
pip3 install transforms3d
Edit move_robot.py
#!/usr/bin/env python3
import rclpy
from rclpy.node import Node
from geometry_msgs.msg import Twist
from nav_msgs.msg import Odometry
import transforms3d
import math
class GotoGoalNode(Node):
  def __init__(self):
     super().__init__("move_robot")
     self.target_x = 2
     self.target y = 2
     self.publisher = self.create_publisher(Twist, "cmd_vel", 10)
     self.subscriber = self.create_subscription(Odometry, "odom", self.control_loop, 10)
  def control_loop(self, msg):
     dist_x = self.target_x - msg.pose.pose.position.x
     dist_y = self.target_y - msg.pose.pose.position.y
     print('current position: {}
{}'.format(msg.pose.pose.position.x,msg.pose.pose.position.y))
     distance = math.sqrt(dist_x * dist_x + dist_y * dist_y)
     print('distance : {}'.format(round(distance, 3)))
     goal_theta = math.atan2(dist_y, dist_x)
     quat = msg.pose.pose.orientation
     roll, pitch, yaw = transforms3d.euler.quat2euler([quat.w,quat.x,quat.y,quat.z])
     diff = math.pi - round(yaw, 2) + round(goal_theta, 2)
     print('yaw: {}'.format(round(yaw, 2)))
     print('target angle: {}'.format(round(goal_theta, 2)))
     if diff > math.pi:
       diff -= 2*math.pi
     elif diff < -math.pi:
        diff += 2*math.pi
     print('orientation : {}'.format(round(diff, 2)))
     vel = Twist()
     if abs(diff) > 0.2:
       vel.linear.x = 0.0
       vel.angular.z = 0.4*round(diff, 2)
```

else:

```
if abs(distance) > 0.2:
    vel.linear.x = 0.3*round(distance, 3)
    vel.angular.z = 0.0

else:
    vel.linear.x = 0.0
    vel.angular.z = 0.0

print('speed : {}'.format(vel))
self.publisher.publish(vel)

def main(args=None):
    rclpy.init(args=args)
    node = GotoGoalNode()
    rclpy.spin(node)
    rclpy.shutdown()

if __name__ == "__main__":
    main()
```

Execute in Terminal #1

colcon build --packages-select lab4 ros2 launch lab4 rviz.launch.py

Execute in Terminal #2

killall gzserver

ros2 launch lab4 gazebo.launch.py

Execute in Terminal #3

ros2 run lab4 controller

Edit setup.py

```
entry_points={
    'console_scripts': [
        'controller = lab4.move_robot:main'
],
```

Exercise 1: Write a python code to move the robot to along the wall using the laser scan data.

Exercise 2: Modify the URDF code to change to 4 wheeled robot and run the program.