

Robo Ice Cream F1 & F2 User Manual



Revision & Date Rev 2.0 10/2025

Model #

Serial #

Rev 2.0 10/2025

Table of Contents

Introduction

Brief Overview	3
Importance of the Manual	4
Safety Precautions	6

Getting Started

Machine Parameters & Features	10
First Setup	14
First Start	17

Operational Instructions

Front End - The Customer Experience	18
Back End - The Operator Experience	21
Management Screen	23

Maintenance and Review

How to make Ice Cream	29
Maintenance Review	29
Food Safety & Cleaning Checklist	30

Customer Support	33
------------------	----

Legal and Warranty Information	34
--------------------------------	----

Online Manual & Resource Folder	37
---------------------------------	----

Introduction

Brief Overview

The Robo Ice Cream F2 is an innovative and user-friendly appliance designed to effortlessly create delicious soft serve ice cream with minimal effort from the user. This machine combines cutting-edge technology with traditional confectionery techniques to produce smooth soft serve ice cream. Here's a glimpse into its features!



Simple-Touch Operation

The machine boasts a user-friendly interface with intuitive controls. With just a single touch, users can initiate the soft serve making process, eliminating the need for complex manual adjustments. smooth soft serve ice cream. Here's a glimpse into its features!



Easy Cleaning

The machine's detachable parts are designed for easy cleaning and maintenance. This feature ensures that the machine can be kept in optimal working condition with minimal effort.



Safety Features

The Robo Ice Cream F2 prioritizes user safety. It includes features such as an automatic door window with a hand sensor.



Food Safety

The Robo Ice Cream F2 includes settings for automatically pasteurizing ice cream to ensure no bacteria is present.

Importance of the Manual

Reading the manual before operating a machine is of paramount importance for several reasons:



Safety

Manuals typically contain crucial safety information, including potential hazards, proper handling procedures, and precautions to prevent accidents. Understanding these safety guidelines can help users avoid injuries to themselves and others while using the machine.

Proper Usage

Manuals provide detailed instructions on how to use the machine correctly. This includes information on setup, operation, maintenance, and troubleshooting. Following these instructions ensures that the machine functions as intended and extends its lifespan.

Optimal Performance

The manual often includes insights into the machine's capabilities and features. By understanding how to use the machine to its fullest potential, users can achieve optimal results, whether that's producing high-quality outputs or efficiently completing tasks.

Avoiding Damage

Improper usage can lead to damage to the machine. Manuals offer guidance on proper maintenance and care procedures, helping users keep the machine in good working condition. This can save time, money, and frustration by preventing the need for repairs or replacements.

Troubleshooting

Machines can sometimes run into problems, but don't worry! In this manual, you'll find a helpful troubleshooting section that's designed to make your life easier. It's like having a friendly guide to assist you in identifying and fixing those everyday hiccups. This can be a real time-saver and stress-reliever, allowing you to tackle small issues on your own rather than having to reach out to our technical support team.

Compliance

In certain environments or industries, following manufacturer recommendations outlined in the manual might be a requirement for regulatory compliance or warranty coverage. Reading and adhering to the manual's instructions can help users meet these standards.

User Empowerment

Understanding how a machine works and its different features empowers users to confidently operate it. This can lead to a more satisfying user experience and the ability to explore the machine's capabilities.

Preventing Voiding Warranty

Manufacturers often include specific terms in their warranties, which may include stipulations about proper use and maintenance. Failure to follow these guidelines could void the warranty. Reading the manual helps users avoid unintentional breaches of warranty terms.




Avoiding Frustration

Attempting to use a machine without reading the manual can lead to confusion, frustration, and poor results. Taking the time to understand the machine's functions beforehand can make the operation smoother and more enjoyable.

In summary, reading the manual before operating a machine is crucial for safety, proper usage, optimal performance, and avoiding unnecessary complications. It equips users with the knowledge needed to operate the machine confidently, efficiently, and effectively, leading to a more successful and satisfying experience overall.

Safety Precautions

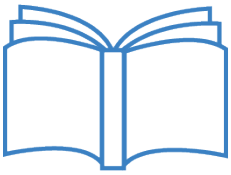

Read the Manual

Before operating the machine, thoroughly read and understand the entire manual. Familiarize yourself with all operating procedures, safety guidelines, and warnings.



Adult Supervision

This machine is not a toy. It should only be operated by adults or under adult supervision. Keep children and pets away from the machine during operation.



Electrical Safety

- Ensure the power cord is intact and undamaged before plugging into a power outlet.
- Use only the provided power cord or a cord recommended by the manufacturer or staff
- Do not immerse the machine in water or any liquid. Keep liquids away from the machine's electrical components.

Proper Environment

- Operate the machine on a stable and flat surface to prevent tipping or instability.
- Keep the machine away from flammable materials, heat sources, and water sources.

Protective Gear

- Wear appropriate clothing and protective gear, including heat-resistant gloves, when handling hot components.
- Avoid loose clothing, jewelry, or accessories that could get caught in the machine's moving parts.

Cleaning and Maintenance



- Disconnect the machine from the power source before cleaning or performing maintenance.
- Allow the machine to cool down before cleaning or touching any hot components.
- Use only cleaning materials recommended by the manufacturer.

Avoid Overloading

- Follow the manufacturer's recommendations for the maximum quantity of sugar to use at a time. Overloading may cause overheating or damage to the machine.

Servicing and Repairs

- Only qualified service technicians authorized by the manufacturer should perform repairs or modifications.
- Attempting to disassemble or repair the machine yourself may result in damage or personal injury.

Emergency Shutdown

In case of any abnormalities, unusual noises, or overheating, immediately turn on the machine ,disconnect it from the power source and connect with the customer support team.

Emergency Contact

In case of any doubts, concerns, or emergencies related to the machine's operation, contact our customer support or the authorized service center.



Remember that failure to adhere to these safety precautions could result in injuries, damage to the machine, or hazardous situations. By following these guidelines, you ensure a safe and enjoyable experience while using the machine.

Contact Us



+1 (844) 793-3872
Ext. #2



Support@sweetrobo.com

Download the Tech Support App

Safety Pre-cautions Notes

1. Live working is prohibited during equipment maintenance
2. Parameters in parameter setting 1 and parameter setting 2 cannot be changed
3. Do not turn on refrigeration during cleaning 4. Do not use boiled water when cleaning
4. No idling of expansion pump
5. It is forbidden to drop foreign matters in the precooling cylinder (such as iron filings, small plastics, spoons, flying insects, etc.)
6. Please ensure that the machine is reliably grounded (with grounding connection) and can be checked by the socket tester

Getting Started

Machine Parameters & Features

F2 Electrical & Power Requirements

Rated Voltage	220V only
Rated Current	13A typical @ 220V
Rated Power	2,860W
Required Breaker	20A
Outlet Type	NEMA 6-20R (to match included 6-20P plug)

F2 Physical Requirements

Width	120 cm (47.2 in / 3.94 ft)
Depth	86.5 cm (34.1 in / 2.84 ft)
Height	245 cm (96.5 in / 8.04 ft)
Weight (Empty)	380 kg
Operational Temperature Range	10°C – 35°C (50°F – 95°F)

F1 Electrical & Power Requirements

Rated Voltage	220V only
Rated Current	13A typical @ 220V
Rated Power	2,860W
Required Breaker	20A
Outlet Type	NEMA 6-20R (to match included 6-20P plug)

F1 Physical Requirements

Width	101.15 cm (39.961 in / 3.33 ft)
Depth	84.5 cm (33.268 in / 2.772 ft)
Height	245 cm (96.5 in / 8.04 ft)
Weight (Empty)	380 kg
Operational Temperature Range	10°C – 35°C (50°F – 95°F)

Internal Capacity

Ice Cream Hoppers	2 × 12L Never fill above the air valve (airpath)
Minimum Mix per Hopper	2L
Cup Storage	200 cups (50 × 4 holders)
Syrup Dispensers	3 (liquid syrups only)
Topping Dispensers	3 × 270g each (dry toppings only)

Critical Operating Requirements

- Never run hoppers empty - Maintain minimum 2L of mix in each hopper
- Replace mix every 3 days - Mix expires and must be discarded after 3 days maximum
- Temperature monitoring - Mix must stay below 5°C (41°F) or machine will block dispensing
- 220V power required - F2 operates on 220V only with 20A dedicated circuit
- Never fill above air valve - Maximum 12L per hopper, keep below airpath opening
- Liquid syrups only - No solids, chunks, or thick sauces in syrup containers
- Dry toppings only - No liquids, wet, or sticky items in topping dispensers
- Regular cleaning - Follow cleaning procedure every 3 days


Machine Parameters & Features

External Components (Customer-Facing)



LED Signage	Contains 4 separate panels that display colorful attraction (Needs to installed by 4 screws/wires connecting to the base to illuminate sign)
Coin Acceptor	System that can be configured to read and accept tokens or coins for payment.
Bill Acceptor	System that can be configured to read and accept currency bills for payment.
Touch Screen	Displays advertisements, preparation animations, and system messages. Allows for interaction with the machine to create product.
Collection Door	Opens only when ice cream is ready. Built-in sensors detect cup presence.
Viewing Window	Window that allows full view of ice cream production.

Internal Components (F2 Dual-Hopper System)

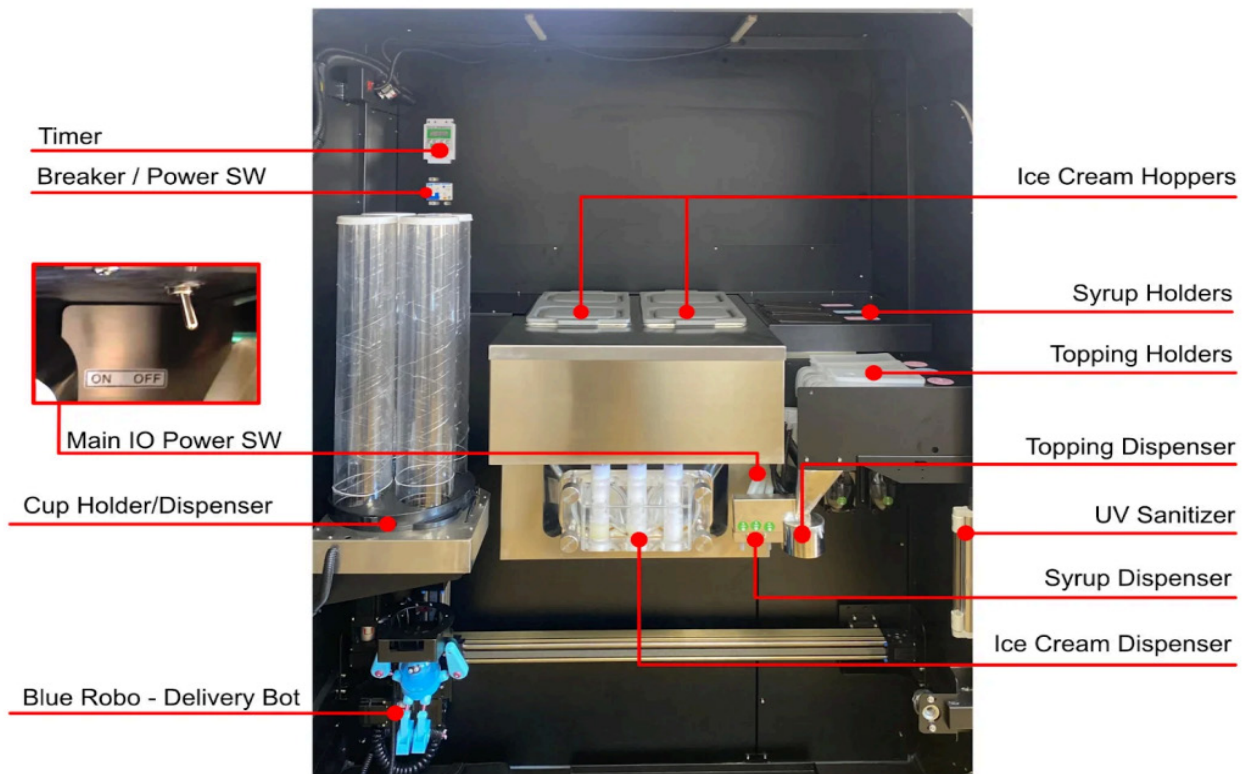

Timer	Hardware timer that controls power to the entire machine. Operates independently of software and cuts all power when activated
Breaker/Power Switch	Primary power cutoff that completely disconnects the machine from power
Ice Cream Hoppers	2 hoppers (Left & Right) - 2L minimum, 12L maximum capacity each. Never fill above the air valve (airpath) inside each hopper
Main IO Power Switch	Controls power to internal refrigeration system and ice cream dispensing mechanism. Must be turned on to use machine
Syrup Holders	3 types of liquid syrup
Topping Holders	3 types of solid toppings
Cup Holder/Dispenser	4 cup tubes, 50 cups per tube = 200 cups total capacity
UV Sanitizer	Activates between all servings regardless of flavor selection
Ice Cream Dispenser	Ice Cream is dispensed and poured into the cup help by the Blue Robot.

First Setup

Initial Setup & Inspection

In case of any doubts, concerns, or emergencies related to the machine's operation, contact our customer support or the authorized service center.

Step 1 – Inspect the Interior

Open all cabinet doors and carefully inspect for any loose plugs, pipes, or components. Reconnect anything that may have become dislodged during transportation. If unsure of the component's original location, contact our support team.

Step 2 – Install the Roof

Inside the provided tool kit, you'll find screws and a cross (Phillips) screwdriver. Use these to securely attach the roof to the top of the machine. Once installed, connect the wires from roof parts to the corresponding wire coming from the machine to complete the setup.



Step 3 – Install the Cups

Open the cabinet door and lift the lid of the cup storage container. Place the ice cream cups neatly into the cup holder tubes. Proper alignment is important to ensure the machine can accurately grab and dispense each cup during operation. Once all cups are loaded, securely close the lid.



Step 4 – Flush the hoppers

Pour approximately 2 liters of warm water into each hopper.

Wipe down the inside of the hoppers using a food-grade sanitizing solution, then rinse thoroughly with additional warm water.

Use the backend system to open the chambers and let out the water. (Section: Manual Discharging in Device Testing) Wipe down and let dry.


Step 5 – Add the Ice Cream Mix

Open the lid of the ice cream tank and carefully pour in the prepared mix. Important: Make sure the amount added is at least 2 liters to ensure proper machine function. Once filled, close the lid securely.



Step 6 – Adjust the Refill Tube


When a cup of ice cream is served, space is created in the freezing chamber, allowing more mix to enter and continue ice cream production. The amount of mix that flows into the chamber depends on the refill tube setting.

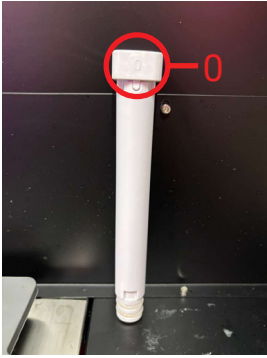


0 = Closed



1 = Smallest Opening

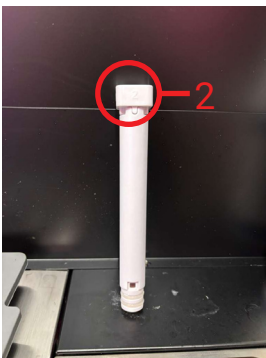

2 = Medium

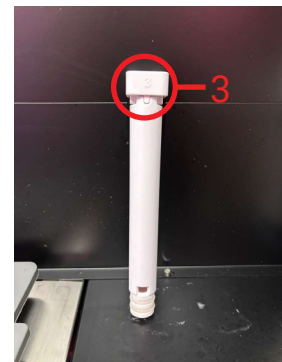

3 = Fully Open

This setting should be adjusted based on your serving size. Most standard servings work well with a setting of 2. If you're serving larger portions, increase the size to create a bigger opening and allow more mix to flow in.

Step 7 - Add Syrups

Open the syrup jar compartment and pull out the syrup tube from the machine. Twist the syrup bag onto the syrup tube connector, ensuring it is securely tightened. Once connected, place the syrup bag upside down so the syrup flows from the bottom.

- Note -
Only liquid syrups are allowed
NO SOLIDS


Step 8 - Add Toppings

Open the lid of the toppings box and pour in the prepared toppings.

- Note -
Only solid toppings are allowed
NO LIQUIDS

First Start

Open the lid of the toppings box and pour in the prepared toppings.



The machine takes 2-8 minutes to cool down for the first time on and can only make ice cream when it reaches a certain temperature.

Once the machine has cooled and is serving ice cream, it can continue to serve until the mix runs out. If the machine is refilled before it runs out, you can maintain a continuous flow of ice cream ready for vending.

The machine will automatically start making ice cream or trying when the refrigeration switch is active.

Operational Instructions

Front End - The Customer Experience



1. Advertisement Screen

The experience begins with an engaging advertisement screen showcasing the available ice cream flavors and delicious topping options.




2. Flavor Selection

Customers choose from three options for F2: (For F1 Press "Continue)

First Flavor


Second Flavor

Swirled Mix (a combination of both flavors)

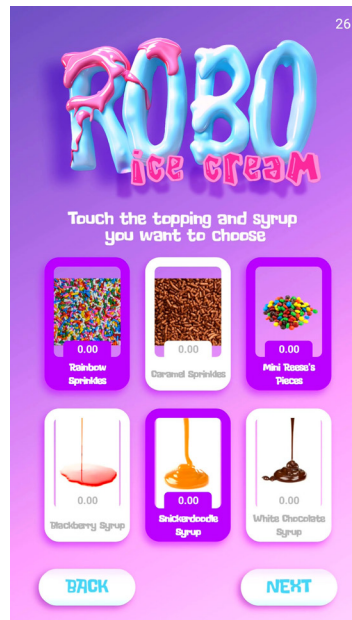


3. Toppings & Syrups

After selecting a flavor, customers proceed to the toppings and syrup screen where they can customize their ice cream with a variety of textures and flavors.

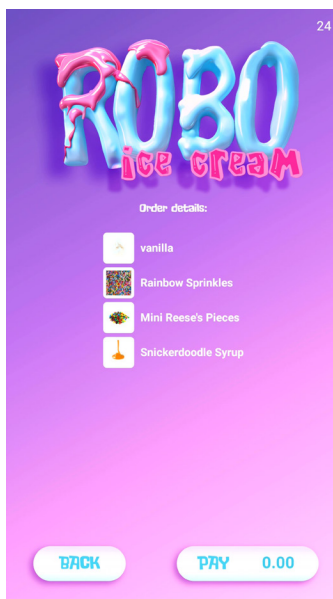


4. Order Details

On the next screen, the complete order is displayed along with the total price. Customers can review and confirm their selections before proceeding.

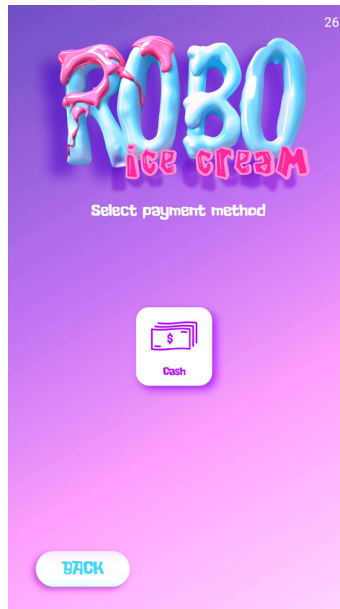

5. Payment

Upon pressing Pay, the customer is taken to the payment screen where they can choose their preferred payment method.

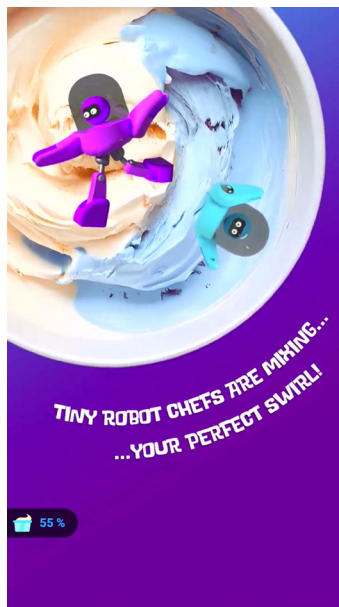

6. Ice Cream Preparation


Once payment is confirmed, the machine begins the preparation process. A video plays for entertainment while the customer waits.

The screen also displays the current status of the ice cream
hoppers:


R: 100% indicates the Right side is ready to serve.

L: 100% indicates the Left side is ready to serve.

Back End - The Operator Experience

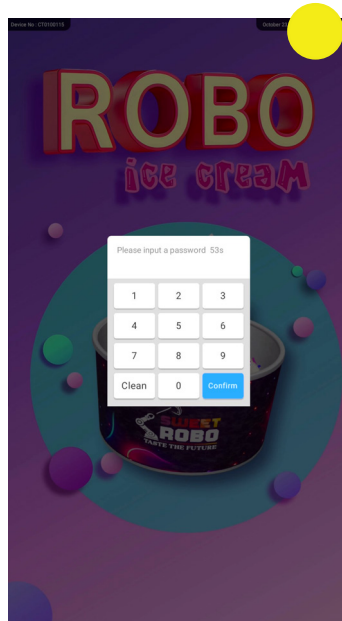


To get to the backend you have to login. The default password is “123456”. Enter it by doing a quick tap and hold on the top right corner of the screen, hold for 3-5 seconds. (Highlight Yellow Circle)

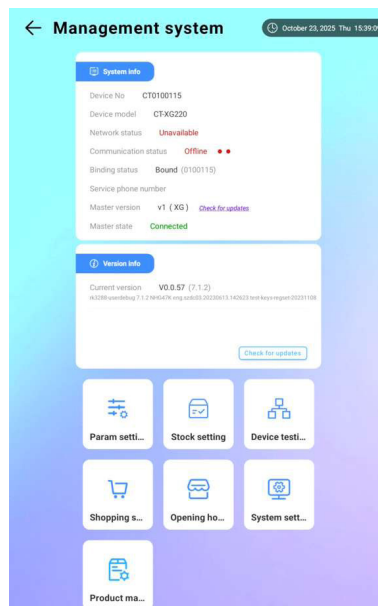

Once logged in you will have access to change all the settings on the machine and perform testing.

WARNING

Please be aware that some of the settings should not be changed without the guidance of one of our technical support staff

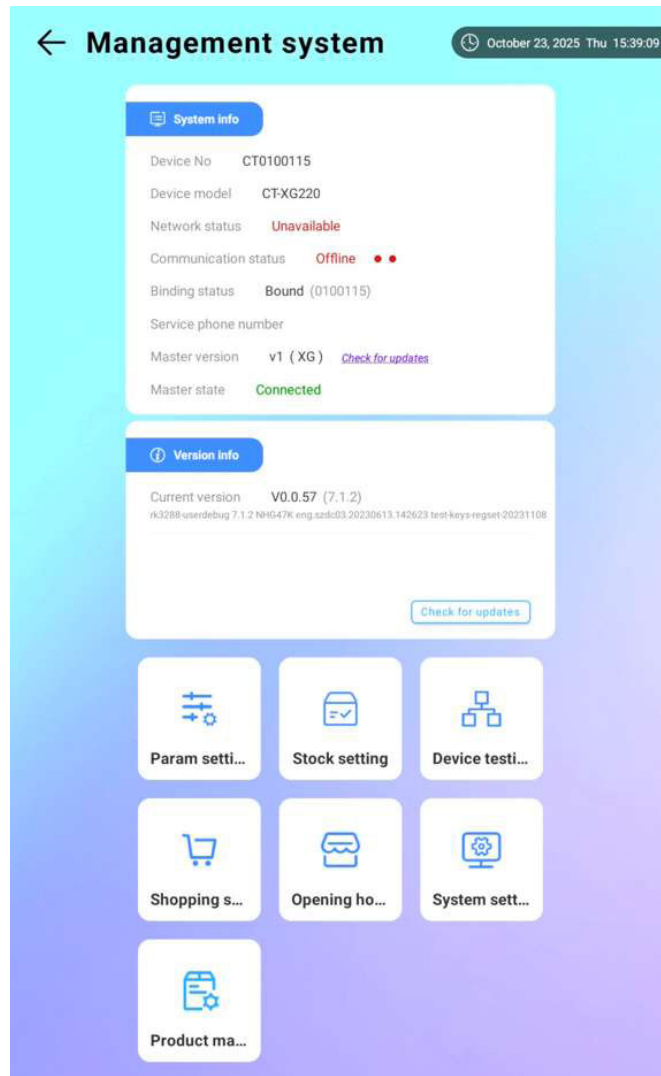

This is the management screen. Here you can find information about the machine like device and model as well as network information and version numbers.

Using the buttons on the bottom of the screen you can enter a few different sections.

1. Parameter Settings
2. Stock Settings
3. Device Testing
4. Shopping Settings
5. Opening Hours
6. System Settings

Management Screen

Parameter Settings

This page contains all the settings to control the timings and temperature of the machine. The time MS is Millisecond, 1/1000th of a second.

(IE: 2 seconds = 2000ms)

Ice Cream Settings

Name	Default	Information
L/R Gear Position	4	Controls hardness of Ice Cream
L/M/R Discharge Time	1.3s	Amount of time to dispense Ice Cream
L/R Tank Precooling Temp	4°C	Tempurature to pre-cool ice cream
L/R Allowable Discharge %	70%	How much % must be to start serving
Cups allowed after shortage	20	How many cups to serve after a low ice cream warning
Low Voltage Alarm	195V	If the power drops below this then alarm will be sent
High Voltage Alarm	255V	If power rasies above this then alarm will be sent

Jam Adding Time Settings (No.1,2,3)

Name	Default	Information
Jam Time	1500ms	How many Ms to serve syrup

Material Adding Time Settings (No.1,2,3)

Name	Default	Information
Sprinkle Time	2000ms	How many Ms to serve sprinkles

UV Lamp Settings

Name	Default	Information
Open	OFF	Enable or Disable this timer
Start Time	00:00	24HR Format - Time to start the timer
Length Time	30mins	How long to turn enable UV Lamp

Cup Holder Position Correction

Pressing this button will reset the cup holder to its initial position.

Stock Settings

On this page you will find ice cream levels and stock information you can adjust.

Cup

Pressing modify will allow you to enter the amount of cups currently stocked.

Left/Right Material

Here you will find information on the current level of ice cream. Adequate or Low/None. This will update automatically

Jams 1,2,3

These boxes will show you the current stock percentage of Syrups. "Clean up" will clear the syrup count and disable it in the order screen. "Fill Up" will set the stock to 100%

Sprinkles 1,2,3

As with the jamaes this will show the current stock of the sprinkles or toppings. "Clean up" will clear the syrup count and disable it in the order screen. "Fill Up" will set the stock to 100%

Device Testing

This page is used to manual control and test the machine. It is recommended to not change settings here. This page should be used only to test timings and for cleaning the machine

Reset Cup Holder

Press this to reset the cup holder's location to home.

Cup Out

This will drop a cup, please ensure the cup holder is home before pressing.

Left or Right Switch Function

Cooling (L or R)

Start the freezing operation. Prepare ice cream to be ready for sale.

Keep Fresh (L or R)

Keep the ice cream at a constant temperature to ensure freshness without freezing.

Thaw Fresh (L or R)

Heat ice cream to melt and prevent bacteria from forming.

Close (L or R)

Turn off Hopper.

Discharging Functions

Manual Discharging

This will open the chamber to allow the liquid to exit the machine from the Left, Middle, or Right side. Press CLOSE to stop the flow. This button is useful when cleaning the machine. Allows you to drain out any liquid. Please make sure there is a bucket to catch falling liquid.

Automatic Discharging

This will open the chamber to allow the liquid to exit the machine from the Left, Middle, or Right side. Press CLOSE to stop the flow. This will automatically close depending on the time set in PARAM SETTINGS. Ensure the function is in Cooling Mode to operate.

Sensor Status

This section shows the status of various sensors

Cup Dispenser

This section will allow you to enable or disable the cup sensor and perform some tests. You can spin the entire cup system or simply test a cup dropping

Jams 1,2,3 Test

Here you can set a time to test the output of the Syrup dispensers.

Sprinkles 1,2,3 Test

Here you can set a time to test the output of the Toppings dispensers.

Door

Use this section to test if the Door can lift, lower, lock and unlock

Disinfection Lamp

Use this to manually control the UV lamp and ensure its operation.

System Settings

Volume Settings

Set the desired volume for open and closing time (if enabled).

Time Based Control

Set the volume based on hours in the day.

Shopping Guide Voice

This will either enable or disable the voice to bring in customers.

Weak Network Mode

Disable or Enable the need for internet connection. Internet is needed to change prices and download new updates

Create Abnormal Interruption Record

This will list times of errors

Buttons On The Bottom Right

Exit - Close the Program

Repair - Clear cache and restart the program

Restart - Restart Entire Machine

Opening Hours

If enabled, this schedule will be used to allow the machine to make sales. When outside of sales hours here, the machine will not allow any ice cream to be vended.

Shopping Settings

On this page you can control the payment options and other settings that deal with the shopping experience.

Payment Method

You can select the types of payments allowed.

Banknote machine: Bill acceptor.

VPOS: NAYAX credit card device

Coin Acceptor: Coin acceptor

Change Settings

Name	Information
Open	Disable/Enable the Coin Dispenser
Coin Value	How much is each coin worth (IE: US 0.25 per Quarter)
Inventory Quantity	How many coins are in the dispenser
Number of Alerts	How many coins should be left before giving alarm
Change Limit	Max amount of coin to dispense at once
Change Test/ Testing amount	Set the amount of coins to dispense as a test and press PLAY. If you are dispensing quite a few coins and need to cancel, press STOP.
No Change Reminder	Alarm when there is no change

Shopping Settings

Name	Information
Shopping Time	Time of inactivity before jumping back to the ad screen from any screen that isn't payment.
Payment Time	Time of inactivity before jumping back to the ad screen from the payment screen.
Show Balance	Show Customer Change

Maintenance and Review

How to make Ice Cream

Depending on the mix you're using you may need to adjust the quantities below.

1. Prepare a bucket with 4L of fresh water, pour an entire mix of ice cream, in our case it's a 1.5KG bag, onto the water.
2. After pouring the powder into the bucket, start mixing with either an electronic mixer or whisk. Stir for 2-3 minutes. After mixing, slowly pour the milk slurry into the raw material tank.
3. Enter the machines' setting by pressing and holding the top right hand corner and enter your password
4. Go to Device Testing and select the "Cooling" Function and allow the machine to cool down the mix and it will be ready to serve in 10 minutes.

Food Safety

Cleaning Expired Ice Cream Mix


Ice cream mix stored in the hoppers for more than 3 days should be discarded. To maintain hygiene and prevent contamination, the machine must be cleaned and sanitized at least once every 3 days.

Syrup Container Maintenance

Syrup containers and their tubing should be cleaned weekly. This helps prevent the buildup of bacteria and avoids clogging within the dispensing system.

Topping Container Maintenance

Topping containers should also be cleaned once a week to avoid clumping and the potential for bacterial growth.



To view our "How to Clean Videos" Scan the QR code
or type the link into your browser

Food Safety & Cleaning Checklist

Daily Tasks

- ☐ Check expiration dates on ice cream mix in hoppers
- ☐ Wipe down external surfaces of the machine
- ☐ Inspect cup and topping dispensers for debris or blockages
- ☐ Sanitize touch screen and customer contact areas

Every 3 Days

- ☐ Discard old ice cream mix (if over 3 days old)
- ☐ Wipe down external surfaces of the machine
- ☐ Inspect cup and topping dispensers for debris or blockages

Weekly Task

- ☐ Clean syrup containers and tubing to prevent bacteria and clogging
- ☐ Clean topping containers to prevent clumping and contamination
- ☐ Check all food contact parts for signs of wear or buildup
- ☐ Empty and clean the drip tray and waste bins

Physical Safety

Automatic Door Maintenance

Before performing any maintenance on the automatic door, power must be turned off. If testing or debugging with power on, use extreme caution to avoid injury—particularly the risk of pinching from moving parts.

Machine Wheels

This machine is not designed for long-distance pushing, as the wheels may become damaged. If a wheel replacement is needed, special lifting equipment is required—do not attempt to tilt or turn the machine on its side, as this may cause serious damage.

Electrical Safety

Maintenance & Safety Guidelines

Before performing any maintenance on the machine, ensure all power sources are completely disconnected. Maintenance should only be carried out by someone with basic electrical knowledge to prevent injury or damage.

IMPORTANT

Never unplug the machine directly while it is powered on. Always use the Breaker Switch to safely shut down the system before disconnecting the power plug.

Even with these precautions, we strongly recommend informing a Sweet Robo technician of any issues and planned maintenance actions. Our team is here to support you and ensure everything is done safely and correctly.

Please note:

Any unauthorized modifications or changes to the machine may void the warranty. Always seek approval or guidance before making adjustments.

Appearance of Vending Machine

When replenishing goods each time, the machine has dust, which can be wiped with a dry cloth. If it is dirty, clean it with a cloth dipped with warm water or neutral detergent.

When decontaminating, do not use thinner, volatile oil, solvent, strong alkaline detergent and other chemicals, otherwise the paint and plastic parts may be corroded or cracked.

It is recommended to clean every 3 days for common cleaning. Deep cleaning is recommended every 7-10 days.

Common Cleaning

Common cleaning involves flushing the system without removing any parts. This helps maintain smooth operation and sanitary conditions between deep cleaning cycles.

Deep Cleaning

Deep cleaning is essential. This process requires removing the front block and containers to ensure a thorough and hygienic clean.

Precautions

1. Since the machine has a cooling device, it should be transported vertically and connected to the power supply 2 hours after unpacking and installation.
2. After receiving the machine, please check whether the body, glass and anchor are intact, and whether the accessories are complete.
3. The machine body is made of steel. Please entrust professional personnel to install and move to avoid personal injury and machine damage.
4. The ground must be hard and flat, and poor installation may lead to tilt, electric shock, fire or burn.
5. Please select a suitable ground to install this equipment. The equipment shall be kept vertical during operation, and the maximum inclination of the front, rear and lateral is 5% ($\sim 2^\circ$).
6. The place must be moisture-proof and rainproof to prevent short circuit of the circuit and burning of the circuit board caused by water.
7. The place must be protected from direct radiation of heat source to ensure good ventilation and heat dissipation, so as to ensure the refrigeration effect of the machine.
8. Make sure that the machine is not affected by moisture, dust, dirt, etc. Pay special attention to ensure that the ventilation grid is smooth and free from any obstructions.
9. The distance between the rear side of the machine and the wall shall not be less than 50cm, the distance between multiple machines shall not be less than 20cm, and the opening angle of the door shall be at least 135° to ensure good performance of the machine and convenient loading.
10. Do not disassemble or refit without the guidance of the manufacturer's professional personnel to avoid accidents.
11. The installation area of the machine needs a standard and stable 220V mains voltage. The power socket must be a three hole socket with grounding. It cannot be grounded through the gas pipe, water pipe, telephone line and lightning rod. The grounding resistance of the grounding terminal should be less than $4\ \Omega$.
12. Before connecting to the power supply, ensure that the characteristics of the power supply are consistent with those of the machine.
13. The power socket shall be installed properly to facilitate the disconnection of the machine from the power supply.

14. Do not use damaged power lines and patch cords to prevent electric leakage from endangering personal safety.
15. If the power cord (Y connection) is damaged, it should be replaced by the manufacturer or after-sales service or similar qualified personnel to prevent danger.
16. The wiring of the power supply must be firm and stable, and the poor contact of the power line will affect the performance of the machine.
17. It is prohibited to put flammable articles in the machine to prevent fire or explosion.
18. In case of abnormal burning smell, smoke or fire, please unplug the power plug immediately and contact the professional maintenance personnel.
19. When the machine cannot be used due to failure, please provide the photos of the front of the machine and the machine code when contacting the after-sales service personnel, so that the after-sales service personnel can confirm the model of the parts and troubleshooting.
20. When replacing parts or cleaning and maintenance of the machine, please cut off the power supply first to prevent electric shock or damage to the machine and equipment.
21. Frequent cleaning can prevent failures and prolong the service life of the machine.
22. Please use clean water to clean the machine, and do not use concentrated products to clean the machine (it may corrode the paint and change the color).
23. When cleaning the electronic equipment, do not use a wet towel to prevent the equipment from being damaged by water inflow and short circuit.
24. Please wear gloves when cleaning the condenser, and use a long brush to clean the aluminum sheet to prevent hands from being scratched.
25. Please turn off the compressor before loading, so as to reduce the water vapor in the external air from entering the machine for liquefaction, prevent water leakage at the back and the aluminum plate of the compressor from frosting and blocking. If the water in the evaporating dish is full, please pour it out in time.

Customer Support

Troubleshooting

Note: For issues not resolvable using this guide please contact technical support.

We hope you benefit from our 24/7 assistance with any technical issues you may be experiencing. Our team is available to provide you with the support you need to ensure a smooth and seamless product experience. If you're experiencing any difficulties or have questions about our product, please don't hesitate to reach out. We're here to help and will do our best to resolve your issue as quickly as possible.

Support

E-Mail : support@sweetrobo.com

Phone: +1 347-696-7530

Legal and Warranty Information

Limitation of Liability

Except as enumerated in section 9, Vendor shall not be liable for loss, injury, or damage of any kind to any person or entity resulting from any use, condition, performance, defect, or failure in the Products. This Agreement will not provide any third party, including but not limited to any end user of the Products with any remedy, claim, liability, reimbursement, cause of action, or other right in excess of those existing without reference to this Agreement. Upon delivery of the Products, Customer shall assume all obligations and liabilities concerning the Products and for their safe use, maintenance, operation, condition, and storage, including, without limitation, liability for (a) the loss, theft, vandalism, destruction, damage, neglect, or abuse to the Products (or any part thereof); and (b) all other risks and liabilities, including, without limitation, the death of or injury to any person or property arising from the use, operation, condition, possession, or storage of the Products from any cause whatsoever. Vendor shall not be liable for any incidental damages, including, but not limited to, the loss of revenue or business interruption incurred by Customer by reason of any downtime or malfunction of the Products. Customer expressly releases Vendor from such liability in entering into this Agreement.

9. Limited Warranty

9.1 Vendor warrants that the Products sold to Customer by Vendor, and any replacement parts, will be free from material defect in materials and workmanship for a period of twelve (12) months from the date of delivery of the Products to Customer, subject to the terms and conditions in this limited warranty.

9.2 Vendor may refund the value or partial value of, or replace the Product or a part of the Product at no cost to Customer, excepting shipping costs of the Product and technician expenses which will be paid by Customer, upon the following circumstances:

- (a) Vendor is advised in writing as to a defect in the Product;
- (b) An examination of such Product, whether completed remotely or in person, discloses to Vendor's reasonable satisfaction that such Product is defective and such defect was not caused by accident, abuse, neglect, improper installation, alteration, lightning damage, submersion, or short circuits due to improper handling, repair, improper testing, or use contrary to any instruction issued by Vendor;
- (c) By written request of Customer, Vendor's designated Remote Technician has worked remotely with Customer or Customer's representative to address the defect, and, despite Vendor's Remote Technician's good faith effort and reasonable diligence, the Remote Technician was not able to fix the defect;
- (d) An In-Person Technician, with good faith effort and reasonable diligence was not able to repair the defect; and
- (e) The defect occurred within the first twelve (12) months from the date of delivery of the Product to Customer.

Replacement shall mean furnishing Customer with a new Product or replacement part equivalent to the defective Product or part. The defective Product replaced by Vendor under this warranty shall become the property of Vendor and must be returned to Vendor properly packaged to prevent physical damage.

9.4 If the Remote Technician is unable to assist Customer, then Vendor may, at Customer's request, send an In-Person Technician to diagnose and repair the Product. Customer is responsible for paying the In-Person Technician's expenses, which include travel, lodging, and an hourly labor charge at the current market rate. Vendor shall use its best efforts to send an In-Person Technician to Customer within one (1) week of Customer's request.

9.5 The obligations created by the warranty statement to repair, refund, or replace a defective Product shall be the sole remedy of the Customer in the event of a defective Product. Except as expressly provided in the warranty statement, Vendor disclaims all other warranties, whether express or implied, oral, or written, with respect to the Product, including, without limitation, all implied warranties of merchantability or fitness for any particular purpose. The foregoing limited warranty is in lieu of all other warranties. No representative, employee, distributor, or dealer of Vendor has the authority to make or imply any warranty, representation, promise, or agreement which in any way varies the terms of the limited warranty. Under no circumstances shall Vendor be liable to Customer or any third party for any consequential, incidental, indirect, exemplary, special, or other damages whether based on contract, tort (including negligence), or any other legal theory arising out of or related to the Product sold to Customer, including, but not limited to, lost profits or loss of business, even if Vendor is apprised of the likelihood of such damages occurring. This limited warranty may not be changed, modified, limited, or extended in scope except by a written agreement signed by Vendor and Customer. Except as stated, any purported modification of this limited warranty shall be null and void.

9.6 The limited warranty provided in this Section 7 is valid only in the United States and Canada and does not cover Products sold and clearly marked "as is" or with faults. Some states or provinces do not allow limitations on how long an implied warranty lasts and some states do not allow the exclusion or limitations of consequential or incidental damages, so these limitations or exclusions may not apply to Customers in those instances. Customers may also have other rights which vary from state to state or province to province.

9.7 If Customer makes any defamatory, disparaging, libelous, or damaging publication or statement about Vendor or the Products, Vendor may refuse to provide Customer with Remote or In-Person Technician services; provided, however, that Customer can make a truthful statement to the extent, but only to the extent,

(a) necessary with respect to any litigation, arbitration, or mediation involving this Agreement, including, but not limited to, the enforcement of this Agreement, in the forum in which such litigation, arbitration, or mediation properly takes place; or

(b) required by law, legal process, or by any court, arbitrator, mediator, or administrative or legislative body (including any committee thereof) with apparent jurisdiction over the Parties.

10. Indemnification


10.1 Customer agrees to defend, indemnify, and hold harmless Vendor and its officers, directors, and employees from or against any and all claims, demands, damages, actions or causes of action, together with any and all losses, costs, or expenses, including, without limitation, to attorney's fees and court costs arising out of, connected with, or resulting from the Products, including, without limitation, the selection, delivery, control, possession, use, operation, maintenance, or return of the Products.

10.2 Customer further agrees to defend, indemnify, and hold harmless Vendor and its officers, directors, and employees from or against any and all claims, demands, damages, actions or causes of action, together with any and all losses, costs, or expenses, including, without limitation, to attorney fees and court costs in connection therewith and related thereto, asserted by any person or persons for property damage, bodily injuries, or death received or sustained by any person or persons in any manner caused by, arising from, incident to, connected with, or growing out of the event or function for which the Products are used, unless the property damage, bodily injuries, or death are caused in whole or in part by the intentional conduct, recklessness, or negligence of Vendor or its employees or agents.


10.3 Customer will indemnify Vendor against all claims, losses, and reasonable expenses from any third-party claim alleging that the use of the Products infringes or misappropriates the third-party's intellectual property rights. Customer must promptly provide Vendor with written notice of such claim, tender to Vendor the defense or settlement of such claim at Customer's expense and cooperate fully with Vendor in the defense or settlement of such claim. Customer's intellectual property indemnification obligations shall apply to claims based on

- (a) modification of the Products by a third-party not approved by Vendor;
- (b) use of the Products in combination with hardware or services not approved by Vendor;
- (c) use of Vendor's Products other than as permitted in this Agreement; or
- (d) use of Vendor's Product software or application that is not the most current release provided by Vendor.

Online Manual & Resource Folder



Online Manual
or type in this link:



Customer Resource Folder
or type in this link:

Feedback? Feel free to send us an email at
Support@sweetrobo.com

Written by Mikey Fiallos, Jason Lopez, Meir Knapp ©Sweet Robo 2025