
INSTALLER BUILD PLAN

Placement for the crew. X is measured from the left wall facing the screen. Y is from the screen wall. Numbers on the plan match the schedule.

Job	Example — Omaha basement bay
Client	Example client · Homeowner
Location	Omaha, NE
Status	Lead example

PLACEMENT PLAN

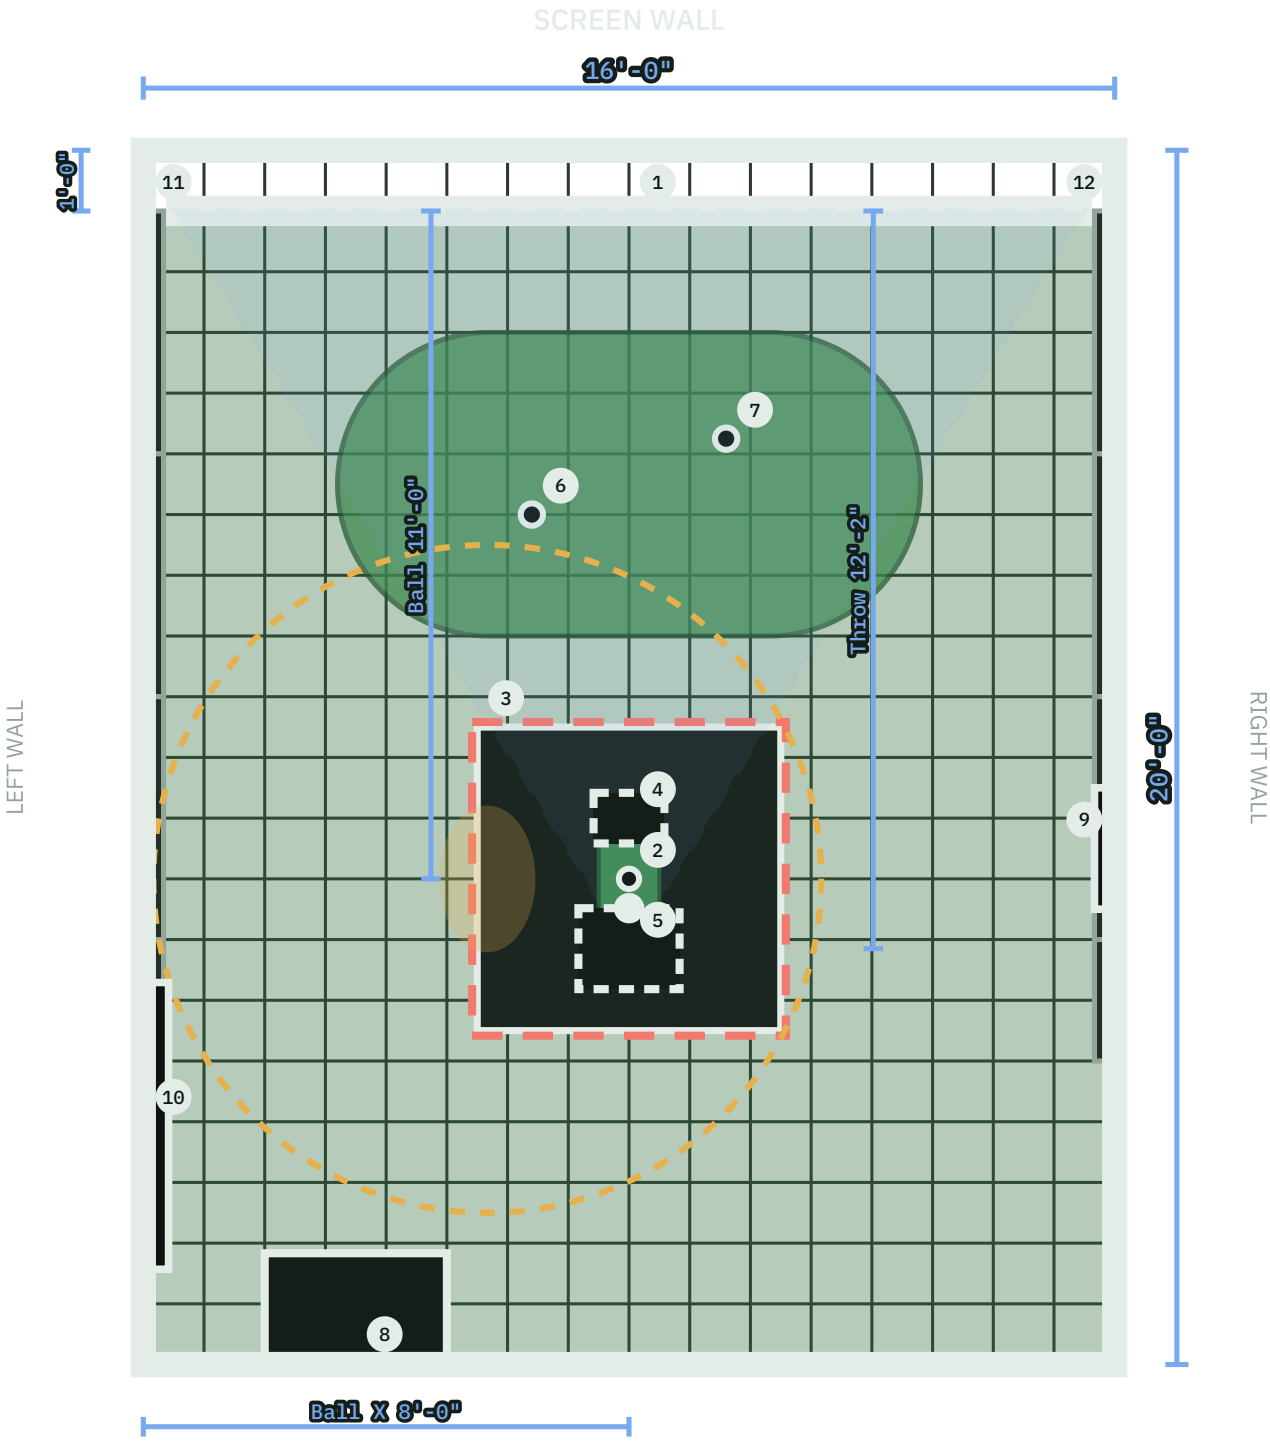

REAR WALL · scale 1 sq = 1 ft


PLACEMENT SCHEDULE

#	ITEM	X (LEFT WALL)	Y (BACK WALL)	HEIGHT	MOUNT	NOTES
1	Impact screen (face)	—	1'-0"	0'-0"–9'-6"	Frame to blocking	Screen 15'-0" × 9'-6". 0'-6" trim each side. Face is 1'-0" off the back wall.
2	Ball position / hitting strip	8'-0"	12'-0"	0'-0"	Floor	Snap the target line from screen center to the ball. RH setup.
3	Hitting mat (flush inset)	5'-6"	9'-6"	0'-0"	Floor	5' × 5' dual-strip mat. Corner dims are the mat's left-front corner. Cut turf and subfloor to mat size plus 1/8 in..
4	Launch monitor — Uneekor EYE XO2	8'-0"	11'-0"	9'-8" (to unit)	Ceiling	Ceiling unit over the hitting area. Verify the Uneekor height chart. Positions are planning values. Final aim follows the manufacturer.
5	Projector (lens)	8'-0"	13'-2"	9'-4"	Ceiling	Throw 12'-2" at TR 0.81. Image 15'-0" wide. Verify lens offset with the manufacturer calculator.
6	Putting cup 1	6'-5"	6'-0"	0'-0"	Floor	4¼ in hole. Set the cup ½ in below the turf.
7	Putting cup 2	9'-7"	4'-9"	0'-0"	Floor	4¼ in hole. Set the cup ½ in below the turf.
8	Computer cabinet	3'-6"	20'-0"	2'-10" top	Rear wall	Center on the wall point. 3'-0" wide × 1'-10" deep.
9	Computer monitor	16'-0"	11'-6"	4'-0" ctr	Right wall	Arm on backing B9, outside the swing radius
10	TV 1 (65")	0'-0"	16'-1"	5'-6" ctr	Left wall	Mount to backing. Hide the cable in the tube.
11	Wall panels — left (4)	0'-0"	1'-0"	0–8'-0"	Left wall	Start at the screen line. Run 14'-0". 48 in panels.
12	Wall panels — right (4)	16'-0"	1'-0"	0–8'-0"	Right wall	Start at the screen line. Run 14'-0". 48 in panels.
13	Turf	0'-0"	1'-0"	0'-0"	Floor	Wall to wall from the screen line to the rear

#	ITEM	X (LEFT WALL)	Y (BACK WALL)	HEIGHT	MOUNT	NOTES
						wall. About 279 sq ft net.

WALL ELEVATION

Screen | Left | Right | Rear

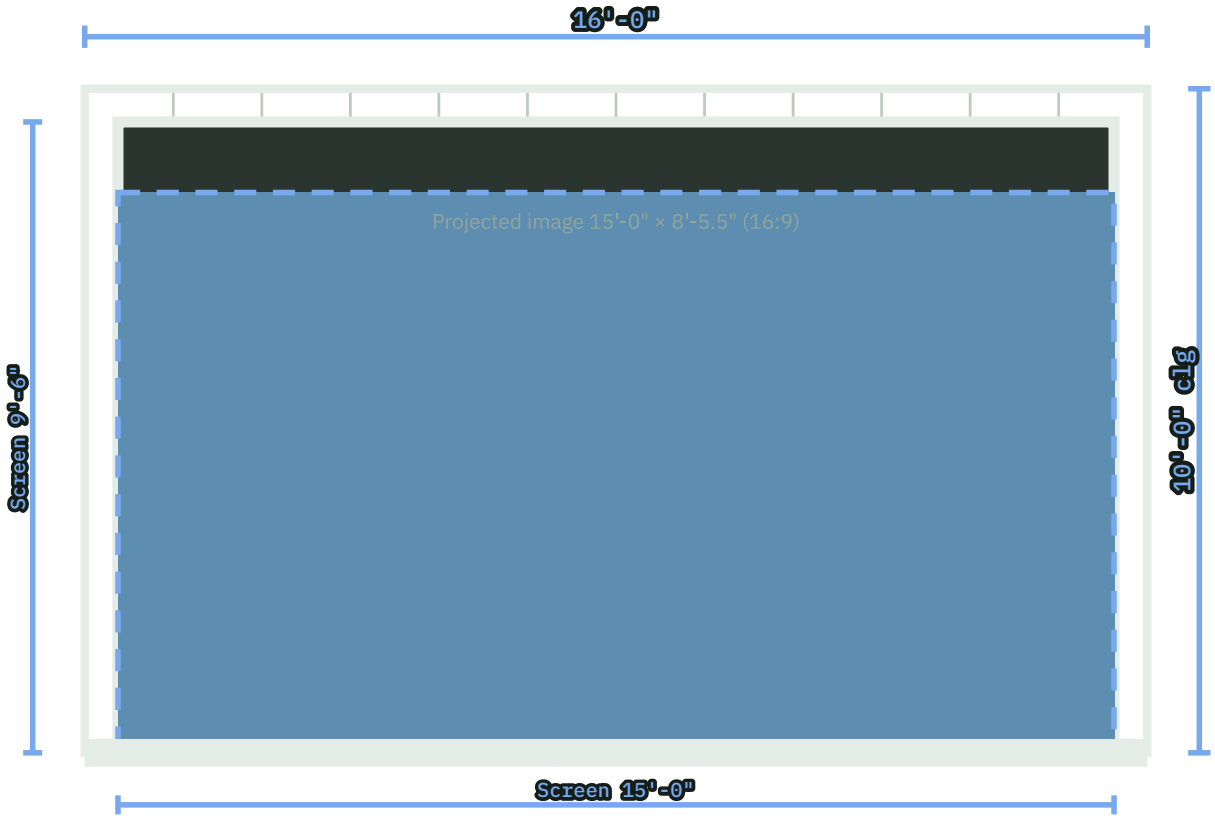

SCREEN WALL — looking at screen

INSTALL SEQUENCE

0/12

- [ ] **Verify rough-in against the builder sheet**
  Backing, receptacles, Cat6, and tech tubes are in place. Photograph each before panels go up.
- [ ] **Snap layout lines**
  Screen line, target line, ball center, mat outline, projector, and launch-monitor points from the schedule.
- [ ] **Install wall panels**
  8 panels on the nailer rows, starting at the screen line.
- [ ] **Hang the screen frame and impact screen**
  Fasten to B1–B3 backing. Tension evenly. Check the projected area for wrinkles.
- [ ] **Lay turf and cut the mat inset**
  Cut the inset to mat size plus 1/8 in. Mat surface sits flush with the turf.
- [ ] **Cut and set putting cups**
  2 cups per the schedule.
- [ ] **Mount the launch monitor**
  Bolt to B5. Level it and aim at the hitting area per the manufacturer.
- [ ] **Mount the projector**
  Lens at 13'-2" from the back wall. Square to the screen, keystone off, filling an image 15'-0" wide.
- [ ] **Set the computer and pull cables**
  Run HDMI, USB, and Cat6 through the tubes. Label both ends.
- [ ] **Mount TVs and the monitor**
  On the marked backing. Hide cables in the tubes.
- [ ] **Install software and calibrate**
  Align the launch monitor and the screen. Test shots from both sides if the bay is dual-handed.
- [ ] **Client walkthrough and photos**
  Run a session with the client. Add photos to the job notes.

Save the job to keep checklist progress.

SPACE CHECK CARRIED FROM SALES

Fits with caveats

Ceiling 10'-0" clears the estimated driver swing height (~9'-4").

Ball-to-screen 11'-0" is in the typical 10'–12'+ range.

8'-0" behind the ball for backswing and lounge space.

Projector beam clears the golfer's head (~8'-9" at the ball).

Projector bottom (9'-4") is close to the swing height over the hitting area. Use a protective ceiling enclosure.