


AQUABED

Bed Heating & Cooling System



contents

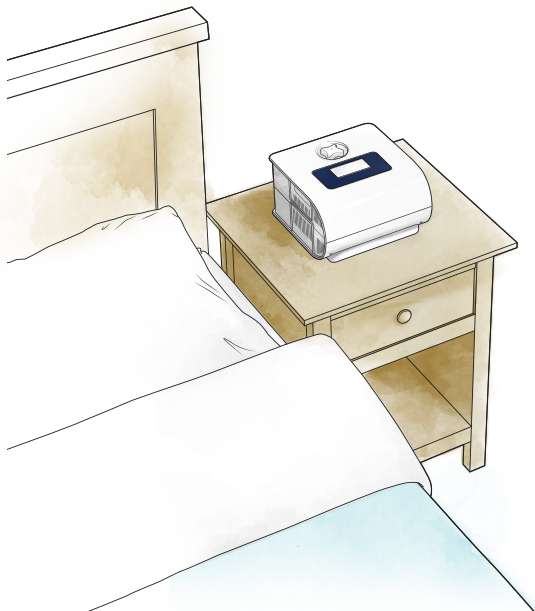

Welcome	1
Safety procedure	2
Parts & functions	4
Installation	5
Settings	10
Draining & storage	13
Troubleshooting	14
Warranty	15


AQUABED

Thank you for choosing the AquaBed Bed Heating & Cooling System. Please use this User's Guide for the proper installation, use, and maintenance of your AquaBed. A digital version of this User's Guide is also available on www.aquabedwarmer.com.

What's in the Box?



**AquaBed
Water Heater***



Mattress Pad




Hand Pump


* 2 heaters included if Dual system.

Notice

Read the following instructions to ensure safe and proper installation.

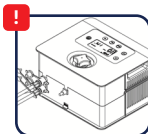

Please make sure the AquaBed Water Heater is securely connected to the Mattress Pad before activation or usage.

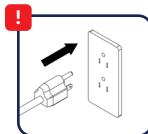

Please use only a 120V charge wall outlet.




Please only use drinkable tap or bottled water to fill the AquaBed Water Heater.



Please place your AquaBed Water Heater on a flat surface.



Please disconnect power to the AquaBed Water Heater before removing any water from the unit.

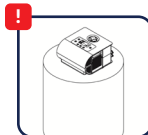


Please place the AquaBed Water Heater within 2.3feet(70cm) from your Mattress Pad.

Caution

Read the following instructions to avoid damaging your AquaBed Water Heater.




Do not overfill the AquaBed Water Heater when filling.

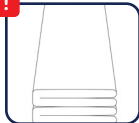

Do not fold the Mattress Pad during operation or usage.



Do not use any liquids other than drinkable water when filling the AquaBed Water Heater.

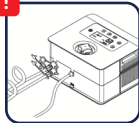

Do not fold or twist the Mattress Pad hose on to the AquaBed Water Heater.




Do not try to fix or open the Aqua Cool and Warm unit.




Do not place the Mattress Pad on top of any sharp objects.

parts & functions

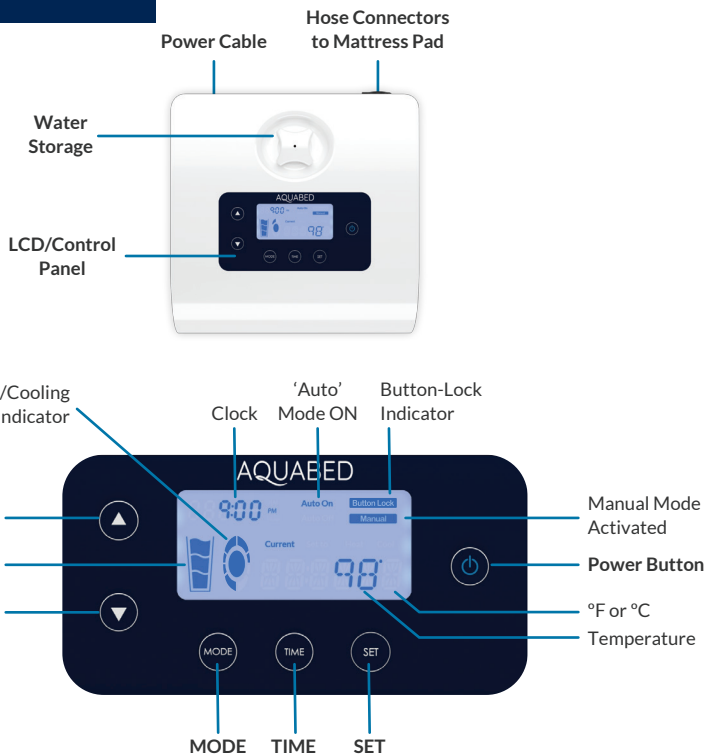





Place the Mattress Pad on the desired location (i.e. top of bed mattress). When first installing the AquaBed, lay your Mattress Pad flat out on the desired location for at least 10 minutes before connecting it to the AquaBed Water Heater.

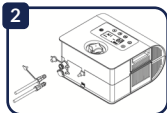

Remove the rubber caps on the hose connectors on the Mattress Pad and AquaBed Water Heater. Note: Some AquaBed Water Heaters will contain residual water from Quality Assurance testing.

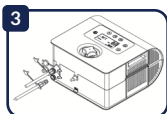

Connect the Mattress Pad to the AquaBed Water Heater by inserting both hose connectors on the AquaBed Water Heater. Make sure to secure the connection by plugging the hose connector in and twisting it clockwise.

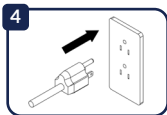


Plug the AquaBed Water Heater into a nearby wall outlet. Upon connection, OFF should appear on the screen.



installation cntd.



Prepare the water to fill the AquaBed Water Heater. Note: Use drinkable, preferably bottled water. The necessary water volume depends on the size of your AquaBed Mattress Pad.

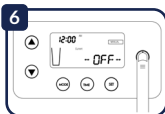

Press the POWER button to turn on the AquaBed Water Heater. You will notice a WATER & EMPTY message on the LCD.



Release the cap on the AquaBed Water Heater and slowly pour water into the water storage. Make sure your Mattress Pad hose connectors are securely plugged into the AquaBed Water Heater to prevent leaking.



If the AquaBed Water Heater is on, the unit will automatically pump the water into the Mattress Pad. The three water level bars indicate the amount of water in the AquaBed Water Heater.




As the AquaBed Water Heater pumps water into the Mattress Pad, the LEDs may indicate a shortage of water.

Pour water into the AquaBed Water Heater until the water level indicator reads “full”. If you see an “E1” message on the LCD, please pour more water into the AquaBed Water Heater.




Upon initial installation, the AquaBed Water Heater may generate slight noises/vibrations. The unit is removing all of the air pockets inside of the system and will only last up to 90 seconds.

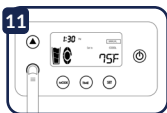

The temperature displayed on the bottom right side of the LCD indicates the current water temperature within your system. You can easily set your desired temperature by using UP and DOWN buttons. The temperature range is 50°F to 158°F (10°C to 70°C).


setting up auto mode

Auto Mode: This mode will allow you to set scheduled heating/cooling time.

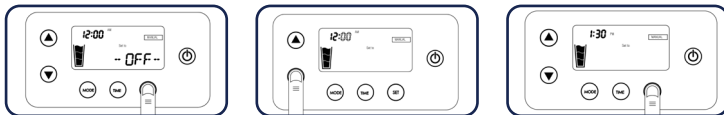


A. Set current time

Hold the SET button for 2 seconds. The AquaBed Water Heater must be off. The current time on the top left corner should be blinking. Select the current hour, minute, and AM/PM using the UP and DOWN buttons - pressing SET between each item.

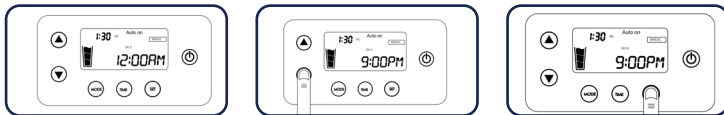

B. Set Auto Mode start time.

After you have set the current time, you will automatically be taken to schedule your Auto Mode start time. To do this, use the UP and DOWN buttons to select the hour, minute, and AM/PM at which you would like Auto Mode to start, pressing SET between each item.

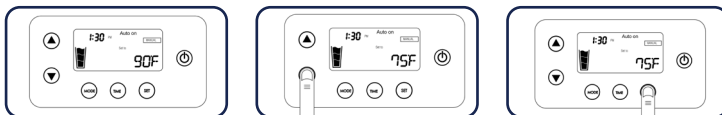

C. Set Auto Mode temperature

After you have set your Auto Mode start time, you will automatically be taken to schedule your Auto Mode temperature. To do this, select your desired temperature using the UP and DOWN buttons, then press SET.






D. Set Auto Mode stop time.

After you have set your Auto Mode temperature, you will automatically be taken to schedule your Auto Mode end time. To do this, use the UP and DOWN buttons to select the hour, minute, and AM/PM at which you would like Auto Mode to end, pressing SET between each item.

Note: Auto Mode can only run a maximum of 24 hours.


Make sure to switch back to AutoOn/AutoOff mode. Manual will override the scheduled settings, and will not follow the scheduled setting.

settings

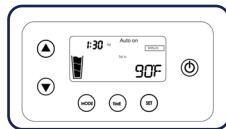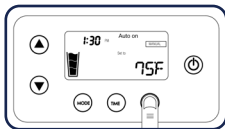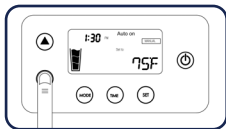

Set current temperature




1. Turn the AquaBed Water Heater ON.
2. Press the SET button, or simply press the UP or DOWN buttons. The temperature will appear at the bottom of the screen.
3. Select your desired temperature using the UP and DOWN buttons, then press SET.

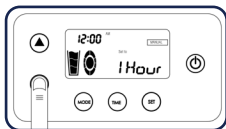

Set run time

1. Turn the AquaBed Water Heater ON.
2. Press the TIME button. The current runtime will appear at the bottom of the screen.
3. Select your desired runtime using the UP and DOWN buttons, then press SET.


Note: the run timer range is 1 to 24 hours. The default is 8 hours.

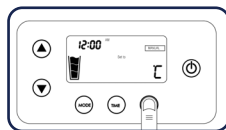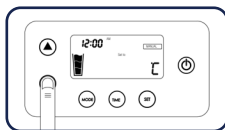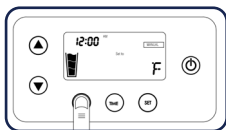

Change temperature units

1. Turn the AquaBed Water Heater OFF.
2. Hold the MODE button for 2 seconds. F or C should appear on the bottom right of the screen.
3. Toggle between Farenheit or Celsius using the UP and DOWN buttons, then press SET.


Switch between Manual and Auto Mode

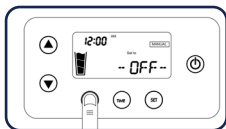

MANUAL

Manual/On: Allows you to change current temperature while also keeping the Auto-set schedule.

Manual/Off: Current and Auto scheduled heating is off.

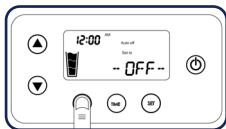

AUTO MODE

Auto/On: Indicates that the heating/cooling is on and following the set schedule.

Auto/Off: Indicates that the heating/cooling is off but still following the set schedule.

1. Press the POWER button to turn the AquaBed Water Heater OFF.
2. Press the MODE button to switch between Manual or Auto Mode.

The mode will be shown in the right side of the screen.

Check total hours used

1. Turn the AquaBed Water Heater OFF.
2. Hold the TIME button for 2 seconds. The total time used will appear in the top left of the screen.


Setting up child-lock mode

The AquaBed features a child-lock safety feature that locks all the buttons and functions in place on your AquaBed Water Heater.


How to Lock - Hold the UP and DOWN buttons simultaneously for 3 seconds. The LOCK status will appear on the screen. (all buttons are now disabled).

How to Unlock - Hold the UP and DOWN buttons simultaneously for 3 seconds. The LOCK status will disappear from the screen (all buttons are now active).

Make sure the water in your AquaBed Water Heater has reached room temperature before cleaning and storing.

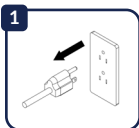

Unplug the power supply for your AquaBed Water Heater.

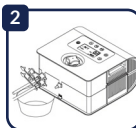

Before disconnecting the hose connectors to the Mattress Pad, place a pitcher or large-size bowl (preferred) underneath the unit.
When the hose connectors are disconnected water will spill out.




First, disconnect the LOWER hose connector by twisting the plug counter-clockwise and slowly pulling away from the AquaBed Water Heater.



Second, disconnect EACH hose connector by twisting the plug counter-clockwise and slowly pulling away from the AquaBed Water Heater.



Drain out all remaining water inside of your system.

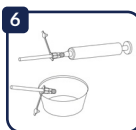

To drain the Mattress Pad, use the included hand-pump on one hose connector to push the water out of the other hose connector.



After all of the water has been drained, cover all hose connectors with the original rubber caps.



Before storing your AquaBed, allow both the Mattress Pad and the unit to dry.

ERROR CODE	DESCRIPTION	SOLUTION
Water Empty	Water shortage	Pour drinkable water into your water heater.
Error2	Temperature sensor error	Please contact support.
Error3	Circulation pump error	Please check connections and mattress pad tubing system. If not solved, contact support.
Error4	Temperature control error	Please contact support.
Error5	Heater control error	Please contact support.
Error6	Water sensor error	Please contact support.

Specifications

- Product : Aqua Bed Cool and Warm (AB-550)
- Power Requirement : AC120V 50/60Hz
- Heater Dimensions : 250 x 250 x 140mm
- Wattage : Cooling - 110W / Heating - 360W
- Amperage : Cooling - 1A / Heating - 3A
- Temperature Range : 50°~158°F (10° ~ 70°C)
- Heater Type : Coil Heater (AC 120V 350W - 2.9A)
- Peltier Type : DC 12V - 12A - 100W
- Pump Type : BLDC PUMP (DC12V - 4W - 0.3A)

Heater warranty

Every Aqua Cool and Warm is protected by our 2-year warranty or 5,000 hours. This will cover you for defects and malfunctioning components. After the first cycle, the Aqua Mattress Pad is not returnable or covered by warranty.

Registration

In order to be eligible for warranty, please register your purchase on www.aquabedwarmer.com within 10 days of receiving your AquaBed.



Firstech, LLC.

21903 68th Avenue South

Kent, WA 98032, USA

Toll-Free: 1(855)646-AQUA (2782)

Hours: Monday-Friday, 8AM-5PM PST

Website: www.aquabedwarmer.com