• Robotics Operating System

- Ludovic Saint-Bauzel (saintbauzel@isir.upmc.fr)

- *2023*

Summary

- Context
- Ros in a Nutshell
- Implementing a Robot

Timeline

- *2022* ---- ***ROS2 Humble***
- *2020 :* ***ROS 1.1 Noetic !!!*** –– *ROS 2.0 Foxy*
- *2018 : ROS 1.1 Melodic Morenia* –– *ROS 2.0 AA*
- 2017 : ROS 1.1 Lunar Loggerhead
- 2016 : ROS 1.1 Kinetic Kame
- 2015 : ROS 1.1 Jade Turtle
- 2014 : ROS 1.1 Indigo Igloo
- 2014 : ROS Hydro Medusa
- 2012 : ROS Groovy Galapagos
- 2012 : ROS Fuerte
- 2011 : ROS Electric Emys
- 2011 : ROS Diamondback
- 2010 : ROS 1.0 : C Turtle
- 2009 : ROS 0.4
- 2007 : Beginning

Rationales

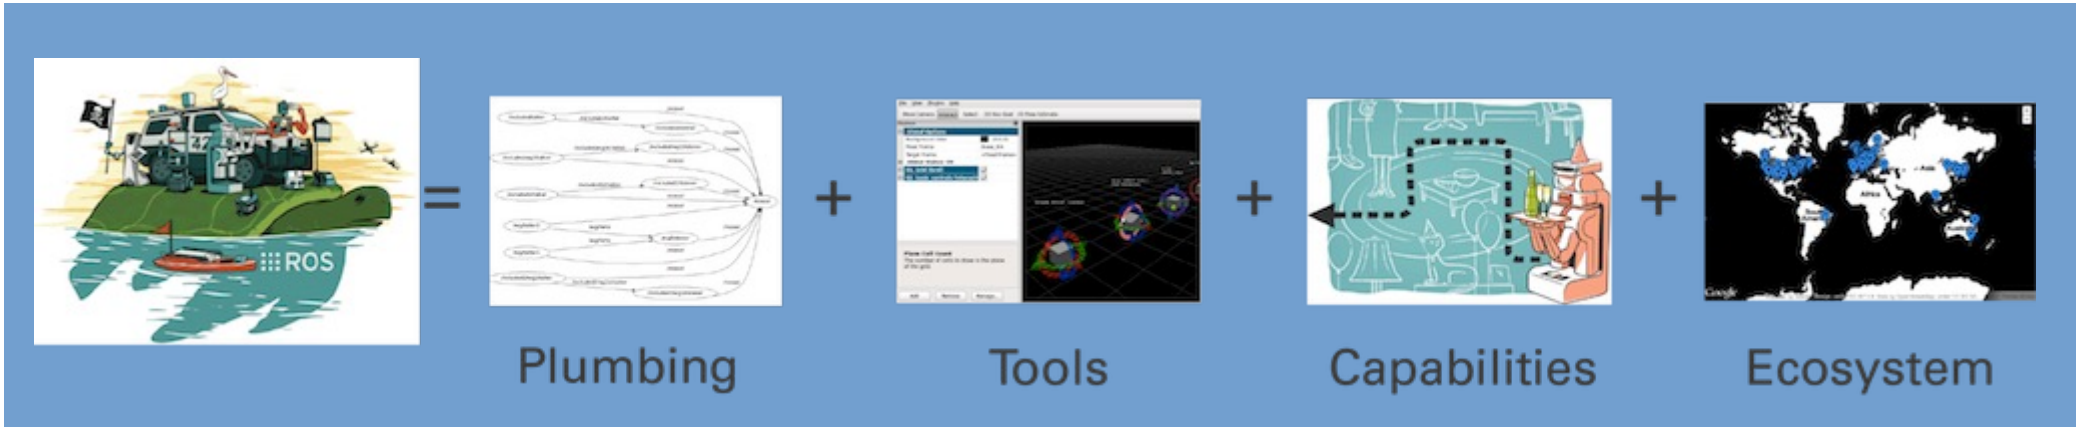

Community

- Distributions
- **Repositories**
- **ROS Wiki**
- Bug Tickets System
- Mailling Lists
- ROS Answers
- Blog

Robot-Specific Features

- Standard Message Definitions for Robots (poses,transforms, vectors, camera...)
- Robot Geometry Library (tf)
- Robot Description Language (KDL, URDF)
- Preemptable Remote Procedure Calls (actions)
- Diagnostics
- Pose Estimation (EKF)
- *Localization*
- *Mapping*
- *Navigation*

Integration

- GAZEBO
- OpenCV
- PCL
- MoveIt
- (Ros Industrial)

ROS1 → ROS2

- C++03, *C++11*
- Python 2
- catkin_make
- Roshell :
  - roscd, rosls,
  - rosmake…
- Custom Communication Framework
- roscore

- **C++11, *C++14, C++17***
- Python **3**
- **ament**_make
- Roshell :
  - ros2 cd, ros2 ls,
  - **ros2 build** …
- **Industrial** Communication Framework
- ~~roscore~~

ROS In a Nutshell

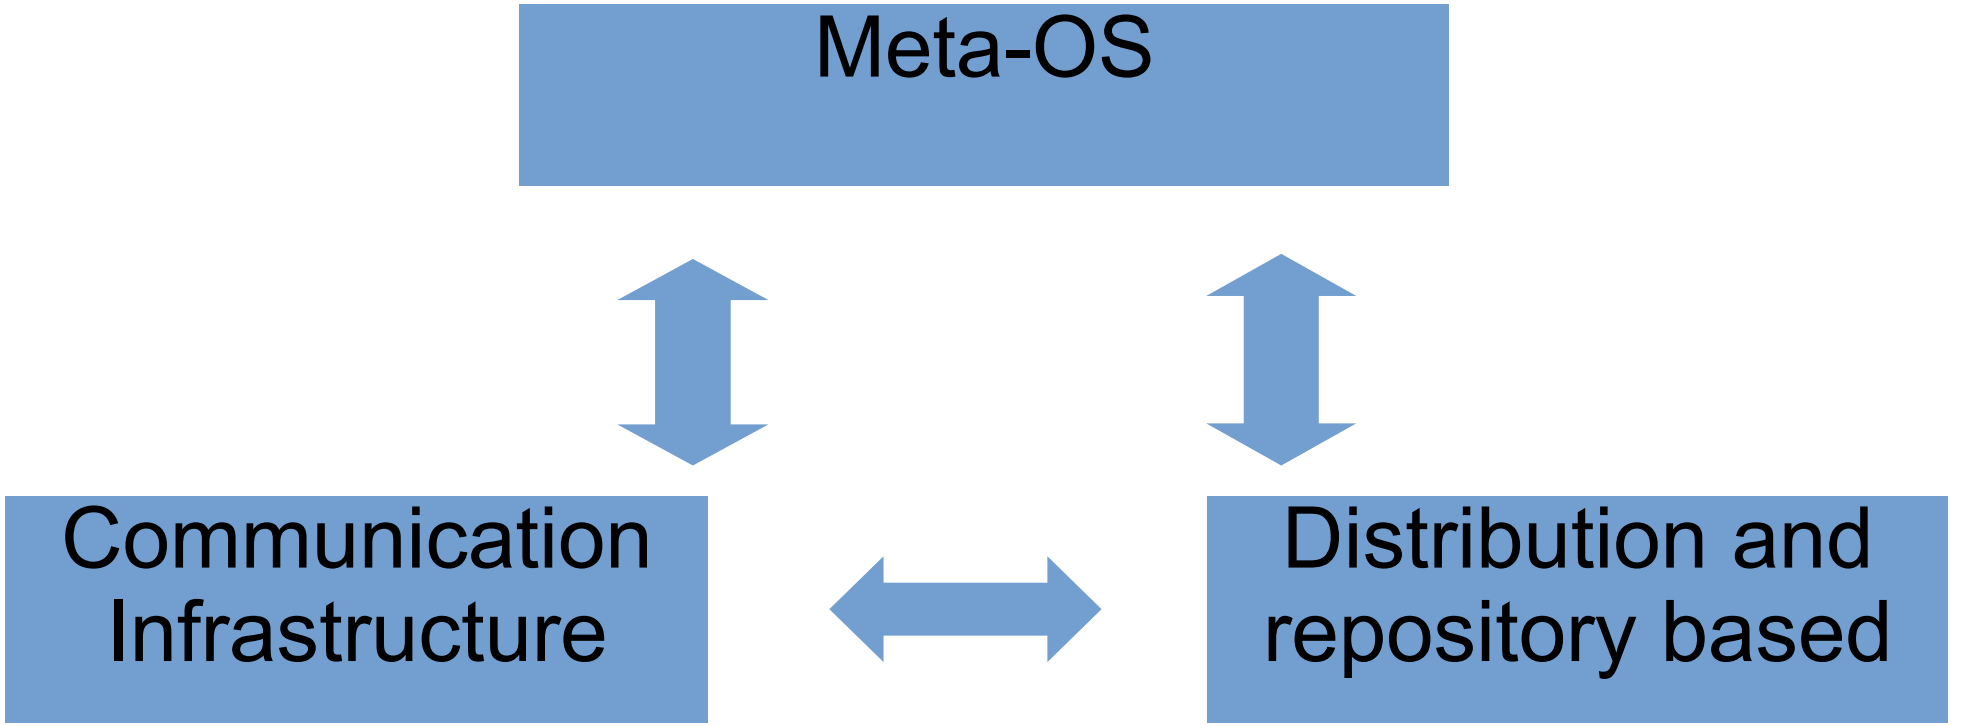

ROS In a Nutshell

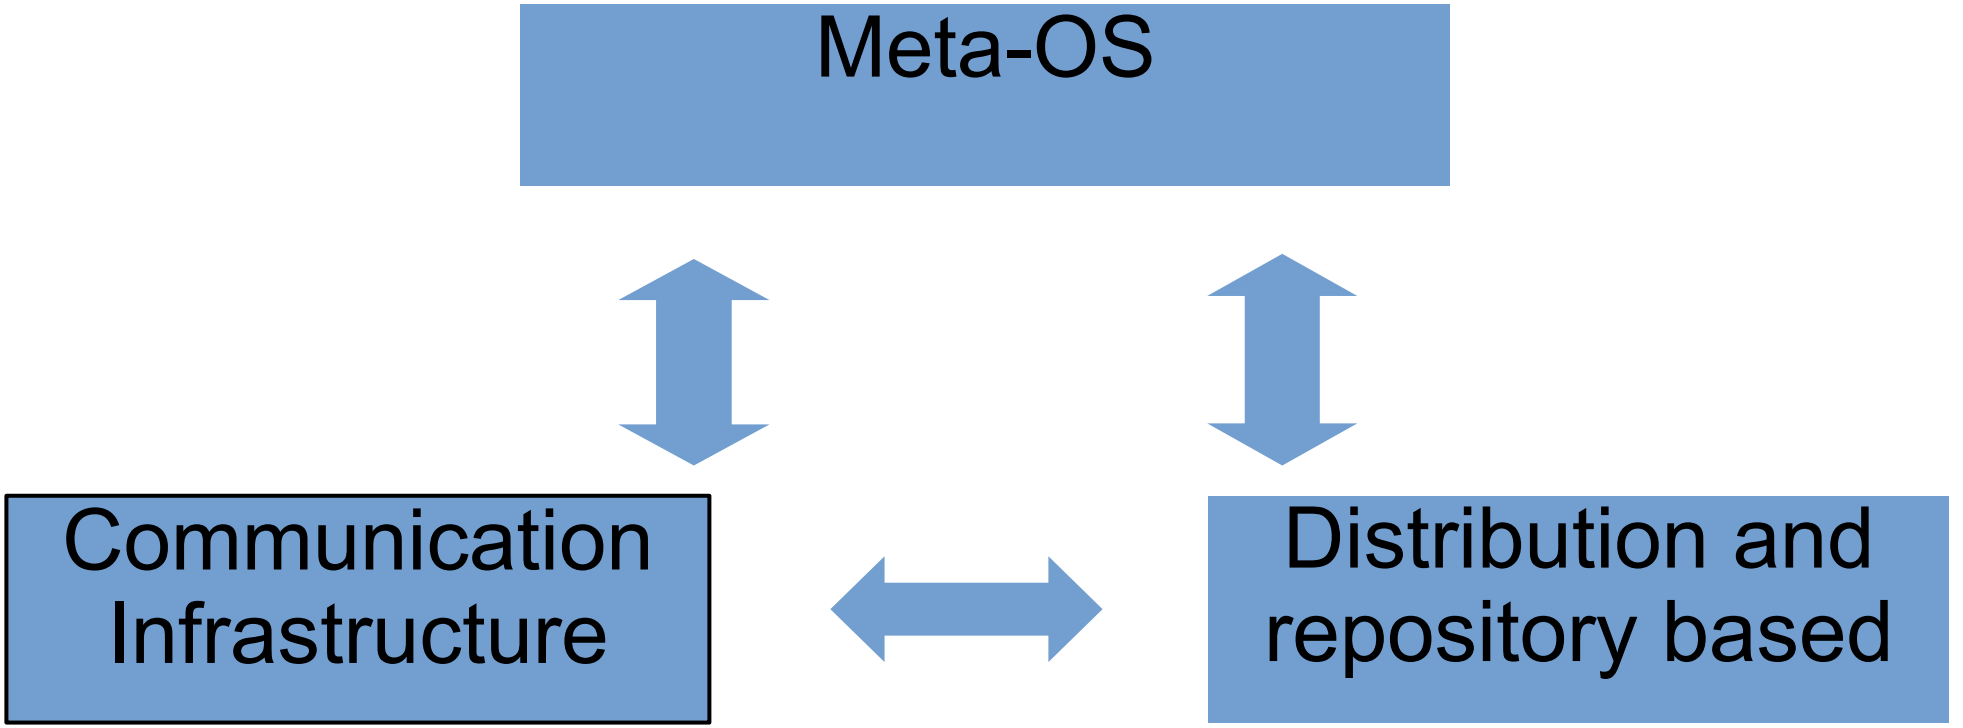

Communications Infrastructure

- publish/subscribe anonymous message passing
- recording and playback of messages
- request/response remote procedure calls
- distributed parameter system

Communications Infrastructure

- Master (XML RPC)
- Node
- Topics
- Messages (IDL,TCP, UDP,Serial)
- Services (RPC)
- Bags
- Parameter Server(Dictionnaries)

Master / Nodes / Topics

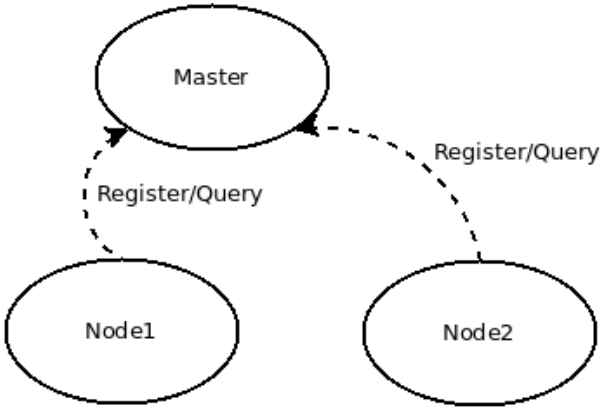

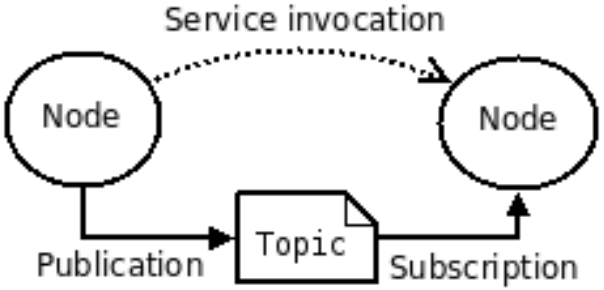

- Master : Information Server
  - roscore
  - Register, query : XMLRPC
- Node : Process
- Nodelet : Threads
- Topic : Transport “socket”
  - TCP, UDP, “*serial*”
  - Protocol and properties
- Service : RPC (xml rpc)

XML RPC

• Distributed / Local	HTTP/Shared Memory
• Parsing	XML
• Remote Procedure Call	Procedures, parameters
• Easy to implement	Perl, Python, Java, Frontier, C/C++, Lisp...

Master / Nodes / Topics : Example

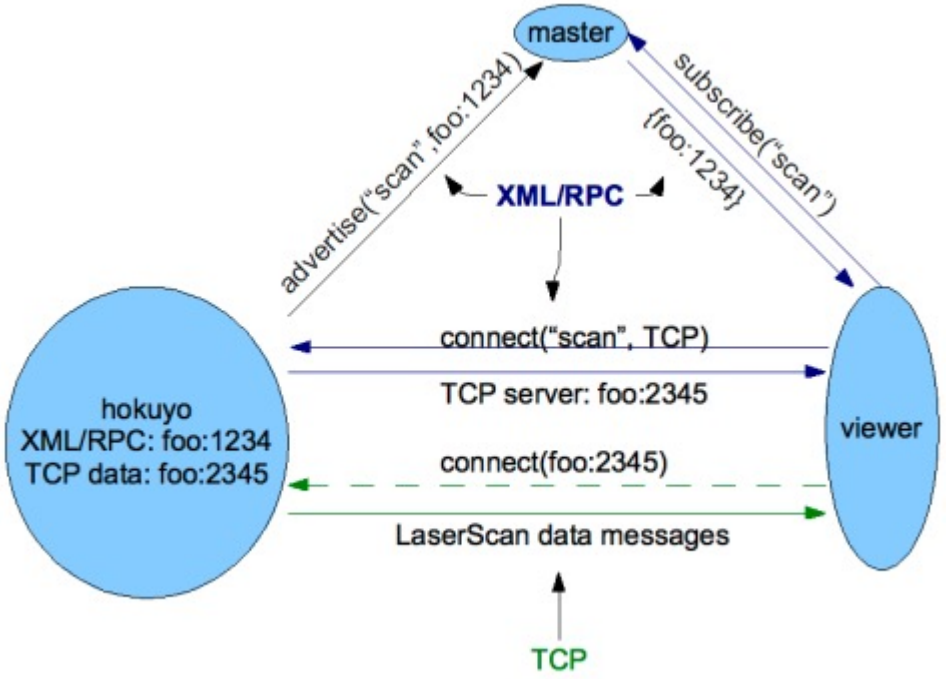

http://wiki.ros.org/ROS/Technical Overview

Distributed Infrastructure

- Master URI
  - roscore
  - ROS_MASTER_URI

- Transport :
  - Supported TCP, UDP
  - Rosserial : rosserial_server → Serial (arduino...)

Graph Resource Names

Nodes, Param, Services …

- base
- relative/name
- /global/name
- ~private/name

Examples:

- / (the global namespace)
- /foo
- /stanford/robot/name
- /wg/node1

Messages

- std_msgs
  - int32, float64, string, float64multiarray…
- common_msgs
  - actionlib_msgs: messages for representing actions.
  - diagnostic_msgs: messages for sending diagnostic data.
  - geometry_msgs: messages for representing common geometric primitives.
  - nav_msgs: messages for navigation.
  - sensor_msgs: messages for representing sensor data.

http://wiki.ros.org/ROS/Higher-Level Concepts

Messages : Examples

- IDL Description

std_msgs/Float64MultiArray	geometry_msgs/Twist	geometry_msgs/Transform	sensor_msgs/Image
std_msgs/MultiArrayLayout layout float64[] data	geometry_msgs/Vector3 linear geometry_msgs/Vector3 angular	geometry_msgs/Vector3 translation geometry_msgs/Quaternion rotation	std_msgs/Header header uint32 height uint32 width string encoding uint8 is_bigendian uint32 step uint8[] data

http://wiki.ros.org/std_msgs
http://wiki.ros.org/common_msgs

Use case ROS : turtlesim

roscore

rosrun turtlesim turtlesim_node

rostopic info /turtle1/pose

rosmsg show /turtle1/pose

rosrun turtlesim turtle_teleop

rostopic pub -1 /turtle1/cmd_vel geometry_msgs/Twist –
‘[1.0, 0.0,0.0]’ ‘[0.0, 0.0, 1.8]’

rostopic pub /turtle1/cmd_vel geometry_msgs/Twist -r 1
– ‘[1.0, 0.0,0.0]’ ‘[0.0, 0.0, 1.8]’

ROS In a Nutshell

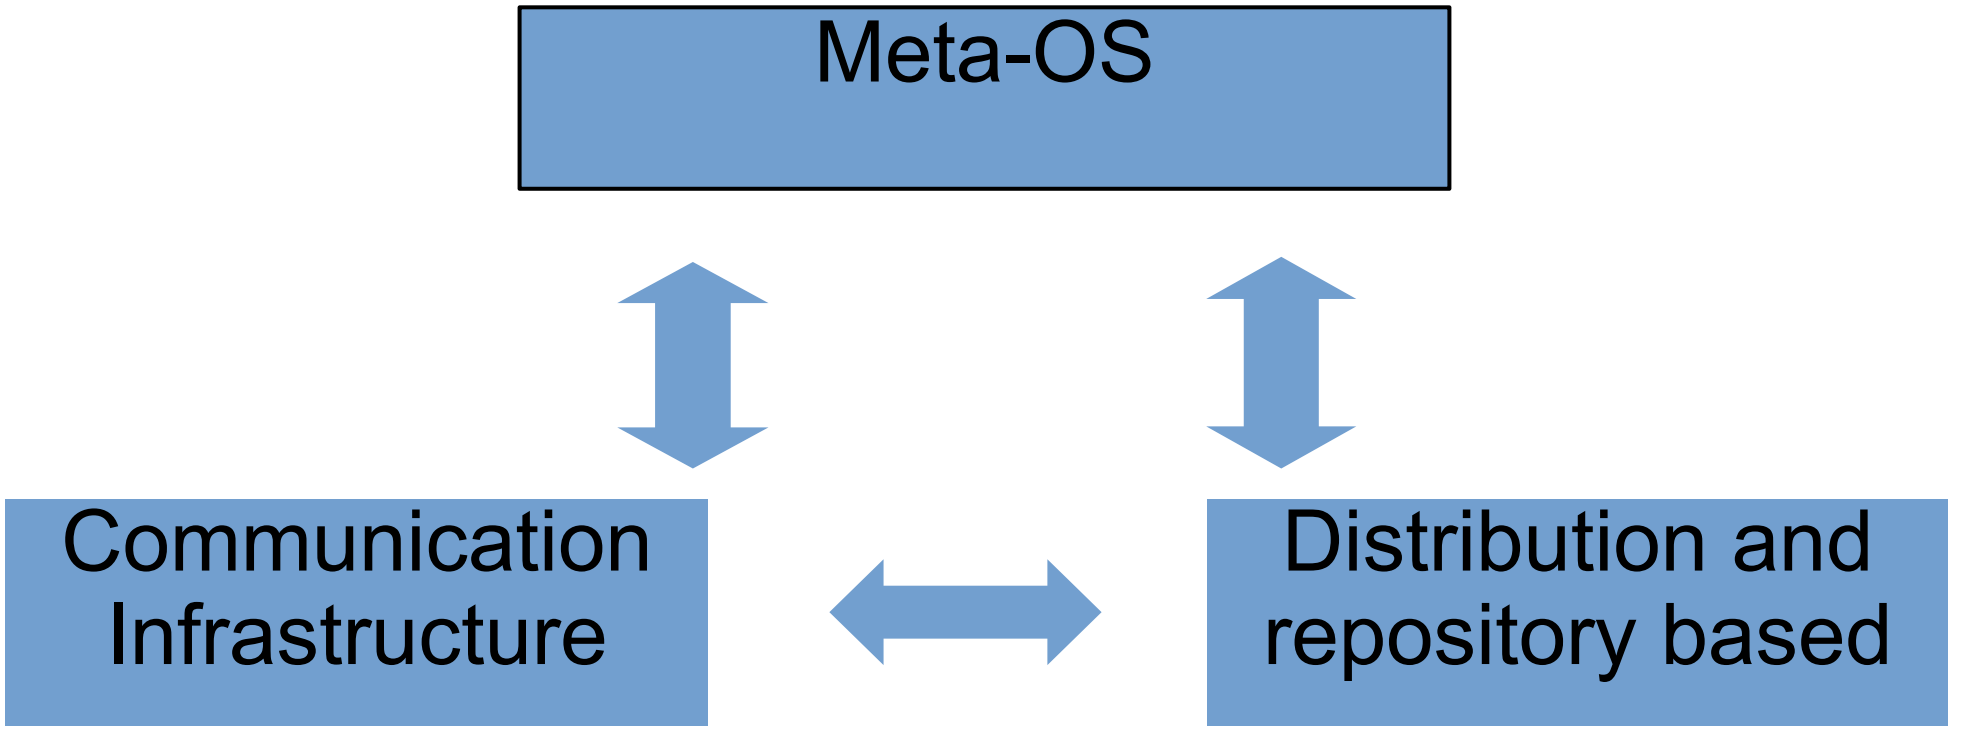

ROS : Meta-Operating System

OS

- Shell
  - cd, ls
- Gestion de paquets
  - apt install, yum install
- Gestion compilation
  - make, cmake

Meta-OS

- ROS Shell
  - roscd, rosls, roslaunch, rosrun…
- Packages Management
  - rosinstall
  - rosdep
- Compilation
  - *rosmake*, catkin_make

ros+shell

- roscd package1 : ros+cd
- rosls package1 : ros+ls
- roscp package1 file path_dest : ros+cp
- rosed : ros+ed(itor) uses $EDITOR Global variable
- roscore : ros+core(server)
- rosgraph
- rosrun package program_node

rostopic

- rostopic list
- rostopic info /topic1
- rostopic type /topic
- rostopic hz /topic1
- rostopic pub /topic1 std_msgs/string “Hello World!”
- rostopic echo /topic1

rosnode

- rosnode list
- rosnode info node1
- rosnode ping node1
- rosnode kill node1
- rosnode machine

rospack

- rospack list
- rospack find package1
- rospack depends1 package1
- rospack depends package1

rosparam

- rosparam list
- rosparam set /param1
- rosparam get /param1
- rosparam load file.yaml
- rosparam dump

rosservice

- rosservice list
- rosservice type serv1
- rosservice args serv1
- rosservice call serv1 arg1:=val

rosmsg/rossrv

- rossrv show srv1

- rosmsg show msg1

roslaunch

- roslaunch package1 file.launch

```
<launch>
  <node name="listener" pkg="beginner_tutorial" type="listener.py"
output="screen"/>

  <node name="talker" pkg="beginner_tutorial" type="talker"
output="screen"/>

</launch>
```

rosbag

- rosbag record topic1 topic2
  - -O filename
  - --node=nodename
  - -a (all)
  - -j (BZ2 compress)
  - --split –duration=30/--size=1024
- rosbag play filename.bag
- rosbag check filename.bag
- rosbag fix filename.bag

Tools : CLI

- CLI : **every thing** can be command line
  - **roscd** : Change Directory in Package (roscd package/localpath)
  - **rosls** : List files in package (rosls package)
  - **rosrun** : execute programs in package (rosrun package program)
  - **roslaunch** : execute a deployment file
  - **catkin_make** : compile packages
  - **rostopic** : management of topics (list, publish, frequency...)
    - rostopic echo /topic; rostopic pub /topic type data
  - **rosnode** : management of topics (list,info...)
  - **rossrv** : management of services (list, info...)
  - **rosmsg** : management of messages (list, info…)
  - **rosbag :** management of topics recording and replying
    - rosbag record -O file -a; rosbag replay file.bag
  - ...

Use Case RosBag

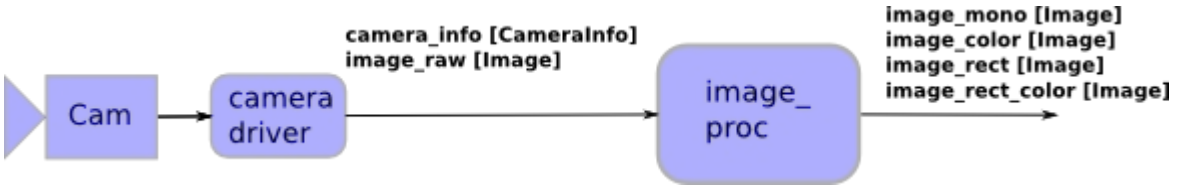

- Nodes : (let run them with rosrun and have a look with rosnode, rostopic)
  - usb_cam/usb_cam_node
  - image_view/image_view image:=/usb_cam/image_raw
- *Node image_proc -> opencv*
- Rosbag usage :
  - rosbag record -O webcam -a
  - rosbag play webcam.bag

Graphical Tools : RQT

- Some usefull tools for data
  - **rqt_graph** : show the topology of nodes
  - **rqt_dep** : show the dependencies of nodes
  - **rqt_plot** : show the data in topics in a plot
  - **rqt_logger_level** : show the log information and manage levels
  - **rqt** : generic ros infrastructure visualisation (plugins)
  - ...

Use case ROS : turtlesim teleop

roscore

rosnode list

rostopic list

rosrun turtlesim turtlesim_node

rosnode list

rostopic list

rosrun turtlesim turtle_teleop

ROS In a Nutshell

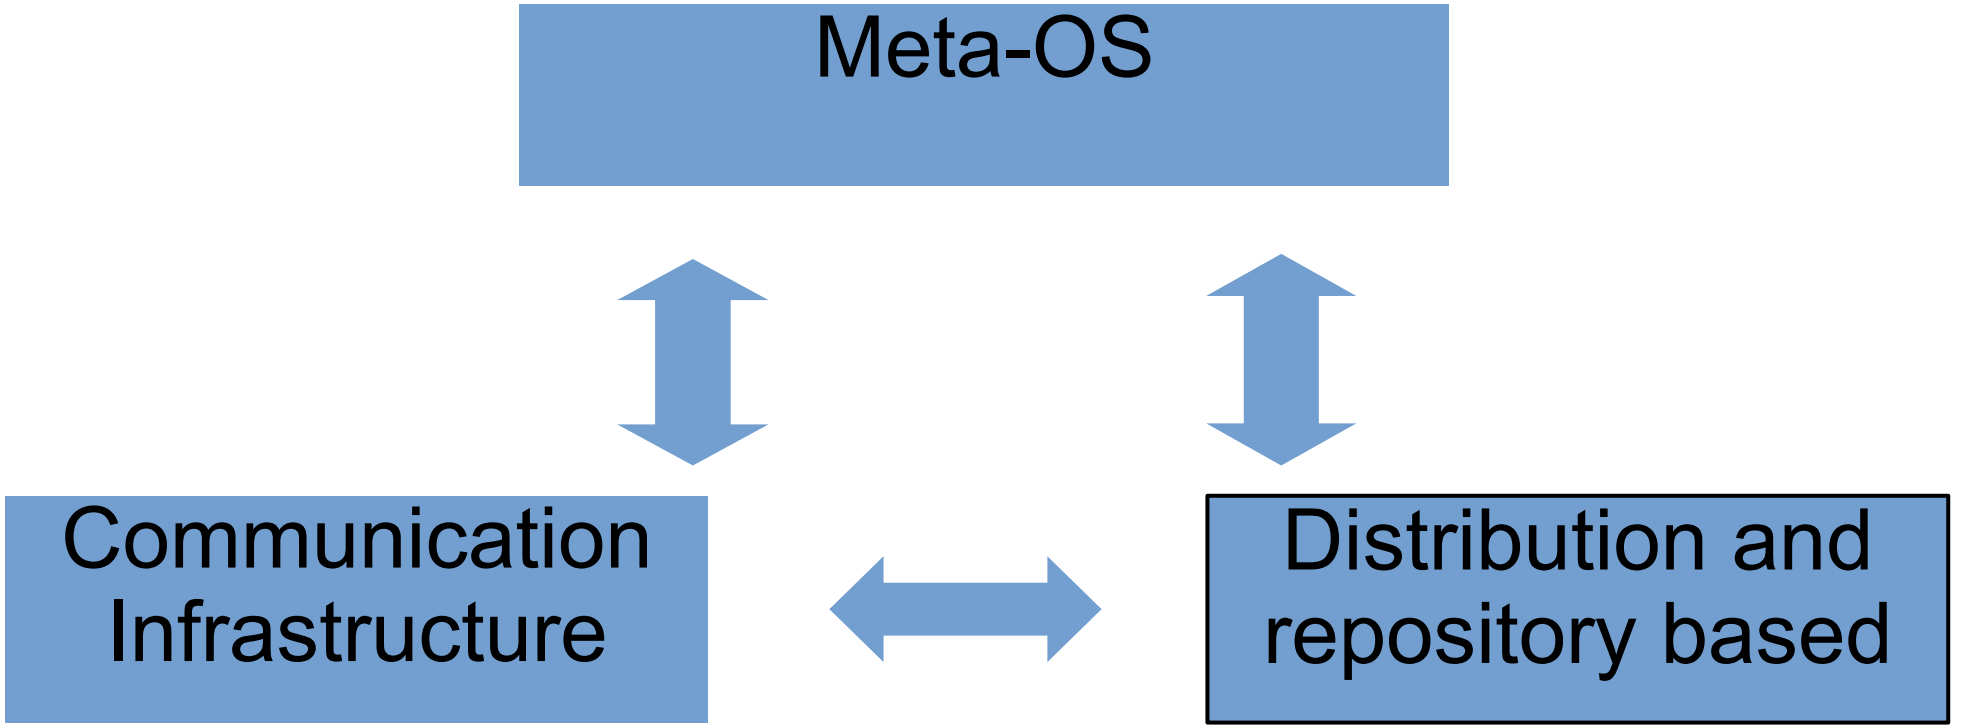

Installing and navigating

> **source /opt/ros/noetic/setup.bash**

> mkdir -p ~/catkin_ws/src

> cd ~/catkin_ws/src

> **catkin_init_workspace**

> cd ../

> **catkin_make**

>echo $ROS_PACKAGE_PATH

> **source devel/setup.bash**

>echo $ROS_PACKAGE_PATH

> rospack find rospy

> rosls rospy

>pwd

> **roscd rospy**

> pwd

http://wiki.ros.org/ROS/Tutorials/InstallingandConfiguringROSEnvironmen
t
http://wiki.ros.org/ROS/Tutorials/NavigatingTheFilesystem

Package creation

- Package.xml
  - Author,
  - License,
  - Dependencies
- CMakeLists.txt
  - Compilation instructions
  - Depends

- *FileSystem Organisation*
- src/
  - CmakeLists.txt
  - package_1/
  - CMakeLists.txt
  - package.xml
  - …
  - package_n/
  - CMakeLists.txt
  - package.xml

- *Tools*
- **catkin_create_pkg** package_1 roscpp rospy std_msgs

- **rospack** depends1 package_1

http://wiki.ros.org/ROS/Tutorials/CreatingPackage

Developing a Node

node_only.py

```
#!/usr/bin/env python
import rospy

if __name__ == '__main__':
    try:
                rospy.init_node('nodename', anonymous=True)
                rate = rospy.Rate(10) # 10hz
                while not rospy.is_shutdown():
                                rate.sleep()

    except rospy.ROSInterruptException:
        pass
```

http://wiki.ros.org/ROS/Tutorials/WritingPublisherSubscriber

Developing a Topic Sub

talker.py

```
#!/usr/bin/env python
import rospy
from std_msgs.msg import String

if __name__ == '__main__':
    try:
                pub = rospy.Publisher('chatter', String, queue_size=10)
                rospy.init_node('talker', anonymous=True)
                rate = rospy.Rate(10) # 10hz
                while not rospy.is_shutdown():
                                hello_str = "hello world %s" %
rospy.get_time()
                                pub.publish(hello_str)
                                rate.sleep()

    except rospy.ROSInterruptException:
        pass
```

http://wiki.ros.org/ROS/Tutorials/WritingPublisherSubscriber

Developing a Topic Sub

listener.py

```
#!/usr/bin/env python
import rospy
from std_msgs.msg import String

def callback(data):
    rospy.loginfo(rospy.get_caller_id()+ "I heard %s",data.data)

if __name__ == '__main__':
    try:
        rospy.init_node('listener', anonymous=True)
        rospy.Subscriber('chatter', String, callback)
        rospy.spin()

    except rospy.ROSInterruptException:
        pass
```

http://wiki.ros.org/ROS/Tutorials/WritingPublisherSubscriber

Custom Message

- IDL :
  Interface Description
  Language

msg/Num.msg

```
int64 num
```

- Compilation

CmakeLists.txt

```
add_message_files(
  FILES
  Num.msg
)
```

- Tools : rosmsg

```
$> rosmsg show beginner_tutorial/Num
```

Custom Service 1/3

- IDL :
  Interface Description
  Language

srv/AddTwoInts.srv

```
int64 a
Int64 b
---
Int64 sum
```

- Compilation

CMakeLists.txt

```
...
add_service_files(
  FILES
  AddTwoInts.srv
)
```

-
-
- Tools : rossrv

```
$> rossrv show beginner_tutorial/AddTwoInts
```

Custom Service 2/3

- **Server Implementation**

```
#!/usr/bin/env python

from beginner_tutorials.srv import AddTwoInts,AddTwoIntsResponse
import rospy

def handle_add_two_ints(req):
    print "Returning [%s + %s = %s]"%(req.a, req.b, (req.a + req.b))
    return AddTwoIntsResponse(req.a + req.b)

def add_two_ints_server():
    rospy.init_node('add_two_ints_server')
    s = rospy.Service('add_two_ints', AddTwoInts, handle_add_two_ints)
    print "Ready to add two ints."
    rospy.spin()

if __name__ == "__main__":
    add_two_ints_server()
```

Custom Service 3/3

- **Client Implementation**

```
#!/usr/bin/env python
import sys
import rospy
from beginner_tutorials.srv import *
def add_two_ints_client(x, y):
    rospy.wait_for_service('add_two_ints')
    try:
        add_two_ints = rospy.ServiceProxy('add_two_ints', AddTwoInts)
        resp1 = add_two_ints(x, y)
        return resp1.sum
    except rospy.ServiceException, e:
        print "Service call failed: %s"%e
def usage():
    return "%s [x y]"%sys.argv[0]
if __name__ == "__main__":
    if len(sys.argv) == 3:
        x = int(sys.argv[1])
        y = int(sys.argv[2])
    else:
        print usage()
        sys.exit(1)
    print "Requesting %s+%s"%(x, y)
    print "%s + %s = %s"%(x, y, add_two_ints_client(x, y))
```

Designing a ROS Software Requirements

- Communication diagram
- Network RPC (Services, Actions)

- No Real-Time
- No Synchronization constraints

Imagine a distributed scenario

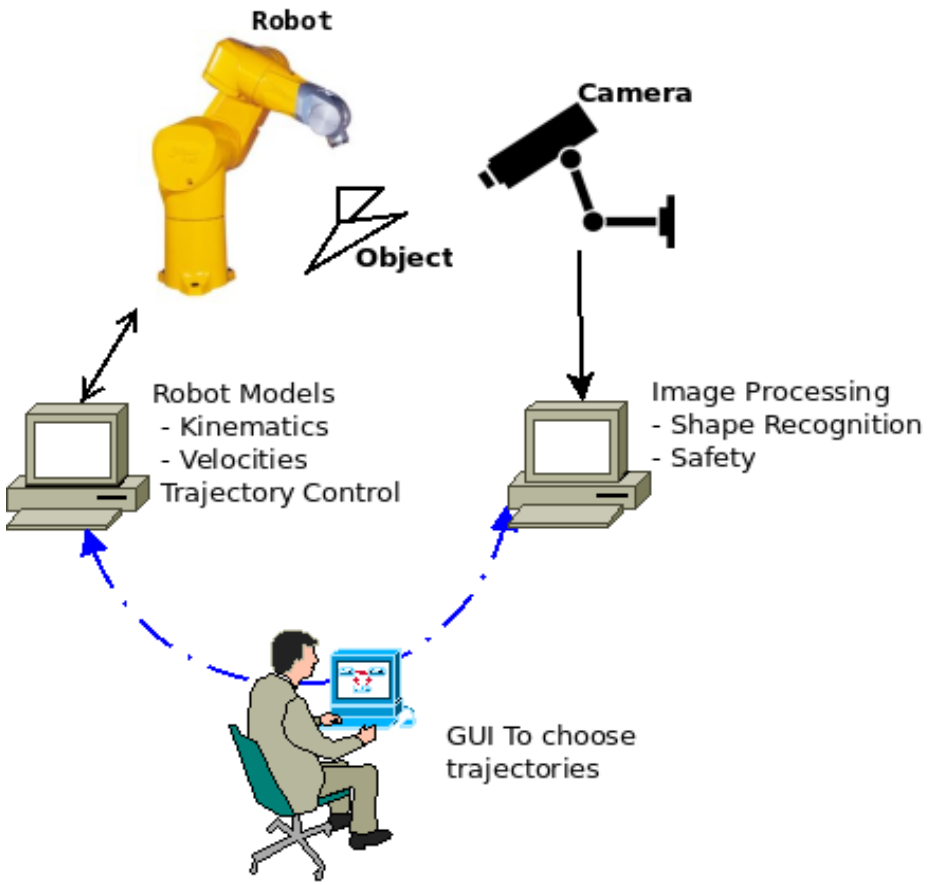

- Propose an implementation
  - Topics
  - Nodes, Master
  - Services (RPC)
  - Messages

ROS In a Nutshell

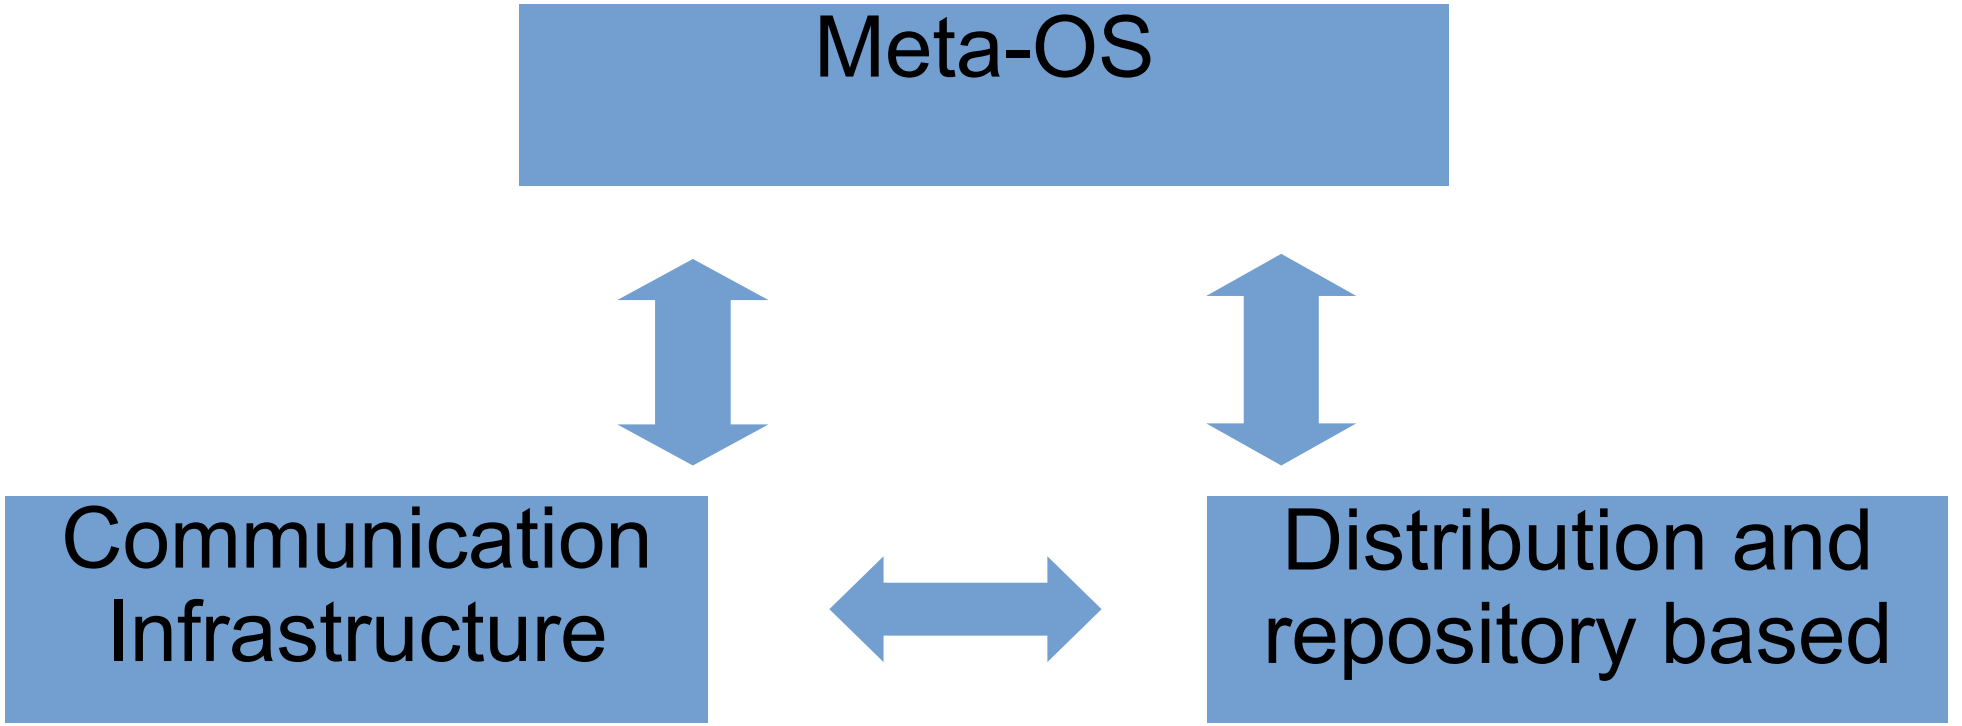

Implementing a robot

Geometry, kinematic and control

Visualization 3D,2D : RViz

- It is a debugging visualization tool for robot
  - Sensor values
  - Visualize SLAM
  - Visualize 3D state of the robot
  - ...

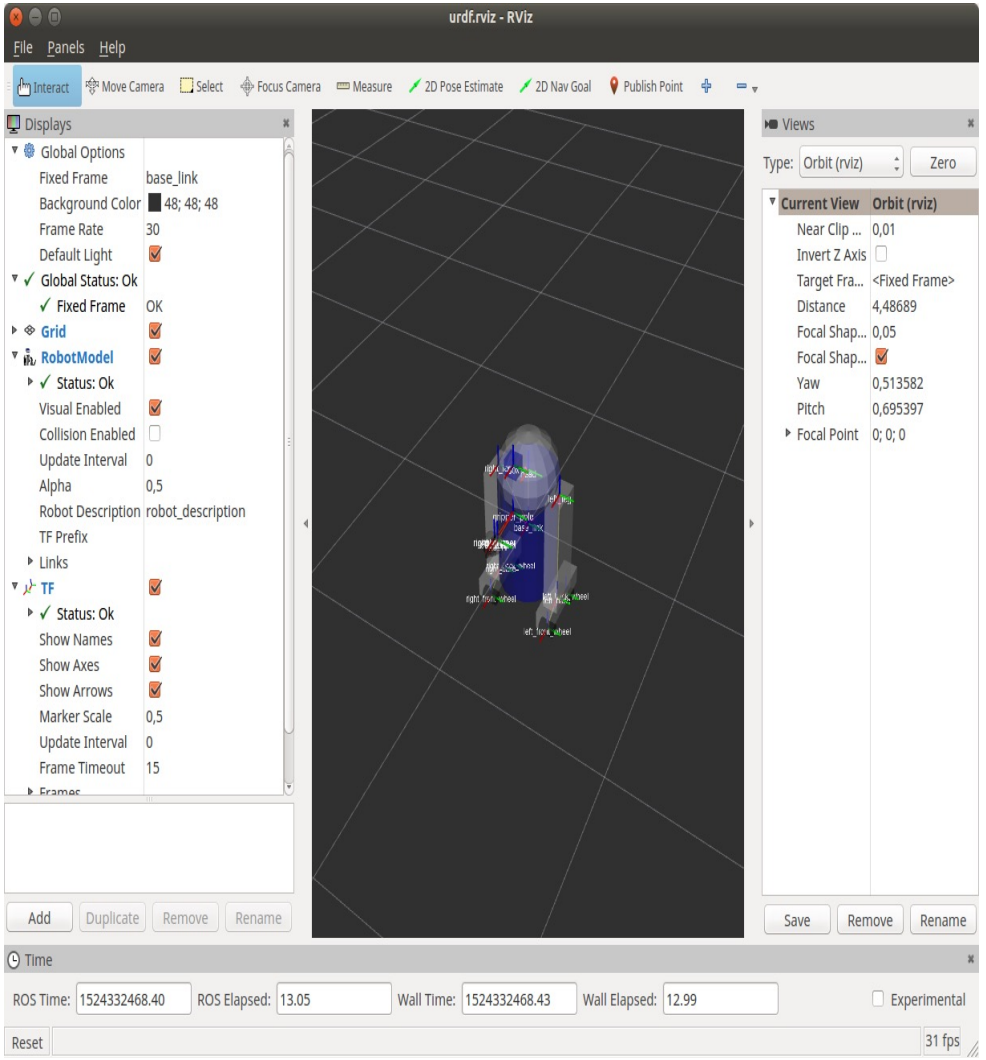

tf : Transform

- Position
- Rotation (quaternion)
  - x*cos(a/2) y*cos(a/2) z*cos(a/2) sin(a/2)
  - Roll Pitch Yaw : RPY(r, p, y)

http://wiki.ros.org/tf/Tutorials/Introduction to tf

http://wiki.ros.org/tf/Tutorials/Writing a tf broadcaster

tf

```
#!/usr/bin/env python
import roslib
roslib.load_manifest('learning_tf')
import rospy
import tf
import turtlesim.msg
def handle_turtle_pose(msg, turtlename):
    br = tf.TransformBroadcaster()
    br.sendTransform((msg.x, msg.y, 0),
                     tf.transformations.quaternion_from_euler(0, 0,
msg.theta),
                     rospy.Time.now(),
                     turtlename,
                     "world")
if __name__ == '__main__':
    rospy.init_node('turtle_tf_broadcaster')
    turtlename = rospy.get_param('~turtle')
    rospy.Subscriber('/%s/pose' % turtlename,
                     turtlesim.msg.Pose,
                     handle_turtle_pose,
                     turtlename)
    rospy.spin()
```

Robot Modeling : URDF

XML Specifications

- <link>
  - Describes the kinematic and dynamic properties of a link.
- <transmission>
  - Transmissions link actuators to joints and represents their mechanical coupling
- <joint>
  - Describes the kinematic and dynamic properties of a joint.
- <gazebo>
  - Describes simulation properties, such as damping, friction, etc
- <sensor>
  - Describes a sensor, such as a camera, ray sensor, etc
- <model_state>
  - Describes the state of a model at a certain time
- <model>
  - Describes the kinematic and dynamic properties of a robot structure.

ROS URDF

Universal Robotic Description Format

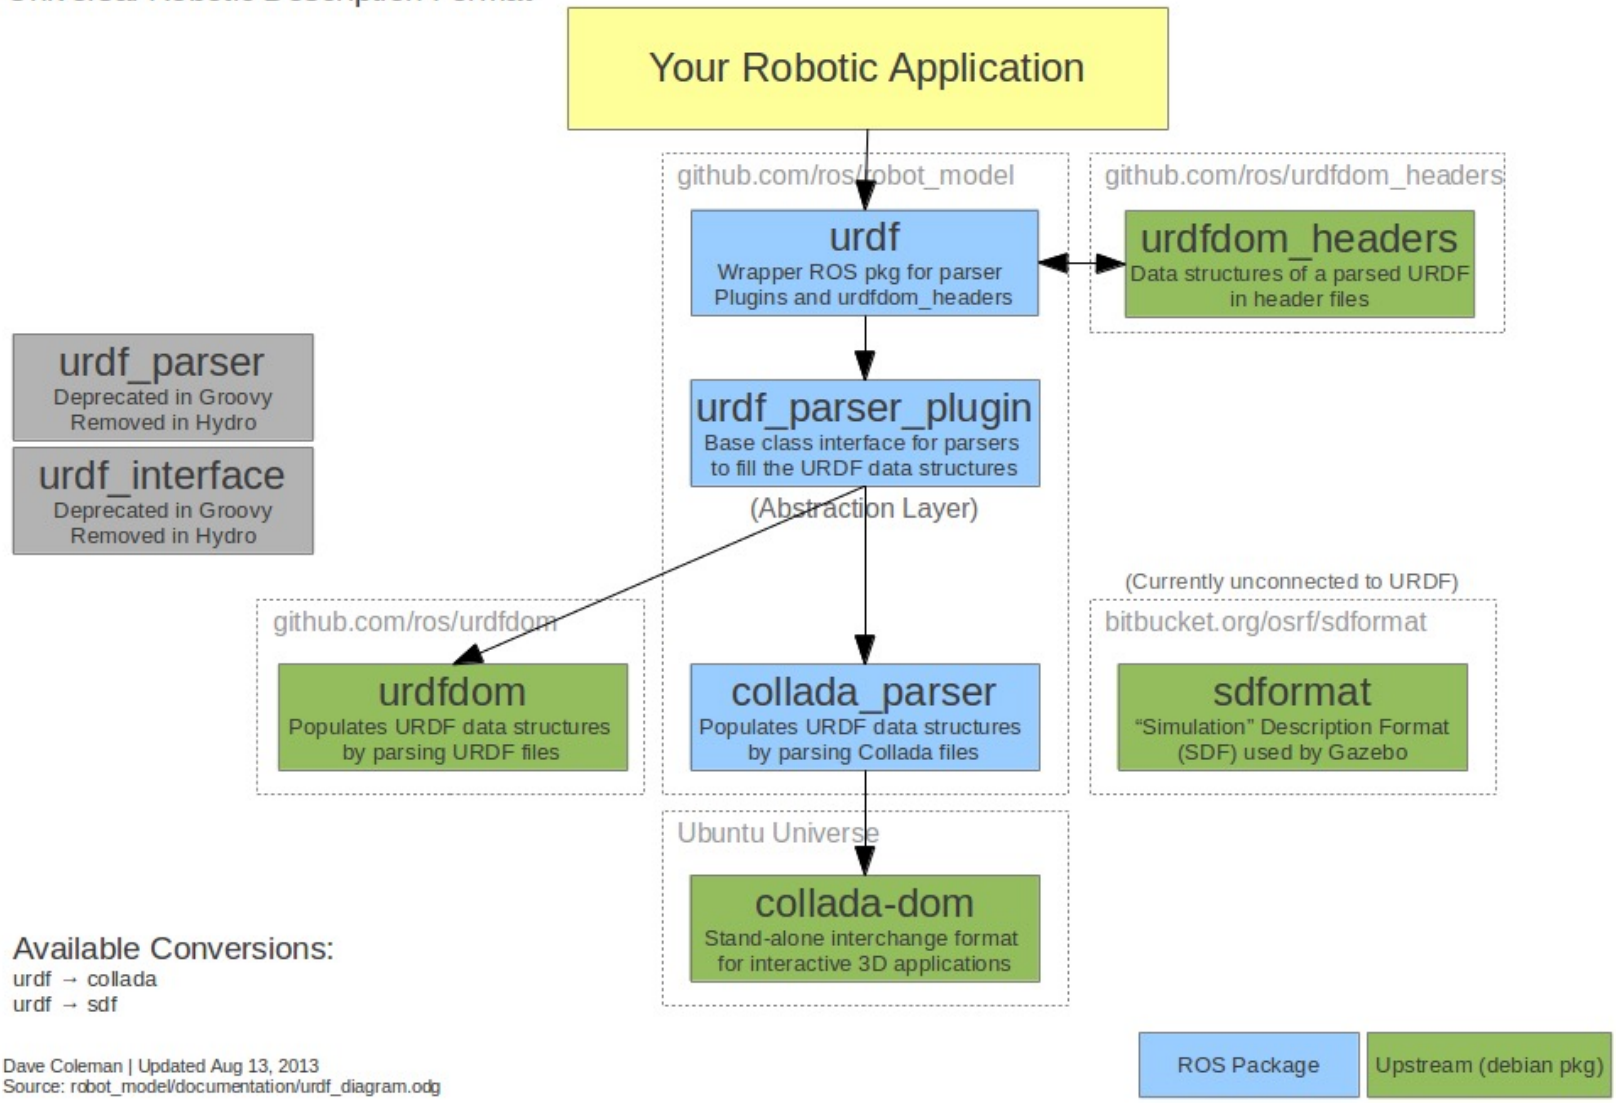

http://wiki.ros.org/urdf

URDF : Links and Joints

```
<robot name="test_robot">
  <link name="link1" />
  <link name="link2" />
  <link name="link3" />
  <link name="link4" />

  <joint name="joint1" type="continuous">
    <parent link="link1"/>
    <child link="link2"/>
  </joint>

  <joint name="joint2" type="continuous">
    <parent link="link1"/>
    <child link="link3"/>
  </joint>

  <joint name="joint3" type="continuous">
    <parent link="link3"/>
    <child link="link4"/>
  </joint>
</robot>
```

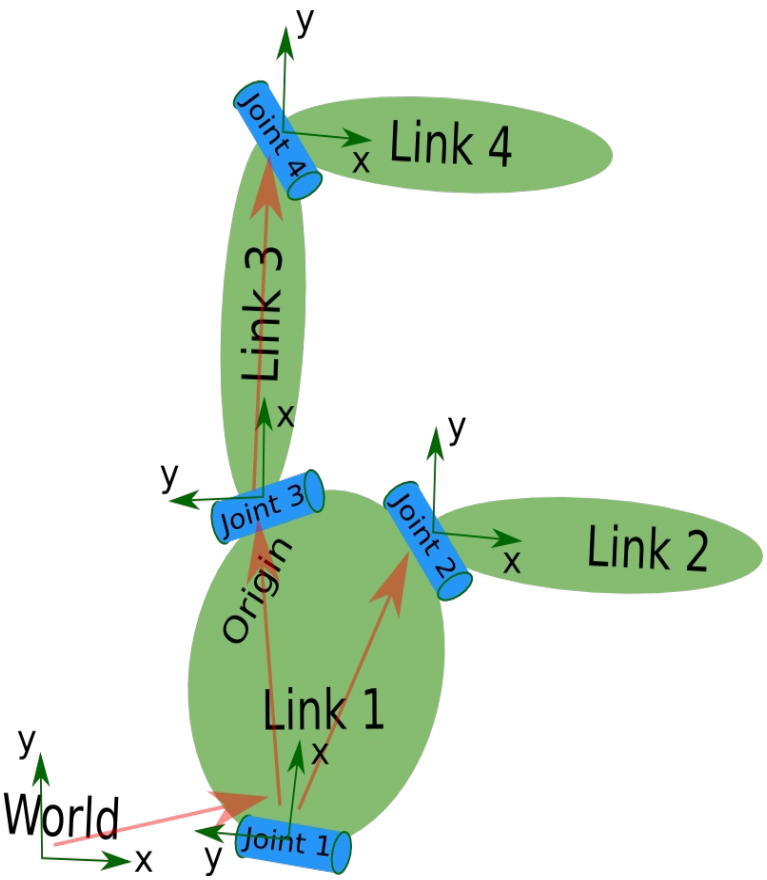

http://wiki.ros.org/urdf/Tutorials/Create your own urdf file

http://wiki.ros.org/urdf/Tutorials/Parse a urdf file

http://wiki.ros.org/urdf/Tutorials/Building a Movable Robot Model with URDF

URDF : Shapes

- 1 shape

roscd urdf_tutorial
roslaunch urdf_tutorial display.launch model:=urdf/01-myfirst.urdf

```
<?xml version="1.0"?>
<robot name="myfirst">
 <link name="base_link">
  <visual>
   <geometry>
    <cylinder length="0.6" radius="0.2"/>
   </geometry>
  </visual>
 </link>
</robot>
```

- Multiple shapes

02-multipleshapes.urdf

```
<?xml version="1.0"?>
<robot name="multipleshapes">
 <link name="base_link">
  <visual>
   <geometry>
    <cylinder length="0.6" radius="0.2"/>
   </geometry>
  </visual>
 </link>
 <link name="right_leg">
  <visual>
   <geometry>
    <box size="0.6 0.1 0.2"/>
   </geometry>
  </visual>
 </link>
 <joint name="base_to_right_leg" type="fixed">
  <parent link="base_link"/>
  <child link="right_leg"/>
 </joint>
</robot>
```

- Origin

03-origins.urdf

```
...
  <origin rpy="0 1.57075 0" xyz="0 0 -0.3"/>
...
```

http://wiki.ros.org/urdf/Tutorials/Building a Visual Robot Model with URDF from Scratch

URDF : Physics and Collisions

- Materials

  04-materials.urdf

- Collision
- Inertial

  07-physics.urdf

- Visual

  05-visual.urdf

```
...
 <material name="blue">
   <color rgba="0 0 0.8 1"/>
 </material>
 <material name="white">
   <color rgba="1 1 1 1"/>
 </material>
 <link name="base_link">
   <visual>
                        ...
     <material name="blue"/>
                        ...
   </visual>
...


 <link name="link1">
   <collision>
     <origin xyz="0 0 ${height1/2}" rpy="0 0 0"/>
     <geometry>
       <box size="${width} ${width} ${height1}"/>
     </geometry>
   </collision>
   <visual>
     <origin xyz="0 0 ${height1/2}" rpy="0 0 0"/>
     <geometry>
       <box size="${width} ${width} ${height1}"/>
     </geometry>
     <material name="orange"/>
   </visual>
   <inertial>
     <origin xyz="0 0 1" rpy="0 0 0"/>
     <mass value="1"/>
     <inertia
       ixx="1.0" ixy="0.0" ixz="0.0"
       iyy="1.0" iyz="0.0"
       izz="1.0"/>
   </inertial>
 </link>
```

http://wiki.ros.org/urdf/Tutorials/Adding Physical and Collision Properties to a URDF Model

URDF : Joints

- Head

```
<joint name="head_swivel" type="continuous">
  <parent link="base_link"/>
  <child link="head"/>
  <axis xyz="0 0 1"/>
  <origin xyz="0 0 0.3"/>
</joint>
```

- Gripper

```
<joint name="left_gripper_joint" type="revolute">
  <axis xyz="0 0 1"/>
  <limit effort="1000.0" lower="0.0" upper="0.548" velocity="0.5"/>
  <origin rpy="0 0 0" xyz="0.2 0.01 0"/>
  <parent link="gripper_pole"/>
  <child link="left_gripper"/>
</joint>

<joint name="gripper_extension" type="prismatic">
  <parent link="base_link"/>
  <child link="gripper_pole"/>
  <limit effort="1000.0" lower="-0.38" upper="0" velocity="0.5"/>
  <origin rpy="0 0 0" xyz="0.19 0 0.2"/>
</joint>
```

http://wiki.ros.org/urdf/Tutorials/Building a Movable Robot Model with URDF

URDF : Gazebo

- links

```
<gazebo reference="link2">
  <mu1>0.2</mu1>
  <mu2>0.2</mu2>
  <material>Gazebo/Black</material>
 </gazebo>
```

- joints

```
<joint name="joint2" type="continuous">
  <parent link="link2"/>
  <child link="link3"/>
  <origin xyz="0 ${width} ${height2 - axel_offset*2}" rpy="0 0 0"/>
  <axis xyz="0 1 0"/>
  <dynamics damping="0.7"/>
</joint>
```

Name	Type
material	value
gravity	bool
dampingFactor	double
maxVel	double
minDepth	double
mu1	double
mu2	
fdir1	string
kp	double
kd	
selfCollide	bool
maxContacts	int
laserRetro	double

Name	Type
stopCfm	double
stopErp	
provideFeedback	bool
implicitSpringDamper	bool
cfmDamping	
fudgeFactor	double

URDF : Gazebo Ros Control

Controllers → controller_manager spawner

- effort_controllers
  - JointEffortController
  - JointPositionController
  - JointVelocityController
- joint_state_controller
  - JointStateController
- position_controllers
  - JointPositionController
- velocity_controllers
  - JointVelocityController

Config File .yaml → rosparam

- Loaded in .launch

-
```
<gazebo>
  <plugin name="gazebo_ros_control"
filename="libgazebo_ros_control.so">
    <robotNamespace>/</robotNamespace>
  </plugin>
</gazebo>
```

```
# Publish all joint states -----------------------------------
 joint_state_controller:
   type: joint_state_controller/JointStateController
   publish_rate: 50
 # Position Controllers ---------------------------------------
 joint1_position_controller:
   type: effort_controllers/JointPositionController
   joint: joint1
   pid: {p: 100.0, i: 0.01, d: 10.0}
 joint2_position_controller:
   type: effort_controllers/JointPositionController
   joint: joint2
   pid: {p: 100.0, i: 0.01, d: 10.0}
```

```
 <node name="controller_spawner" pkg="controller_manager" type="spawner"
respawn="false"
   output="screen" args="joint1_position_controller joint2_position_controller
joint_state_controller"/>
```

http://wiki.ros.org/ros_control#Hardware_Interface

http://gazebosim.org/tutorials/?tut=ros_control

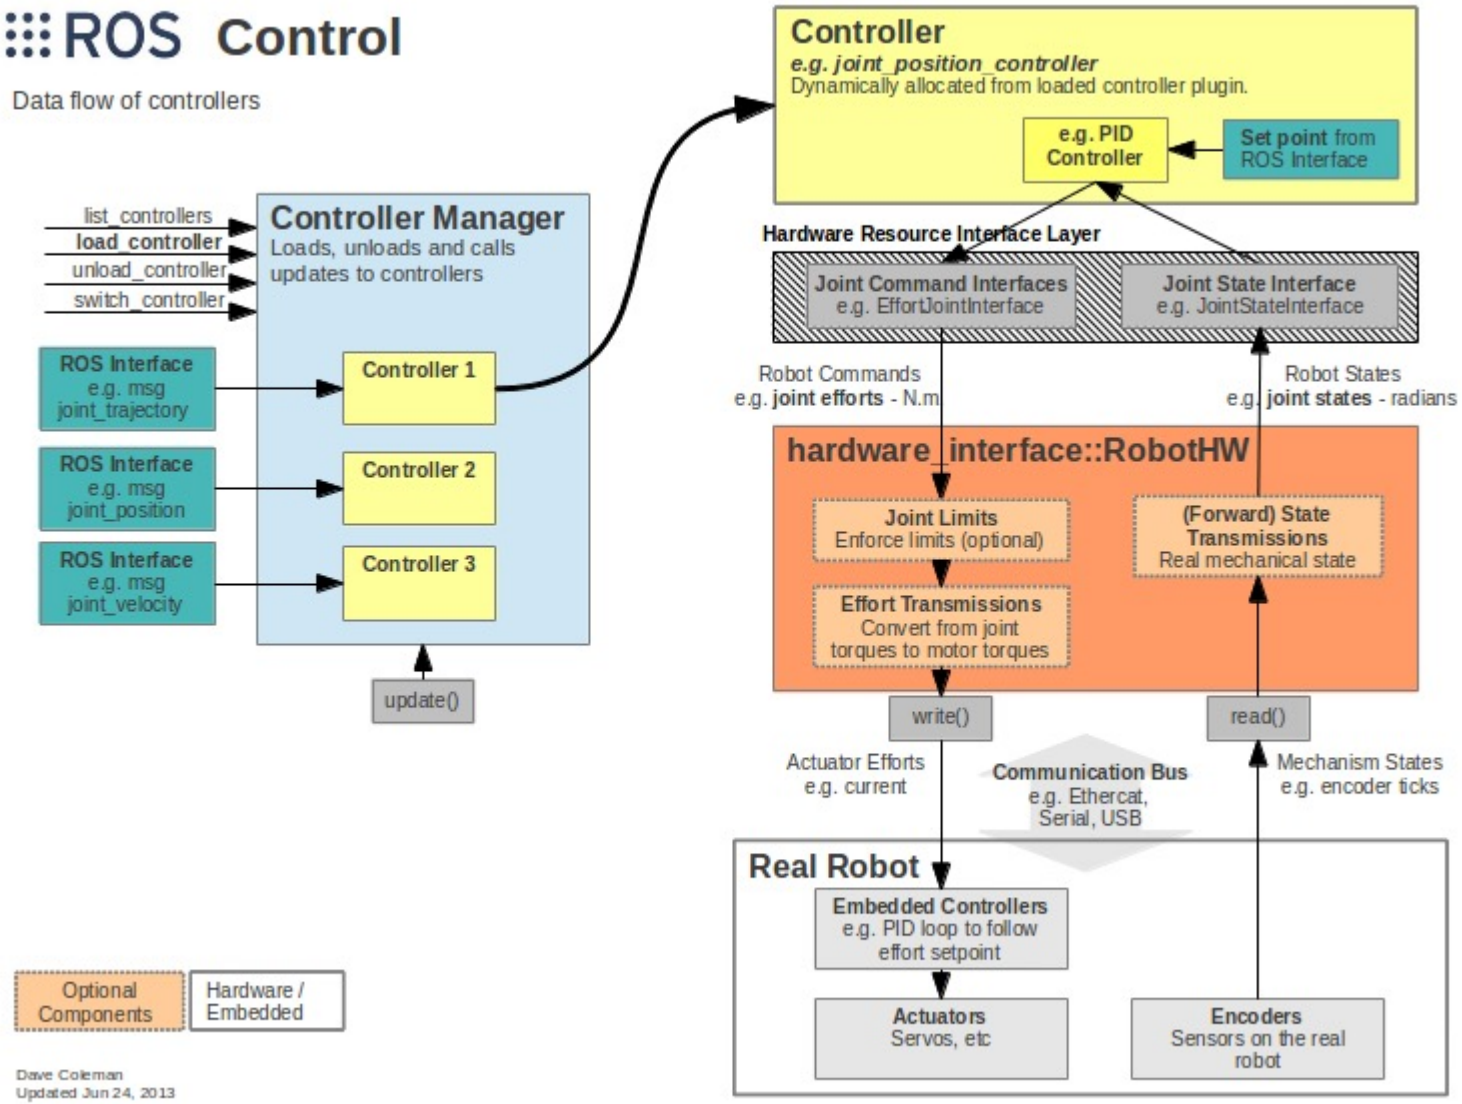
ROS Control
Data flow of controllers
Controller
e.g. joint_position_controller
Dynamically allocated from loaded controller plugin.
e.g. PID Controller
Set point from ROS Interface
Hardware Resource Interface Layer
Joint Command Interfaces
e.g. EffortJointInterface
Joint State Interface
e.g. JointStateInterface
Robot Commands
e.g. joint efforts - N.m
Robot States
e.g. joint states - radians
hardware_interface::RobotHW
Joint Limits
Enforce limits (optional)
Effort Transmissions
Convert from joint torques to motor torques
(Forward) State Transmissions
Real mechanical state
write()
read()
Actuator Efforts
e.g. current
Communication Bus
e.g. Ethercat, Serial, USB
Mechanism States
e.g. encoder ticks
Real Robot
Embedded Controllers
e.g. PID loop to follow effort setpoint
Actuators
Servos, etc
Encoders
Sensors on the real robot
list_controllers
load_controller
unload_controller
switch_controller
Controller Manager
Loads, unloads and calls updates to controllers
ROS Interface
e.g. msg
joint_trajectory
ROS Interface
e.g. msg
joint_position
ROS Interface
e.g. msg
joint_velocity
Controller 1
Controller 2
Controller 3
update()
Optional Components
Hardware / Embedded
Dave Coleman
Updated Jun 24, 2013

URDF – Transmission & Control

Hardware Interfaces

- Joint Command Interfaces
  - EffortJointInterface
  - VelocityJointInterface
  - PositionJointInterface
- Joint State Interfaces
- Actuator Command Interfaces
  - EffortActuatorInterface
  - VelocityActuatorInterface
  - PositionActuatorInterface

…

```
<joint name="head_swivel" type="continuous">
  <parent link="base_link"/>
  <child link="head"/>
  <axis xyz="0 0 1"/>
  <origin xyz="0 0 ${bodylen/2}"/>
  <limit effort="30" velocity="1.0"/>
</joint>
...
 <transmission name="head_swivel_trans">
  <type>transmission_interface/SimpleTransmission</type>
  <actuator name="$head_swivel_motor">
    <mechanicalReduction>1</mechanicalReduction>
  </actuator>
  <joint name="head_swivel">
<hardwareInterface>PositionJointInterface</hardwareInterface>
  </joint>
</transmission>
```

- type: "position_controllers/JointPositionController"
- joint: head_swivel

[http://wiki.ros.org/urdf/Tutorials/Using a URDF in Gazebo](http://wiki.ros.org/urdf/Tutorials/Using%20a%20URDF%20in%20Gazebo)

URDF : Sensor examples

- Supported descriptions :
  - Camera
  - Ray
- Proposal Descriptions
  - IMU
  - Magnetometer
  - Gps
  - Contact
  - Force Torque
  - Sonar
  - Rfidtag
  - Rfid

-
```
<sensor name="my_ray_sensor" update_rate="20">
  <parent link="optical_frame_link_name"/>
   <origin xyz="0 0 0" rpy="0 0 0"/>
   <ray>
     <horizontal samples="100" resolution="1"
min_angle="-1.5708" max_angle="1.5708"/>
     <vertical samples="1" resolution="1" min_angle="0"
max_angle="0"/>
   </ray>
</sensor>
```

-
```
<sensor name="my_camera_sensor"
update_rate="20">
   <parent link="optical_frame_link_name"/>
   <origin xyz="0 0 0" rpy="0 0 0"/>
   <camera>
     <image width="640" height="480"
hfov="1.5708" format="RGB8" near="0.01"
far="50.0"/>
   </camera>
 </sensor>
```

http://wiki.ros.org/urdf/XML/sensor
http://wiki.ros.org/urdf/XML/sensor/proposals

R2D2 – From URDF to Gazebo

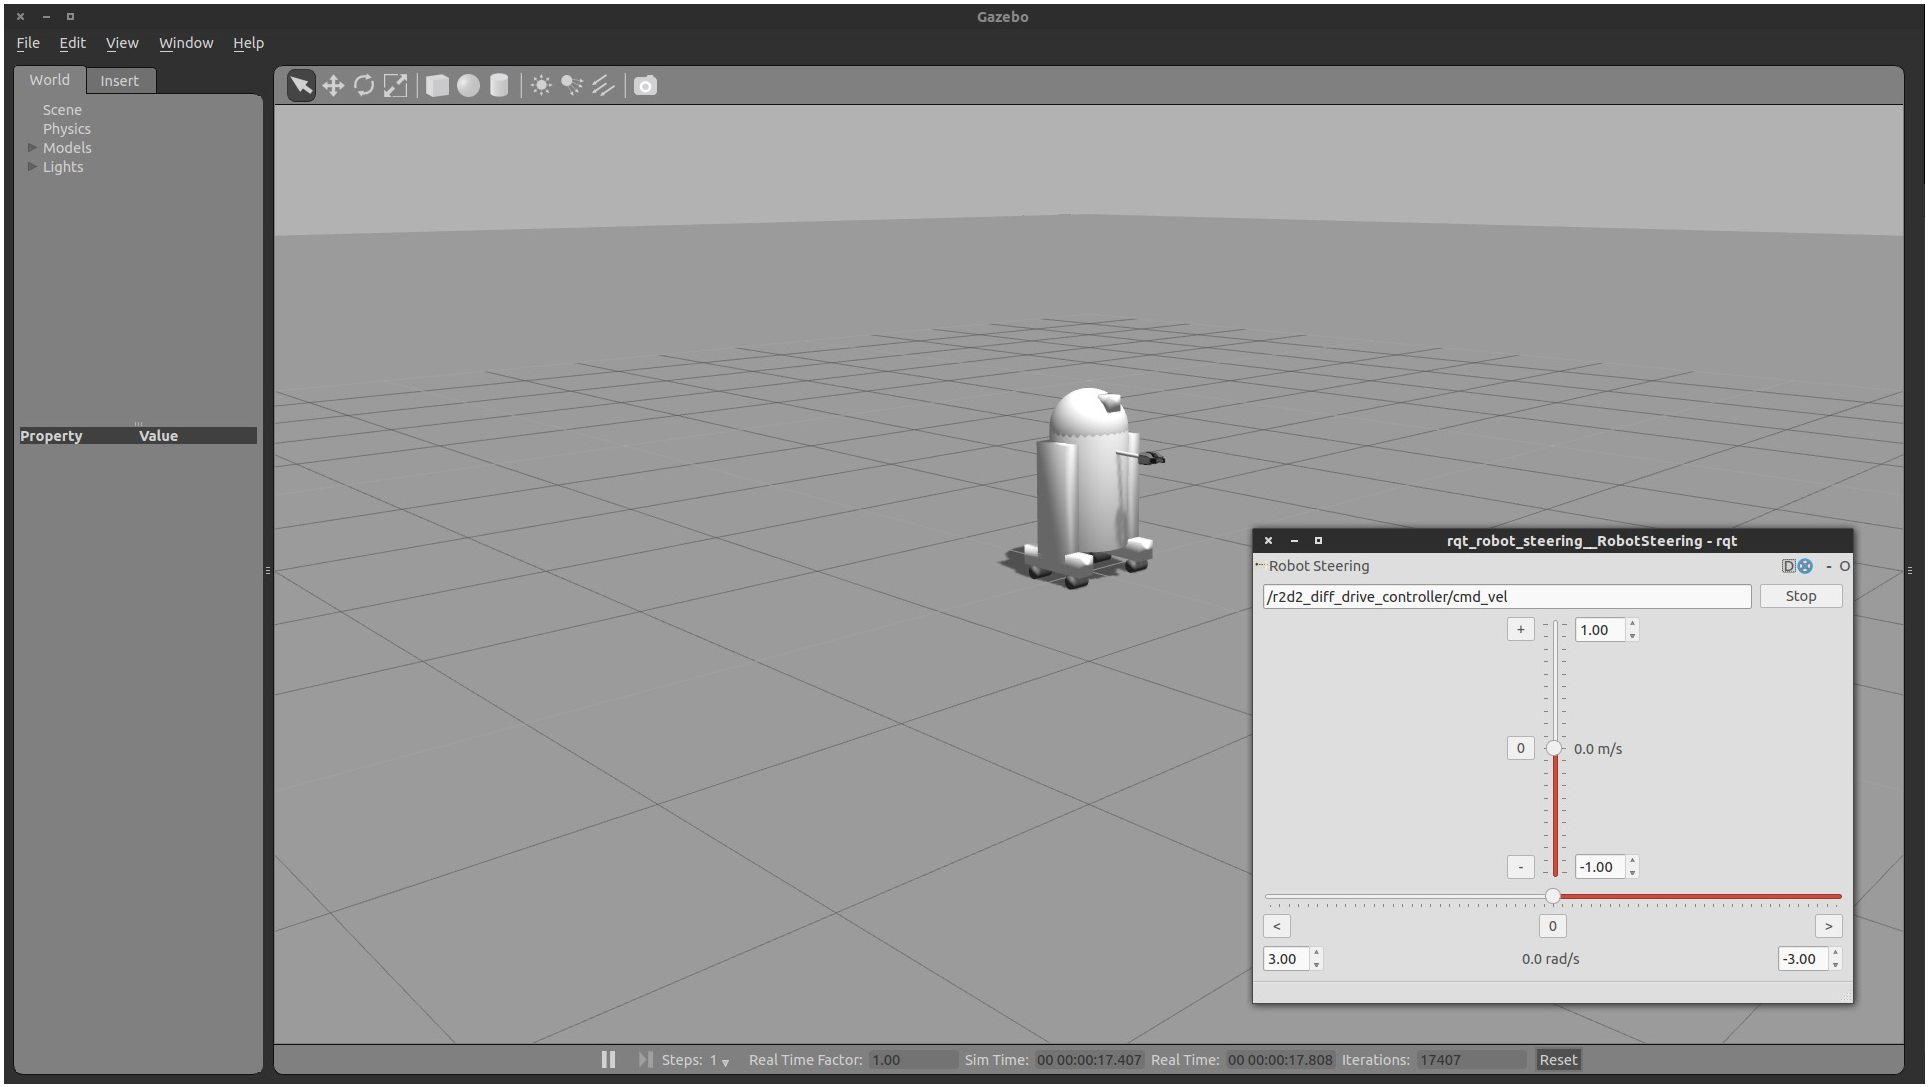

http://wiki.ros.org/urdf/Tutorials/Using a URDF in Gazebo

References

- wiki.ros.org
- cmake.org
- design.ros2.org

• Robotics Control Softwares

- *Ludovic Saint-Bauzel (saintbauzel@isir.upmc.fr)*

- *2022*