
Electrode Placement

Right Arm

Place one electrode on the inner surface of your right forearm, equidistant from the wrist and elbow.

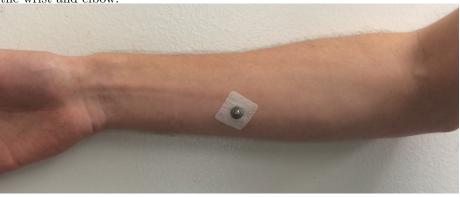

Ankles

Place one electrode on the inner surface each of your ankles, behind the ankle bones. Avoid hair as possible.

