



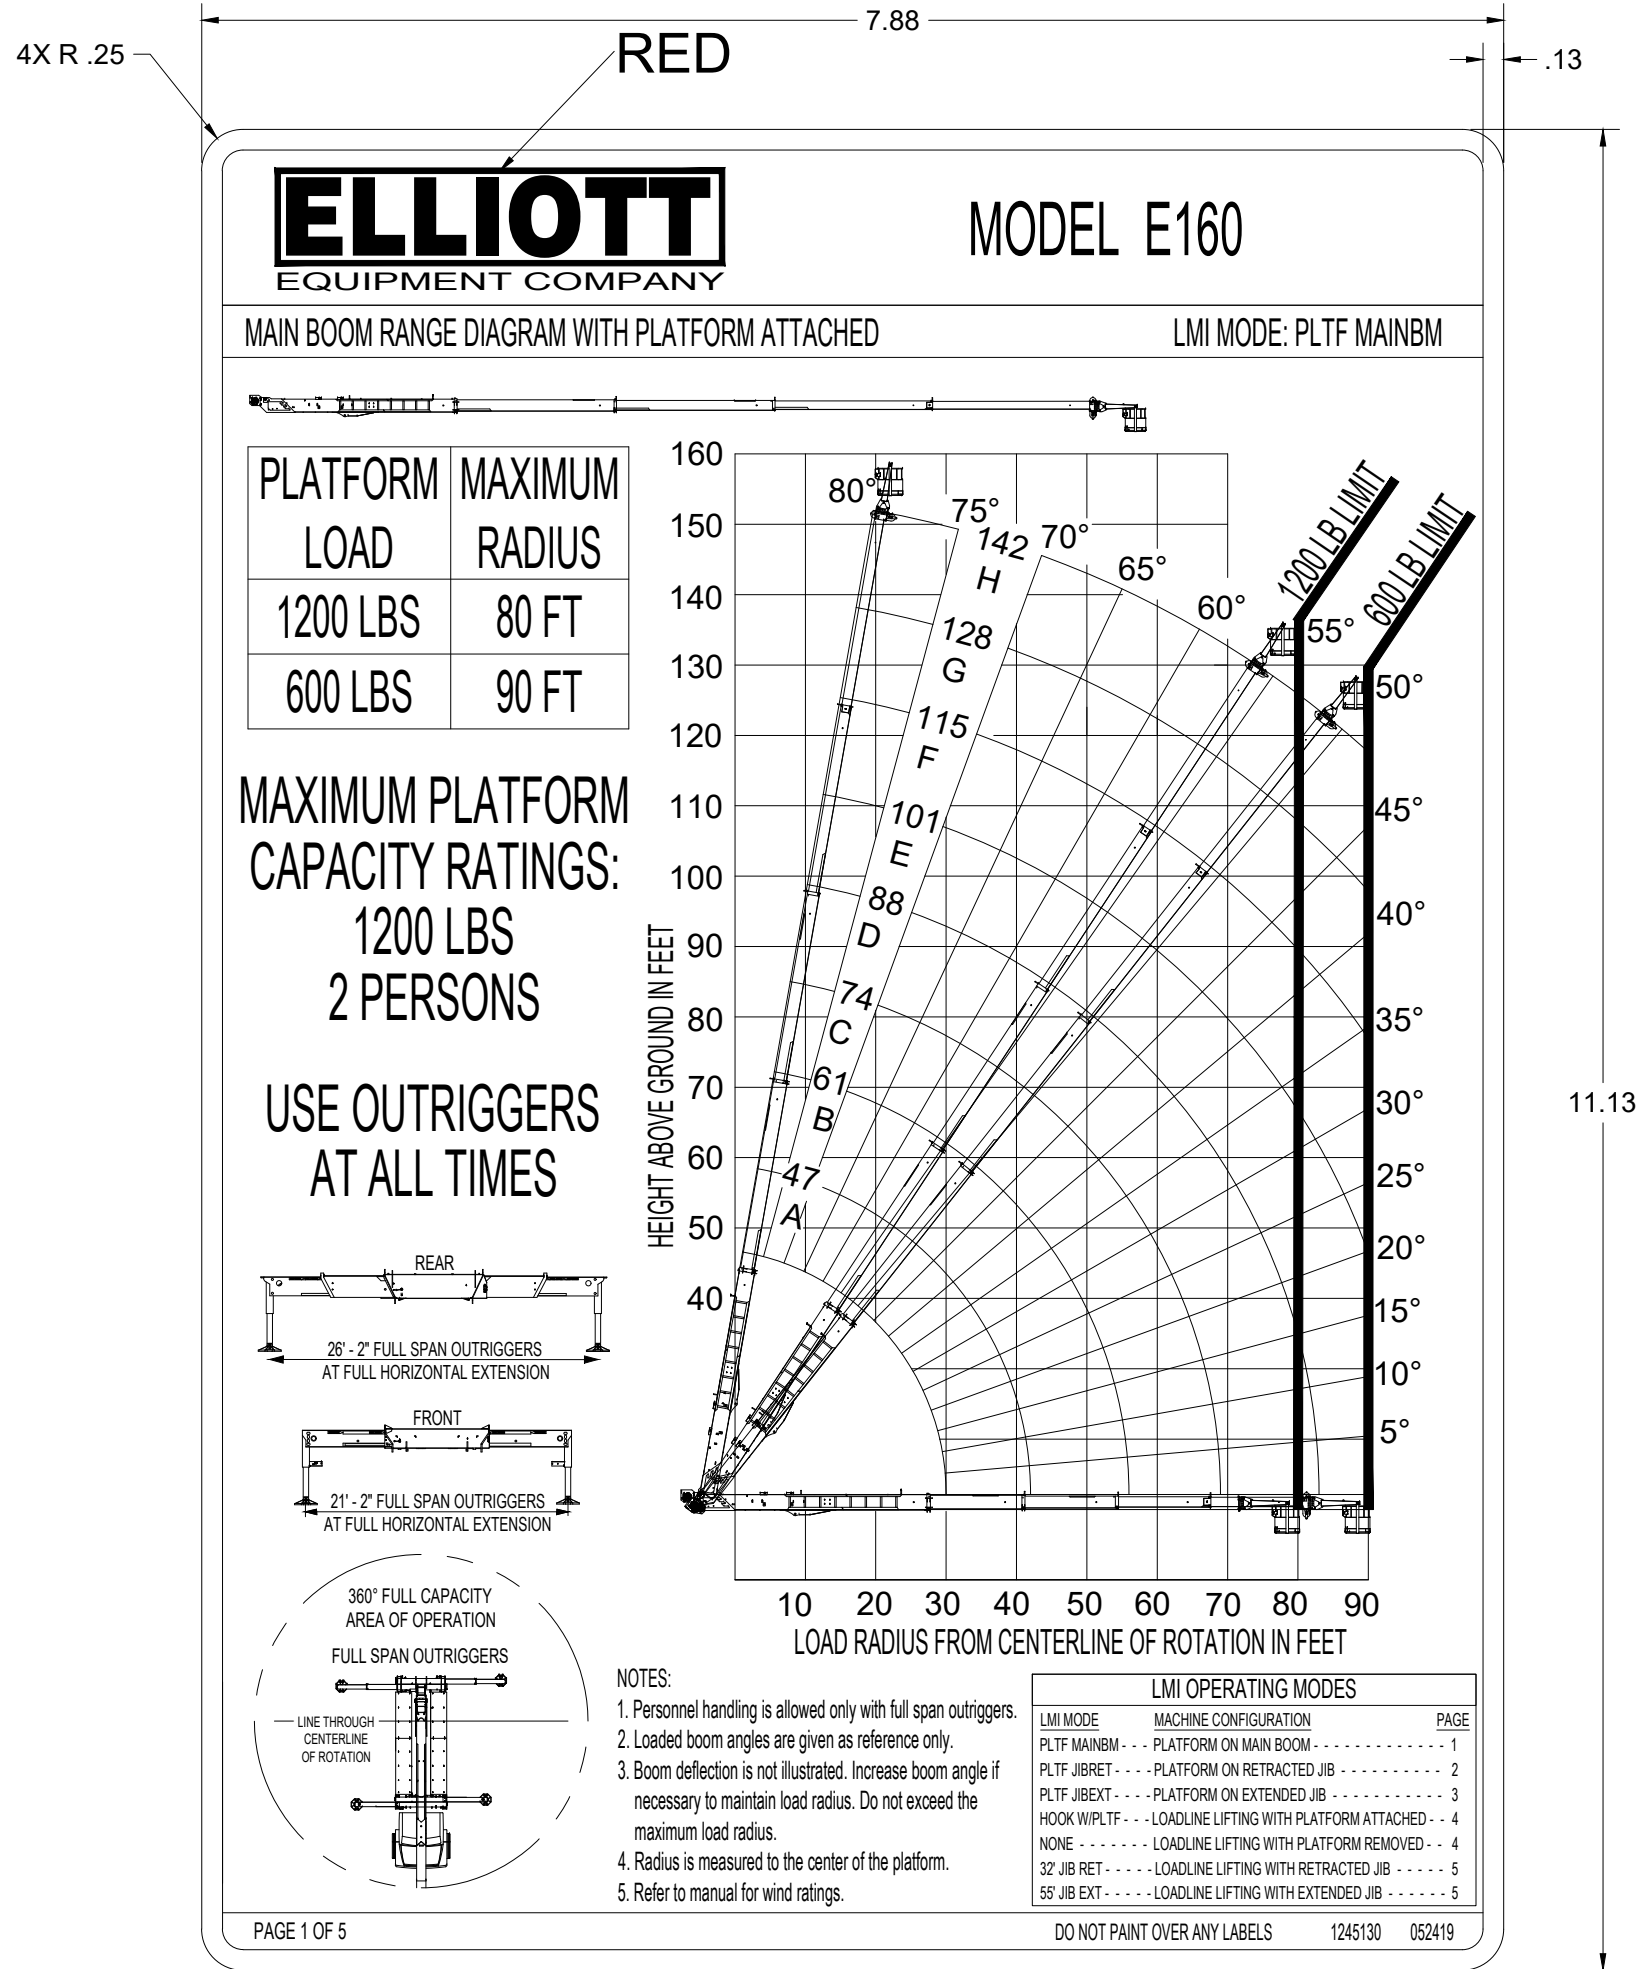

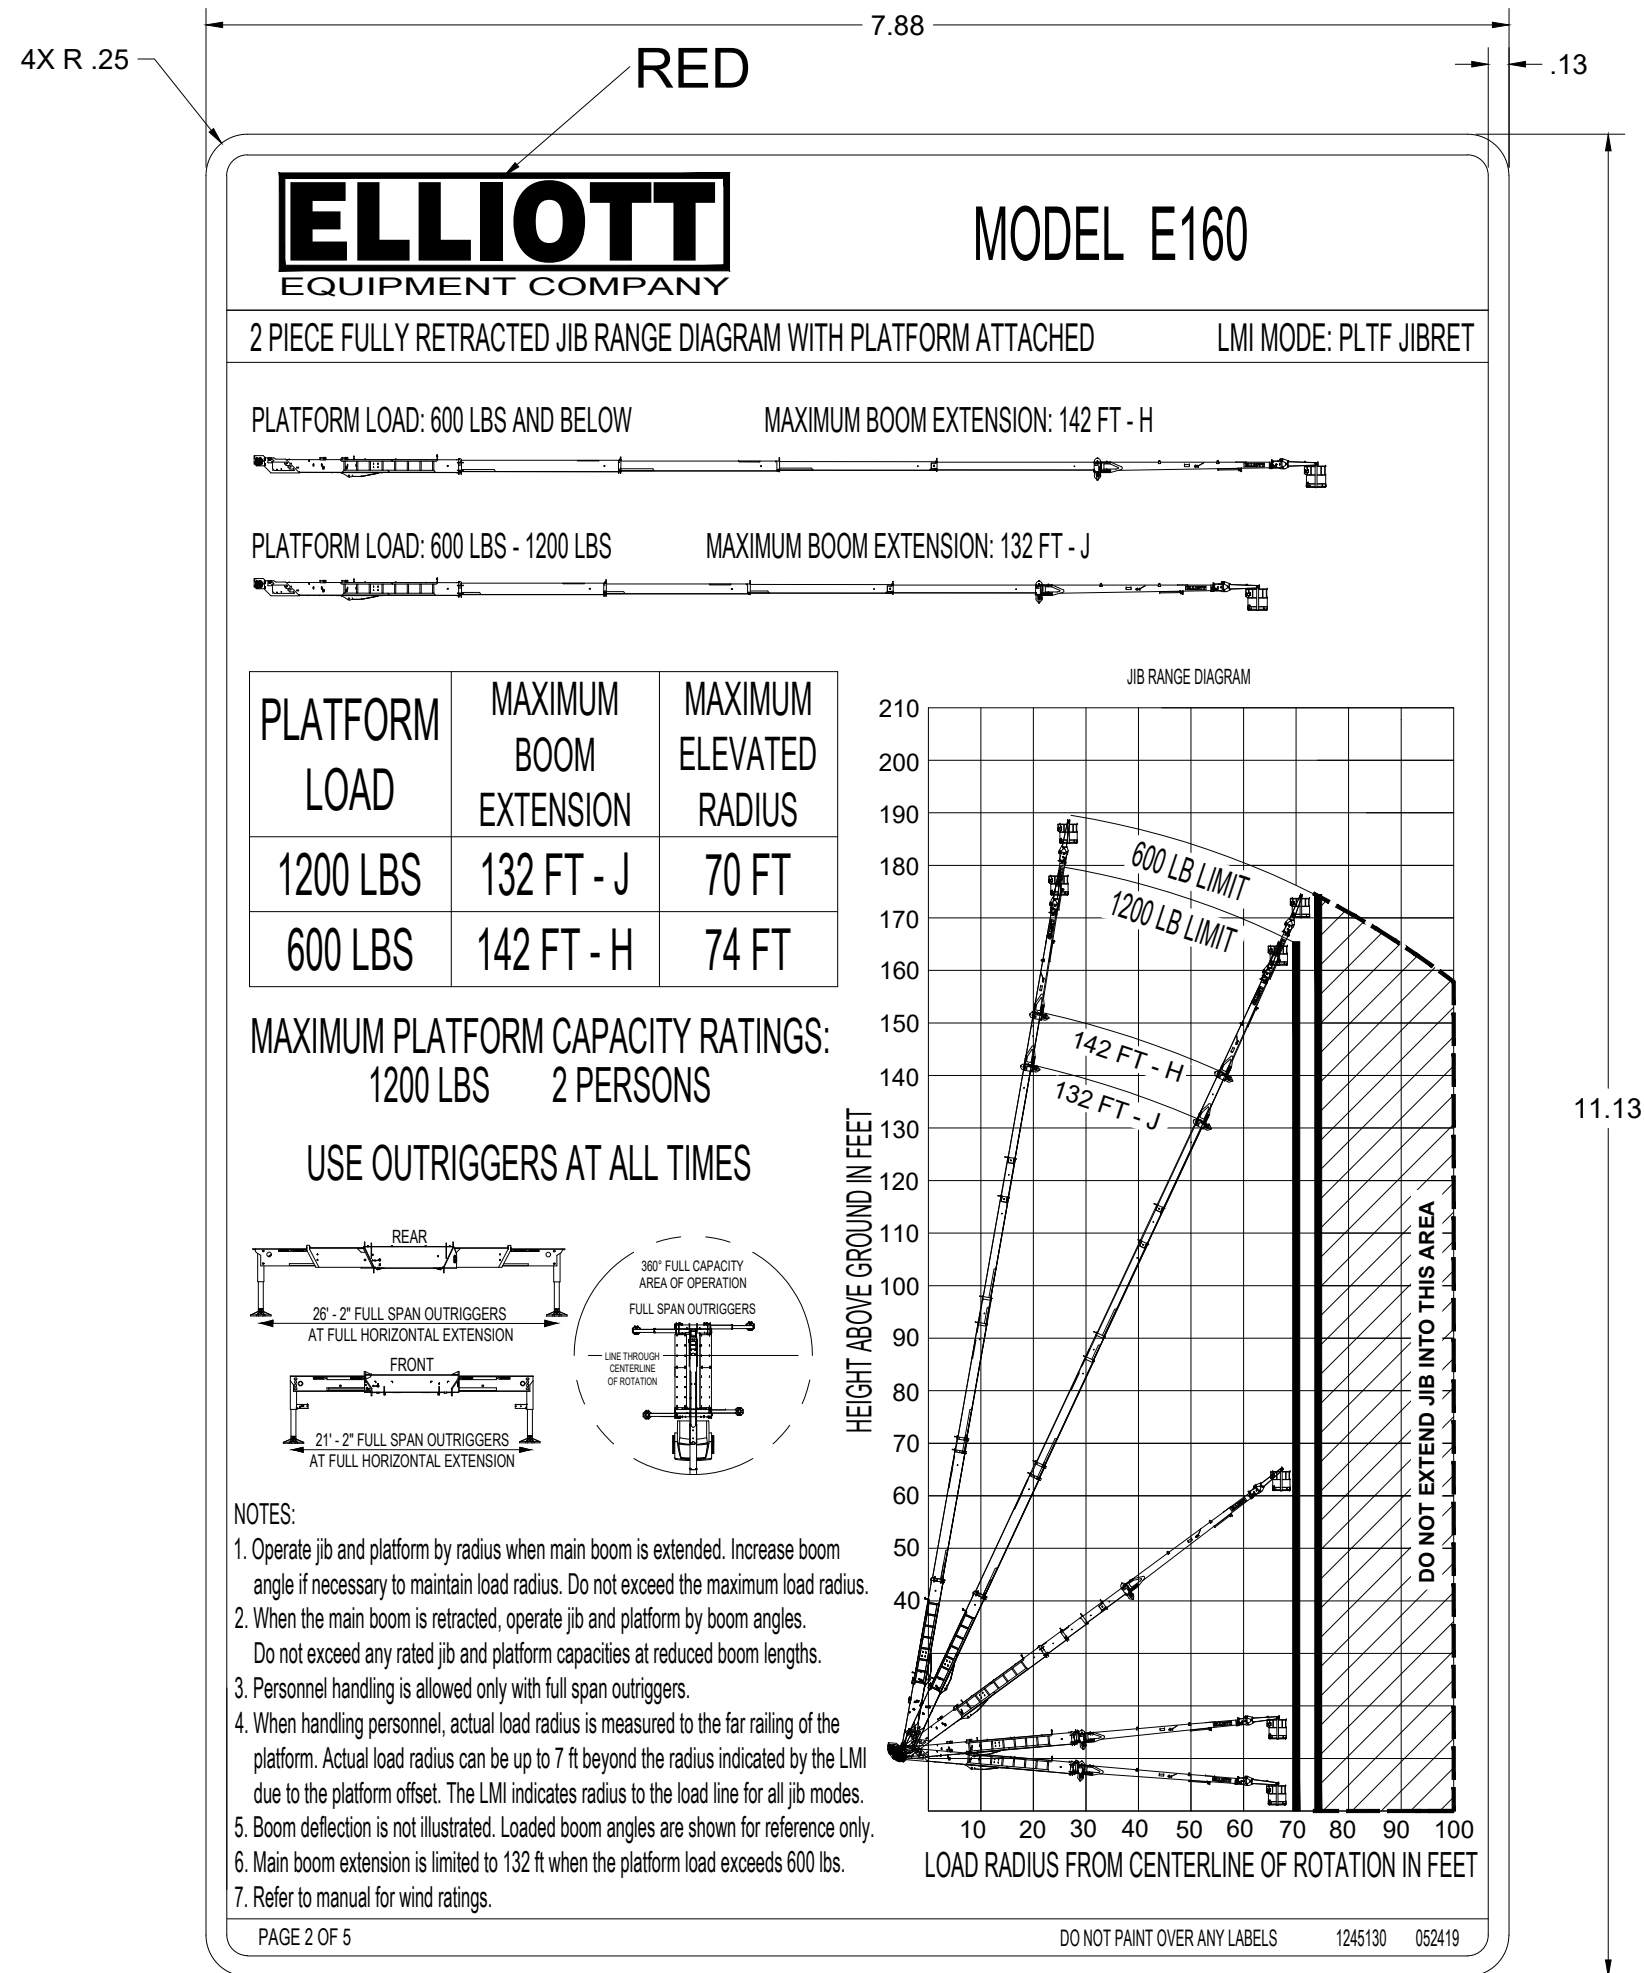

4X R .25

RED

7.88

.13




MODEL E160

2 PIECE FULLY EXTENDED JIB RANGE DIAGRAM WITH PLATFORM ATTACHED

LMI MODE: PLTF JIBEXT

PLATFORM LOAD: 600 LBS AND BELOW

MAXIMUM BOOM EXTENSION: 142 FT - H



PLATFORM LOAD: 600 LBS - 1200 LBS



MAXIMUM BOOM EXTENSION: 132 FT - J



PLATFORM LOAD	MAXIMUM BOOM EXTENSION	MAXIMUM ELEVATED RADIUS
1200 LBS	132 FT - J	78 FT
600 LBS	142 FT - H	82 FT

MAXIMUM PLATFORM CAPACITY RATINGS:
1200 LBS 2 PERSONS

USE OUTRIGGERS AT ALL TIMES

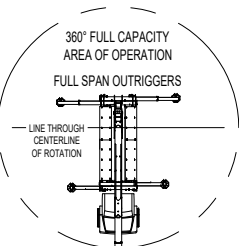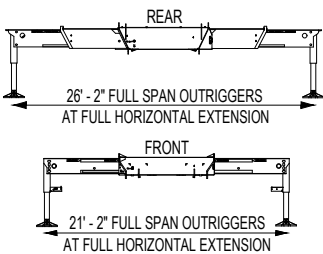


NOTES:

1. Operate jib and platform by radius when main boom is extended. Increase boom angle if necessary to maintain load radius. Do not exceed the maximum load radius.
2. When the main boom is retracted, operate jib and platform by boom angles. Do not exceed any rated jib and platform capacities at reduced boom lengths.
3. Personnel handling is allowed only with full span outriggers.
4. When handling personnel, actual load radius is measured to the far railing of the platform. Actual load radius can be up to 7 ft beyond the radius indicated by the LMI due to the platform offset. The LMI indicates radius to the load line for all jib modes.
5. Boom deflection is not illustrated. Loaded boom angles are shown for reference only.
6. Main boom extension is limited to 132 ft when the platform load exceeds 600 lbs.
7. Refer to manual for wind ratings.

PAGE 3 OF 5

DO NOT PAINT OVER ANY LABELS

1245130 052419

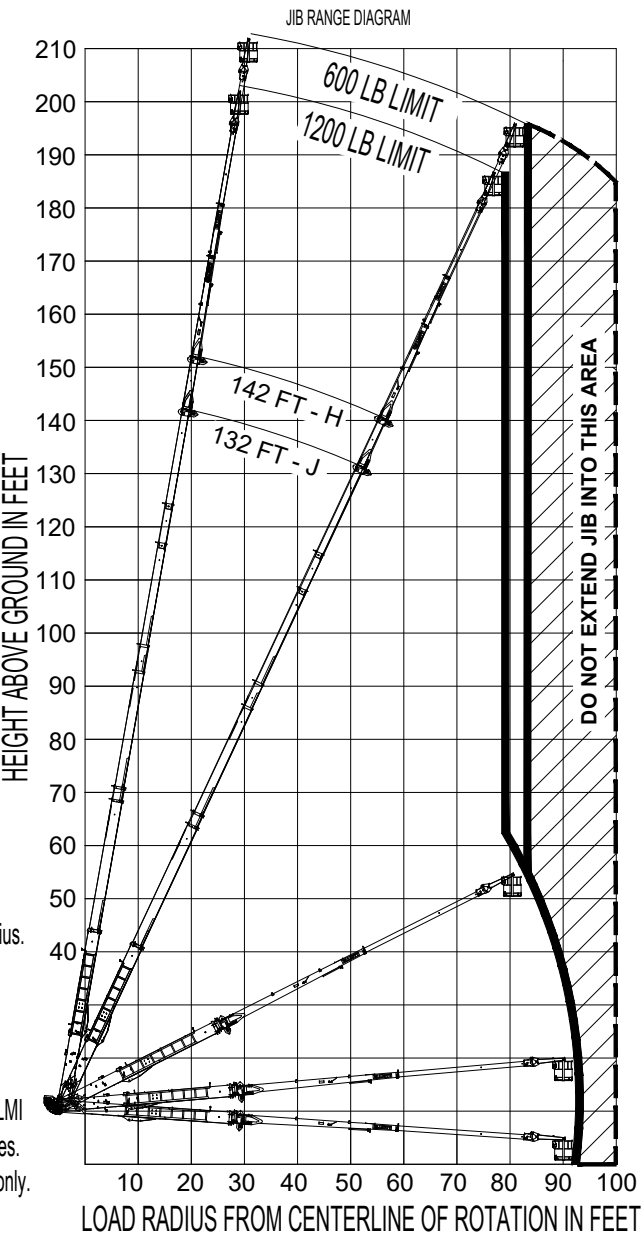

11.13

LABEL-C

ENG TCR

DATE

CHECKED

DATE

DTR AJF

DATE 05/24/19



TITLE:

LABEL-LIFTING CAPACITY CHART MODEL E160

SIZE

B

SHEET


3 OF 5

DWG#

1245130.dwg

REV

A

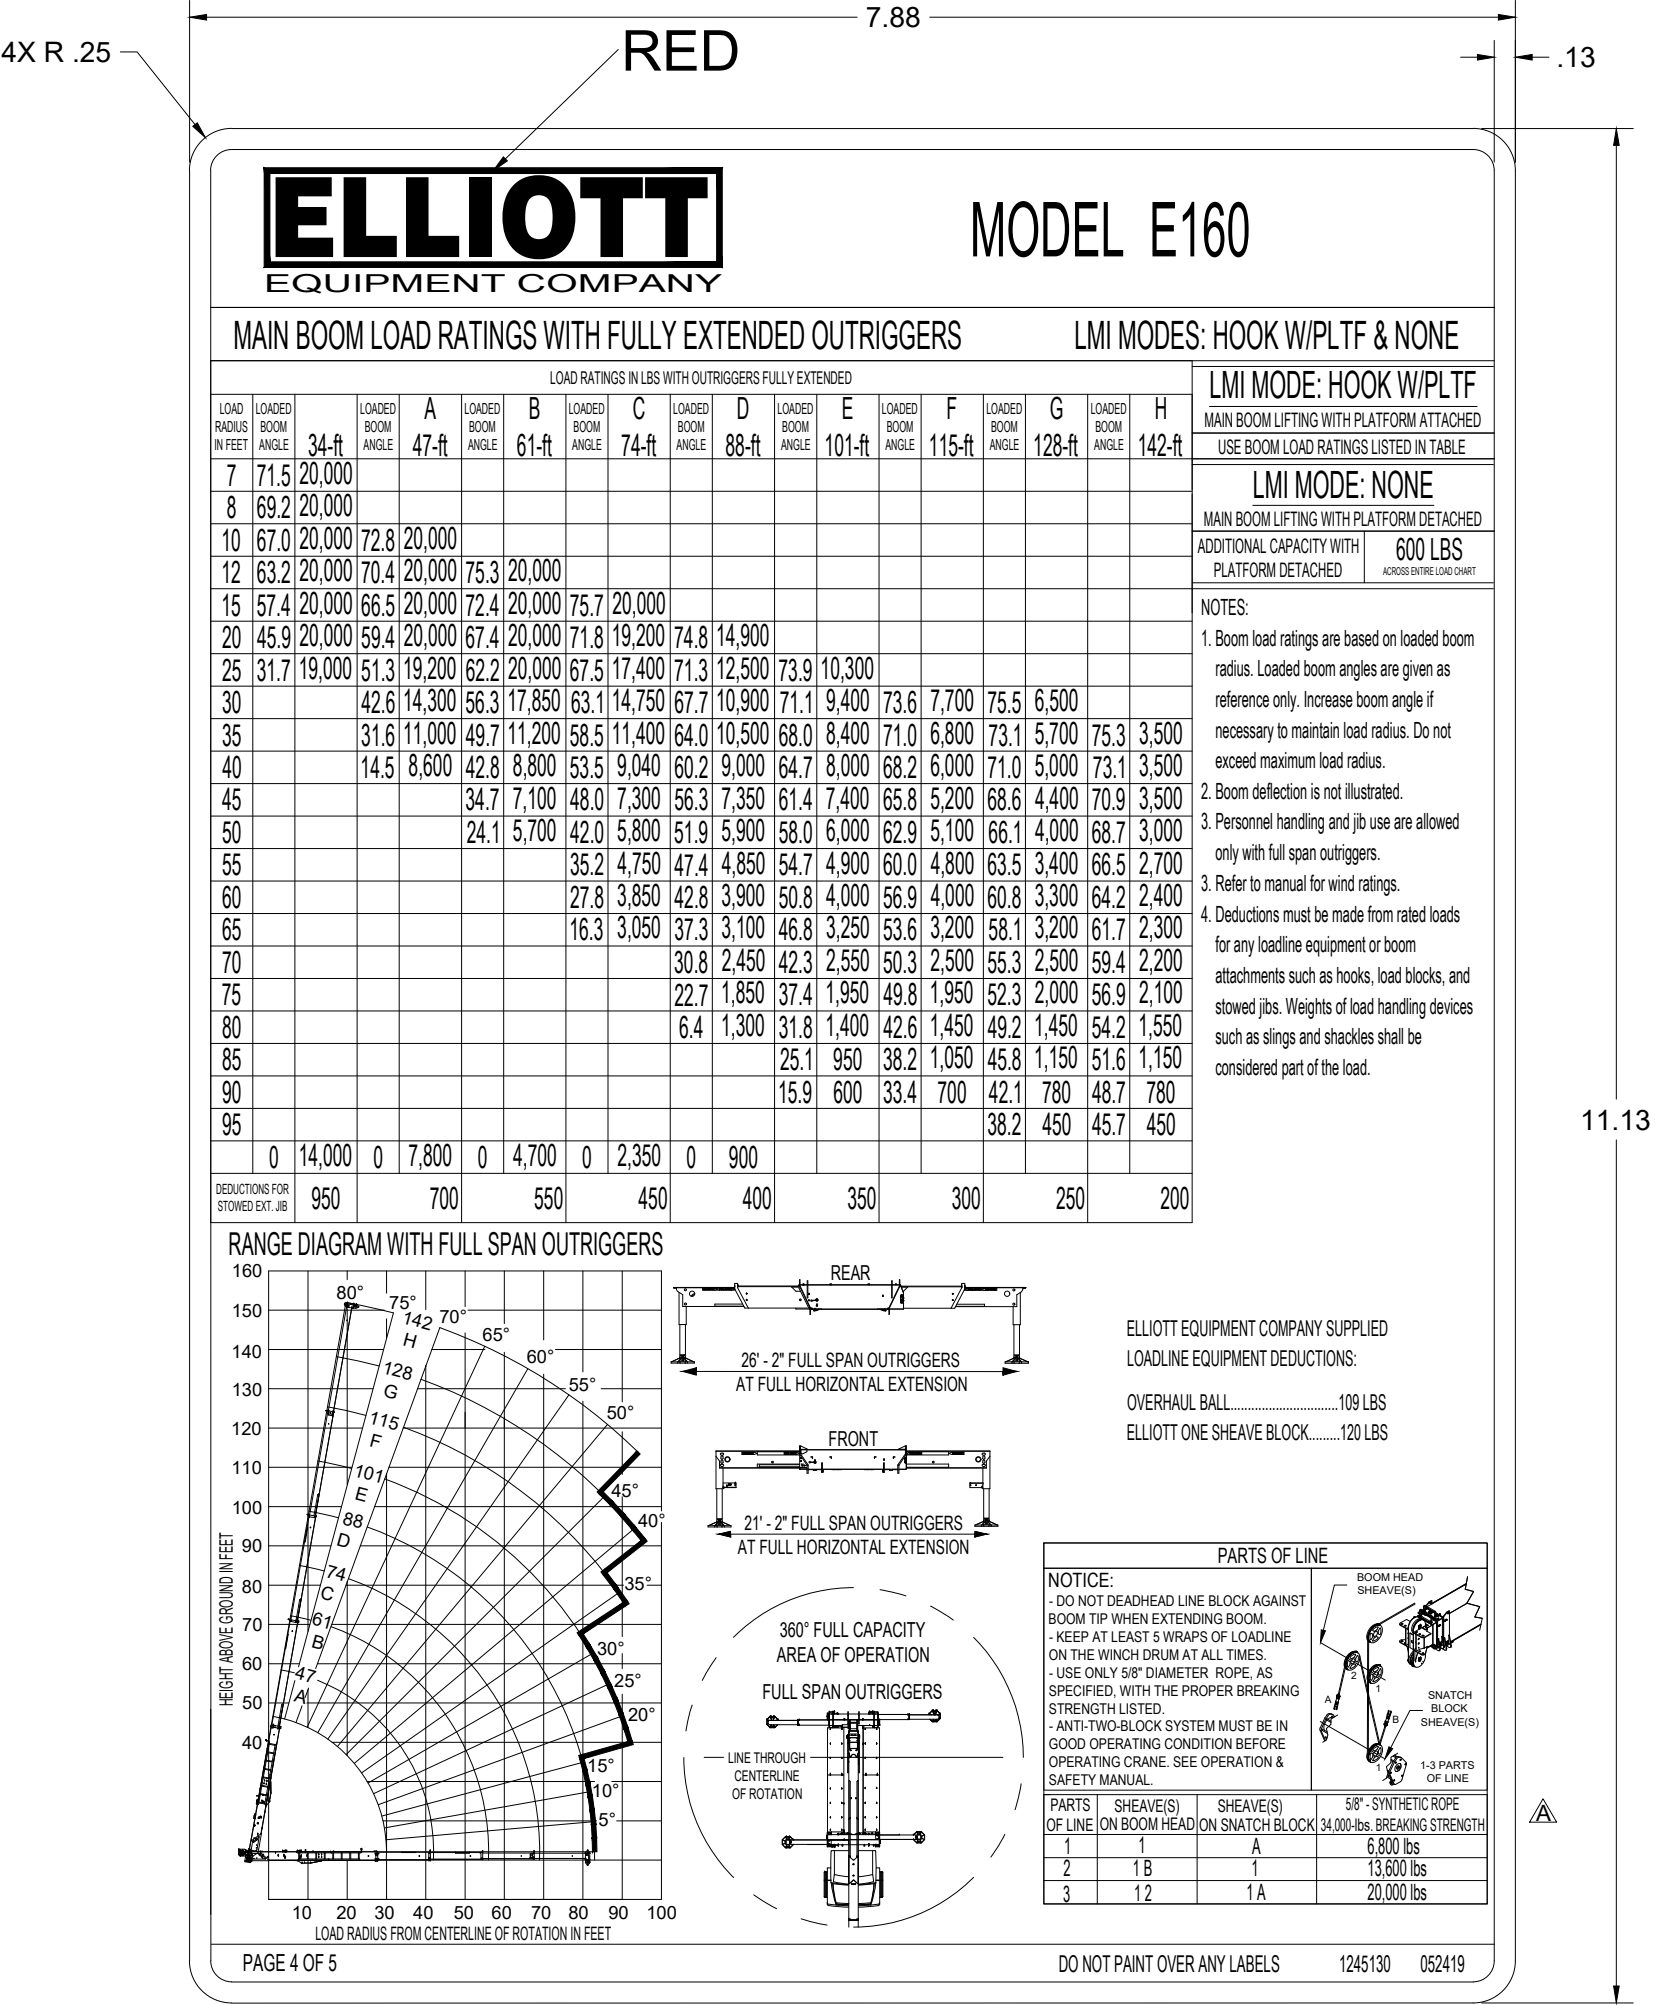

4X R .25

RED

7.88

.13

ELLIOTT
EQUIPMENT COMPANY


MODEL E160

JIB RANGE DIAGRAM WITH FULLY EXTENDED OUTRIGGERS


LMI MODES: 32' JIBRET & 55' JIBEXT

32' - 55' TWO SECTION JIB

32' RETRACTED JIB - LMI MODE: 32' JIBRET





55' EXTENDED JIB - LMI MODE: 55' JIBEXT



LMI MODE: 32' JIBRET		
LOAD RADIUS (FT)	LOADED BOOM ANGLE	LOAD RATING (LBS)
33	80	1,400
50	75	1,400
65	70	450


LMI MODE: 55' JIBEXT		
LOAD RADIUS (FT)	LOADED BOOM ANGLE	LOAD RATING (LBS)
40	80	900
59	75	900
76	70	300

USE OUTRIGGERS AT ALL TIMES

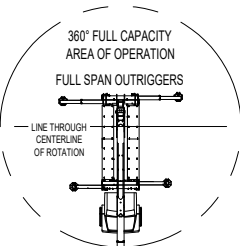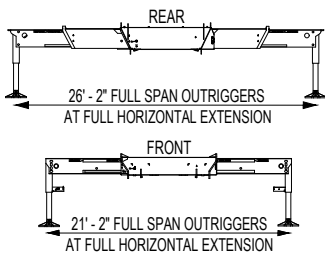

NOTES:

1. Operate jib by radius when main boom is extended. Increase boom angle if necessary to maintain load radius. Do not exceed the maximum load radius.
2. When the main boom is retracted, operate jib by boom angles. Do not exceed any rated jib capacities at reduced boom lengths.
3. Material handling with the jib is allowed only with full span outriggers.
4. Material handling with the jib is allowed only at boom angles above 70°.
5. Boom deflection is not illustrated. Loaded boom angles are shown for reference only.
6. Refer to manual for wind ratings.

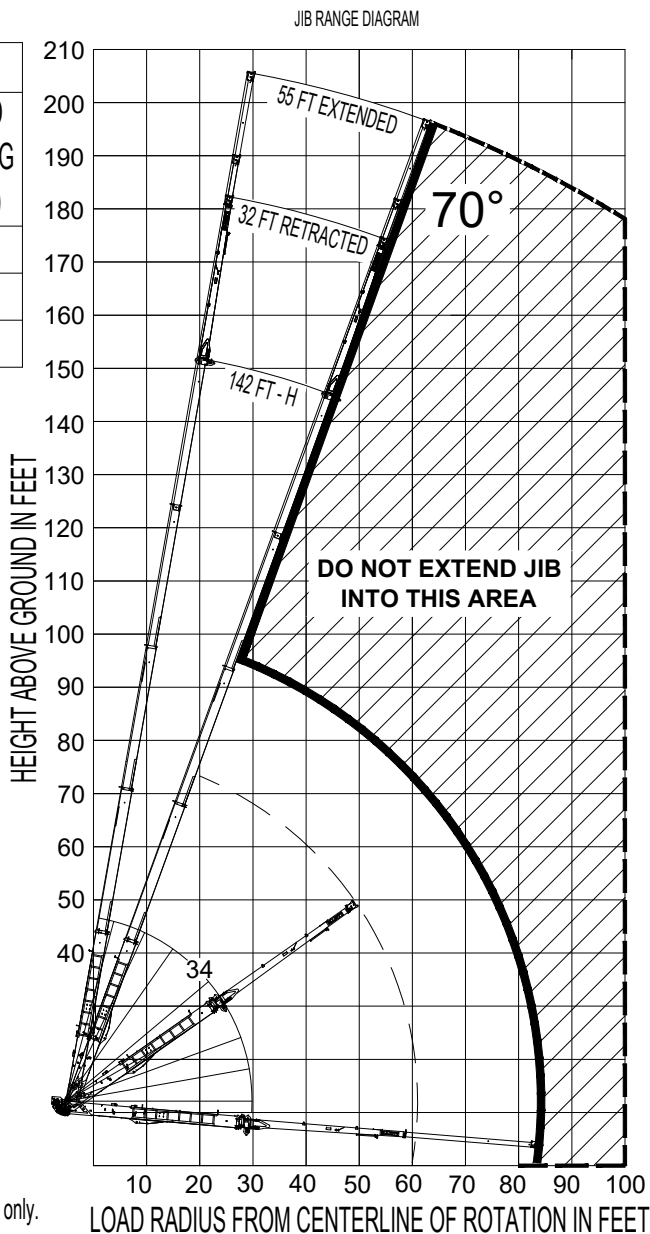

11.13

LABEL-E

REVISIONS

DRT	REV	DESCRIPTION	DATE	ECO

ENG TCR

DATE

CHECKED

DATE

DTR AJF

DATE 05/24/19

ELLIOTT
EQUIPMENT COMPANY

TITLE:
LABEL-LIFTING CAPACITY CHART
MODEL E160

SIZE
B

SHEET
5 OF 5

DWG#
1245130.dwg

REV
A