


Studio 5000 Temperature Conversion

Routine: InputControlRoutine


Buffering works because of one shot

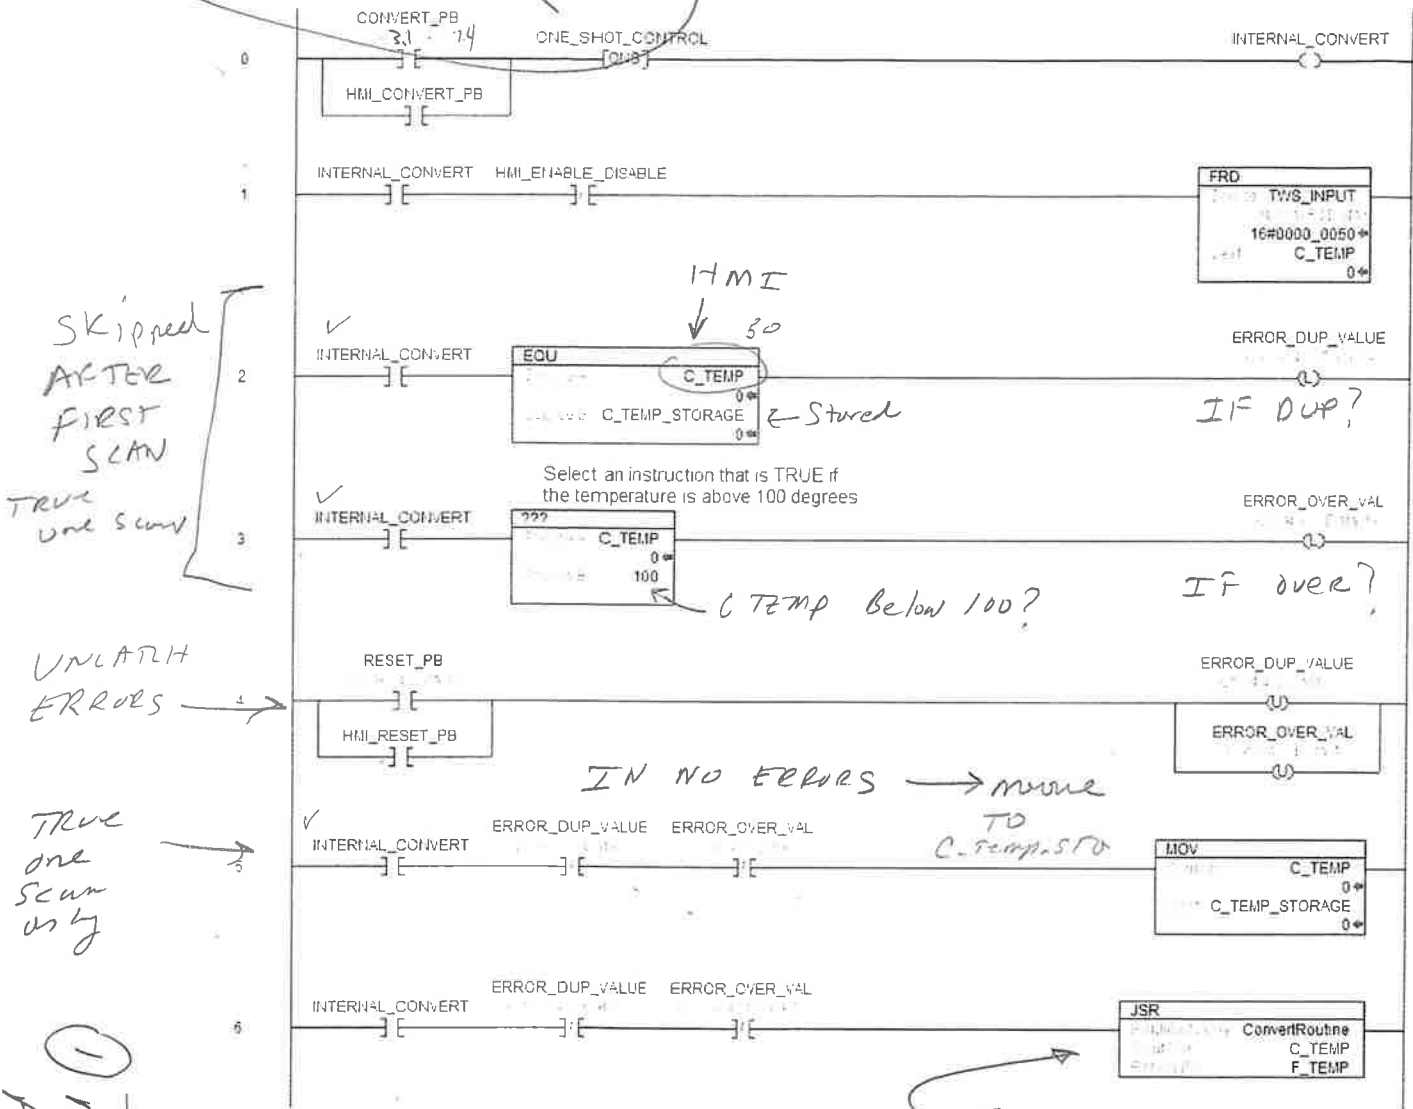

Routine: ConvertRoutine

The C_TEMP tag value is passed to the Tag C_TEMP_CONVERT to be used as the Celsius value in the calculation.

① Missing Rung
ADD + mult + DIV
Return

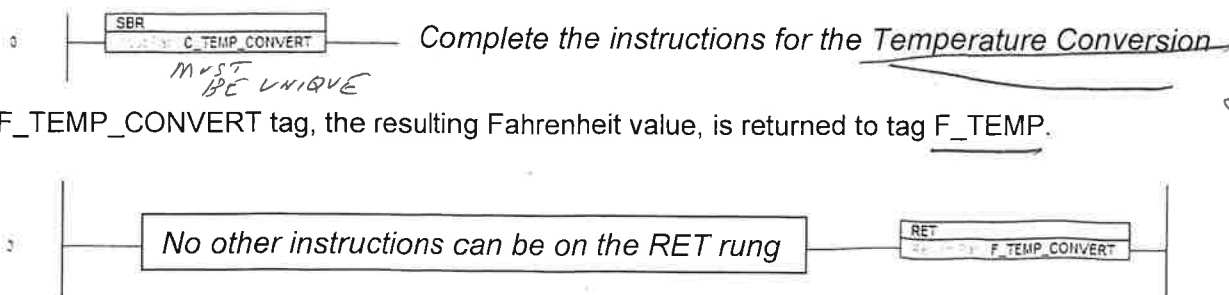

Return Back
TO F_TEMP


Same subroutine over and over same values

* Add SBR
- RETURN Rung
only Return instruction

Siemens no return or input.

Siemens Temperature Conversion

Function Block: Block_Input_Control

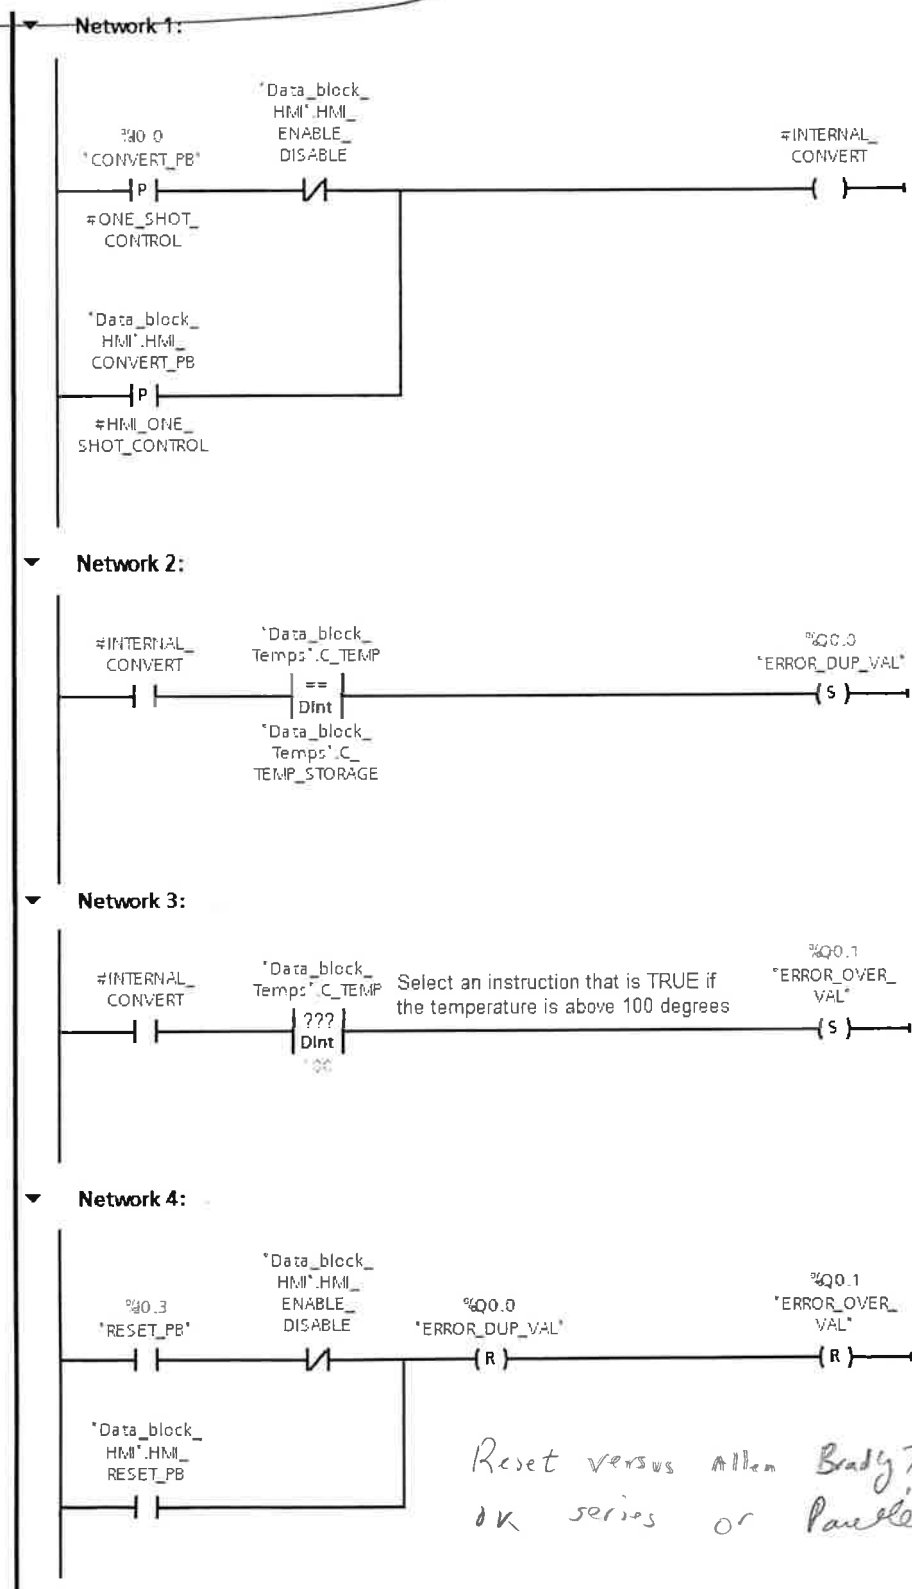

Reset versus Allen Brady?
OK series or parallel

