
GROOVEBOX FOR ABLETON MOVE

TAKTILE

A complete pattern groove box – 16 tracks, 1210 sounds, your own samples, a full effects chain – running as an overtake module on the Schwung platform.

16 TRACKS · 1210 SOUNDS · 128 STEPS · 32 PROJECTS · SAMPLER · MIDI

TaktOnMusic · Vienna · v5.4.1 · MIT

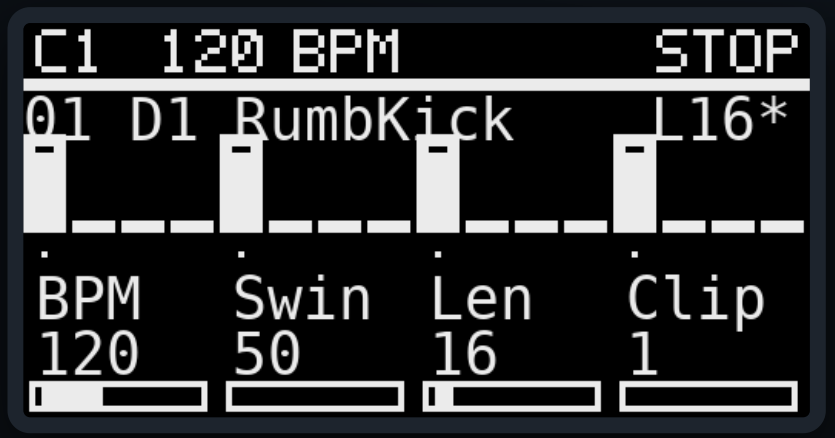



AT A GLANCE

Everything on one Move

Taktile takes over pads, steps, knobs and display and brings its own sound engine, sequencer and mixer.

16 tracks	**1210** sounds	**128** steps per pattern	**8** clips per track	**4×16** drum tracks × sounds	**32** project slots
10 insert FX	**10** MIDI FX	**16+16** factory + user kits	**5×4** arp patterns × rates	**16** note-repeat speeds	**3-EQ** master EQ + comp + limiter

MAKE MUSIC

- **Synth + drum tracks** scale keyboard or 16 drum sounds per track
- **Step sequencer** parameter locks, ratchets, probability, conditions
- **Live play** note repeat, arpeggiator, mute per pad, scenes
- **Euclid** generator with four pages


SHAPE SOUND

- **1210 sounds** browse folders, audition on turn, confirm on click
- **Sampler** WAV slices, envelope, time-stretch
- **Per-track FX** delay, reverb, chorus, phaser, insert + sidechain
- **Master** filter, saturation, width, comp, EQ, limiter


SOUND LIBRARY

1210 sounds, found in seconds


A folder tree sorted by musical role. Turn the jog to move, click to confirm – nothing is loaded by accident.

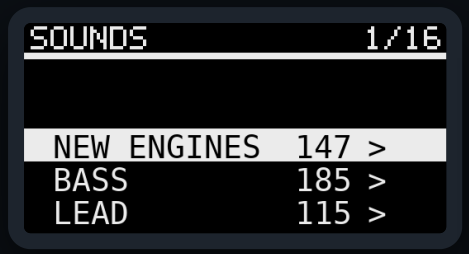

Folders

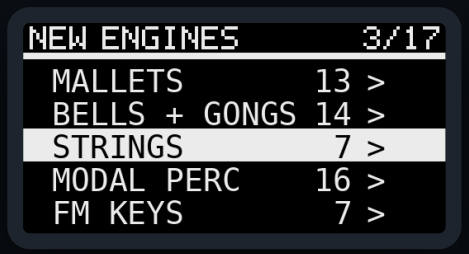

Sub-folders

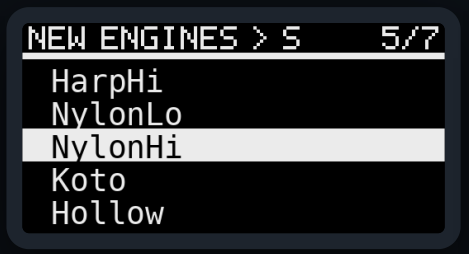

Sounds



Kit styles

SYNTH FAMILIES

Sub · Roll · Acid · Reese · FM · Goa · Wobble · DnB · Hoover · Pluck · Harp · Dub chord · Stab · Pad · Strings · Choir · Brass · Rhodes · Clav · Organ · Bell · Gong · Riser · Impact · Laser


WHY IT FEELS FAST

- **Jog turn** walks through track pages
- **Jog click** opens folders and presets
- **Shift + Jog click** HOME from anywhere
- **Knob 1** scrolls the sound list


SEQUENCER

Patterns that move


Up to 128 steps, every step a small instrument of its own.

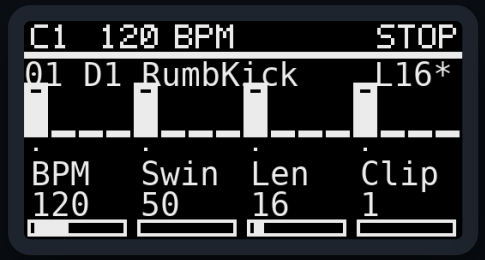


SEQ view

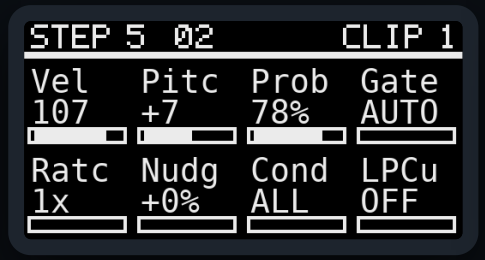

Hold a step, turn knobs

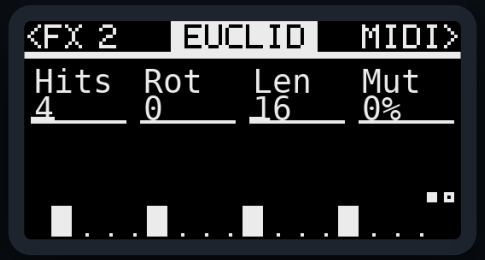

Euclid

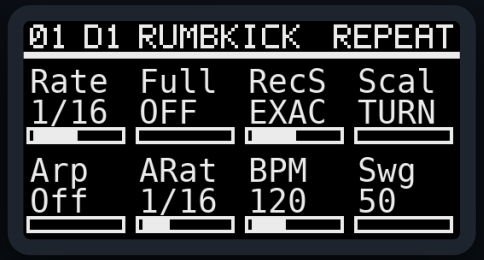

Note repeat

PER STEP

- **Velocity, pitch, probability, gate**
- **Ratchets, nudge, conditions**
- **Parameter locks** any sound parameter, per step

PER PATTERN

- **Loop length per drum lane**
- **Swing** per track
- **Random with rules, fill, double**
- **Quantize on record + scale quantise**

PADS

Pads that tell you what is going on

The 32 pads light up with what the sequencer plays – in every mode.



SYNTH: SCALE KEYBOARD

Bright = root note. Key and scale freely selectable; Up/Down shift the octave.



DRUM: 16 SOUNDS + PLAY MODE

Left block = sounds in family colours (kick red, hats yellow …); a pad pulses when its note triggers. Dark pads are muted. Right block = pitch, repeat or 16-step grid.



SEQUENCED NOTES LIGHT UP

See at a glance which notes or sounds play in the current pattern.

PLAY

- **Note repeat** 16 speeds, free or locked to the scale
- **Arpeggiator** Up, Down, UpDn, Rand, Roll × 4 rates – live and sequenced
- **Mute** per pad, per track, per session pad
- **Copy / swap pads**




MIX

SOUND DESIGN

Deep sounds, simple pages


Every page is eight knobs. Full names appear while you turn.

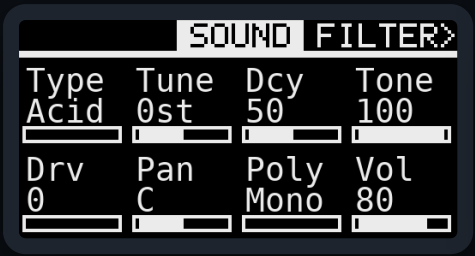


SOUND



FILTER with envelope

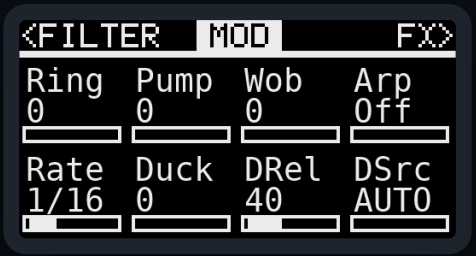

MOD

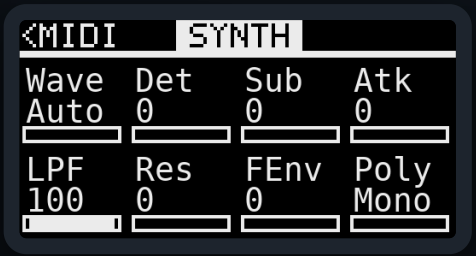

SYNTH

VOICE

- **Type, Tune, Decay, Tone, Drive, Pan, Poly, Vol**
- **Waveform, detune, sub, attack**
- **Filter reset to open on each new sound**

MODULATION

- **Ring, Pump, Wobble, Crush, Lo-cut**
- **Filter: LP/BP/HP, envelope + decay, key tracking**
- **Effects per drum pad**
- **Sidechain duck** with selectable source


EFFECTS & MASTER

From one track to the whole mix


Each track has its own delay, reverb, chorus and phaser plus an insert and a MIDI effect.




Track FX

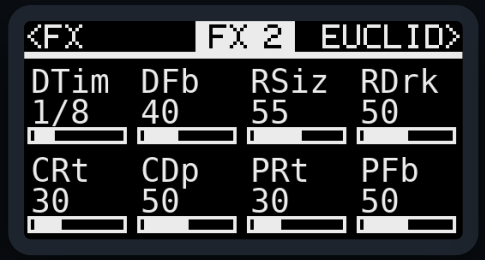

Track FX 2

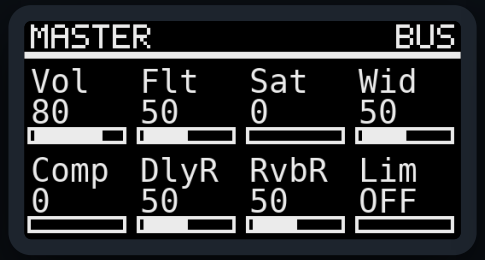

MASTER

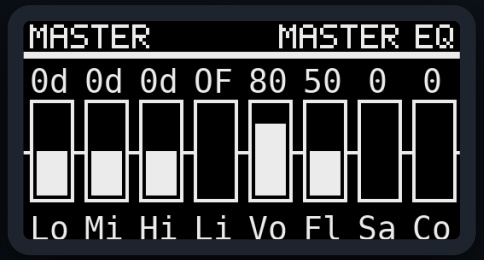

EQ

PER TRACK

- **Delay** time, feedback
- **Reverb** size, damping
- **Chorus / Phaser**
- **Insert FX ×10 (incl. stutter, reverse), MIDI FX ×10**


MASTER

- **Filter, saturation, width**
- **Compressor with sidechain high-pass**
- **3-band EQ, limiter**
- **Resample** print the mix back into a pad

DRUM KITS

Kits with character

16 factory kits, each styled to its genre, plus 16 user slots for your own.

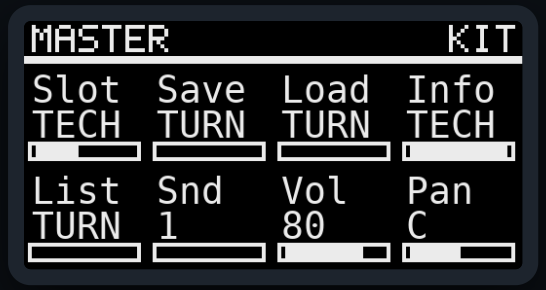

KIT page



Kit styles



HOUSE
tight, punchy

TRANCE
long open hats, hard kick

PSY
rolling, dry

DUB
deep, spacious

TRAP
808 boom, snappy hats

TECHNO
industrial, hard

Turning the jog inside a kit list loads the kit and plays a few hits so you can judge it immediately.


WORKFLOW

Built for jamming


Clips, scenes and songs, 32 project slots and an undo history.




CLIPS

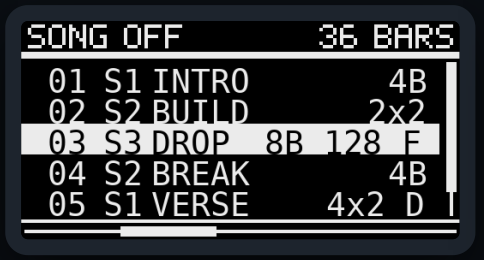

SONG

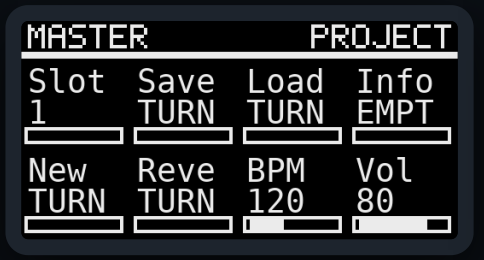

PROJECT

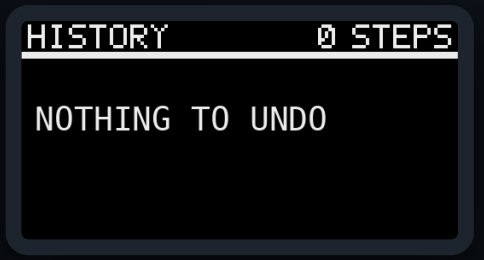

UNDO

ARRANGE

- **8 clips per track** each with its own sound state
- **Scenes + song chain**
- **Launch quantisation**

STAY SAFE

- **32 project slots** new, save, load
- **Undo** history page
- **Automatic backups**
- **MIDI** clock and notes out, sync in

NAVIGATION

Everything in two clicks


A hub menu, tabbed track pages and a Shift map of the step buttons.




HOME



MORE

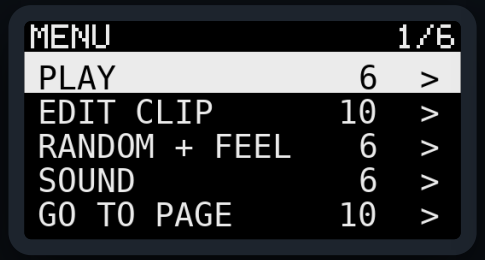

MENU

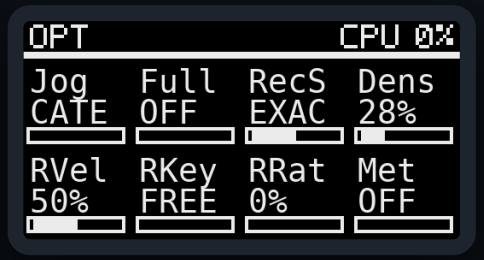

OPTIONS

Jog
turn: track pages · click: folders + presets

Shift + Jog
turn: browser · click: HOME

Knob 1–8
page parameters; knob 1 = first

Shift + Step
tempo, swing, key, options …

Back
one level up · Shift+Back = close

Delete + Track
clear track (asks twice)

CHEAT SHEET

The shortcuts on one page

Everything you can do without opening a menu.

Sample
random pattern · Shift: wild

Copy + Sample
variation of the clip

Shift + Capture
fill (one bar roll)

Capture
keep the last 2 bars you played

Mute + Pad
mute one drum sound

Shift + Mute + Track
solo

Copy + Pad
copy a sound to another pad

Copy + Track
copy the sound

Shift + Copy + Track
copy the whole track

Delete + Pad
clear steps · again: reset sound

Shift + Rec
metronome on/off

Loop + Step 1–8
launch scene

Song: Pad
jump to that step at bar end

Song: Shift/Delete + Pad
insert / delete a step

GET STARTED

Six steps to a first loop

And an honest status.

1. Install the .tar.gz in Schwung Manager and start Taktile from the overtake list.
2. Pick Synth or Drum for track 1. Turn the jog, click, choose a sound.
3. Tap steps, or hold Rec and play the pads.
4. Hold a step and turn knobs for velocity, pitch, probability.
5. Open HOME with Shift + Jog click: FX, MIX, BUS.
6. Save in PROJECT – 32 slots.

STATUS

UI logic and DSP are covered by desktop tests: a UI simulator, fuzzing with 60,000 random events and native ASAN/UBSAN runs of the DSP. Behaviour that depends on the real device – pad LEDs, arp feel, display legibility, background suspend – still has to be confirmed on the hardware. The screens in this document are renderings, not photos.

UNDER THE HOOD

- **Schwung overtake module**
- **Own C DSP (dsp.so), no Move synth engines**
- **JavaScript UI, MIT license**

APPENDIX

Full reference

Every control, page and parameter – the detailed manual.

TAKTILE

User manual – groove box overtake module for Ableton Move (Schwung)
Version 5.4.1 · 10 October 2026 · by TaktOnMusic · MIT license

16 tracks · synth and drum tracks · up to 128 steps · 8 clips per track · 1210 sounds · your own samples with time-stretch · per-track effects · 10 insert effects · 10 MIDI effects · master EQ, compressor and limiter

Status. The UI logic and the DSP are covered by desktop tests (a UI simulator, fuzzing with 60,000 random events, native ASAN/UBSAN runs of the DSP). Everything that depends on the real device – background suspend, CPU headroom, display legibility, MIDI out – still has to be confirmed on hardware. The figures in this manual are renderings of the display, not photos.

Contents

1. Overview
2. Installing and leaving the module
3. Concepts: tracks, clips, sounds
4. Pads and play modes
5. Step buttons and Shift map
6. Menus and pages
7. Sequencing
8. Sounds, samples and kits
9. Effects, sidechain and master
10. Projects, backups and files
11. Technical notes for Schwung developers
12. Known limits and open questions
13. What is new in 4.9

1. Overview

Taktile turns the Move into a pattern-based groove box. It is an **overtake** module: it takes over pads, buttons, knobs and display, and sounds come from its own DSP (*dsp.so*), not from Move's synth engines.

- **16 tracks**, each either a **synth track** (one sound played on a scale keyboard) or a **drum track** (16 sounds, each with its own pattern; at most 4 drum tracks).
- **8 clips per track**, every clip with its own sound settings; scenes, a song chain and launch quantisation.
- **1210 sounds** in 8 categories (kicks, drums, hats, percussion, bass, leads, pads, FX) plus **your own WAV samples** with slicing, envelope and time-stretch.
- **Sequencer** up to 128 steps per pattern with velocity, pitch, probability, gate, ratchets, nudge, conditions and **per-step parameter locks**; Euclid generator with two pages of eight knobs; per-track swing.
- **Effects per track**: delay, reverb, chorus, phaser, one of 10 insert effects (STUT stutter, REV reverse, FLNG, TREM, APAN, COMB, WAH, GATE, LOFI, DJ filter) and one of 10 MIDI effects; sidechain ducking with selectable source.
- **Master bus**: filter, saturation, width, compressor with sidechain high-pass, 3-band EQ and limiter.
- **Workflow**: undo history, fill, random with rules, copy/swap pads, factory kits, resampling, MIDI clock and notes out, 32 project slots, automatic backups, in-device help.

2. Installing and leaving the module

Install

- **Schwung Manager** → install a custom module → choose *taktile-module.tar.gz*. Start it from the overtake list.
- **Or build it yourself:** *./scripts/build.sh* (needs an aarch64 gcc or Docker) creates *dist/taktile-module.tar.gz*; *./scripts/install.sh* copies it to the Move over ssh.

Leaving

Back on the top level asks **BACKGROUND** (the sequencer keeps playing while you return to Move), **CLOSE** (stop and unload); Back stays in Taktile. **Shift** + **Back** always closes the module completely; Shift + Volume + Jog click also works as in every overtake module. Background operation relies on the module capabilities *suspend_keeps_js* and *suspend_self_managed*; if the host refuses to suspend, Taktile falls back to returning to the menu.




The exit dialog


3. Concepts: tracks, clips, sounds

Term	Meaning
Track	One of 16. Selected with the four track buttons (bank of four) or the Up/Down buttons. In a new project (first start or PROJECT → New) Taktile asks *Synth or Drum* the first time you select each track, track 1 included. A cleared track (Delete + track button, twice) asks again; Back keeps the type.
Synth track	One sound, pitched. The 32 pads are a scale keyboard in the chosen key and scale.
Drum track	16 sounds on a 4×4 pad block, each with its own pattern, loop length, effects and sample. The other 4×4 block plays the selected sound pitched, repeated, or as a 16-step grid.
Clip	8 per track. A clip is a pattern *and* a sound state; switching clips switches both.
Sound	A sound type (1210) plus parameters: tune, decay, tone, drive, filter, modulation, effects sends. Samples are a sound type too.

4. Pads and play modes

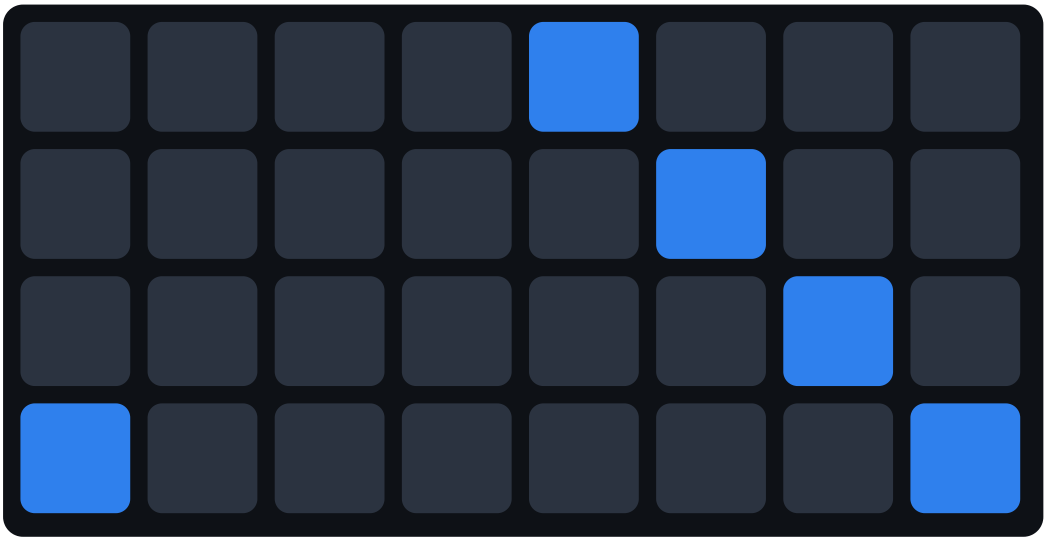

Synth track, mode PITCH: 32 pads = scale keyboard (bright = root note).

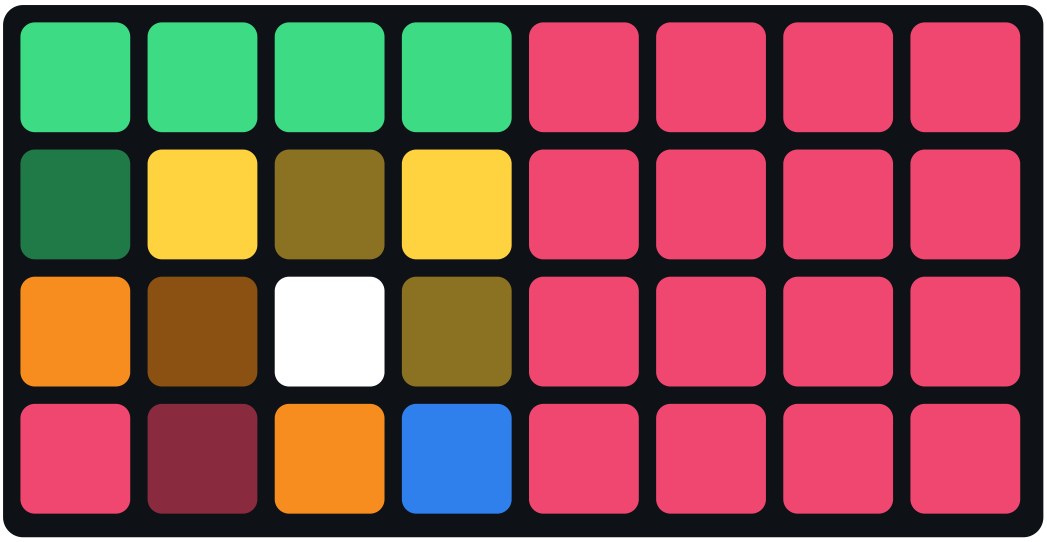


Drum track: left 4×4 = the 16 sounds (colour = sound family), right 4×4 = play mode for the selected sound.

Control	Effect
Left pad	Plays **and selects** the drum sound.
Shift + left pad	Select without playing.
Delete + left pad	Clear all steps of that sound in the current clip.
Copy + pad, then target pad	Copy a sound between pads. **Shift + Copy + pad** swaps the two sounds.
Mode PITCH / REPEAT / STEPS	Pitched keyboard · note repeat · 16-step grid for the selected sound. Shift + step 8 switches note repeat on and off (REPEAT ↔ PITCH); STEPS is reached with the track button or HOME → TRACK → Pads.

5. Step buttons and Shift map

The 16 step buttons toggle steps. **Hold a step** and turn knobs 1–8 to edit it (see section 7). With **Shift** held, only the step buttons that have a function light up:

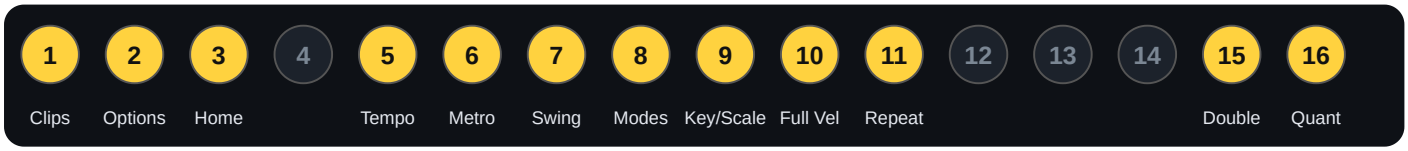


Shift + step buttons (yellow = assigned)

Step	Function
1	Clip view
2	Options (jog mode, full velocity, CPU, random rules)
3	HOME menu
5 / 6 / 7	Tempo · metronome · swing
8	Pad mode PITCH → REPEAT → STEPS
9	Key and scale
10	Full velocity on/off
11	Repeat rate
15	Double the loop and notes
16	Quantize page (launch quantisation, record snap, scale quantise)


Button	Effect
Play	Start / stop. Shift + Play stops and rewinds.
Rec	Record. Hits are quantised with the record-snap setting.
Jog turn	Browse sounds inside the category; Shift = next category. In clip view: scroll tracks.
Jog click	HOME menu; Shift = tap tempo; on a track tab: back to the previous tab.
Delete + track button	Clear the whole track (asks twice). Undo restores it.
Shift + Capture	Fill: a one-bar roll that restores itself.
Copy + Sample button	Variation: a few steps appear or vanish, some velocities change; the groove stays recognisable (also EDIT menu: Vary pattern).
Shift + Copy + track button	Copies the **whole track** (sounds, all clips, length) to another track. Synth to synth or drum to drum. Copy + track button without Shift copies only the sound.
Shift + Rec	Metronome on/off.
Shift + Menu	In-device help for the current page.
Master knob	Master volume (the module claims it).

6. Menus and pages

Jog click opens **HOME**: SOUND, TRACK, MIX, BUS, EDIT and MORE. **MORE** has two pages: Tempo, Song, Project, Kit, Resample, Sync, Option, Undo and EQ. Jog turns, Jog click opens, **Back** goes up one level.

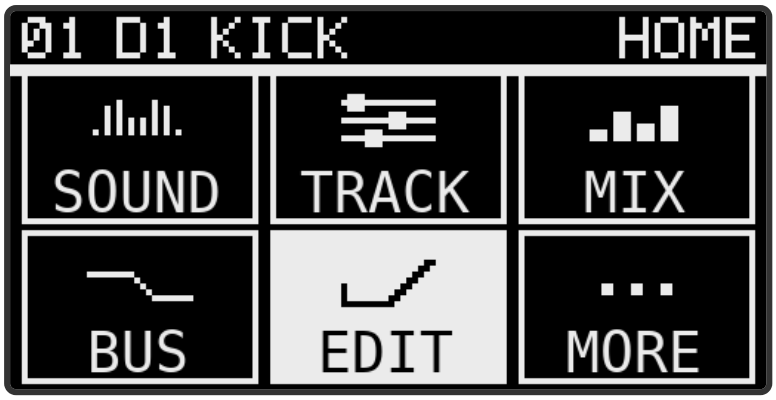

HOME

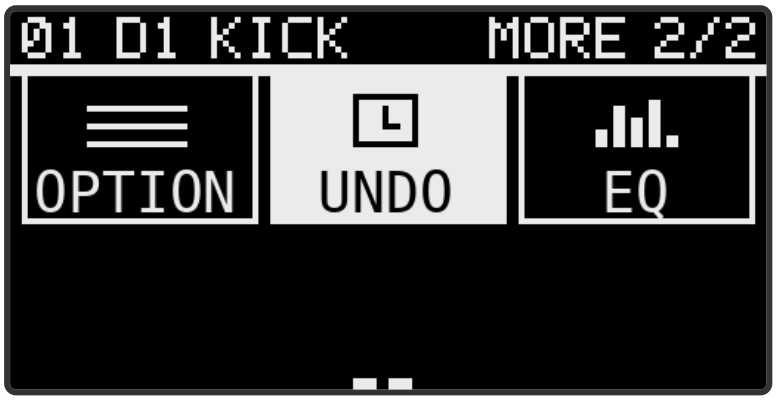


MORE, page 2

Track page with tabs

HOME → SOUND opens the track page. The header lists the pages in this order: **SOUND → FILTER → MOD → FX → FX 2 → EUCLID → MIDI FX → SYNTH/SAMPLE** (sample page last). Jog turns between them; the current page is the white block, the neighbours are shown beside it. Knobs 1–8 edit the page; the tab you used last is remembered per track.




SOUND tab

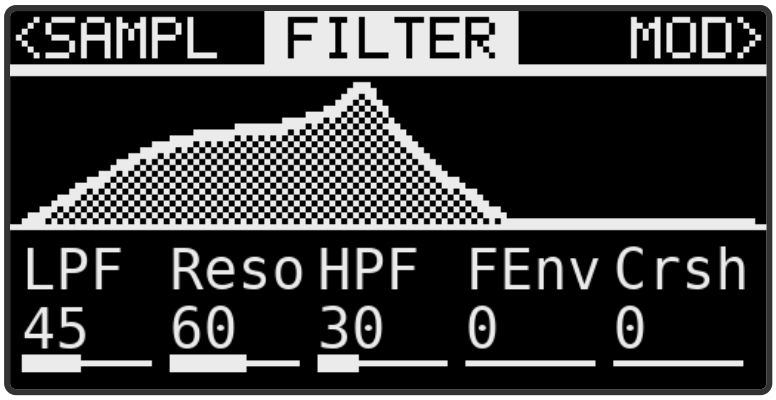


FILTER tab: the curve is computed from LPCut, Reso and HPCut

Page styles


Page types look different on purpose: outlined cells (SOUND, step edit, sample), light tiles (MOD, KIT, PROJECT, SYNC, RESAMPLE), thick bars (BUS, TEMPO, MIDI, FX 2), lists (TRACK, OPTION, FX), faders (master EQ), and a response curve (FILTER). The header uses its own squared pixel font.

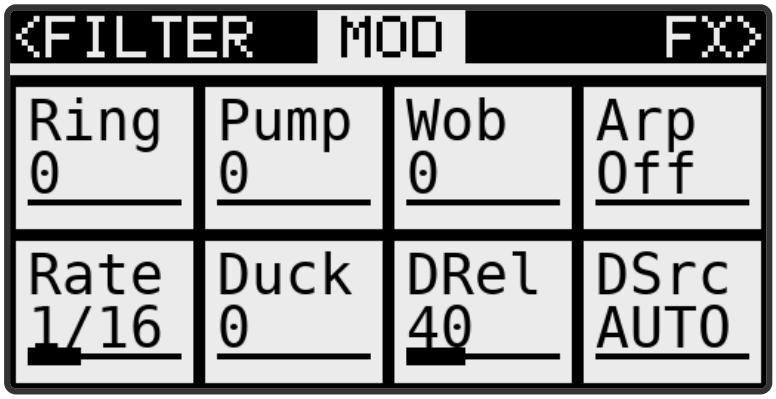

MOD tab (light tiles)

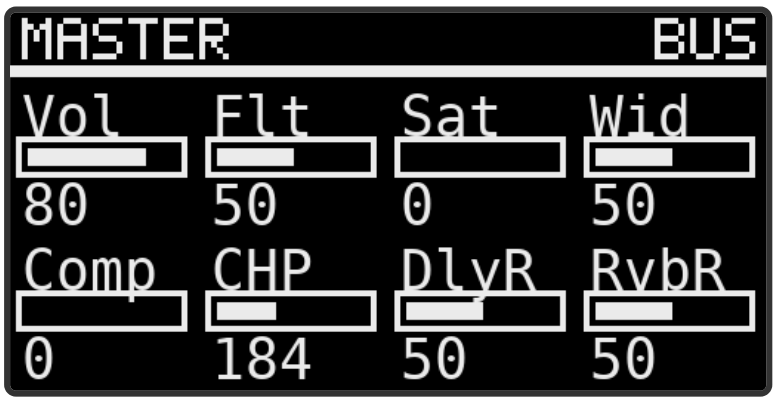

BUS (thick bars)

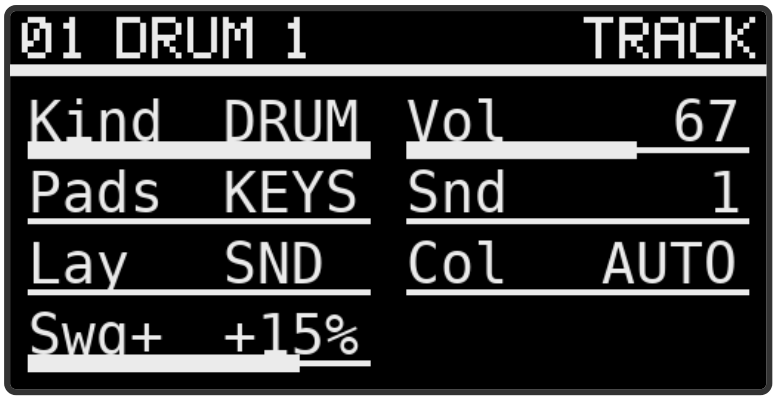


TRACK (list)

7. Sequencing

Step editing

Hold a step and turn the knobs:

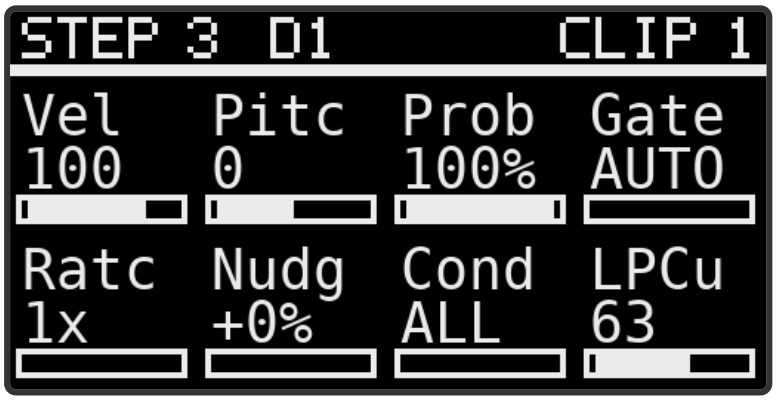

Step edit page

Knob	Parameter
1	Velocity (Shift = coarse)
2	Pitch in semitones (also: hold the step and tap a pad)
3	Probability (100 % … 13 %)
4	Gate length
5	Ratchet 1×–4×
6	Nudge: delay up to 70 % of a step
7	Condition: play only on certain loop passes (1:2, 2:2, 1:3 … 4:4)
8	**Parameter lock**: a per-step value for one parameter of the sound. Shift + knob 8 chooses the target (LPCut, Reso, FltEnv, Tune, Decay, Tone, Drive, Pan, Vol, HPCut). Steps without a lock use the normal knob value.

Other sequencing tools

- **Euclid** (track tab): two pages of eight knobs each (PATTERN + LEVEL, TRIGGER + EXTRA) with hits, rotation, length, mutate, velocity, accent, humanise, nudge, probability, gate, ratchet,

condition, keep, reverse, invert and clear, a seeded random generator and a live preview.

- **Swing+** (TRACK page): extra swing on this track's off-beat steps, up to +25 % of a step on top of the global swing.
- **Fill**: Shift + Capture or EDIT → Fill. One bar of rolls on the last four steps; the pattern restores itself at the loop wrap or on stop.
- **Random** (EDIT menu) obeys the OPTION settings: density, velocity variation, in-key notes, ratchet chance.
- **Undo history** (MORE → UNDO): a list of recent edits; Jog click undoes everything back to the selected entry.
- **Song list** (MORE → SONG): a vertical list of up to 32 entries. Each entry has a scene, 1–32 bars, 1–16 repeats, an optional own tempo, a name (INTRO, BUILD, DROP, BREAK, VERSE, CHORUS, OUTRO) and a way in: HARD, FILL (a drum roll in the bar before) or DRUMS 1ST (only drum tracks for the first 2 bars). The 32 pads are the 32 song steps, coloured by name: press one to select it, or while the song runs to jump there at the end of the bar; Shift + pad inserts a copy, Delete + pad removes it. Knob 8 is OFF / LOOP / ONCE; Shift + knob 1 moves an entry.
- **Recording**: Rec + play; hits are recorded with snap; knob movements can be recorded as automation per sound.



Clip view with mini pattern bars

8. Sounds, samples and kits


- **Sounds:** Jog turns through the category of the current sound; Shift + jog changes category. OPTION → Jog switches between CATEG, ALL and FAV. EDIT → Favorite sound marks a favourite (shown with *).
- **Samples:** WAV files (16/24/32-bit, up to 40 MB) live in */data/UserData/schwung/taktile-samples*. The sample editor (SAMPLE tab) has start, end, mode (one-shot, reverse, loop), gain, attack, release and **Stretch** (0.5×–2× without changing pitch, overlapping Hann grains).
- **File browser:** Shift + Jog click in the sample editor browses **every folder of the Move**. Play previews a file, Jog click loads it. **Shift + Jog click on a folder** loads its first 16 WAV files onto the 16 pads of the drum track.
- **Slices:** Jog click in the sample editor switches to SLICE (up to 16 markers; knob 5 **To Pads** applies them to the 16 pads).
- **Bank:** 64 samples / 40 MB. The sample page shows how full the bank is; a warning appears above 85 %.
- **Kits:** MORE → KIT has 16 user slots and 23 read-only factory kits (TECHNO, HOUSE, TRANCE, PSY, DUB, TRAP, GABBA, LOFI, ELECTRO, ACID, MINIMAL, DNB, HIPHOP, INDUST, 808, RAVE and,

new in 5.2.0, WORLD, TABLA, ORCHESTRA, FOUND, ORGANIC, GAMELAN, CHIPKIT). *Listen* loads a kit and plays the first pads; turn left to restore the old sounds, *Load* keeps it.

- **Resample:** MORE → RESAMP records the master or one track for 1–16 bars into a new sample.



Sample envelope page with Stretch

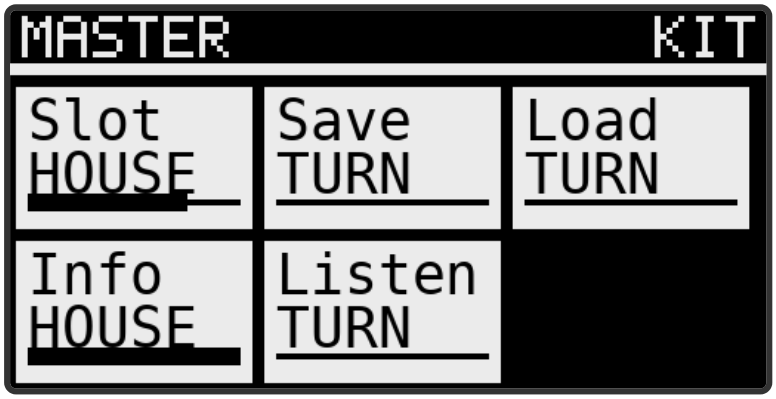

KIT page




Sound list with favourites

9. Effects, sidechain and master

- **Per track:** delay and reverb sends, chorus, phaser, one insert effect (11 incl. off) with amount/rate/depth, and a MIDI effect (arp, chords, octaves …) with amount and parameter.
- **Sidechain:** the *Duck* and *DuckRel* controls on the MOD tab set how strongly and how long a track is ducked. *DuckSrc* chooses what ducks the other tracks: AUTO = kick-family sounds, ALL = every hit of this track, OFF = never.
- **Master (BUS page):** volume, filter, saturation, width, compressor, delay and reverb returns. **Master EQ** (MORE → EQ): low (<250 Hz), mid, high (>3.5 kHz) ±12 dB, plus a **limiter** whose ceiling falls from 1.0 to 0.3; a soft clipper stays at the output.

- **MIDI out:** MORE → SYNC sends MIDI clock and notes of selected tracks to USB-A (channel = track number by default). Knobs 5–8: channel offset, transpose (±24 semitones, Shift = octaves), velocity scale (25–150 %) and the base note of the drum pads (default C1 = 36, Shift = octaves).

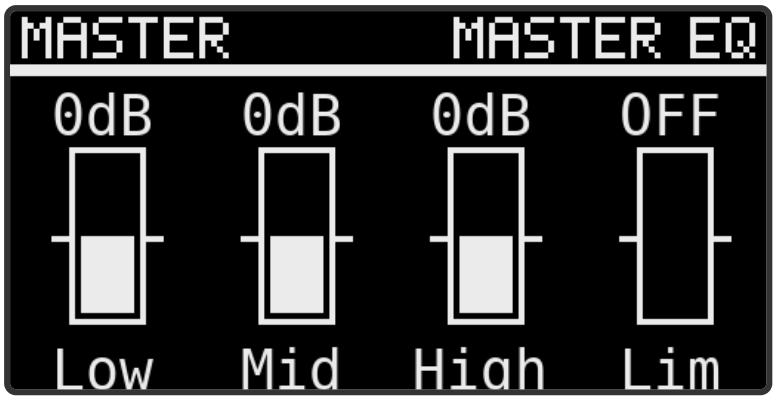

Master EQ and limiter

10. Projects, backups and files

File (in /data/UserData/schwung/)	Content
taktile-state.json	The current state: sounds, patterns, clips, settings, song, per-track colours, random rules, lock targets, favourites.
taktile-backup-0…5.json (+ .idx)	Rotating automatic backups taken at start, on exit and before New. PROJECT → Revert restores the latest.
taktile-proj-1…8.json, taktile-proj-undo.json	Eight project slots and a one-step undo for New/Load.
taktile-kits.json	The 16 user kits.
taktile-samples/ (+ .idx)	Imported WAV files; slot numbers stay stable.
taktile-error.log	Errors caught by the UI (the module stays open and shows TAKTILE ERROR).

Patterns are stored as 12 hex characters per step (the last byte is the parameter lock); older saves with 10, 6 or 4 characters still load.

11. Technical notes for Schwung developers

Layout

- *module.json*: id *taktile*, *component_type: overtake*, *api_version 2*, *ui.js* + *dsp.so*; capabilities *claims_master_knob*, *suspend_keeps_js*, *suspend_self_managed*.
- *src/pad_studio.c* (~2,500 lines): the whole sound engine and sequencer, built for aarch64 with *scripts/build.sh*; *ui.js* (~2,300 long lines): views, menus, persistence.
- The DSP renders 128-frame blocks; the sequencer runs in the audio thread on a sample-accurate clock, so timing does not depend on the UI tick (about 44 Hz).

Host calls used

host_module_set_param / *host_module_get_param* (all DSP communication), *host_read_file* / *host_write_file* (state, kits, projects), *host_suspend_overtake* (background), *host_exit_module* and *host_return_to_menu* (fallbacks), *move_midi_internal_send* (LEDs) and, on the DSP side, *midi_send_external* (clock and notes).

Parameter protocol (UI → DSP)

- Lane parameters: *pNN_key* (NN = 1..80: 16 synth/track lanes plus 4 drum tracks × 16 sounds), e.g. *p03_cut*; 53 lane parameters (*PP_**), 21 master parameters (*G_**).
- Sequences: *st* (one step) and *seqd* (chunks of 16 steps, 12 hex chars each); *plkt* sets the lane parameter driven by a lane's parameter locks. The UI keeps a send queue and flushes a few messages per tick.
- Sample bank: *brdir* / *br_N* (file browser), *brimport*, *brprev* (audition, mixed in after the master chain), *smp_N*, *smpmem*.
- Track-level parameters (effects, sidechain, swing+) are stored on the track lane, sound parameters on the sound lane.

Engine facts

- Sample voices with linear resampling, loop crossfade, optional two-grain time-stretch; sample bank of 64 slots / 40 MB.
- Master chain: filter → width → saturation → compressor → 3-band EQ → volume → limiter → soft clip.
- Parameter locks apply at step trigger: the lane parameter takes the step value, steps without a lock restore the base value (the base follows manual edits).

Testing

The UI was run headless in Node with a mock of the Schwung host (fuzzing with 60,000 random pad/button/knob events, scripted feature checks, loading of states saved by older versions). The DSP was compiled natively with ASAN/UBSAN and fuzzed with 400,000 random parameter, step and MIDI events, plus targeted tests for sidechain source, EQ, limiter, stretch, locks and swing.

12. Known limits and open questions

- At most 4 drum tracks. Drum pan is per sound, not per track. Samples are mixed to mono on import.
- Time-stretch is granular: percussive material and very low notes can sound grainy; reverse samples are not stretched.
- The sidechain is a ducking envelope triggered by hits, not an audio-rate sidechain input.
- Parameter locks cover ten lane parameters; the base value is tracked on manual edits and on clip changes.
- **Questions for the Schwung maintainer:** (1) Is *suspend_keeps_js* + *suspend_self_managed* the intended way to keep a sequencer playing in the background, and how should a module come back from the background? (2) Is there a preferred place and size limit for module data (the state file can reach several hundred KB)? (3) Can an overtake module read the Move's own samples or projects directly, or only via the file system as done here?

13. What is new in 4.9: sound folders, menu, parameter names

5.4.1 – what is new:

- **SYNTH / SAMPLE tile reachable again:** with the new EQ page the tabs had shifted by one, so the jogwheel no longer reached the last page (SYNTH or SAMPLE). Fixed.
- **Note Repeat can be switched off:** menu, group SYSTEM, “Note repeat on/off”. Off = the REPEAT pad mode is skipped when switching pad modes, and tracks currently in repeat mode go back to PITCH. The setting is saved.

5.4.0:

- **EQ per track and drum pad:** new “EQ” page (tab after FILTER, turn the jogwheel to reach it). Three knobs per sound: Low (shelf, 100 Hz), Mid (bell, 1 kHz), High (shelf, 8 kHz), each ±12 dB, centre = off. On drum tracks the EQ belongs to the selected pad, on synth tracks to the track. It is part of the sound and is saved with clips and kits. At the centre position it costs no CPU.

5.3.4:

- **Step window:** holding a step now opens the window with velocity, pitch, probability, gate, ratchet, nudge and condition on the sound pages too (SOUND, SYNTH, FILTER, MOD, FX, SAMPLE), not only on the SEQ page. Knobs 1-8 then edit the step.

5.3.3:

- **Undo for everything:** Undo (and Shift + Undo = Redo) now also reverts live-recorded takes, knob moves, sound changes, random sounds, tempo and swing, master knobs and mutes, not just step edits. Turning the same knob (within 1.5 seconds) counts as one step, and a whole live take counts as one step. The undo history (menu, EDIT CLIP) lists every step.

5.3.2:

- **MIDI monitor:** menu, group SYSTEM, “MIDI monitor”. Shows every message the module receives from the Move (e.g. “CC 56 VAL 127”), so you can check whether and with which number a button arrives. Back leaves the monitor.

5.3.1:

- **All loops 16:** menu, group EDIT CLIP, “All loops 16” resets every track and every drum sound to the standard length of 16 steps. Recorded steps after step 16 stay stored but are not played. When you record into an empty clip, the length still grows by 16 steps automatically if you keep playing into the last beat.

5.3.0:

- **Scope page:** HOME > MORE > SCOPE (or menu, group SYSTEM, “Scope”). Shows the master output live as a waveform (stably triggered, with auto gain and a CLIP warning) and as 8 frequency bands from bass to treble. Jog click switches between wave + bands, wave only and bands only.
- **Start animation on/off:** menu, group SYSTEM, “Start animation on/off”.

- **Idle screen:** menu, SYSTEM, “Idle screen on/off”. After 5 minutes without input the animation plays once and the display goes black (OLED protection). Any button press wakes it.
- **Invert display:** menu, SYSTEM, “Invert display”. All three settings are saved with the project.

5.2.5:

- **Curve preview:** while you turn Decay, Attack, Cutoff, Resonance, Filter Envelope (FEnv), Duck, DuckRel or Drive, a small box at the top right briefly shows the shape of the curve (envelope, filter response, duck course or drive transfer curve).

5.2.4:

- **Sound randomizer:** menu, group RANDOM + FEEL: “Random sound” (mild) and “Random sound wild” vary the tone parameters of the current sound (synth: cutoff, resonance, filter envelope, detune, sub, attack, decay, tone, drive, wave; drum: tune, decay, tone, drive, crush, ring). Volume, pan, sends and sound type stay untouched. “Undo sound” brings the previous sound back.

5.2.3:

- **Start animation:** when the module opens, the letters TAKTILE drop in, a line sweeps over the step row and the pads and steps light up in a wave (about 3 seconds). Any button or pad press skips it.

5.2.2:

- **Live notes too high:** when the Move pads go straight to Taktile, the engine converted the pads to scale degrees without the chosen pad layout (8 degrees per row instead of 3). Recorded notes were right, so playback sounded lower than live playing. Both now use the same layout (MOVE, SEQ, OCT, CHR). *Checked on the computer with all four layouts, not on the real Move.*
- **File browser (SAMPLE → Shift + jog click):** folders always come first and are no longer cut off (up to 200 folders and 280 files per folder; before, 160 entries in total, and folders could drop out). File names up to 95 characters, .wav in any capitalisation. A folder without access says NO ACCESS instead of empty and the browser goes one level up. If entries are hidden (names too long, limit), a message shows how many. Only WAV files are listed; hidden folders starting with a dot stay hidden. *Checked on the computer with test folders, not on the real Move.*

5.2.1 – what is new:

- **Kick rumble:** the MOD page of a drum pad has **Rumble** (amount) and **RumbleTail** (length), replacing Arp and Rate, which do nothing on drums. The kick is low-passed (around 130 Hz), sent through a dark reverb and ducked by the kicks themselves, so the bass tail swells between the hits. All pads with Rumble > 0 feed the same reverb. The TECHNO and PSY kits have it slightly on. *Measured on the computer (level, no overload, ducking), not listened to.*
- **Sound browser on drum pads:** changing the sound of a drum pad opens the matching category straight away (a kick sound in KICK, a hi-hat in HATS + CYMBALS …) on the current sound. If the sound fits no category (a marimba preset, say), the role of the pad decides.
- **Loop + jogwheel:** the length changes on every page now and wins over a held track button. A short hint appears when you press Loop.
- **Pad colours:** with yellow track colours (track 3, for example) the root notes light white instead of yellow so they stand out.

5.2.0 – what is new:

- **Seven new factory kits built from the modal drums:** WORLD, TABLA, ORCHESTRA, FOUND (found objects such as pipe, tin can, anvil), ORGANIC, GAMELAN and CHIPKIT (with the chip drums). They follow the earlier factory kits in the KIT menu and appear under KIT STYLES in the sound browser, 23 factory kits in all. *Levels come from the single sounds that were already measured; I have not listened to the kits.*
- **Euclid with eight knobs:** two pages (PATTERN + LEVEL, TRIGGER + EXTRA) of eight knobs instead of four pages of four. The pattern stays visible underneath.
- **MIDI out with eight knobs:** new are channel offset, transpose, velocity scale and the drum base note. Old projects load unchanged (channel = track number, no transpose, 100 %, note 36). *Checked on the computer (channels, notes and velocities sent are correct); not tested with real devices.*

5.1.0 – what is new:

- **NEW ENGINES – 147 new presets from five new sound generators** (sound browser → NEW ENGINES). They are made differently from the older sounds on purpose: **Modal** (marimba, vibes, xylophone, kalimba, glockenspiel, tubular bells, church bell, steel drum, harp, nylon guitar, koto, timpani, tabla, bongo, toms, wood blocks, metal plates; built from ringing resonators like a real body), **FM** (electric pianos, organs, basses, bells, plucks, metal; three operators with feedback and three routings), **Vocal** (choir ah/oh/ee/oo, male and female voice, wow, talkbox, robot, whisper; a voice source through three formant filters), **Chip** (pulse 12.5/25/50 percent, PWM, 4-bit crunch, arpeggios, coin, power-up, laser, noise as hat, snare and kick) and **Morph** (two real AKWF waveforms that fade into each other: basses, leads, pads, keys). They respond to decay, tune, filter and effects like all other sounds. *The presets are checked on a computer (pitch, level, decay, memory tests) but not listened to; please listen critically and tell me which ones you do not like.*

5.0.0 – what is new:

- **Song mode extended:** per entry repeats (1–16), own tempo, a name with colour and a transition (hard, fill or drums first). The 32 pads are the song steps: press to jump at the end of the bar, Shift + pad inserts, Delete + pad removes.
- **Silent pads after a sound or kit change:** new sound data now reaches the engine immediately, before a pad plays, and a whole kit loads at once. Before, it could arrive late. *Tested on a computer only, not on a real Move. If it still happens please note the kit and sound.*
- **More difference between presets:** similar presets were re-rolled automatically whenever that increased the distance to their nearest neighbour. Measured, not listened to.
- **RECENT in the sound browser:** the sounds you chose last are a folder at the top, before the favourites.
- **New shortcuts:** Shift + Copy + track button copies the whole track, Copy + Sample button makes a variation, Shift + Rec toggles the metronome.
- **CPU warning:** from 75 percent load a blinking "CPU nn!" shows top right and a message suggests fewer effects or pads.

4.9.19 to 4.9.25 – combined:

- **MIDI effects per drum pad:** on drum tracks every pad has its own MIDI effect (effect, amount, param). Old projects are converted on load.

- **Finer steps: Probability** has 32 levels (about 3 % each), **Nudge** 29 levels (2.5 % each, up to 70 %), both with only 4 clicks per level on the knob. Old projects are converted. **Fixed:** knob 6 on the MIDI FX page raised an error.
- **New sound sources:** presets now use 640 real single-cycle waveforms from the free **AKWF (Adventure Kid Waveforms, CC0)** collection. Every bass, lead, pad, pluck, stab, e-piano, organ and kick/808/tom/conga preset has its own wave, plus its own formant resonance and filter character. All preset levels were re-matched. The Wave knob (1–15) still overrides the preset wave.
- **Drum pads:** every drum pad starts with 16 steps.
- **Scenes in song mode:** a scene is **clip number N on every track** (column N of the clip view). Create one by filling clip N with steps on each track. Launch scenes with **Loop + step 1–8**; in the song, knob 2 “Scene” picks the scene. Tracks without notes in that scene pause.
- **Finer probability:** 16 levels (6.25 % per step) instead of 8. Old projects sound unchanged.
- **Pad colours corrected:** drum pads glow steadily in their family colour (kick red, hats yellow …) without blinking. A pad **pulses (briefly white) only at the moment a note is triggered on it**; same for synth pads and the clip view.
- **New song mode:** vertical list (up to 32 entries, up to 32 bars each) with insert, delete, move and loop/once; knobs 5–8 = Insert, Delete, Move, Loop; the Delete button removes the selected entry.
- **Slices to pads:** on the SLICE page knob 5 **To Pads** puts the slices on the drum pads (before: only Shift + Jog click).
- **Eight knobs everywhere:** SAMPLE, ENV, SLICE, SYNTH, MULTI, MIDI FX, DUCK, delay/reverb/chorus/phaser pages, EQ, KIT, PROJECT, RESAMPLE, TEMPO and more now use all eight knobs (Euclid and MIDI OUT have four per page).
- **Delete on drum tracks:** Delete + sound pad clears the sound's steps; if there are none the sound is reset. Delete + note pad removes all steps of that pitch.
- **Muted drum pads** now glow dimmed instead of going dark. **Exit dialog:** only BACKGROUND and CLOSE (Back = stay).

4.9.19:

- **Effects per drum pad:** on drum tracks delay, reverb, chorus, phaser, insert effect and all times now belong to the single pad. One pad can have reverb while the next stays dry. Older projects are converted on load (every pad gets the former track effects). More active pad effects need more CPU; the CPU meter in OPTIONS shows it.
- **Full filter page:** three new knobs – **FltDecay**, **KeyTrack**, **Mode** (LP/BP/HP). All eight knobs are in use.
- **New tab order:** SOUND, FILTER, MOD, FX, FX 2, EUCLID, MIDI FX, SYNTH/SAMPLE last.
- **Presets sound different:** each of the 1063 presets now has its own character (filter, saturation, level, waveform). Similar presets were pulled measurably apart (measured on the computer, not listened to on the Move).
- **Pad colours:** on drum and synth tracks all pads have the track colour; **sequenced pads pulse** in time, roots have their own colour, the hit flashes white. In the clip view a playing clip flashes only when it fires a note.

4.9.18:

- **Loop length:** new tracks start with **16 steps** (drum and synth). **Auto length:** when you record into an empty clip and, from the second pass on, play into the last two steps, the loop grows by

16 steps (up to 128). Changing the length by hand or ending record switches it off. **Step parameters** are slower still (velocity 4, pitch 8, the rest 10 clicks per step).

- **New insert effects:** DRIV and FOLD were replaced by **STUT** (stutter) and **REV** (reverse). Also since 4.9.14: panic with Shift + Play, browser preview only while stopped and after a short rest, battery readout removed, root and sequenced notes in a clearly different colour, fixed hanging notes in Poly mode.
- **Mute by pad: hold Mute + pad**: on a drum track this mutes the single drum sound (the pad goes dark; the sequencer skips it), in the session view the track, on synth tracks the current track. On the MIX page the first 16 pads are the track mutes directly.
- **Jogwheel:** on the sequencer page **turning** walks through the track pages (SOUND, SYNTH, FILTER, MOD, FX …), **clicking** opens the folders and presets. On every menu page (tempo, swing, key/scale, master, delay, reverb …) the jogwheel sets the **first parameter**, just like knob 1.
- **Presets only with a click:** in the folder list turning only moves the highlight; the sound (or kit) is taken when you **click**.
- **More sounds:** now 1063 sounds. Synth folders: BASS (Sub, Deep + Dub, Roll + Goa, Acid, Reese, FM, Wobble, Techno + House, DNB, Synth Bass), LEAD (Hoover, Acid, Trance, Psy, Retro, Soft, Sync), ARP + PLUCK, STABS + CHORDS (Dub, House, Rave, Trance), PADS + ATMOS, SUPERSAW, KEYS + ORGAN, BELLS + MALLET, STRINGS + CHOIR, FX (Riser, Sweep, Downlifter, Impact), PERCUSSION (with Glitch and Laser).
- **Drum kits:** every factory kit now shapes its sounds on its own (drive, tone, decay, crush, room depending on the style): TECHNO hard and dry, HOUSE warm, DUB with reverb and echo, GABBA heavily distorted, LOFI with crush, MINIMAL short and dry, TRAP with long 808s, INDUST dirty and so on.
- **Slower step parameters:** velocity changes by 1 per 2 clicks, pitch per 4, probability/gate/ratchet/nudge/condition per 6 clicks, lock value per 3.
- **Pad lights:** on synth tracks the pads of the notes the sequencer plays in the clip light up; the note sounding right now flashes white. On drum tracks the sounds with steps are bright (empty ones dimmed), the one playing now flashes white.

4.9.11 – parameter check: I tested every parameter on every page (value changes, sound changes). Found and fixed: **Arp and Rate** (MOD page) did nothing before. Now a synth track with Arp ≠ Off arpeggiates while you hold a note pad, and also every sequenced step for the length of the note (Rate = 1/8, 1/16, 1/16T, 1/32; patterns Up, Down, UpDn, Rand, Roll follow the scale). Drum tracks do not arpeggiate. Feedback of actions such as ScaleQ (“SCALE Q 4 NOTES”), sample normalize, slice auto, resample and song on/off now stays visible. All other parameters work as intended.

4.9.10: On the PROJ and KIT pages the feedback (SAVED, LOADED, NEW PROJECT, BACKUP RESTORED …) now stays visible; before it was overwritten at once by “TURN >”, so it looked as if nothing happened. Save, Load, New and Revert: turn the knob to the right.

4.9.9: There are now 32 project slots instead of 8 (PROJ page, knob 1 picks the slot).

4.9.8 – how to open everything:

- **Jog click** (SEQ/SOUND): preset list.
- **Shift + jog click** (anywhere): HOME with all menus (SOUND, TRACK, MIX, BUS, EDIT, MORE).
- **Menu button**: grouped menu (Sound, Track, Effects …).

- **Shift + step 1–8**: direct jumps (Clips, Options, HOME, Tempo, Metronome, Swing, Pad mode).
- **Jog click** on other pages: HOME / back to the last tab. Tap tempo: Menu → Tap tempo, or Shift + jog click on the TEMPO page.

4.9.7: Jog click on the SEQ or SOUND page opens the preset list directly (folders, then sounds) for synth tracks and drum kits. HOME is now **Shift + step 3** (other pages keep the old jog click). Sounds no longer ring on for ever: after about 2 seconds (Decay 50 %) they fade out quickly; more Decay keeps them longer (up to about 6 s), less makes them shorter.

4.9.6: Picking a new sound in the browser (or wizard) resets the filter to fully open (LPCut 100, HPCut 0, Reso 0, FltEnv 0); cancel restores the old filter. All menu pages (MOD too) now share one look: black background, white text.


4.9.5: On the SOUND page **Vol** is now last (after Type, Tune, Dcy, Tone, Drv, Pan, Poly). Turning a knob now shows its message only in the header line (name left, value right, bar on the divider), so the page below stays visible.

Sound and kit browser


Shift + jog turn (SEQ or SOUND page) or **HOME → EDIT → SOUND → Sound / kit browser** opens a folder list. Turn the jog to move up and down, **click** to open a folder or keep a sound, **Back** goes one level up (inside a sound list it restores the previous sound), Menu cancels.

- **Synth track:** BASS (Sub, Roll, Acid, Reese, FM, Synth) · LEAD (Pluck, Hoover, Lead) · CHORD + PAD (Stab, Pad, Bell, Supersaw, Keys + Strings) · FX · PERCUSSION · KICK · SNARE + CLAP · HATS + CYMBALS · FAVORITES · MY SAMPLES · ALL SOUNDS.
- **Drum track:** KIT STYLES (16 styles: Techno, House, Trance, Psy, Dub, Trap, Gabba, Lofi, Electro, Acid, Minimal, DNB, Hip-hop, Industrial, 808, Rave, plus your own kits) and folders for single sounds of the selected pad.

While you turn inside a sound list the sound is auditioned immediately; for kits the whole kit is loaded and a few hits are played. Five rows are shown, the current one inverted.

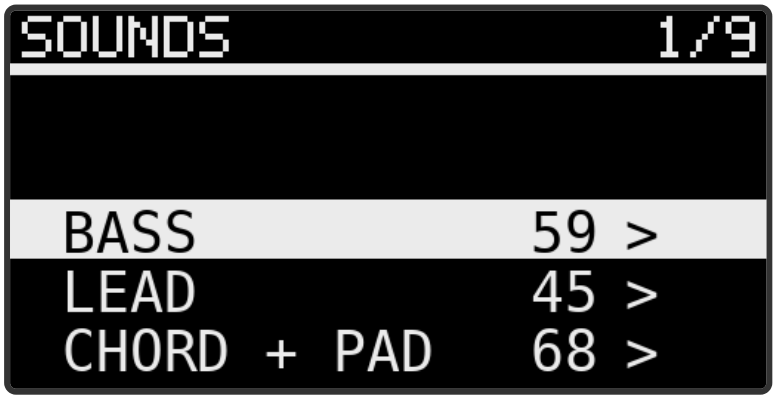

Folders

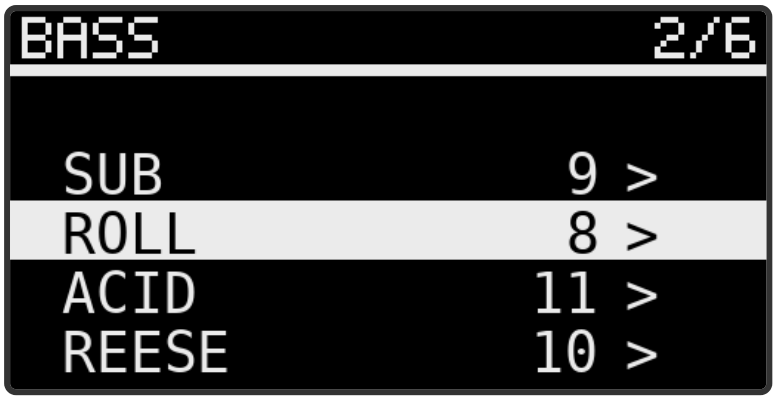

Sub-folders




Sounds



Kit styles

Grouped menu

The menu is sorted into groups: PLAY · EDIT CLIP · RANDOM + FEEL · SOUND · GO TO PAGE · SYSTEM. Click opens a group, Back returns to the group list.

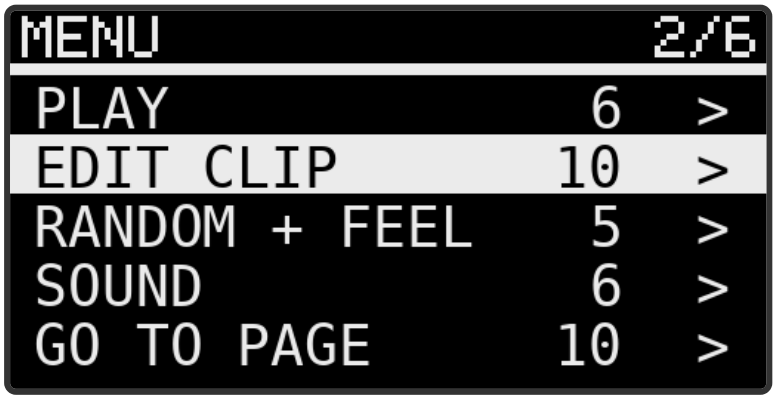


Menu: groups



Menu: items

Full parameter names

Touching or turning a knob shows the full parameter name, for example **DELAY TIME** instead of “DTim”, with value and bar.

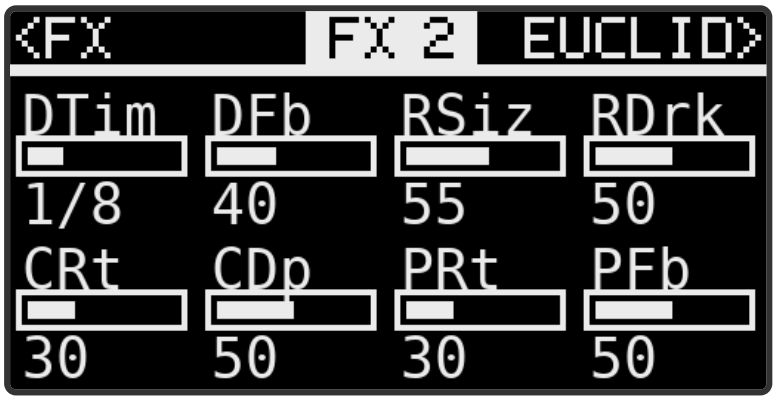

Parameter while turning

Sound and sample list on the knob

On the SOUND page **knob 1 (Type)**, on the SAMPLE page the **file knob**, opens a five-row list you scroll from top to bottom. For sounds the list continues into the next category at the end of one.

Octave with Up / Down

In the track view (SEQ and sound pages) the **Up / Down arrows** shift the pads by an octave (−3 to +3, per track). **Shift + arrow** still selects the track above / below; in the clip view the arrows keep scrolling through the tracks.

Note repeat with speed pads

In REPEAT mode (Shift + step 8) the **16 pads on the right are the speeds**, from bottom-left (slow, 1/2) to top-right (fast, 1/128), including dotted and triplet values. The chosen pad is lit white; the title bar shows “RPT 1/16” and a message appears when you tap a pad, so nothing has to be typed in. The **16 sound pads on the left** then repeat at that speed while held. Synth tracks use the same speed; set it with Shift + step 11 (Rate).

Start wizard for new tracks

A new project (first start or HOME → MORE → PROJECT → New) begins with **16 empty tracks**. The first time you select each track Taktile asks **Drum or Synth**. For **Drum** a second window shows the **kit styles** (turn = audition, click = keep). For **Synth** the second window shows the **categories**, then a third one (a sub-folder for bass, lead and chord) shows the **presets**. Back skips a window. The knobs stay usable meanwhile.

340 new presets and sub-folders

There are now **1063 sounds**. The new ones come in families (for example KckTch1–8 techno kicks, SnrTch, ClpDry, HatCl01–10, TomSet, FMPerc, AcidBs, SynBs, Pluck01–12, Pad01–14, Stab, Bell, Super, EPno, Strng); inside a family the numbers run from **1 = short / low / dark** to the highest = **long / high / bright**. KICK, SNARE + CLAP, HATS, PERCUSSION and FX now have sub-folders too (Techno, House, Trance, Psy, Hard, Dub, 808; closed / open hats; toms, congas, FM, zaps; riser, sweep, impact). The sound list no longer auditions by itself: choose a sound, then play the pads. Old projects load unchanged.

Slower step parameters

With a step held, probability, gate, ratchet, nudge and condition change only every **three clicks**, pitch every two, and the lock value at half speed.

Other changes

- Shift + step 8 switches note repeat on and off;
- Delete releases itself after inactivity; pressing it again turns it off at once.
- Step LEDs stay visible on every page.
- A new project and a cleared track ask Synth or Drum.
- CompHP was removed.
- Holding a step button on a page other than SEQ no longer captures the knobs (they edit the page parameters again).

