LTE DCI Analysis


LTE DCI Analysis analyzes detailed data per TTI. This analysis function enables you to monitor the allocation of LTE resources in detail.

- Supported parameters as of now.
  - Qualcomm Lte/LteAdv.ML1 GM Tx Report(Per TTI)
  - Qualcomm Lte/LteAdv.ML1 DCI Information Report(PerTTI)
  - Qualcomm Lte/LteAdv.ML1 PDCCH PHICH Ind Report(PerTTI)

- Parameters to be supported soon.
  - Qualcomm Lte/LteAdv.ML1 PDSCH Stat Indication(PerTTI)

Following step by step explanation guides you how to monitor and analyze LTE UL RB Allocation.

1. Select main Menu bar – [**Tools**] – [**Analysis**] – **[LTE/5G]** - [**LTE DCI Analysis**].
2. [**New List**] screen appears.

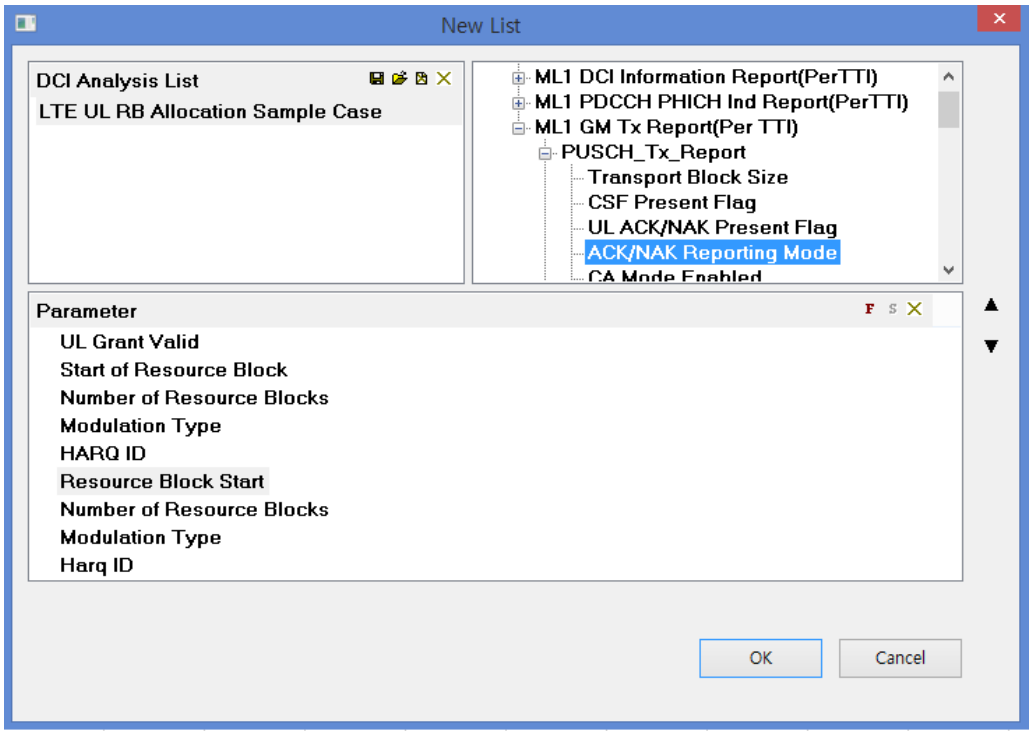

3. Create a new DCI Analysis parameter list.

   The created parameter list can be saved in a separate file, and imported for the other analysis projects.

© Copyright by Accuver Co., Ltd.

a. Click [**New**] icon for [**DCI Analysis List**] field.

b. Enter a name for new parameter list in the entry field.


c. Drag and drop parameter you want to analyze from the parameter tree on top right to the parameter list at the bottom.

d. Dropped parameters are added in the parameter list at the bottom.

e. Click [**OK**].

4. Parameter of Per TTI is re-processed.

5. Result window appears showing re-processed data.

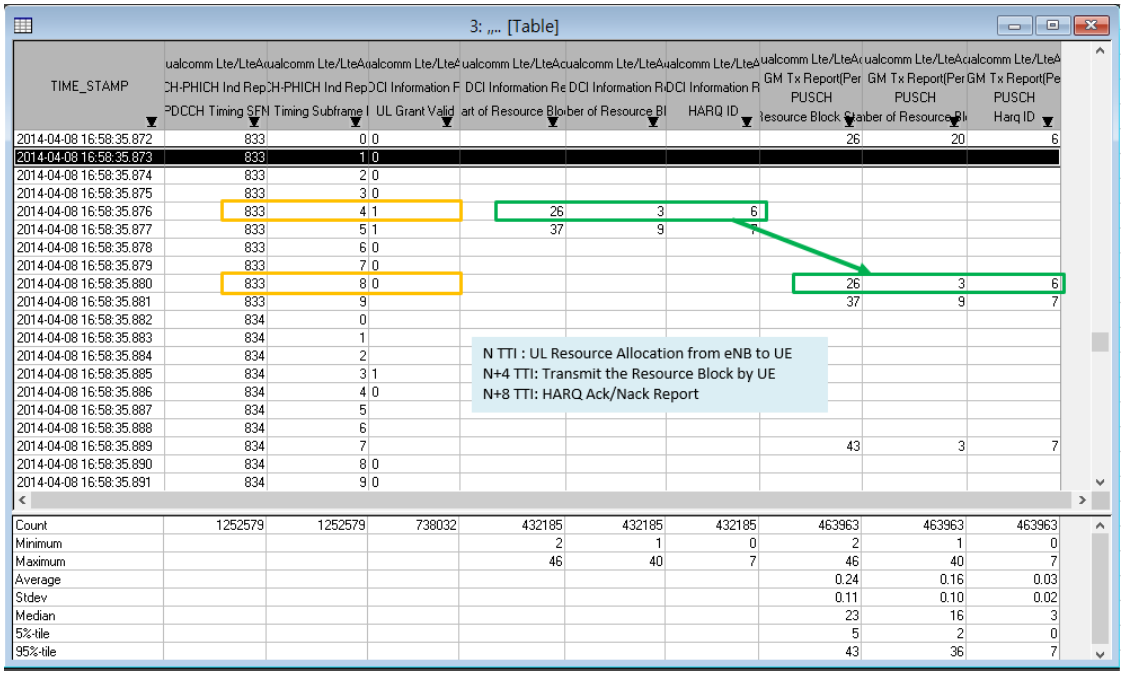

6. The result window does not saved and cannot be re-opened.

© Copyright by Accuver Co., Ltd.