INTERNAL USE | PROPOSED TARGETS

Oversized Hoodie

Interchangeable back panel and hood | S to XXXL | XL base

Units: cm, measured flat without stretching. **Panel:** 30 cm wide x 40 cm high on every size.

1. Garment measurements

Size	Chest width (flat)	Body length	Shoulder width	Sleeve length	Hood height (estimated)
S	63	63	50	67	38.5
M	66	66	53	68	39
L	69	69	56	69	39.5
XL	**72**	**72**	**59**	**70**	**40**
XXL	75	75	62	71	40.5
XXXL	78	78	65	72	41

Highlighted row: XL base. Hood values are estimates; the other columns retain the chosen garment targets.

2. Interchangeable back panel

Measure both positions vertically from the **center-back hood/neck attachment seam**. Center the panel horizontally.

Size	Panel width	Panel height	Neckline to panel top	Neckline to panel bottom
S	30	40	11	51
M	30	40	14	54
L	30	40	17	57
XL	**30**	**40**	**20**	**60**
XXL	30	40	23	63
XXXL	30	40	26	66

The 30 x 40 cm panel and XL top offset of 20 cm are user-supplied. Other offsets are provisional. Bottom = top + 40 cm.

Increments used

+3 cm: chest, body, shoulders and proposed panel top offset. **+1 cm:** sleeve. **+0.5 cm:** estimated hood height. Panel dimensions stay 30 x 40 cm.


Placement assumes usable center-back length also increases by 3 cm per size. Check the actual back and rib clearance using the method on page 2.

Placement and construction

XL reference | Schematic views, not to scale

XL BACK PLACEMENT


Hood lifted to expose the neckline

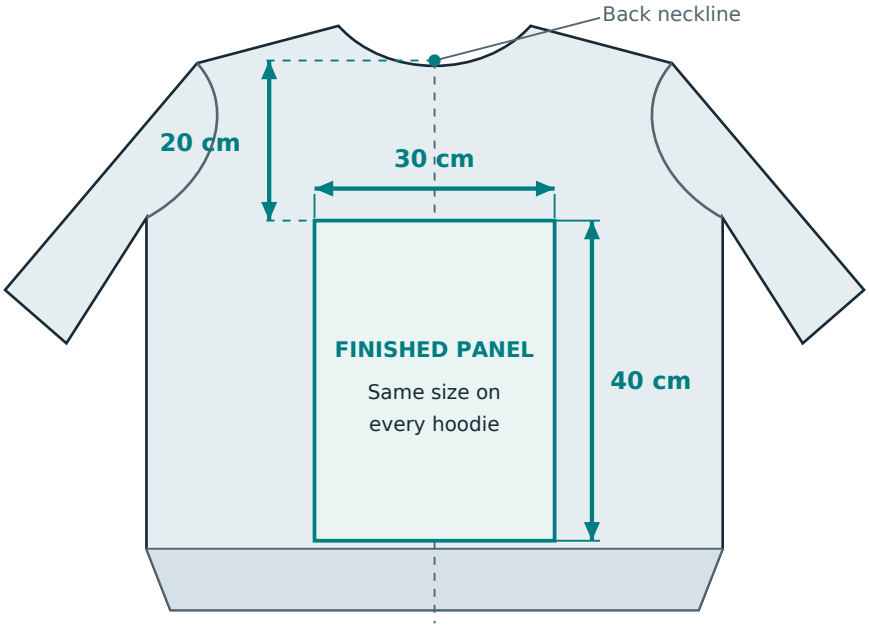

Center the panel on the back

HOOD HEIGHT

Folded flat in side profile

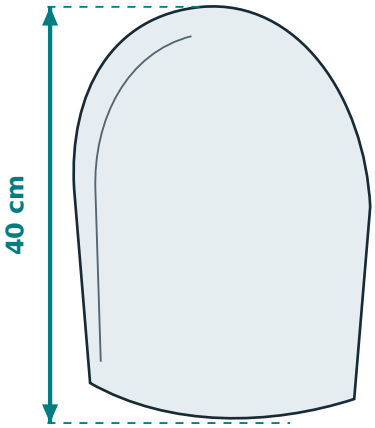

Attachment / base seam

XL estimate: 40 cm

Straight height

Define the reference points

Panel position: lift the hood aside, then measure from the center-back hood/neck seam to the finished panel's top edge. Body length starts at the high shoulder point beside the neck, so it cannot establish exact panel-to-hem clearance.

Hood height: fold the hood flat along its center seam with one side facing up. Measure the straight overall height from the attachment/base level to the highest crown point. This is not a curved seam length.

Confirm the placement on samples

Measure **U** from the center-back hood/neck seam to the **top edge of the bottom rib**, for each size. To retain the XL sample's actual clearance:

Top offset = 20 + (U for that size - U for XL).

Clearance above rib = U - top offset - 40. Check S and XXXL with the panel attached and the hood lowered naturally; hood height alone does not determine panel coverage.

Keep every panel compatible

Use the same finished 30 x 40 cm panel, orientation, fastener type and attachment positions on every size. The maker should specify raw cut sizes, seam allowances, attachment borders and the hood's full pattern dimensions separately.

Hood estimate and source

The estimated XL height is **40 cm**, graded by **0.5 cm per size**. Create Fashion Brand's oversized technical pack lists 39.5 cm for its XL/XXL group. This is a scale reference, not a fit guarantee or validation of this project's measurement method. Check an XL hood sample before grading production.

Source: Create Fashion Brand, hoodie technical pack, page 2