


tb_mpdda_dc: DC transfer of d2s_mpdda, tt 27 C, load 1 kOhm to vref || 100 pF

DUT and bias from the schematics in this directory; code block = the deck's .lib/.param/.save lines and its .control section

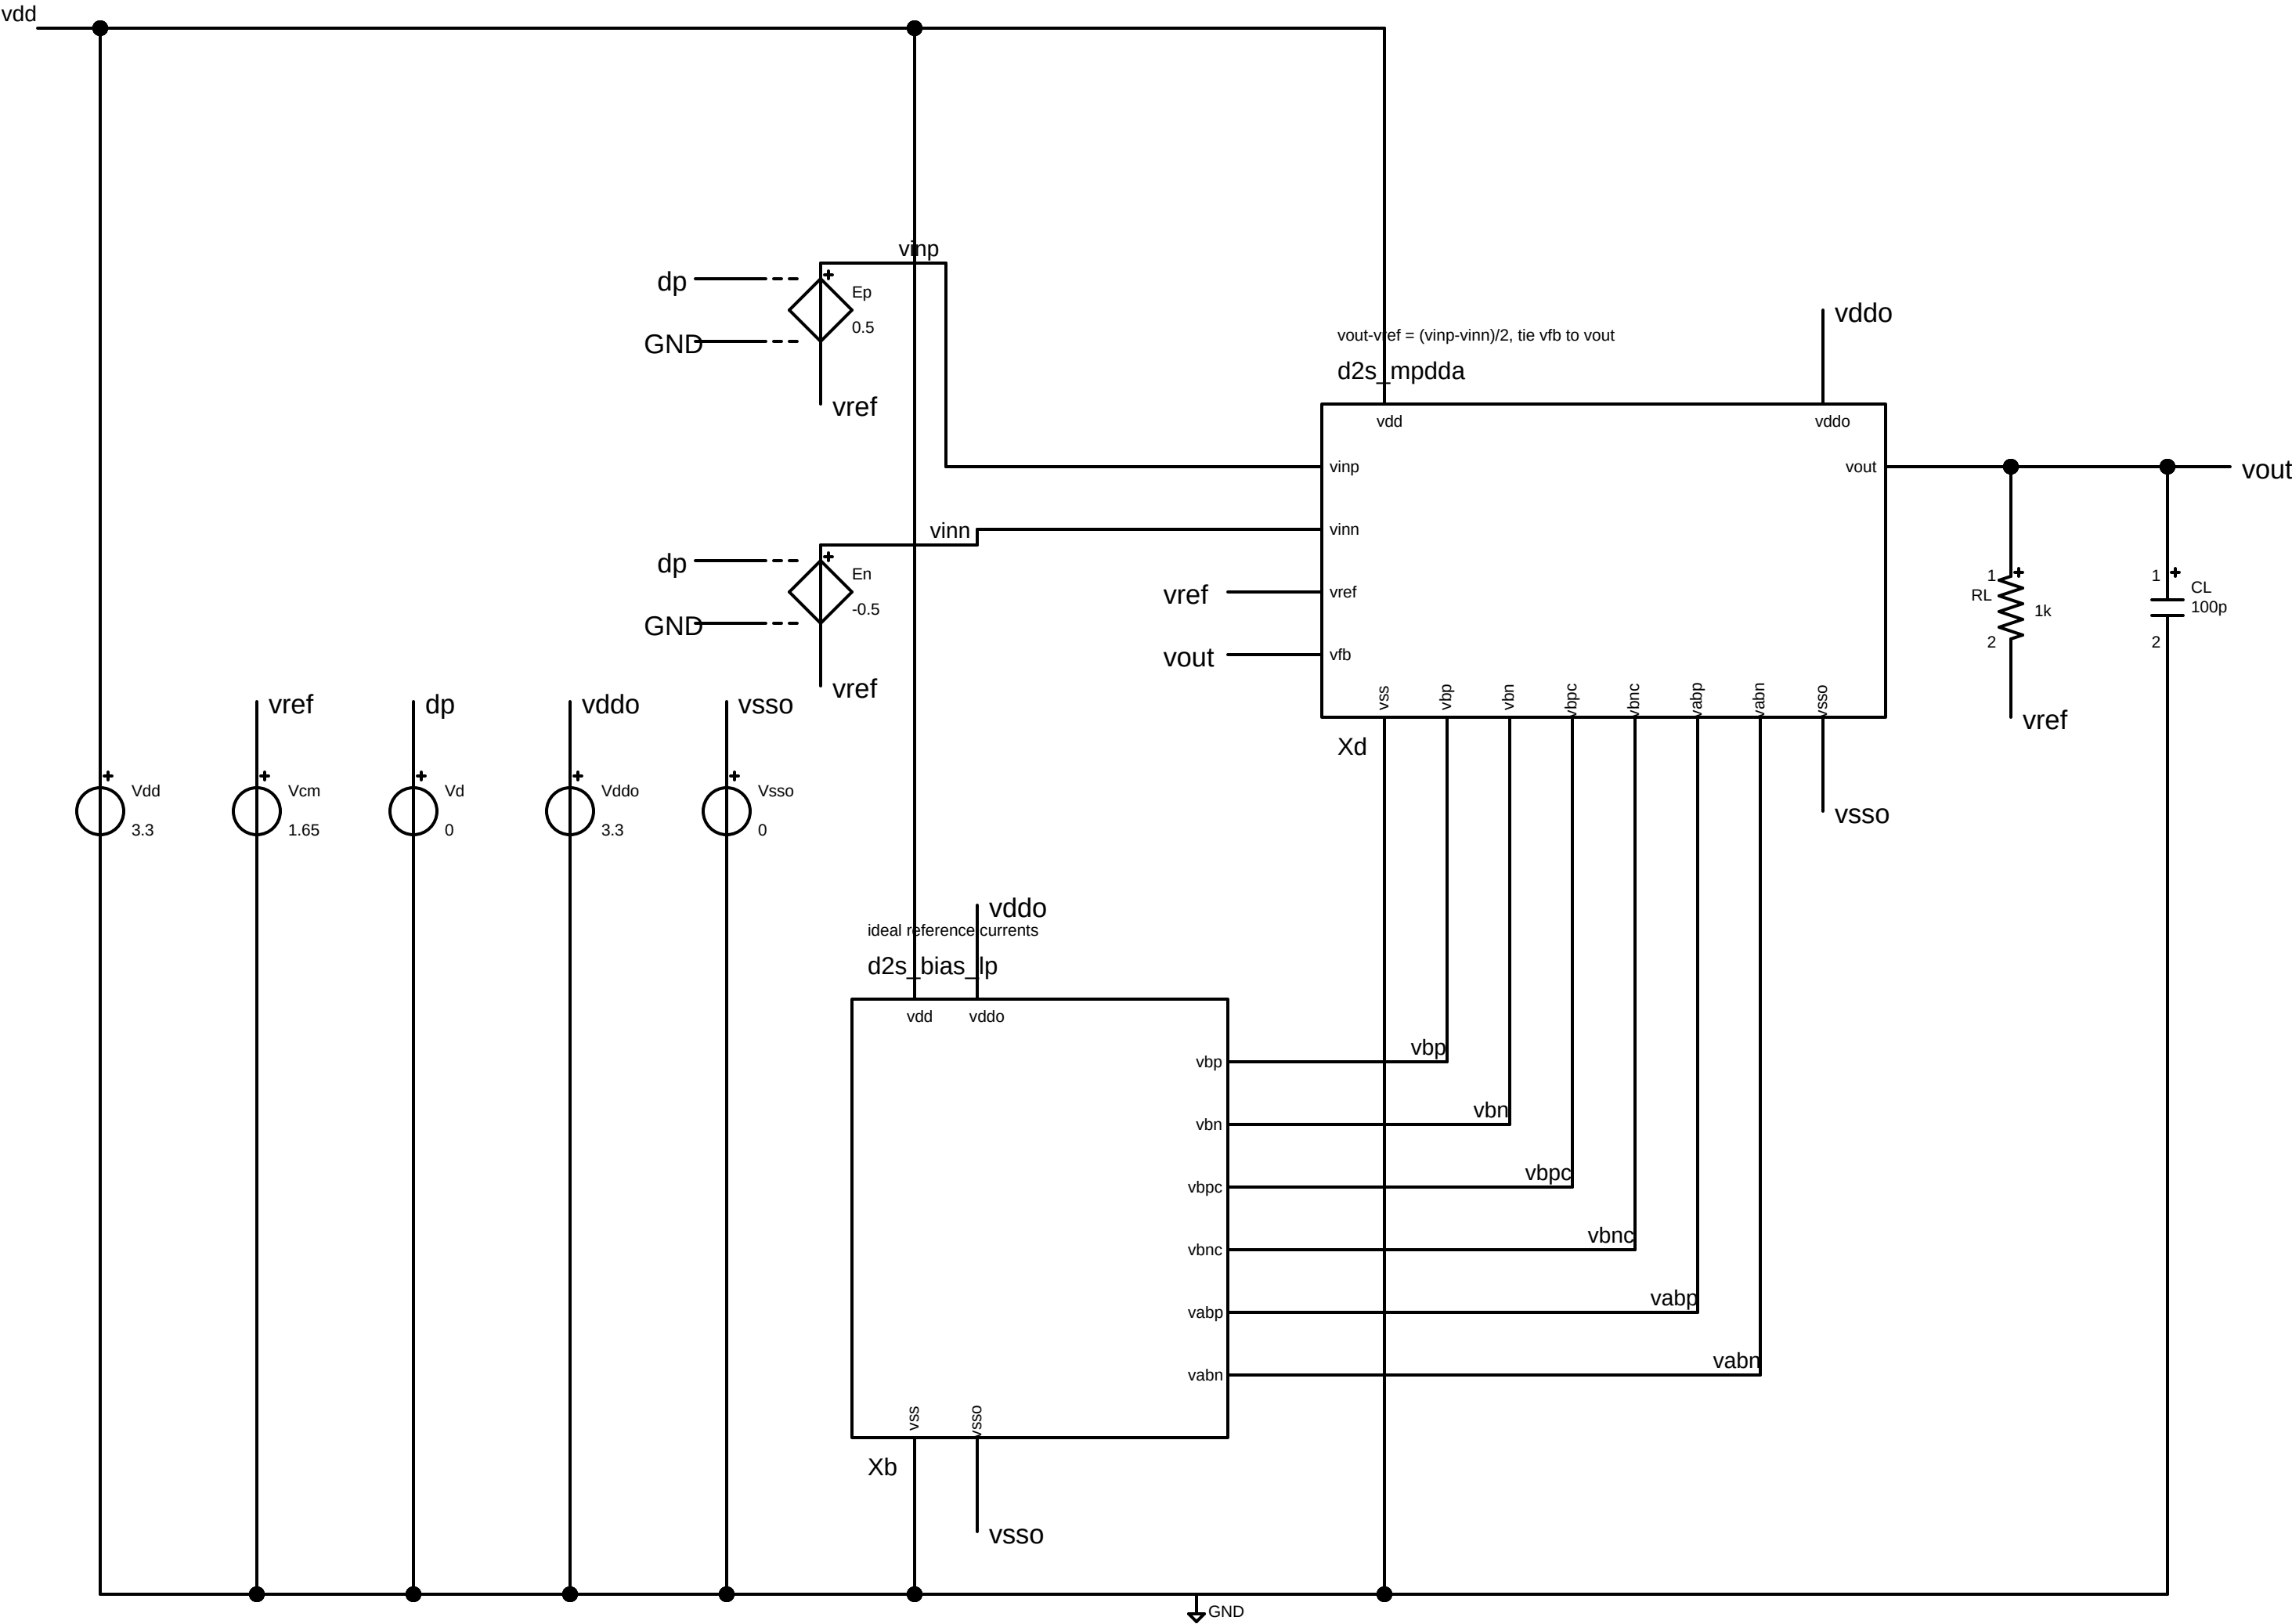

```
s1
.lib cornerM0Shv.lib mos_tt
.lib cornerRES.lib res_typ
.lib cornerCAP.lib cap_typ
.param vstep=0.5
.save v(vout) v(dp) vdd#branch vddo#branch @n.xd.xop.nsg13_hv_pmos[ids] @n.xd.xon.nsg13_hv_nmos[ids]
.control
dc Vd -1 1 0.01
let vo = v(vout) - 1.65
let ip = abs(@n.xd.xop.nsg13_hv_pmos[ids])
let in = abs(@n.xd.xon.nsg13_hv_nmos[ids])
let idd = -i(vdd) - i(vddo)
meas dc vop find vo at=0.2
meas dc von find vo at=-0.2
meas dc off find vo at=0
meas dc iqp find ip at=0
meas dc iqn find in at=0
meas dc iddq find idd at=0
let gain = (vop - von)/0.4
let err = vo - gain*v(dp) - off
let nonlin = vecmax(abs(err))
print gain off nonlin iqp iqn iddq
if $?batchmode = 0
    plot vo
    plot err
end
.endc
```