CSS 422 Hardware and Computer Organization

Project Overview

Professor: Yang Peng

The slides are re-produced by the courtesy of Dr. Arnie Berger and Dr. Wooyoung Kim




Project description

- See the canvas for the project description
 - https://canvas.uw.edu/courses/1032102/pages/project-description
- Progress reports (format, etc.)
- Confidential evaluation (description of the report, format, etc.)
- Specification (how to program, etc.)
- Deliverable (what to submit, when, how)
- Simulator issues and Easy68k bug report (reported by students from previous class)
- Grading standards
- Required op-code and EA
- Addendum (additional information, will be continuously updated)



- Disassembler (also called an inverse assembler):
 - Scans a section of memory and attempts to convert the memory's contents to a listing of valid assembly language instructions
- Most disassemblers cannot recreate symbolic, or label information
- Disassemblers can be easily fooled by not starting on an instruction boundary
- How it works:
 - The disassembler program parses the op-code word of the instruction and then decides how many additional words of memory need to be read in order to complete the instruction
 - If necessary, reads additional instruction words
 - The disassembler program prints out the complete instruction in ASCII-readable format
 - Converts binary information to readable Hex



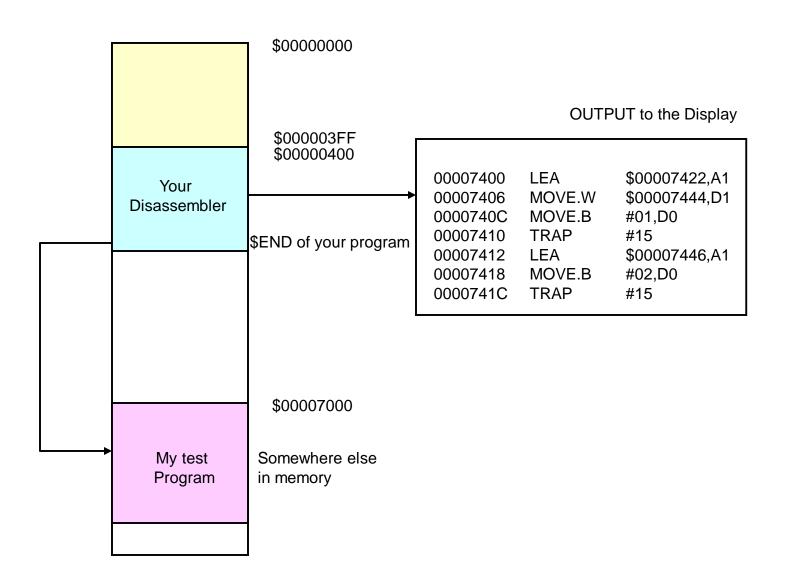



- Source file contains symbolic names for numerical values, comments, symbol names for memory locations (variables)
- Does not contain detailed memory location information

NUM1	EQU	\$AA	*First number *Second Number *Stack pointer *Memory variable
NUM2	EQU	\$55	
stack	EQU	\$7000	
temp	EQU	\$1000	
start	ORG NOP MOE.W MOVE.B MOVE.B MOVE.B MOVEA.W MOVE.B MOVE.B MOVE.B MOVE.B SUBA.W ASR.W MOVE.W BRA END	\$400 #STACK, SP #\$D7, D0 #NUM1, D1 #NUM2, D2 #temp, A0 D1, (A0) + D0, (A0) #\$0001, A0 (A0) (A0), D7 start \$400	*Starting address *Initialize the stack pointer *Load D0 with D7 *Load first number *Load the second number *Load temp address *Save it *Save next *Store address *Shift it *Get it back *Go back and do it again *End of code



- List file contains symbolic names for numerical values, comments, symbol names for memory locations (variables)
- Also contains detailed memory location information not found in source file, line numbers, other cross-reference information, and object code

```
1
    000000AA
                 NUM1:
                                  EQU
                                             $AA
                                                         ; *First number
   00000055
                                             $55
                                                         : *Second Number
                 NUM2:
                                  EQU
   00007000
                                             $7000
                                                         ; *Stack pointer
                 STACK:
                                   EOU
4
   00001000
                 TEMP:
                                             $1000
                                                         ; *Memory variable
                                   EOU
5
   00000400
                                             $400
                                                         ; *Starting address
                                   ORG
   00000400 4E71
                        START:
                                  NOP
   00000402 3E7C7000
                                   MOVE.W
                                             #STACK, SP
                                                         ; *Initialize the stack pointer
   00000406 103C00D7
                                  MOVE.B
                                             #$D7,D0
                                                         ; *Load D0 with D7
10
   0000040A 123C00AA
                                             #NUM1,D1
                                                         ; *Load first number
                                  MOVE.B
   0000040E 143C0055
                                                         ; *Load the second number
11
                                             #NUM2,D2
                                  MOVE.B
12
   00000412 307C1000
                                             #TEMP, AO
                                                         ; *Load temp address
                                  MOVEA.W
13
   00000416 10C1
                                             D1, (A0) +
                                                         ; *Save it
                                  MOVE.B
14
  00000418 1080
                                  MOVE.B
                                             D0, (A0)
                                                         ; *Save next
15
   0000041A 90FC0001
                                             #$0001,A0
                                                         :*Store address
                                  SUBA.W
  0000041E E0D0
16
                                             (A0)
                                                         ; *Shift it
                                   ASR.W
17 00000420 3E10
                                  MOVE.W
                                             (A0), D7
                                                         ; *Get it back
   00000422 60DC
                                                         ; * go back and do it again
18
                                  BRA
                                             START
19
   00000400
                                             $400
                                                         ; * end of code
                                   END
```



- What the same memory region would look like if displayed by an inverse assembly program
- Displays memory addresses and instructions at that address
- All symbolic information and comments are lost

00000400	NOP	
00000402	MOVE.W	\$7000,SP
00000406	MOVE.B	#\$D7,D0
0000040A	MOVE.B	#\$AA,D1
0000040E	MOVE.B	#\$55,D2
00000412	MOVEA.W	\$1000,A0
00000416	MOVE.B	D1,(A0)+
00000418	MOVE.B	D0,(A0)
0000041A	SUBA.W	#\$0001,A0
0000041E	ASR.W	(A0)
00000420	MOVE.W	(A0),D7
00000422	BRA	\$00000400



Testing your code

Assume that you have your disassembler program ready.

- 1. Write a testing source code (testing.X68 → testing.S68)
 - List all the required opcode and EA
 - Any non-required opcodes to see if your program can catch it as invalid data
- 2. Run your disassembler program from the source file
- 3. Your program will open in the simulator program
- 4. In the simulator, go to File → Open Data
- 5. Choose the "testing.S68" file as a testing file
- 6. Then, the assembled testing file will be loaded into your memory
- 7. See where the "data" is loaded
- 8. Go to Run→Log Start to have a log file
- 9. Run your program, and give the starting and ending address when prompt (\$7FC0 and \$814F, for example)
- 10. Should show one screen of data at a time, hitting the ENTER key should display the next screen



Group dynamics and logistics

- Teams of 2 or 3, no larger
- Only one student has done it by himself
- Two groups out of 19 has failed in the previous class
- Get an early jump on this project. Don't wait! You still have a final exam to prepare for
- Plan, plan, plan: Do not write code until you know what you are doing
- Develop your API's before you write code
- Think about back-ups and version control
- Develop a test program early!
- Test thoroughly, do incremental development
- Develop a schedule in MS Project or Excel: Use it!
- Don't neglect your write-up
- Meet regularly to sync-up your code and do a status check face-to-face. Don't depend exclusively on e-mails



Why projects fail

- Insufficient testing
 - Fail to find subtle bugs
 - Side effects due to word addressing
 - Incomplete test program
- Having to write too much code due to poor up-front planning
- Team becomes dysfunctional
 - Must be self-directed, no manager to beat you into submission
- Underestimating effort required
 - Waiting too long to start
- Poor division of responsibilities among team members
- Lost project
 - No back-up or version control
- Caught cheating



Some representative milestones

- 1. Team is organized
- 2. Team meets to discuss and set expectations and team values
- 3. Team decides who does what
- 4. Development schedule is created
- 5. Test program is built
- Team meets and decides on API's
- I/O skeleton is complete, will display all memory as data
- 8. NOP is decoded
- Other op-codes and effective address modes are added
- 10. Team meets regularly to check status, integrate SW

- 11. Begin abuse testing, start write-up
- 12. Complete personal statements
- 13. Complete all deliverables, pack everything up, cross your fingers and study for the final!



How to organize

- Disclaimer: This is one way of several possible ways to organize your teams
- Team Roles
 - I/O Person: Handles all inputs from the user and displays to the screen
 - Op Code Person: Handles decoding the OP-Codes and passing EA information to EA person
 - EA Person: Decodes Effective Addresses



General program flow

- 1. I/O person prompts user (me) for a starting and ending address in memory
- User enters starting and ending addresses for region of memory to be disassembled
- 3. I/O person checks for errors and if address are correct, prepares the display buffer and sends address in memory to OP-Code person
- 4. Op-code person can either decode word to legitimate instruction or cannot.
 - If word in memory cannot be decoded to legitimate instruction, I/O
 person writes to screen: XXXXXXXX DATA YYYY, where
 XXXXXXXX is the memory address of the word and YYYY is the hex
 value of the word
 - 2. If it can be decoded then it is prepared for display and the EA information is passed to the EA person
- 5. EA person decodes EA field(s) and
 - 1. If EA cannot be decoded, signals this back, or
 - 2. Prepares operands for display
- 6. Once the instruction is displayed, process repeats itself




General responsibilities

- Individual responsibilities
 - Op-code person: Decodes op-code
 - Generally the strongest coder on the team
 - EA Person: Decodes effective addresses
 - Uses EA field information passed on by Op-code person
 - I/O Person: Interfaces to user
 - Decodes inputs from user
 - Formats and displays disassembled code
- Group responsibilities
 - Decide on roles
 - Design algorithm, coding conventions and parameter passing rules
 - Design test program
 - Meet to integrate and test
 - Test, test, test!
 - Do write-up



Parameter passing

- A Parameters
 - Pointer to memory to decode
 - Pointer to next available space in "Good buffer"
 - Good/bad flag
- B Parameters
 - Memory pointer to next word after the op-code word
 - 6 bits from EA field of op-code word
 - Pointer to next available space in "Good buffer"
 - Good/bad flag
- C Parameters
 - Memory pointer to next word after the EA word
 - Pointer to next available space in "Good buffer"
 - Good/bad flag
- D Parameters
 - Memory pointer to next op-code word
 - Good/bad flag

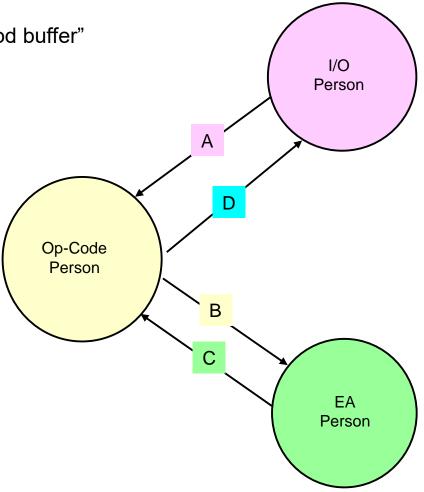



Required Op-code and EA

- Not all op-codes/EA are required to disassemble
- 30 op-codes and 8 EA are required in Winter 2016
- See the list on canvas, <u>https://canvas.uw.edu/courses/1032102/pages/required-opcodes</u>

Instructions:

MOVE, MOVEQ, MOVEM ADD, ADDA, ADDQ SUB, SUBA, SUBI

MULS, DIVU

LEA

CLR

AND, ANDI

EOR, EORI

LSR, LSL, ASL, ASR

ROL, ROR

BCHG

CMP, CMPA, CMPI

Bcc (BCC, BGT, BLE, BVS)

JSR, RTS

Effective Addressing Modes:

Data Register Direct

Address Register Direct

Address Register Indirect

Immediate Addressing

Address Register Indirect with Post incrementing

Address Register Indirect with Pre decrementing

Absolute Long Address

Absolute Word Address