RCS Day 7

Integrated wall QC, punch-list correction, retest, evidence, and handoff

CORRECT. COMPLETE. PROVE.

A complete wall is safe, accurate, inspectable, and explainable.

Today the goal is not to hide defects. The goal is an honest punch list and verified corrections.

Today's flow

Quiz -> model -> guided practice -> capstone lab -> QC



Morning: inspect subsystems, write punch items, and plan evidence.
Afternoon: complete approved rework and close one documented defect.
End: whole-wall QC, handoff practice, evidence, reset.

Today's targets

What successful work must demonstrate

Framing geometry

Window opening

Two outlets + switch/light

Drywall fit + fasteners

Labels + evidence

Complete remaining capstone framing, electrical, and drywall work
Run a subsystem and whole-wall QC inspection
Diagnose and correct one documented defect
Prepare a professional handoff package

The day's path


Trace the work before building it



Prioritize safety and functional defects first. Unresolved items remain visible in the handoff.

Controlled sequence

Release each stage only after its check

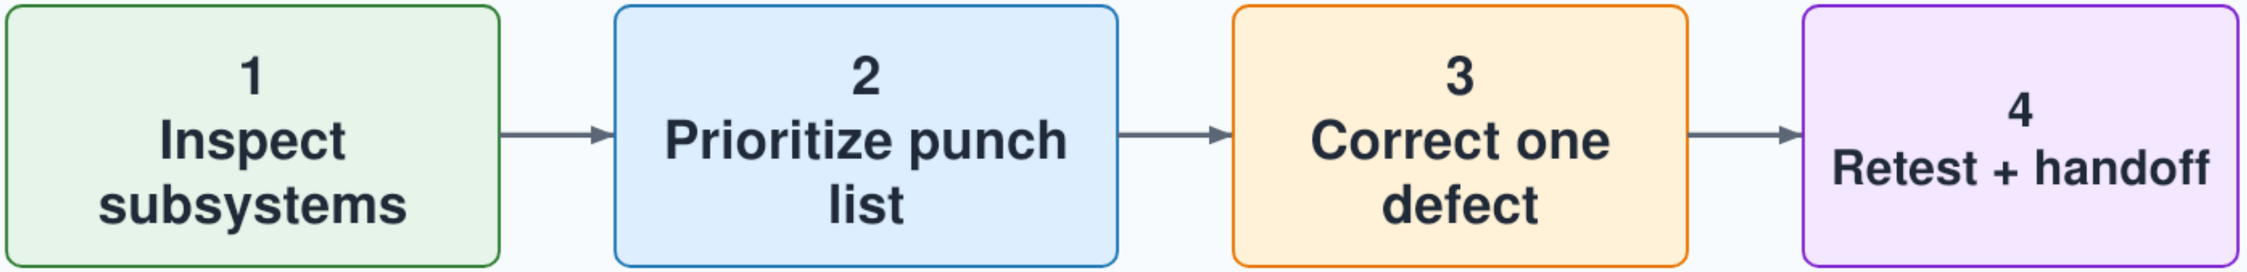

Reapply the right tool and energy controls before every correction. Rework does not suspend safety boundaries.

Working roles

6 students; every result receives another set of eyes

Owner
performs approved rework

Inspector
checks acceptance criteria

Documenter
captures before/after proof

Each student owns their capstone result.
Peer inspection adds another set of eyes; instructor approval closes the item.
State unresolved work honestly.

Verification checkpoints

Do not trust appearance alone

Framing + window

Electrical mock-up

Drywall + fasteners

Labels + evidence

Inspect each subsystem, then the integrated wall.
A punch item closes only after correction and a defined reinspection or retest.

Safety boundaries

The lab begins only inside these controls

Task controls reset

No energized work

Rework zone isolated

Stop outside scope

Instructor approval is required before reopening covered or terminated systems. Stop if a correction creates a new hazard or exceeds training scope.

Professional judgment

Safe work pauses when the evidence conflicts

Good handoff
show condition -> evidence -> result

Bad handoff
hide defects -> claim complete

Professional documentation includes unresolved items. Trust comes from traceability, not presentation polish alone.

Quality criteria

Good physical work leaves visible proof

Inspect framing, devices, drywall, and labels.
Write specific punch items by location.
Correct approved work under task controls.
Retest against acceptance criteria.
Capture overall, detail, test, and corrected views.

No retest evidence? The punch item stays open.


Lab release checklist

The station earns work only after the checks

Pre-task plan and energy state complete.
Baseline whole-wall inspection recorded.
Punch list identifies locations and owners.
Safety/functional items prioritized first.
Rework scope approved by instructor.
Evidence device and file names ready.

Afternoon lab


Slow sequence. Clear callouts. No surprises.

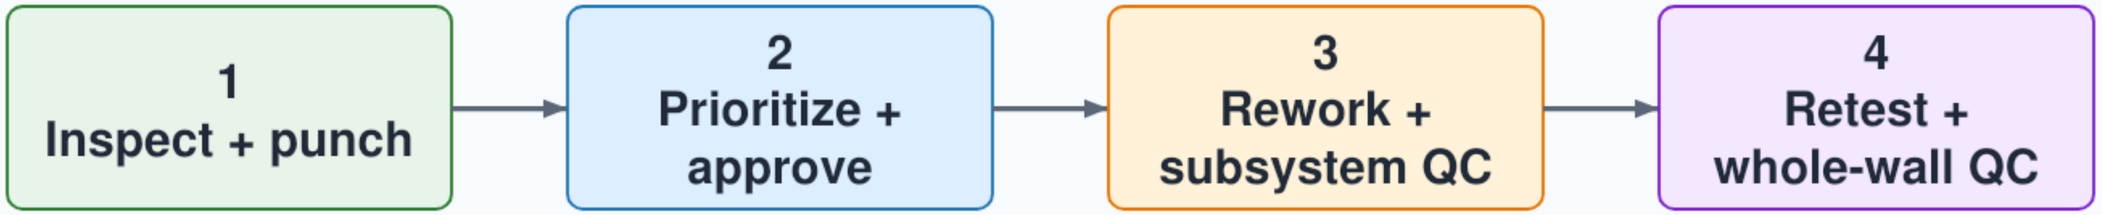

Complete the individual capstone, close at least one documented punch item, and prepare a 60-second handoff.

Closeout order

End verified, documented, and reset

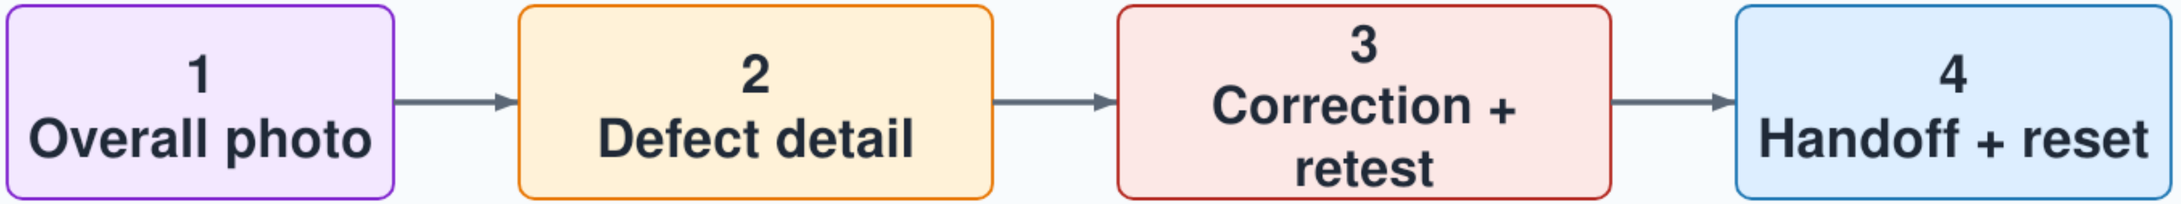

Handoff includes scope, key decisions, verified results, evidence, and any unresolved items.

Evidence log

What students write down

Frame	dims + square	Pass: _____
Devices	2 outlets + S/L	Pass: _____
Drywall	fit + fasteners	Pass: _____
Punch item	location + defect	ID: _____
Retest	acceptance check	Result: _____
Handoff	evidence indexed	Ready: _____

A polished surface does not close a defect. Evidence and a defined retest do.

Exit ticket

Three checks before dismissal

1. Name your highest-priority punch item.

2. Describe the correction and its retest evidence.

3. State any unresolved item honestly.

Punch list current. Corrections verified. Evidence indexed. Wall ready.