Sensitivity: the smallest division of the instrument

Ruler A · smallest division **1 mm** → sensitivity = **1 mm**

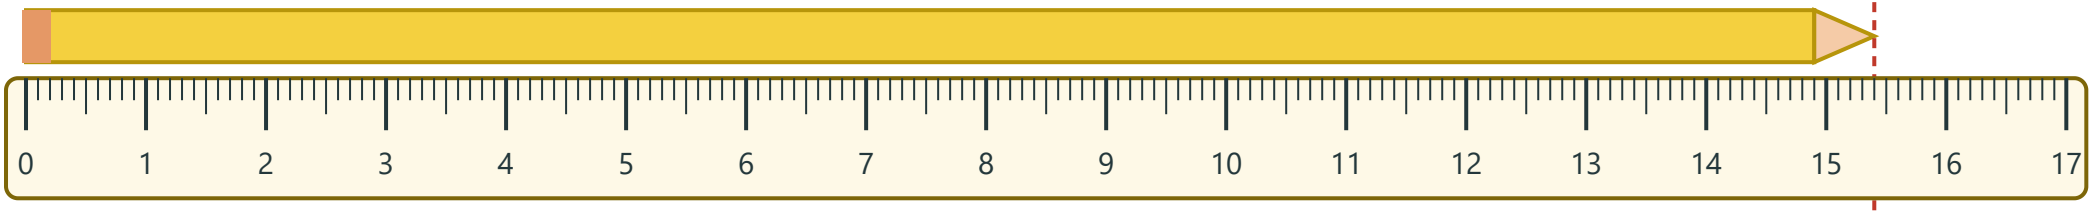

Reading: 15.4 cm ✓ more precise (we can estimate the next digit)

Ruler B · smallest division **1 cm** → sensitivity = **1 cm**

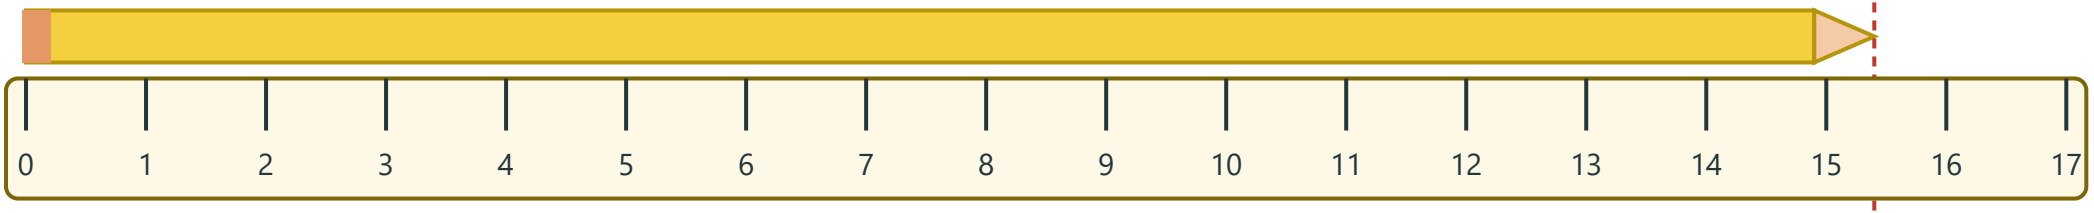

Reading: 15 cm ✗ less precise