CALIBER 2026 | CASE 1: MANUFACTURING KNOWLEDGE HUB

Asset Knowledge Platform

User Manual

Team Insinyur Jawa

Alniko Arya S.

Anas Fauzan

Rainar Athalla W. P.

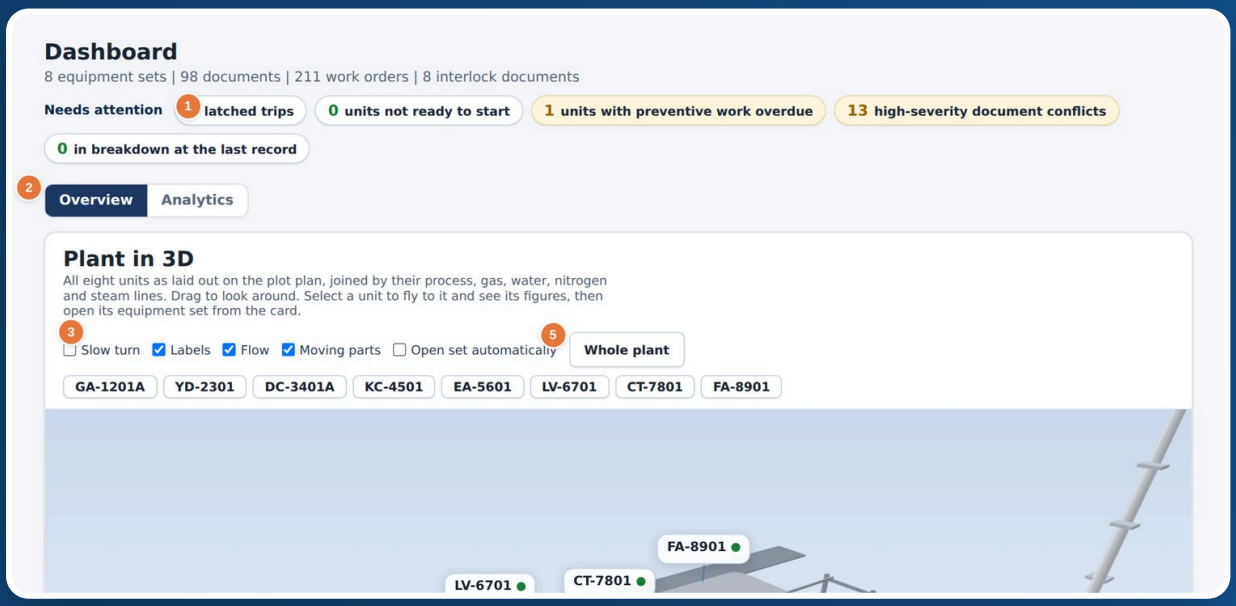

Version 1.0 | 3 October 2026

Document control

Document	Asset Knowledge Platform, User Manual
Version	1.0
Date	3 October 2026
Prepared by	Team Insinyur Jawa: Alniko Arya S., Anas Fauzan, Rainar Athalla W. P.
Applies to	The sample installation for the LLDPE unit, eight equipment sets
Readers	Operators, engineers, reliability engineers, HSE engineers and managers
Data	Sample data provided for CALIBER purposes only

Revision history

Version	Date	Change
1.0	3 October 2026	First issue

How to read the figures

Each figure is a screenshot of the platform. Orange numbered markers point to the parts of the screen that the legend under the figure describes. Chapters begin with the roles that normally use the page.

> **TIP**
> Boxes marked Tip give a faster way to do a task. Boxes marked Caution describe a limit or a risk. Boxes marked Roles describe who can do what.

Table of contents

Part 1. Introduction

1 About the Asset Knowledge Platform 6

1.1 Purpose of this manual 6

1.2 The problem the platform addresses 6

1.3 What you can do with the platform 6

2 How the platform is organised 7

2.1 The knowledge base 7

2.2 The three engines 7

2.3 Why the platform can be trusted 8

3 Equipment covered 8

4 User roles and permissions 9

5 Before you start 10

5.1 What you need 10

5.2 What is a demonstration 10

5.3 Conventions used in this manual 10

Part 2. Getting started

6 Signing in and out 11

6.1 Sign in 11

6.2 What happens when you sign in 12

6.3 Sign out 12

7 The screen layout 12

7.1 The sidebar 13

7.2 Page headers and tabs 13

8 Global search 13

8.1 Search from any page 14

9 Notifications, settings and the guided tour 14

9.1 Notifications 15

9.2 Settings 15

9.3 Guided tour 16

10 Working offline and sharing data 17

10.1 What is stored where 17

10.2 Sync status 17

10.3 Offline search 18

Part 3. Daily operations

11 Dashboard 19

11.1 Overview tab 19

11.2 Using the 3D plant 20

11.3 Analytics tab 20

12 My work 21

12.1 How to use the page 22

13 Equipment Sets 22
13.1 The equipment list 23
13.2 The equipment header 23
13.3 Overview tab 23
13.4 P&ID tab 24
13.5 Drawing and 3D tab 25
13.6 Indicators tab 26
13.7 Plot plan tab 26
13.8 Start-up readiness tab 27
13.9 Documents tab 27
13.10 Datasheet tab 28
13.11 Interlock logic tab 29
13.12 Lessons tab 29
13.13 Maintenance tab 30
13.14 Related assets tab 31
14 Equipment drawings in 2D and 3D 31
14.1 The 2D drawing 31
14.2 The 3D model 32
14.3 Bill of material and work orders by component 34
15 Live P&ID 34
15.1 Reading the diagram 35
15.2 Operating a valve 35
15.3 Simulating a trip 36
16 Interlock Library 36
16.1 Finding an interlock 37
16.2 The interlock sheet 38
16.3 Function test and proof test history 39
17 Start-up readiness 39
17.1 Reading the page 41
17.2 Signing off 41
18 Documents 41
18.1 Finding and opening a document 42
18.2 Document conflicts 42

Part 4. Maintenance and reliability

19 Maintenance overview 44
19.1 The filter bar 44
19.2 What the Overview shows 45
20 Work orders 45
20.1 The work order report 47
20.2 The failure view 47
21 Timeline 48
22 Predictive maintenance 49
22.1 Controls 50
22.2 The six tabs 51

23 Reliability analysis 52
24 Plant replay 54
25 Site plan 56
26 Failure Memory 58
27 Performance 60
27.1 Reliability tab 61
27.2 Knowledge tab 61
27.3 Spare parts tab 62
27.4 Targets and data feeds tab 63

Part 5. Safety, lessons and scenarios

28 One Point Lesson Library 64
28.1 The lesson sheet 65
29 OPL scenario simulator 66
29.1 Switching to 3D 68
30 Scenarios and chain reaction 69
30.1 Plant chain reaction 69
30.2 OPL and maintenance scenario 71
30.3 Assumptions register 72
31 Plot Plan and hazard simulator 73
31.1 Site overview 74
31.2 Hazard simulator in 2D 75
31.3 Hazard simulator in 3D 76

Part 6. Knowledge and AI

32 AI Assistant 78
32.1 Asking a question 78
32.2 What you can ask 79
32.3 Why this answer 79
32.4 Questions the assistant will not answer 80
32.5 Feedback 81
33 How answers are produced 81
33.1 How approval status affects ranking 82
34 Knowledge Studio 83
34.1 Ingest documents 84
34.2 Capture knowledge 85
34.3 Library 85
34.4 Review queue 86
34.5 Quality gates 87
34.6 Question log 88
34.7 Audit trail 89
35 Data Quality 90
36 Integrations and the knowledge graph 92
36.1 Knowledge graph 95

Part 7. Administration

37 Report Center 96

37.1 Producing a report 97

38 Governance and roadmap 98

39 Settings 99

40 Roles, approval workflow and audit trail 101

40.1 What each role may do 101

40.2 The approval workflow 101

40.3 The audit trail 102

Appendices

A Glossary 103

B Quick reference 103

C Troubleshooting 104

D Data and limits 105

E Index 105

1 About the Asset Knowledge Platform

PART 1. INTRODUCTION

Used by: Operator | Engineer | Reliability | HSE | Manager

> The Asset Knowledge Platform joins the documents, drawings, work orders and lessons of the LLDPE unit into one searchable, source-checked knowledge base, and uses it to answer questions, support maintenance and prepare safe work.

1.1 Purpose of this manual

This manual explains how to use every part of the platform. It is written for the people who work with the LLDPE unit each day: operators, maintenance engineers, reliability engineers, HSE engineers and managers. Each chapter states who normally uses the feature, describes what the screen shows, and gives the steps to complete common tasks.

You do not need to read the manual from start to finish. Part 2 covers signing in and the screen layout. Parts 3 to 7 follow the sidebar of the application, so you can go directly to the chapter that matches the page you have open.

1.2 The problem the platform addresses

In a continuous process plant, the knowledge needed for a safe start-up, a quick repair or a correct decision is spread across many systems. Procedures sit in one place, drawings in another, work orders in a third, and the reasons behind a trip often exist only in the memory of senior staff. Engineers lose time searching, and they sometimes act on an outdated drawing or without knowing that the same fault happened before.

The platform brings these sources together and links each record to the equipment tag it concerns. Every answer shows where it came from, which revision of the document was used and whether that document is approved.

1.3 What you can do with the platform

Task	Where in the platform	Chapter
See the state of all eight equipment sets	Dashboard	11
Find a drawing, datasheet, interlock or lesson for one machine	Equipment Sets	13
Ask a question in plain language and receive a cited answer	AI Assistant	32
Check what usually causes a fault and how it was fixed	Failure Memory	26
Review breakdown history and the forecast for the next 90 days	Maintenance	19 to 23
Plan maintenance work with permits and crew capacity	Maintenance, Site plan	25
Practise a one point lesson on a simulated machine	OPL Library	28, 29
Test how a release or a trip spreads across the plant	Plot Plan, Scenarios	30, 31
Add a new document or capture expert knowledge	Knowledge Studio	34
Produce a report for a meeting or an investigation	Report Center	37

NOTE

The platform in this manual runs on sample data prepared for the CALIBER 2026 case. The equipment, documents and work orders are realistic, but they do not describe a real plant.

2 How the platform is organised

PART 1. INTRODUCTION

Used by: Operator | Engineer | Reliability | HSE | Manager

Understanding how the pieces fit together makes every screen easier to read. This chapter describes the knowledge base, the three engines that use it and the way a record travels from a source document to an answer.

2.1 The knowledge base

All information is stored as small, labelled records called chunks. A chunk carries its text, the equipment tag it concerns, its revision and approval status, and the roles allowed to read it. Numbers such as set points are also stored as typed facts, and links between records, such as an interlock that protects a pump, are stored as relations.

Item	Count in the sample data
Searchable chunks	1,109
Typed facts	447
Relations between records	624
Documents	98
Work orders	211
One point lessons	56
Interlock documents	8
Instruments	84

2.2 The three engines

- **Answers.** The AI Assistant, global search and Equipment pages find the right record and show its source.
- **Reliability.** Failure Memory, Maintenance, Predictive maintenance and Performance study the work-order history and the lessons.
- **Safety and planning.** Interlocks, Live P&ID, start-up readiness, the OPL simulator, the hazard simulator and the Site plan prepare safe work.

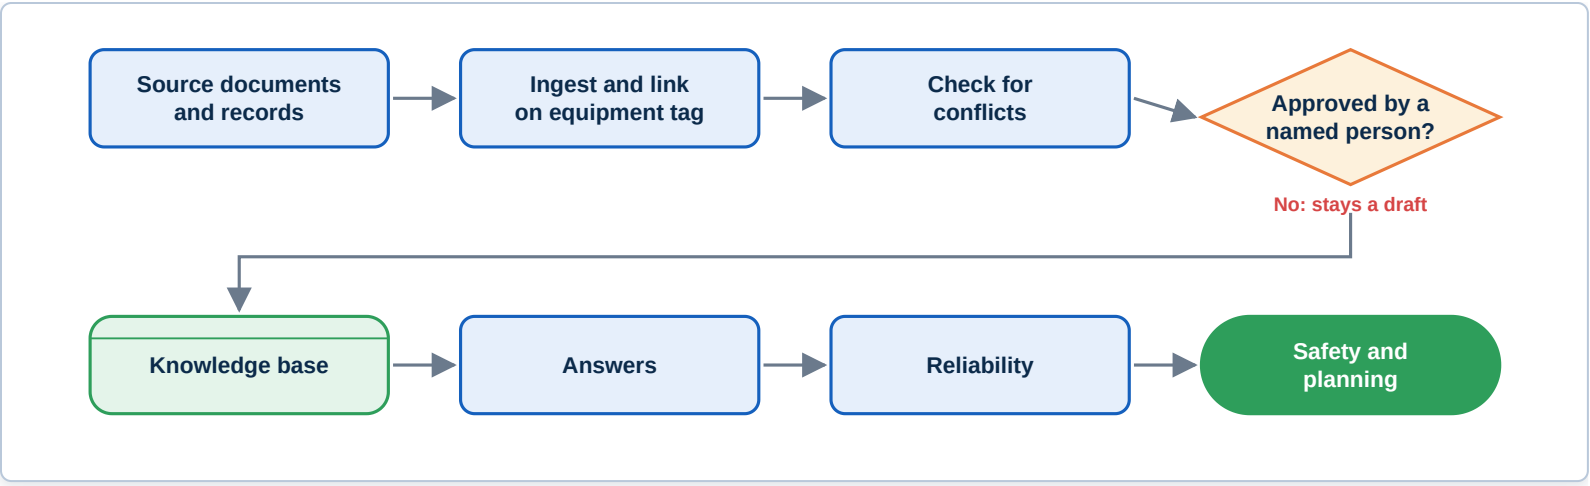

Figure 1. How a record moves from a source document to the features that use it.

2.3 Why the platform can be trusted

Three rules apply everywhere in the platform. A record that is still a draft is clearly marked and is not used as an approved source. Every answer lists its sources. A figure in an answer is checked against the text of its source, and the confidence score drops when a figure cannot be found there.

3 Equipment covered

PART 1. INTRODUCTION

Used by: Operator | Engineer | Reliability | HSE | Manager

> The platform covers eight equipment sets of the LLDPE unit. Each set has its own P&ID, drawings, datasheet, interlock logic, lessons and maintenance history.

Tag	Equipment	Area	Main interlock
GA-1201A	Feed/Charge Pump (hexane feed)	1200 Feed preparation	SEQ-1201
YD-2301	Polymer Fluid Bed Dryer	2300 Separation and drying	SEQ-5500
DC-3401A	Catalyst Reduction Reactor and heater	3400	SEQ-3401
KC-4501	Recycle Gas Compressor	4500 Gas recovery	SEQ-4501
EA-5601	Solvent Heater	5600	Control loop
LV-6701	Separator Level Control	6700	SEQ-6701
CT-7801	Cooling Tower Fan	7800	SEQ-7801
FA-8901	Reflux Accumulator Drum	8900	SEQ-8901

The set number used in the platform follows the order of this table: set 1 is GA-1201A and set 8 is FA-8901. The same tag appears on every page that concerns the equipment, which is how the platform links a work order to a drawing or a lesson.

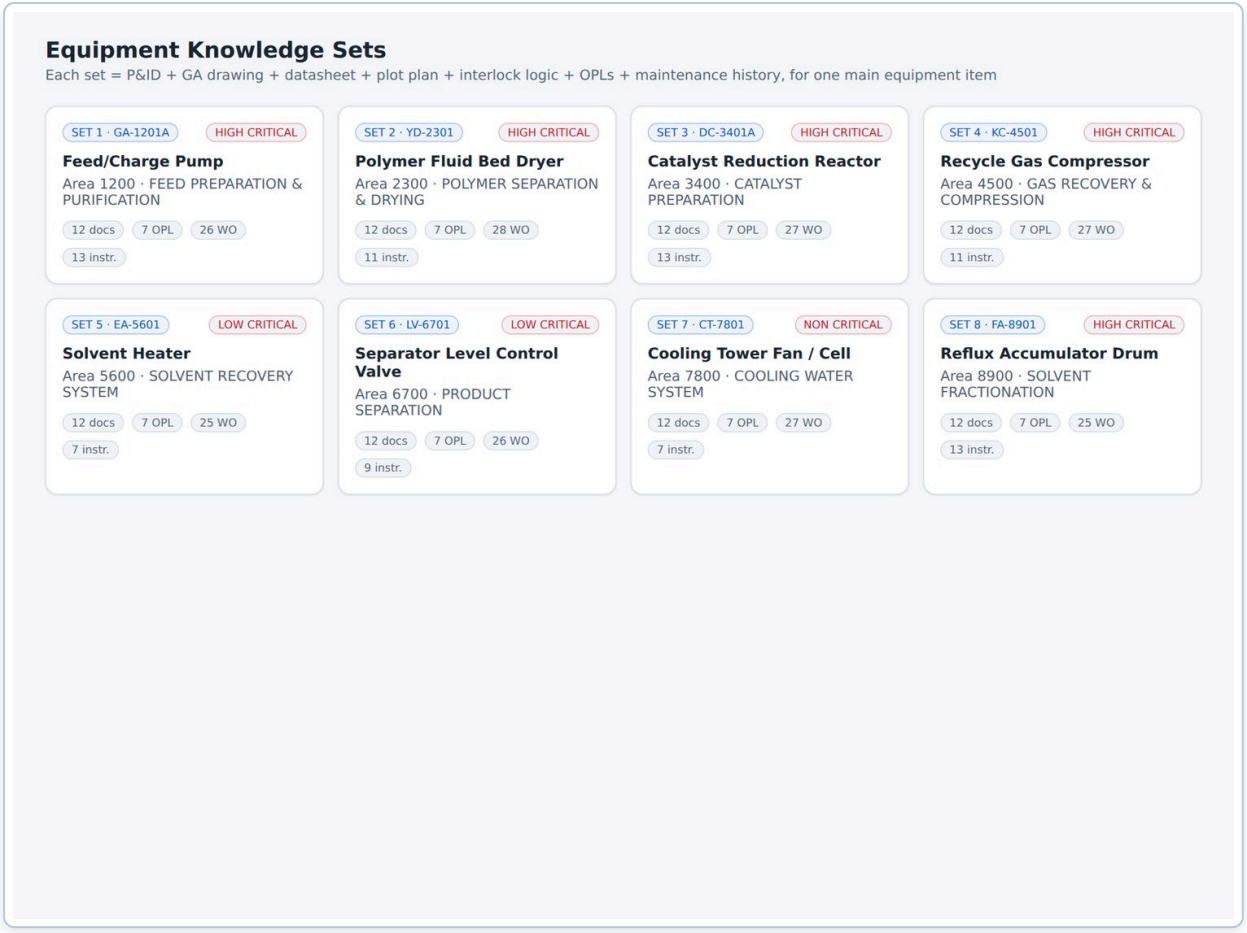

Figure 2. The Equipment Sets page lists all eight sets with their status.

4 User roles and permissions

PART 1. INTRODUCTION

Used by: Operator | Engineer | Reliability | HSE | Manager

The platform has five roles. Your role is set when you sign in, and it decides which actions are available to you. The roles shown in this manual are the ones loaded in the application.

Action	Operator	Engineer	Reliability	HSE	Manager
Read approved knowledge, drawings and records	Yes	Yes	Yes	Yes	Yes
Ask the AI Assistant and give feedback	Yes	Yes	Yes	Yes	Yes
Submit a draft in Knowledge Studio	Yes	Yes	Yes	Yes	Yes
Approve or reject knowledge items	No	Yes	Yes	Yes	Yes
Delete knowledge items that are not your own drafts	No	Yes	Yes	No	Yes
Accept scenario rules	No	Yes	Yes	No	Yes
Import, bulk remove or generate records	No	No	Yes	No	Yes
Open the administration settings	No	No	No	No	Yes

NOTE

A person cannot approve an item that they wrote themselves, except in the Manager role. Another approver must review it. This rule is described in Chapter 40. When the platform builds answers and typed facts, the Operator role sees approved items only.

The sample installation contains 22 demonstration accounts: four managers, four operators, five engineers, five reliability engineers and four HSE engineers. The account named Caliber is the demonstration administrator and can switch between roles from the Settings panel to show how each role sees the platform.

5 Before you start

PART 1. INTRODUCTION

Used by: Operator | Engineer | Reliability | HSE | Manager

This chapter lists what you need to open the platform and explains which parts of the sample installation are demonstrations.

5.1 What you need

- A current desktop browser such as Chrome, Edge or Firefox. A screen width of at least 1280 pixels shows the pages as they appear in this manual.
- A user name and password. The demonstration accounts are listed on the sign-in page.
- No installation. The platform runs in the browser.

5.2 What is a demonstration

The sign-in page and the role list are for demonstration. The accounts are checked in the browser and are not a security control, so they must not be used to protect real plant information. The data is a sample prepared for the CALIBER 2026 case.

Features that connect to other systems, such as the engineering document system or the maintenance system, are shown with simulated connectors. Chapter 36 explains how they would be connected in a production installation.

5.3 Conventions used in this manual

Convention	Meaning
Bold text	The name of a button, tab, field or menu item on the screen.
Numbered orange circles	A callout on a screenshot. The list below the figure explains each number.
Numbered blue steps	A procedure to carry out in order.
Note, Tip, Caution boxes	Extra information, a shortcut, or a warning about a possible mistake.
Roles line	The roles that normally use the feature described in the chapter.

6 Signing in and out

PART 2. GETTING STARTED

Used by: Operator | Engineer | Reliability | HSE | Manager

Every session starts at the sign-in page. Your account decides your role, and your name is recorded on the items you create and approve.

6.1 Sign in

1. Open the platform in your browser. The sign-in page appears.
2. Type your **Username**, for example `Caliber`.
3. Type your **Password**. In the demonstration, the password is the first name followed by 2026, for example `Caliber2026`.
4. Select **Sign in**. The Dashboard opens.

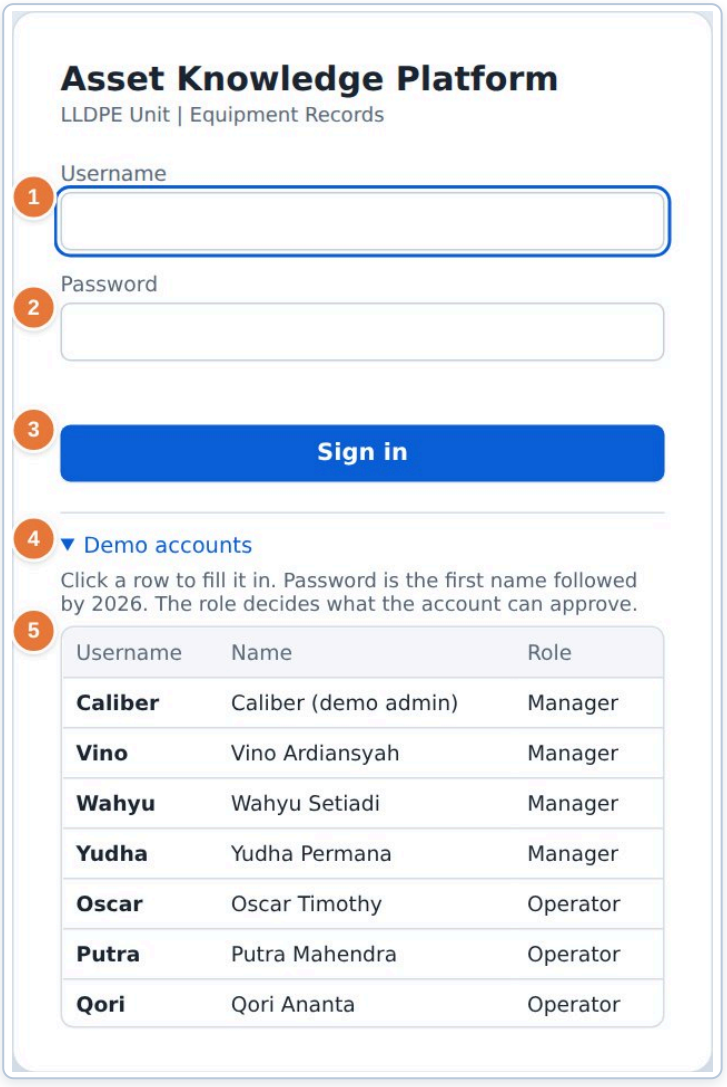

Figure 3. The sign-in page with the list of demonstration accounts open.

1. Username field.
2. Password field.
3. Sig button.
4. Der ist. Select a row to fill in the user name.
5. Accounts with their name and role.

TIP

Select **Demo accounts**, then select a row. The user name and password are filled in for you.

6.2 What happens when you sign in

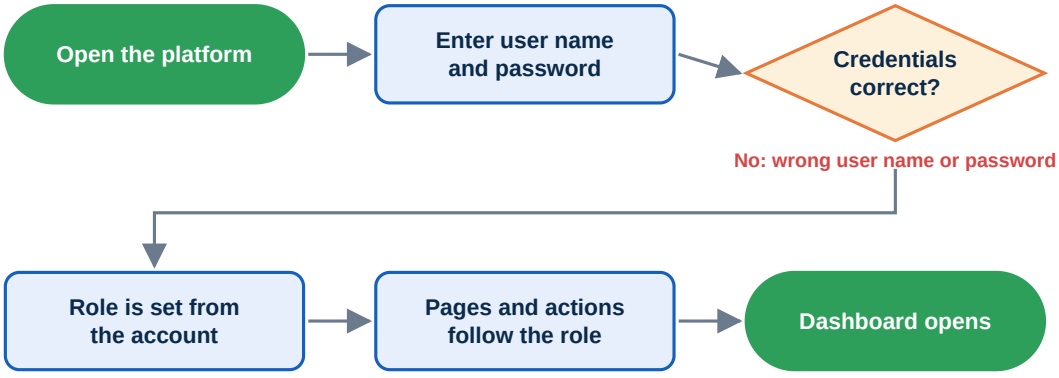

Figure 4. The sign-in sequence.

6.3 Sign out

Your name and role appear at the bottom of the sidebar. Select the sign-out icon next to them to leave the session. The sign-in page appears again. Signing out and in is also the way to change to another account.

7 The screen layout

PART 2. GETTING STARTED

Used by: Operator Engineer Reliability HSE Manager

> All pages share the same layout: a sidebar on the left, a page area on the right and a few global controls. Learn this layout once and every page will look familiar.

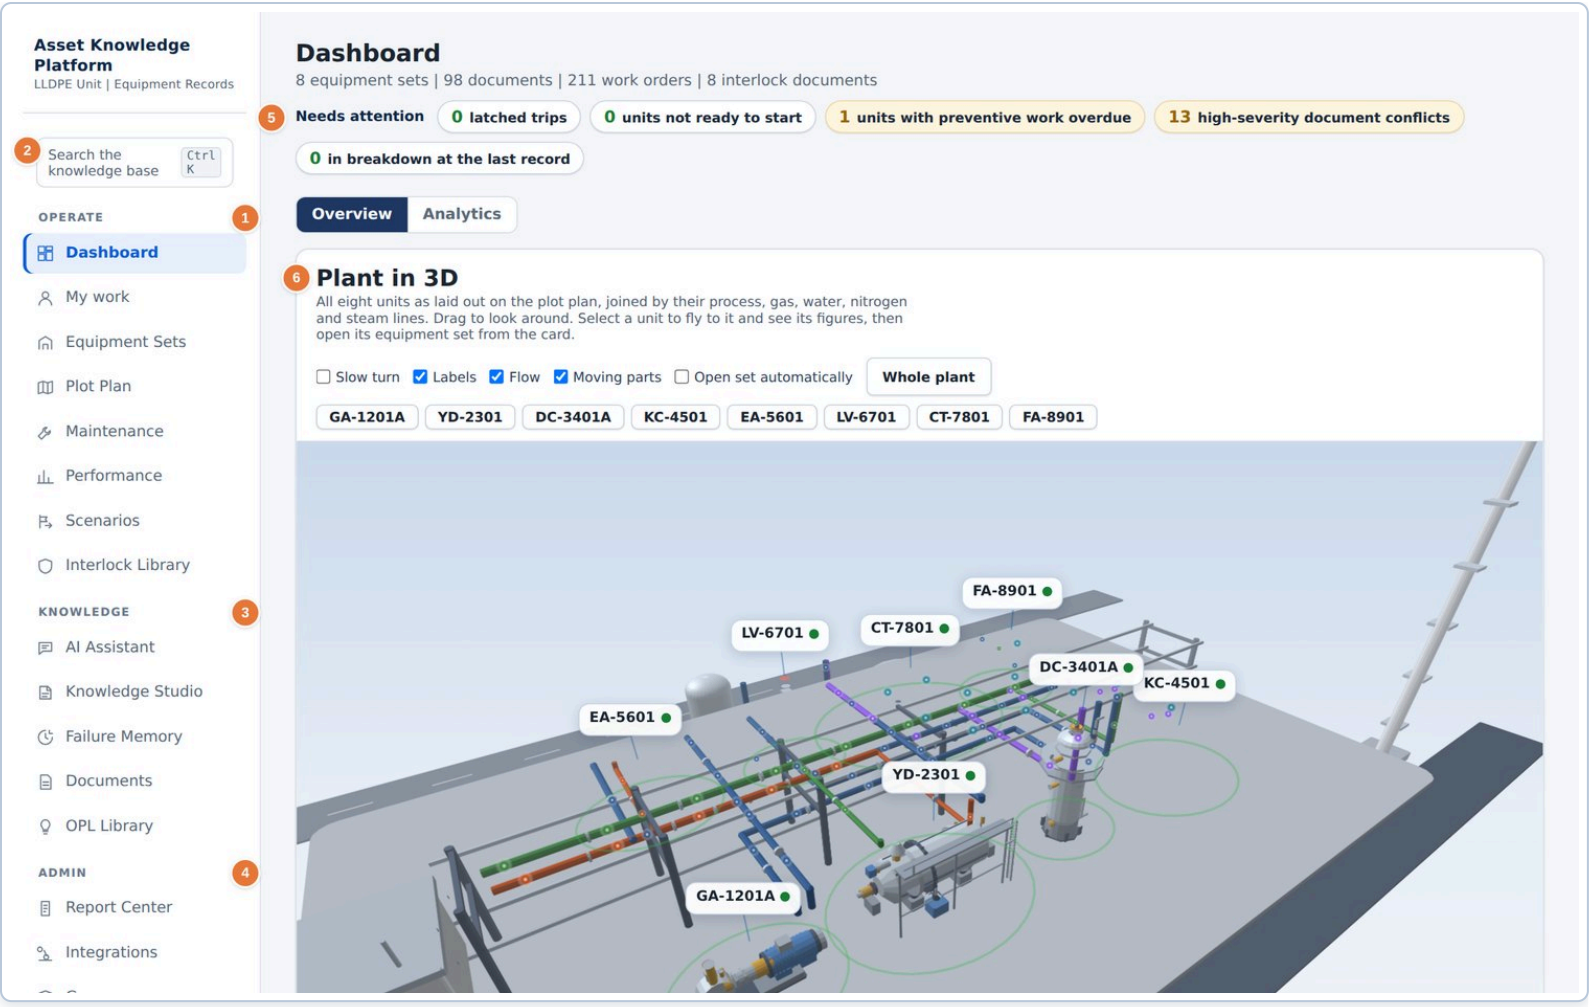

Figure 5. The layout of the platform, shown on the Dashboard.

- **Ope** group: daily pages for the plant.
- **Kno** group: the assistant, Knowledge Studio, Failure Memory, Documents and OPL Library.
- **Nee**: counts that need action today.
- **2** Search box. Press `Ctrl+K` from any page.
- **Adr** group: reports, integrations, governance and data quality.
- **6** The page area. It changes with the page you select.

7.1 The sidebar

Group	Pages
Operate	Dashboard, My work, Equipment Sets, Plot Plan, Maintenance, Performance, Scenarios, Interlock Library
Knowledge	AI Assistant, Knowledge Studio, Failure Memory, Documents, OPL Library
Admin	Report Center, Integrations, Governance, Data Quality

At the bottom of the sidebar you see your name and role, the shared-database status (for example **Local only**) and the controls for notifications, the guided tour, settings and signing out. On a narrow screen the sidebar collapses behind a menu button.

7.2 Page headers and tabs

Each page starts with a title and a one-line description. Pages with several views, such as Maintenance or Knowledge Studio, show a row of tabs under the header. The selected tab is dark. Charts and tables are interactive: selecting a bar, a segment or a row usually filters the page or opens the related record.

8 Global search

Used by: Operator | Engineer | Reliability | HSE | Manager

Global search looks through every approved document, work order, lesson and interlock at once and shows where each match comes from.

8.1 Search from any page

1. Press `Ctrl+K`, or select the search box at the top of the sidebar.
2. Type a word, a tag or a short phrase, for example `seal flush`.
3. Read the results. Each result shows its type (Lesson, Work order or Document), its title, its date, its status and a short extract.
4. Select a result to open the record.

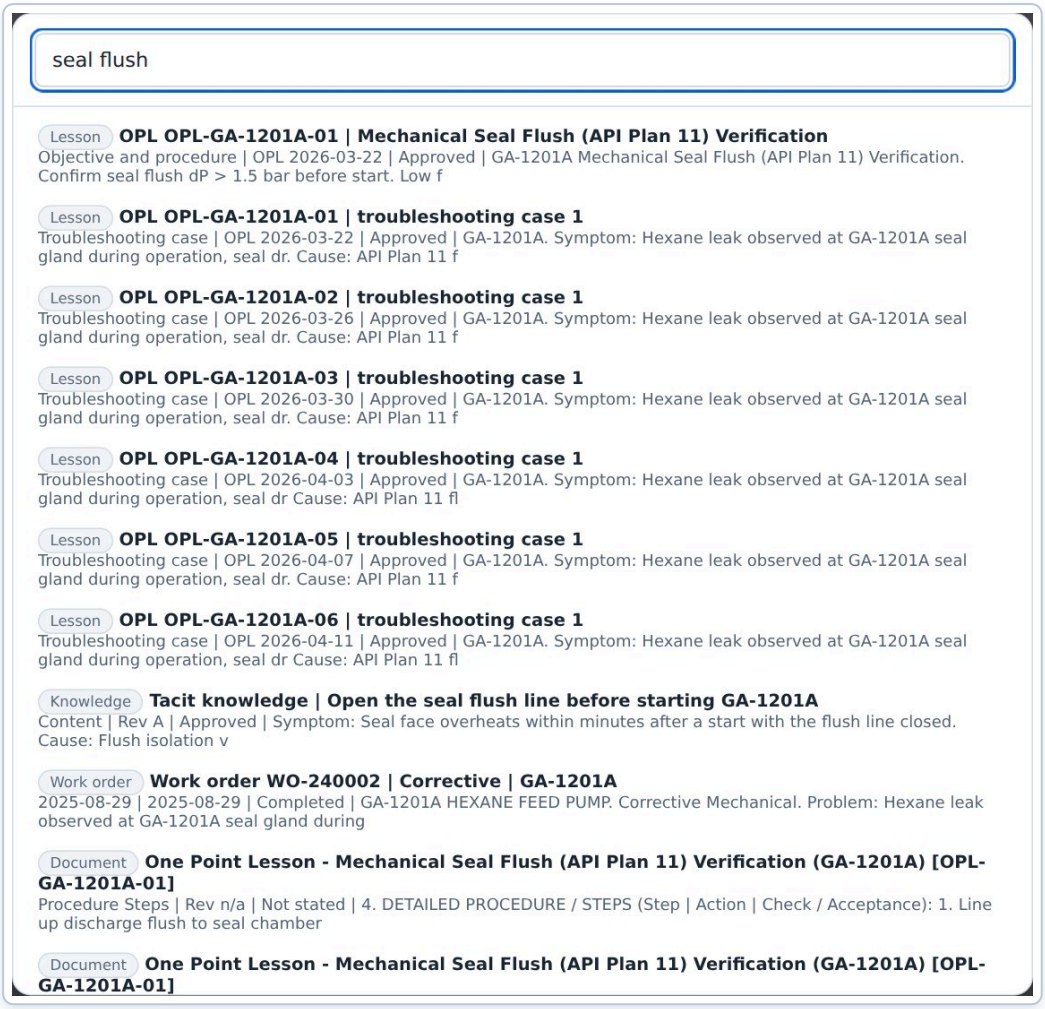

Figure 6. Global search results for the phrase seal flush.

TIP

Search understands equipment tags and common word forms. A search for `PSLL-1201` finds the interlock initiator, and a search for `leaking` also finds records that say `leak`.

Results are ranked by how well they match, by the trust level of the source and by your role. Records that are still drafts are marked and rank lower than approved records.

9 Notifications, settings and the guided tour

PART 2. GETTING STARTED

Used by: Operator Engineer Reliability HSE Manager

> Three controls at the bottom of the sidebar help you stay informed and set up the platform: the notification bell, the settings panel and the guided tour.

9.1 Notifications

The bell shows a count when something needs attention. Select it to see the list. In the sample data it reports units above the forecast risk threshold and high-severity data issues that are still open. Items that wait for your approval also appear here.

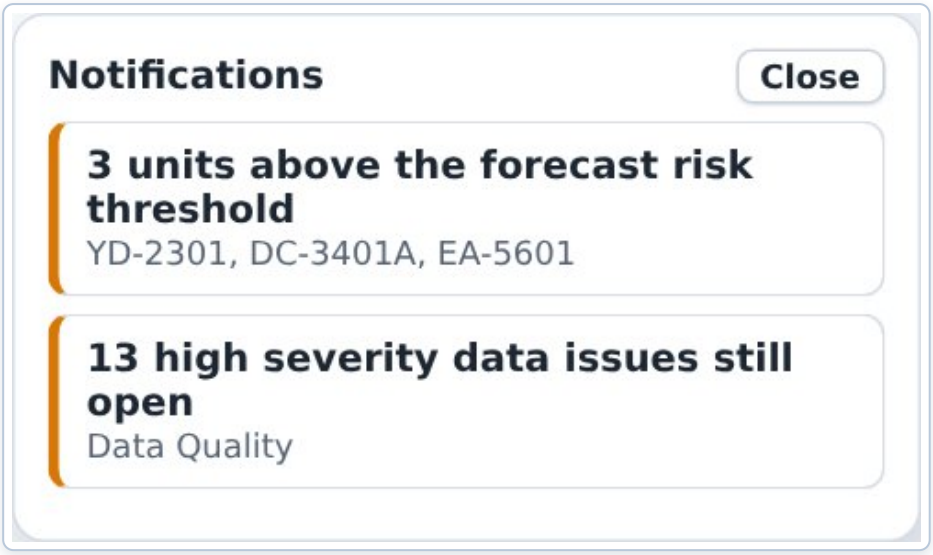

Figure 7. The notification list.

9.2 Settings

Select the gear icon to open the settings panel. The panel has four groups.

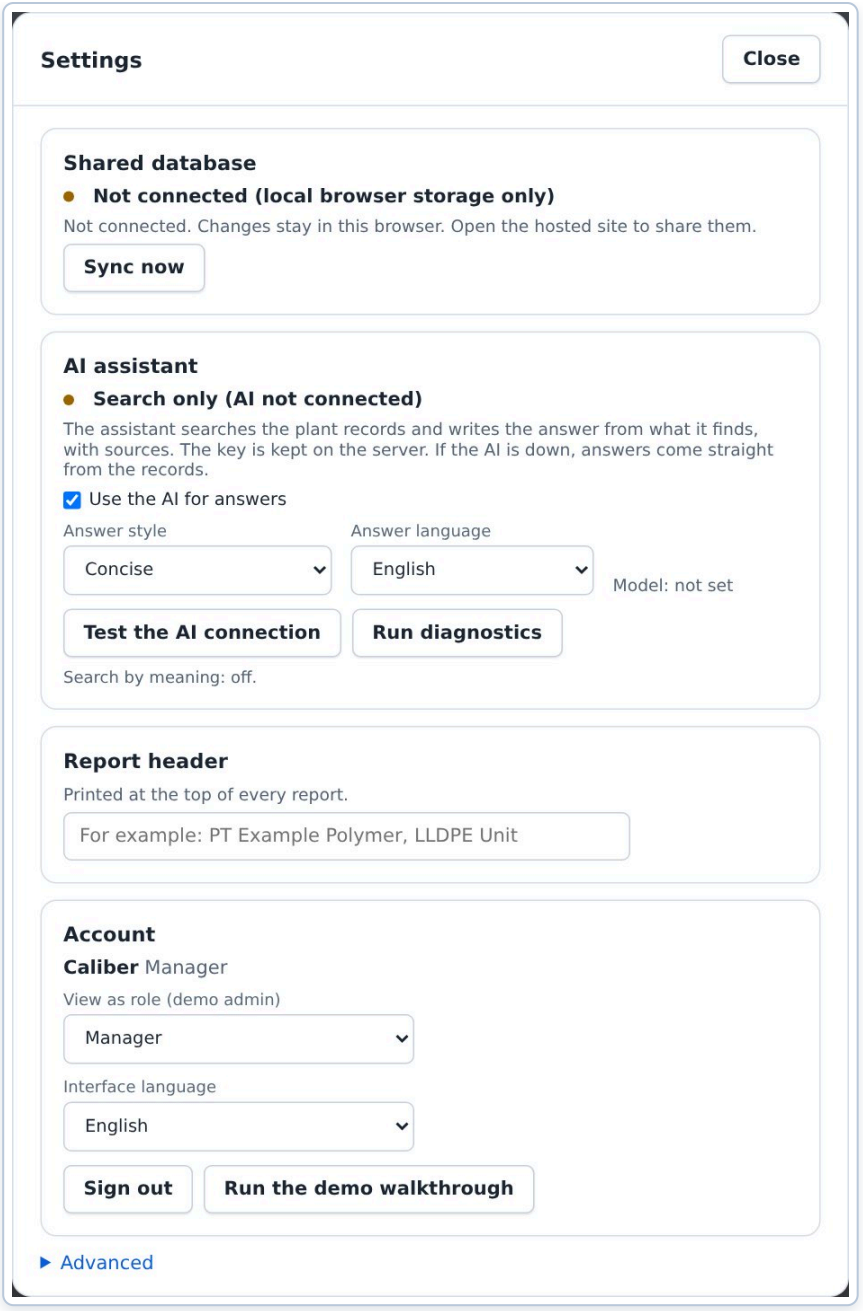

Figure 8. The settings panel.

- **Answer style.** Choose a concise or a detailed style for assistant answers.
- **Answer language.** Choose the language of answers. Bahasa Indonesia is available.
- **Interface language.** Choose English or Bahasa Indonesia for the screen text.
- **Run the demo walkthrough.** Starts the guided tour described below.

9.3 Guided tour

The tour is a seven-step overview that highlights the main parts of the Dashboard. Select the question-mark icon in the sidebar footer to start it. Use **Next** to move on and **Skip tour** to leave.

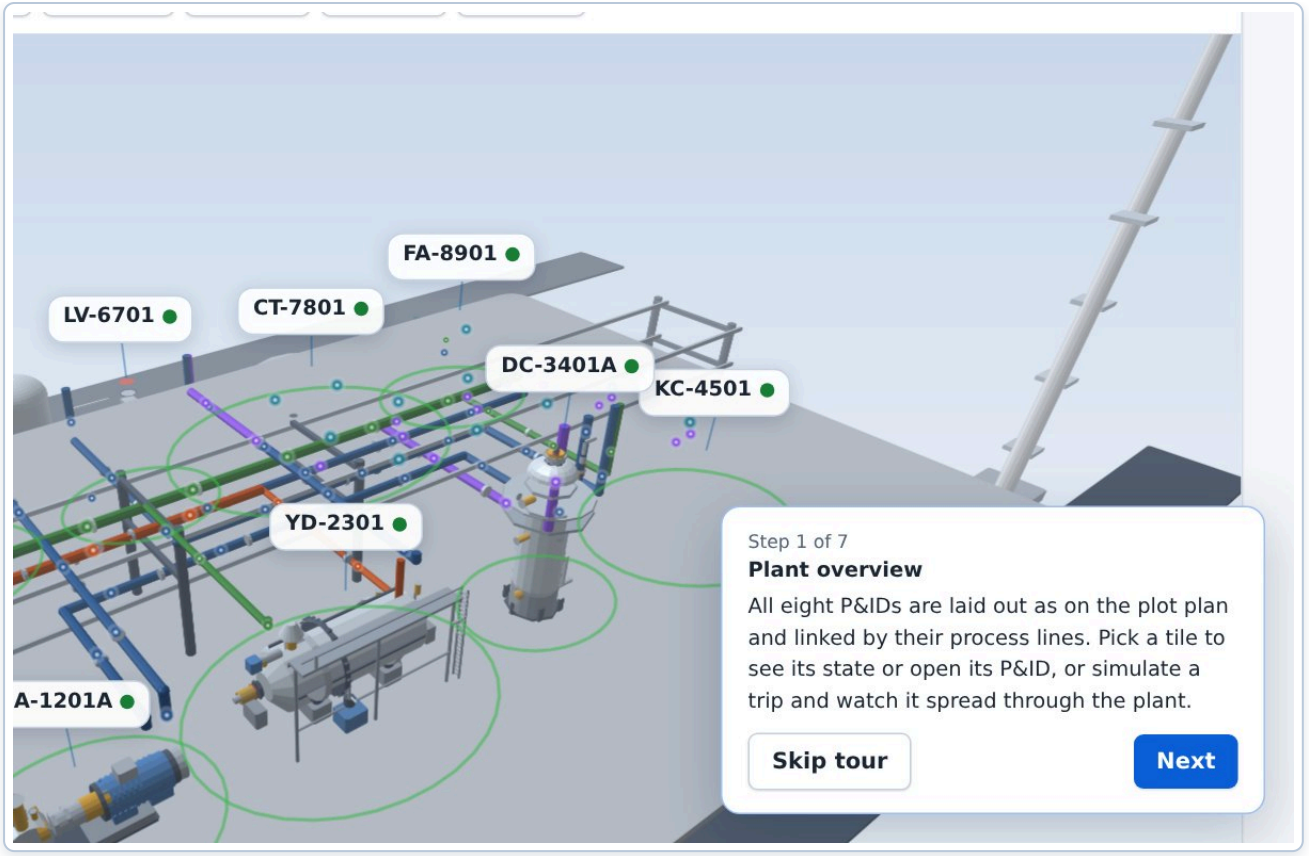

Figure 9. A step of the guided tour.

10 Working offline and sharing data

PART 2. GETTING STARTED

Used by: Operator | Engineer | Reliability | HSE | Manager

> The platform keeps its own copy of the knowledge base in your browser, so searching works without a connection. When a shared database is connected, changes made by one user are shared with the others.

10.1 What is stored where

Storage	What it holds	Who sees it
Your browser	A copy of the knowledge base, your drafts, your recent questions and your settings	Only you, on this computer
Shared database	Knowledge items, work orders, feedback, the audit trail and the question log	All signed-in users, when connected
Production database (target)	The same records in PostgreSQL with vector search	All users of the Company installation

10.2 Sync status

The footer of the sidebar shows the sync status. **Local only** means that the shared database is not connected and your changes stay in this browser. When it is connected, the footer shows the time of the last sync, and the platform checks for changes every few seconds.

1. Open **Settings**.
2. Read the **Shared database** panel. It states whether the platform is connected.

3. Select **Sync now** to send your changes and receive the latest changes immediately.

> **CAUTION**
> If two people change the same item at nearly the same time, the platform keeps the newer change and marks the other as a conflict so that it can be reviewed.

10.3 Offline search

The label **Offline knowledge search** in the footer confirms that the search index is loaded in your browser. You can search, open documents and read lessons without a connection. Actions that need the shared database, such as syncing, wait until the connection returns.

11 Dashboard

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

The Dashboard is the first page after sign-in. It shows the whole LLDPE unit as a 3D plant, lists the items that need attention today and summarises the knowledge base.

11.1 Overview tab

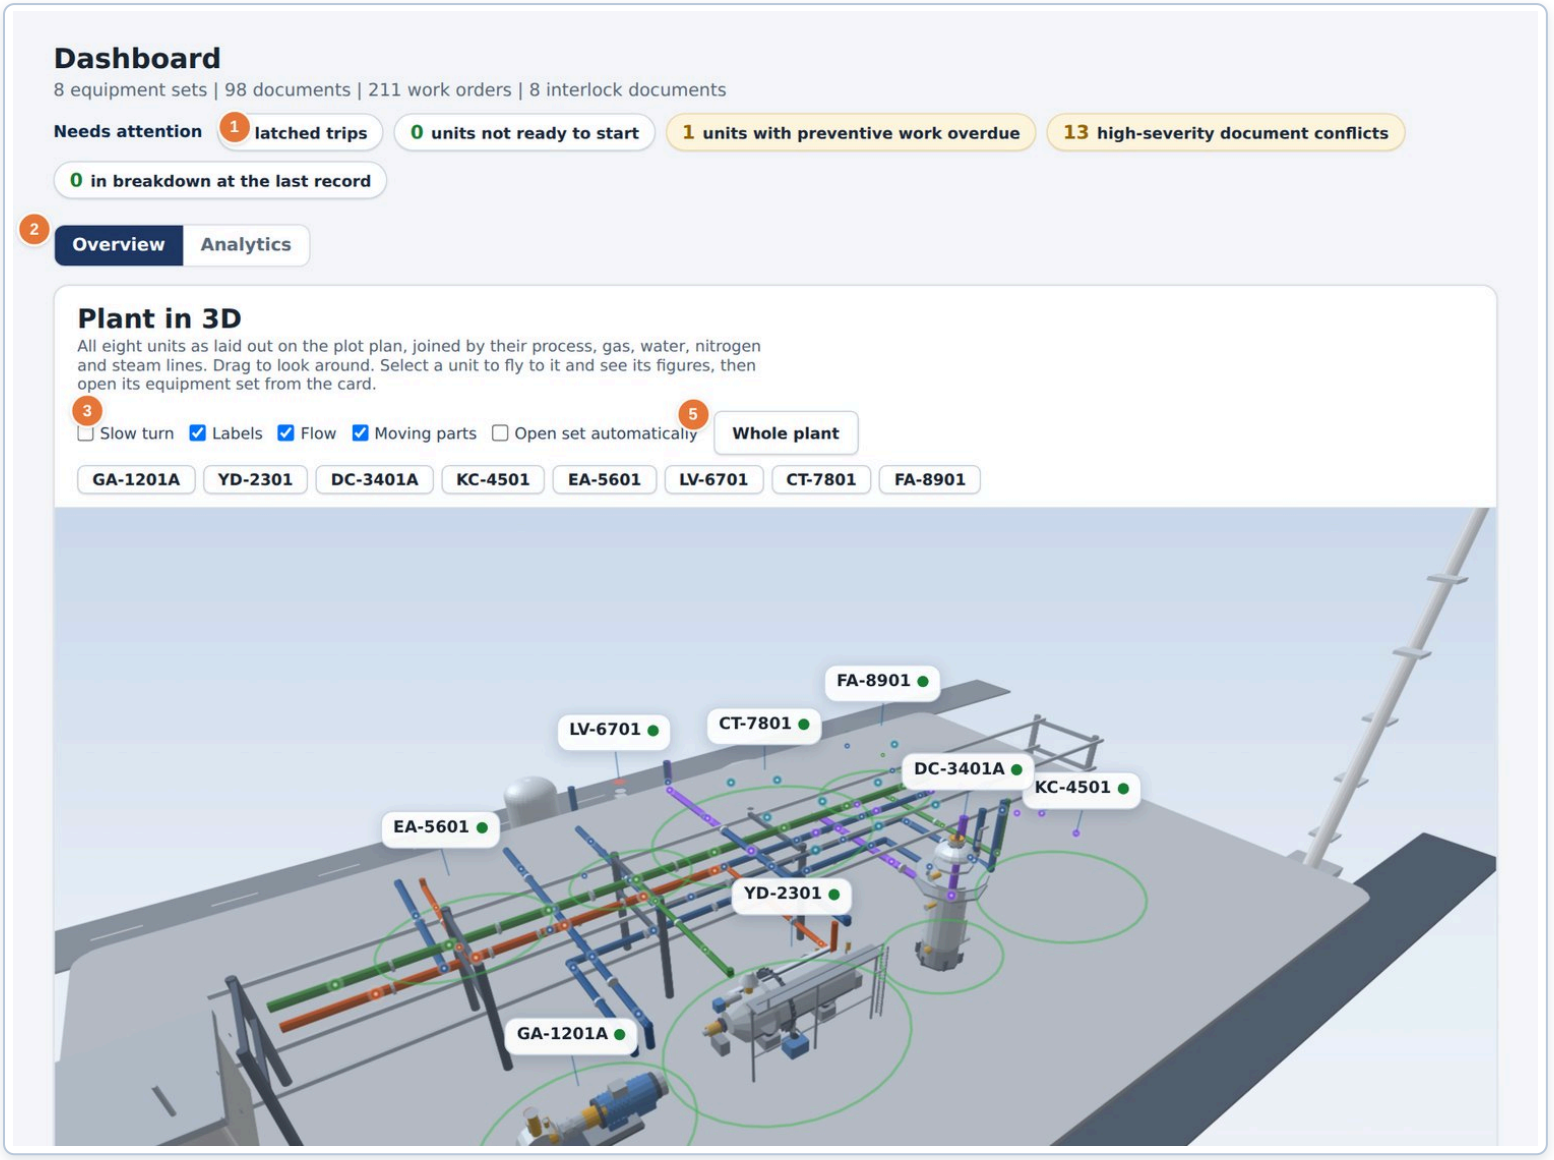

Figure 10. The Dashboard, Overview tab.

Nee chips. Green means no action. Amber means follow up.

3 View options for the 3D plant: Slow turn, Labels, Flow, Moving parts and Open set automatically.

Wh returns to the full view.

Ana and tabs.

4 One button for each equipment set. Select a button to fly to that unit.

The **Needs attention** line counts five conditions: latched interlock trips, units that are not ready to start, units with overdue preventive work, high-severity document conflicts and units in breakdown at the last record. Select a chip to open the page that explains it.

11.2 Using the 3D plant

1. Drag with the mouse to rotate the view. Scroll to zoom. Hold the right mouse button, or use two fingers, to pan.
2. Select a unit tag above the model, or a label on the model, to fly to that unit.
3. Read the unit card that appears. It shows availability, breakdowns, downtime and forecast risk for the unit.
4. Select **Open equipment set** on the card to go to the equipment page, or select **Whole plant** to return.

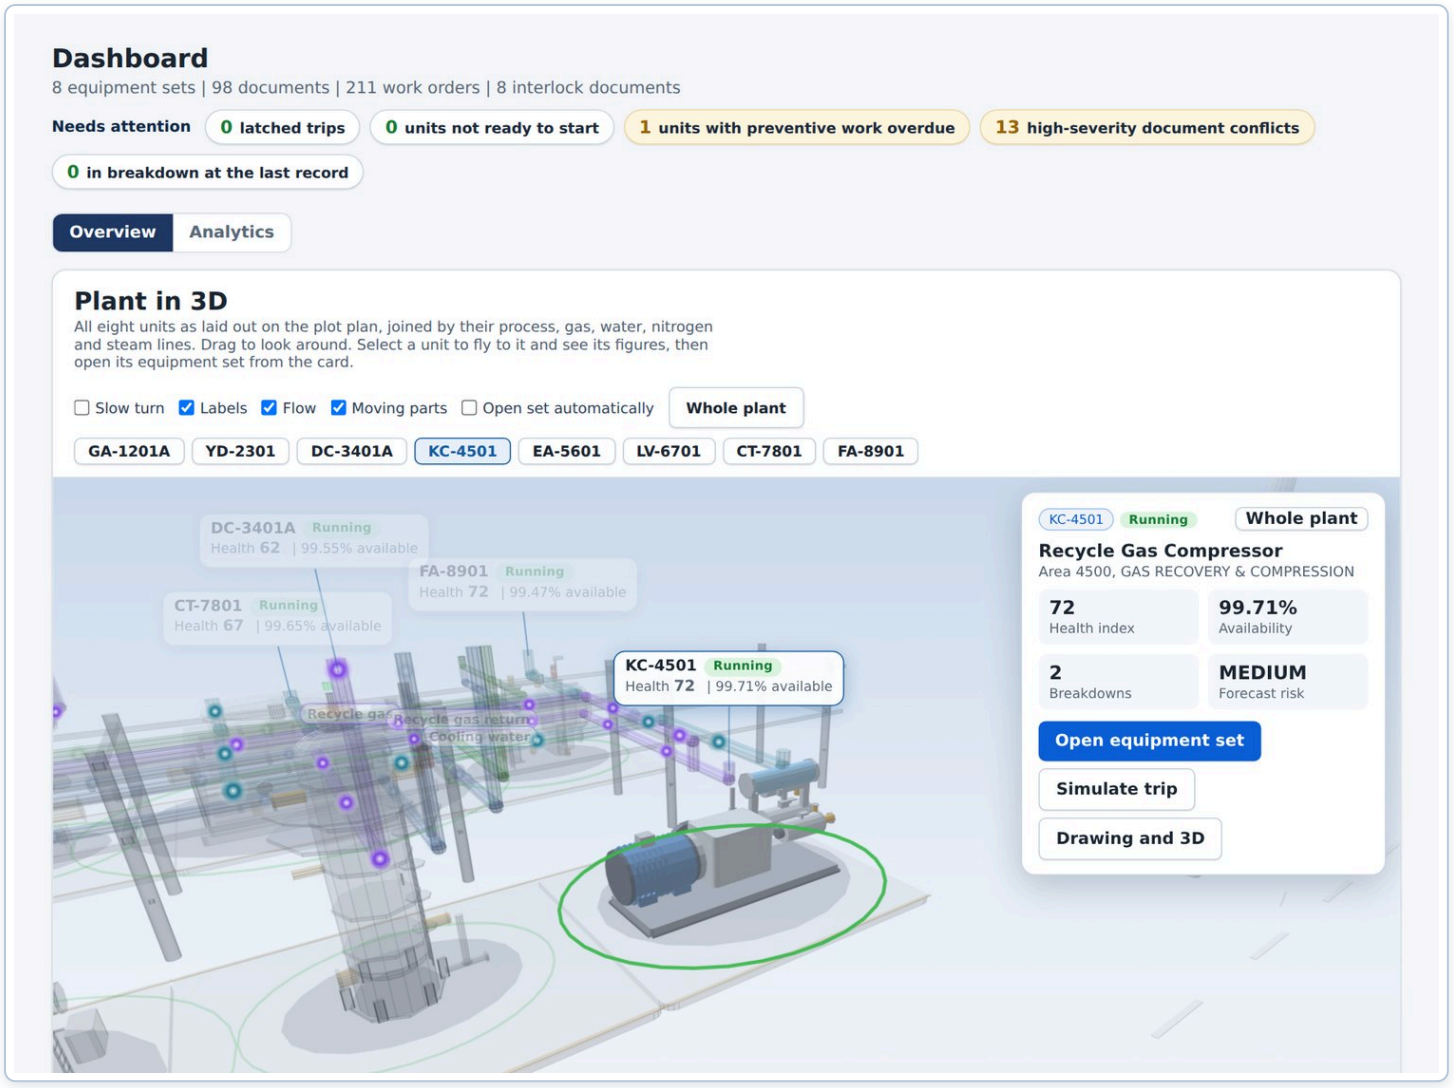

Figure 11. A unit selected on the Dashboard. The unit card opens beside the 3D view.

> **TIP**
> Tick **Open set automatically** if you want a selected unit to open its equipment page at once.

Pipes are coloured by service so that you can follow a line across the plant. The legend under the model lists process liquid, nitrogen, steam and condensate, cooling water, lube and seal oil, and gas, vent and hydrogen. Green rings on the ground mark the hazard radius of each unit.

11.3 Analytics tab

The **Analytics** tab summarises the knowledge base and the maintenance history on one page. Every chart on this page is interactive: select a bar, a segment or a month to see the records behind it.

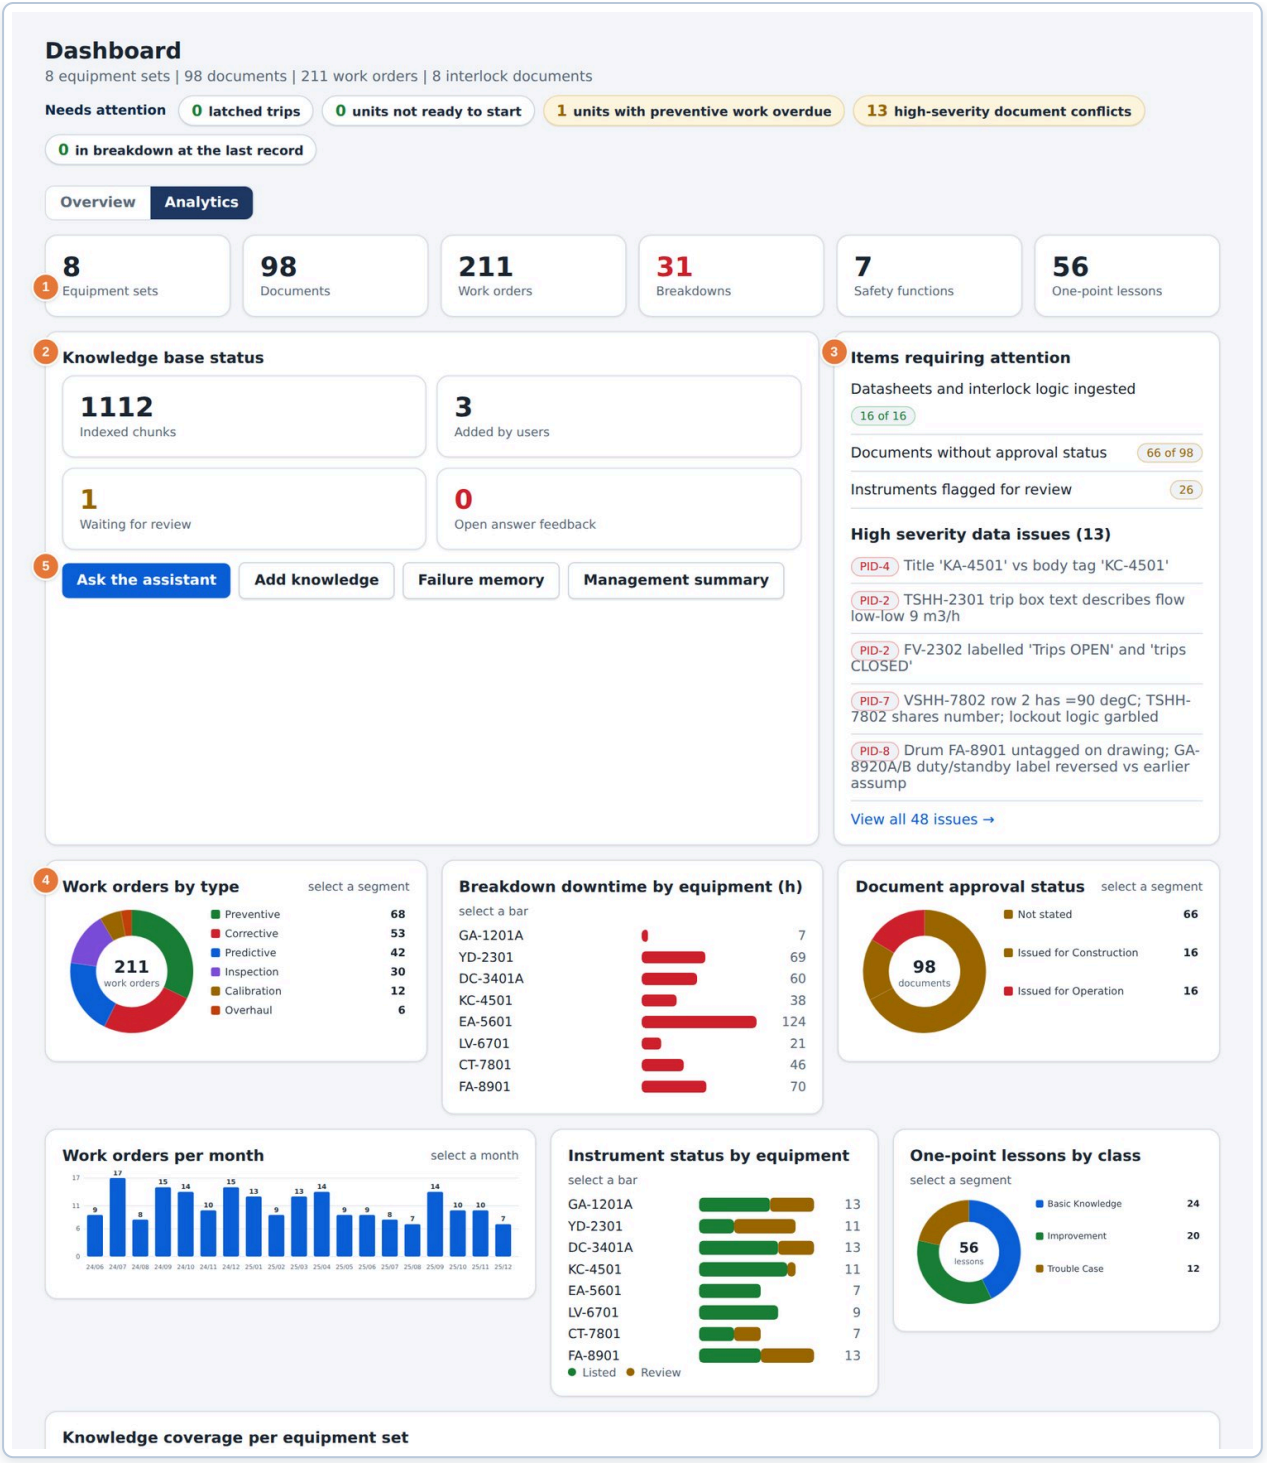

Figure 12. The Dashboard, Analytics tab.

1. Headline counts: equipment sets, documents, work orders, breakdowns, safety functions and lessons.
2. Knowledge base status: indexed chunks, items added by users, items waiting for review and open answer feedback.
3. Items requiring attention: and the high-severity data issues.
4. Charts for work orders by type, breakdown downtime by equipment and document approval status.
5. Quick actions: , , and .

12 My work

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

My work collects what concerns you personally: items waiting for your approval, items you have written, and your recent questions and activity.

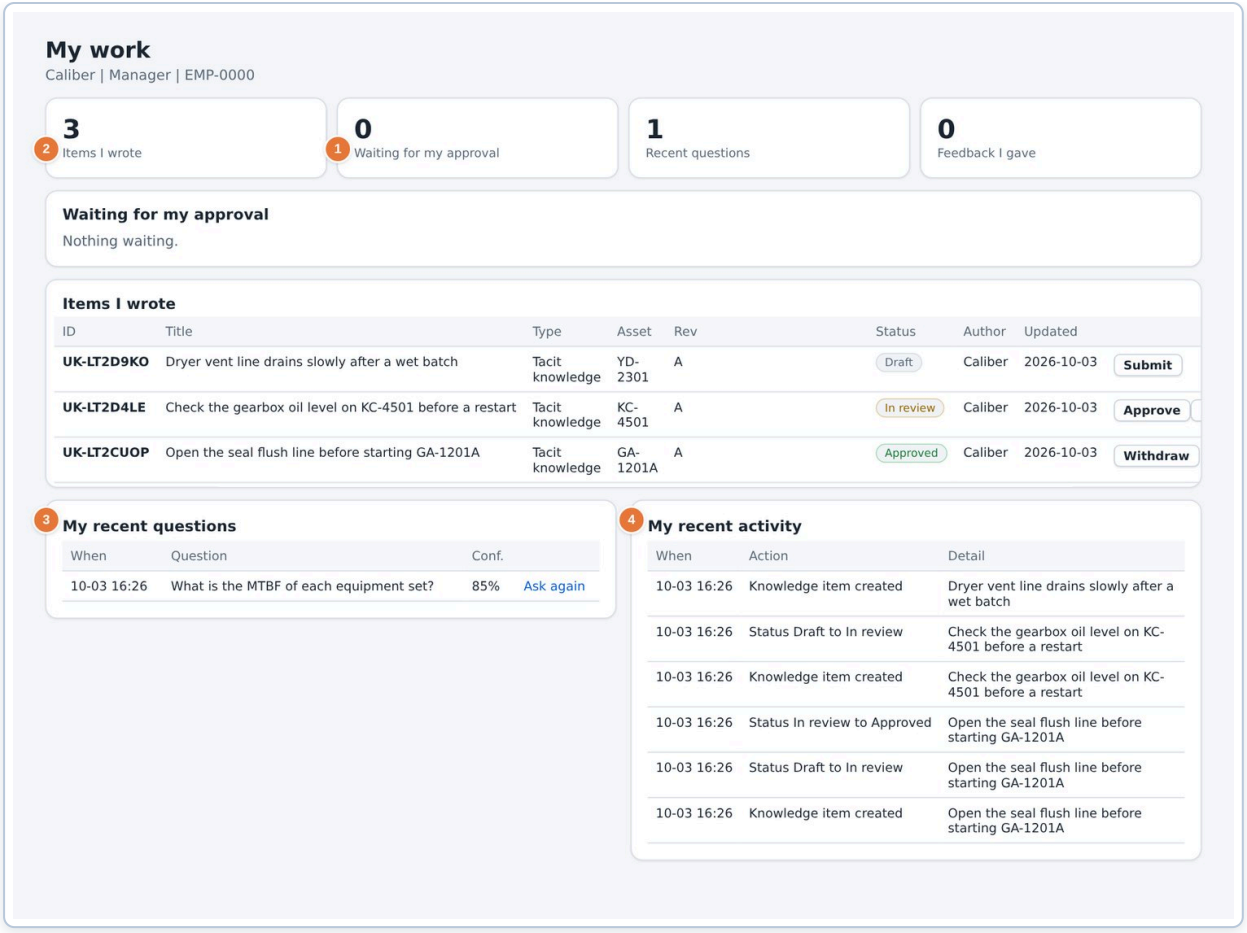

Figure 13. The My work page, after a question has been asked.

you Items waiting for approval. Empty for roles that cannot approve.

2 Knowledge items you have written, with their status.

3 Your recent questions to the AI Assistant.

4 Your recent activity, taken from the audit trail.

12.1 How to use the page

- Check **Waiting for my approval** at the start of each shift if you are an approver. Select an item to open it in Knowledge Studio.
- Use **Items I wrote** to follow a draft you submitted. The status moves from Draft to In review to Approved or Rejected.
- Open a question under **My recent questions** to read the answer again.

> **ROLES**
> Operators can write drafts and ask questions, but they cannot approve. Their **Waiting for my approval** list stays empty.

13 Equipment Sets

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

An equipment set gathers everything known about one machine. The page has a header with the main figures and twelve tabs that open the P&ID, the drawing, the datasheet, the interlock logic, the lessons and the maintenance history.

13.1 The equipment list

Select **Equipment Sets** in the sidebar to see the eight sets. Each card shows the tag, the name, the start-up status, the criticality and the main figures. Select a card to open the set.

13.2 The equipment header

Figure 14. The header of an equipment page.

1. Start-up status, flammability, set number, tag and criticality.
2. about this equipment. The question is limited to this set.
3. The twelve tabs. The selected tab is underlined.
4. Counts beside the tab names show how many records each tab holds.

Under the title, six tiles show availability, mean repair time, breakdowns, downtime, forecast risk and open data issues. **Inspect in 3D** opens the 3D model of the machine. **Export dossier** produces a printable summary of the equipment (see Chapter 37).

13.3 Overview tab

The Overview tab answers the question: what do we know about this machine, and where is it?

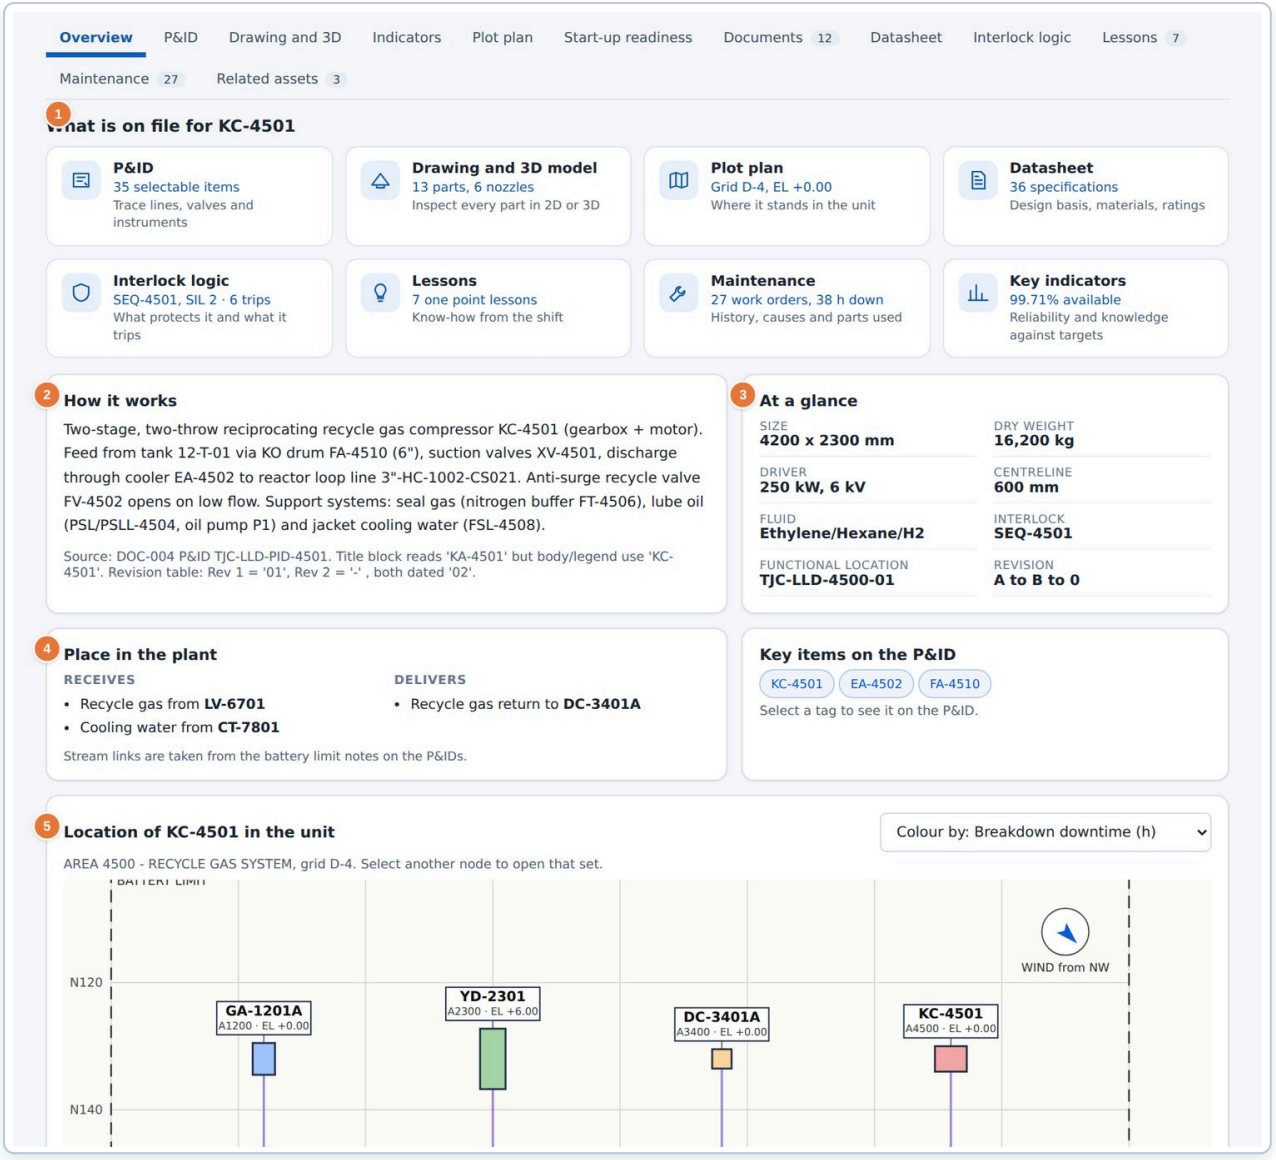

Figure 15. Overview tab of the Recycle Gas Compressor KC-4501.

Wh : tiles that open the P&ID, drawing, plot plan, datasheet, interlock logic, lessons, maintenance and key indicators.

Hov : a plain description of the machine and its process.

At : size, weight, driver and interlock reference.

Pla : what feeds the unit and what it delivers to.

Loc in the unit, coloured by a measure you select.

13.4 P&ID tab

The P&ID tab shows the piping and instrumentation diagram of the unit. Chapter 15 describes how to read it and how to operate the valves.

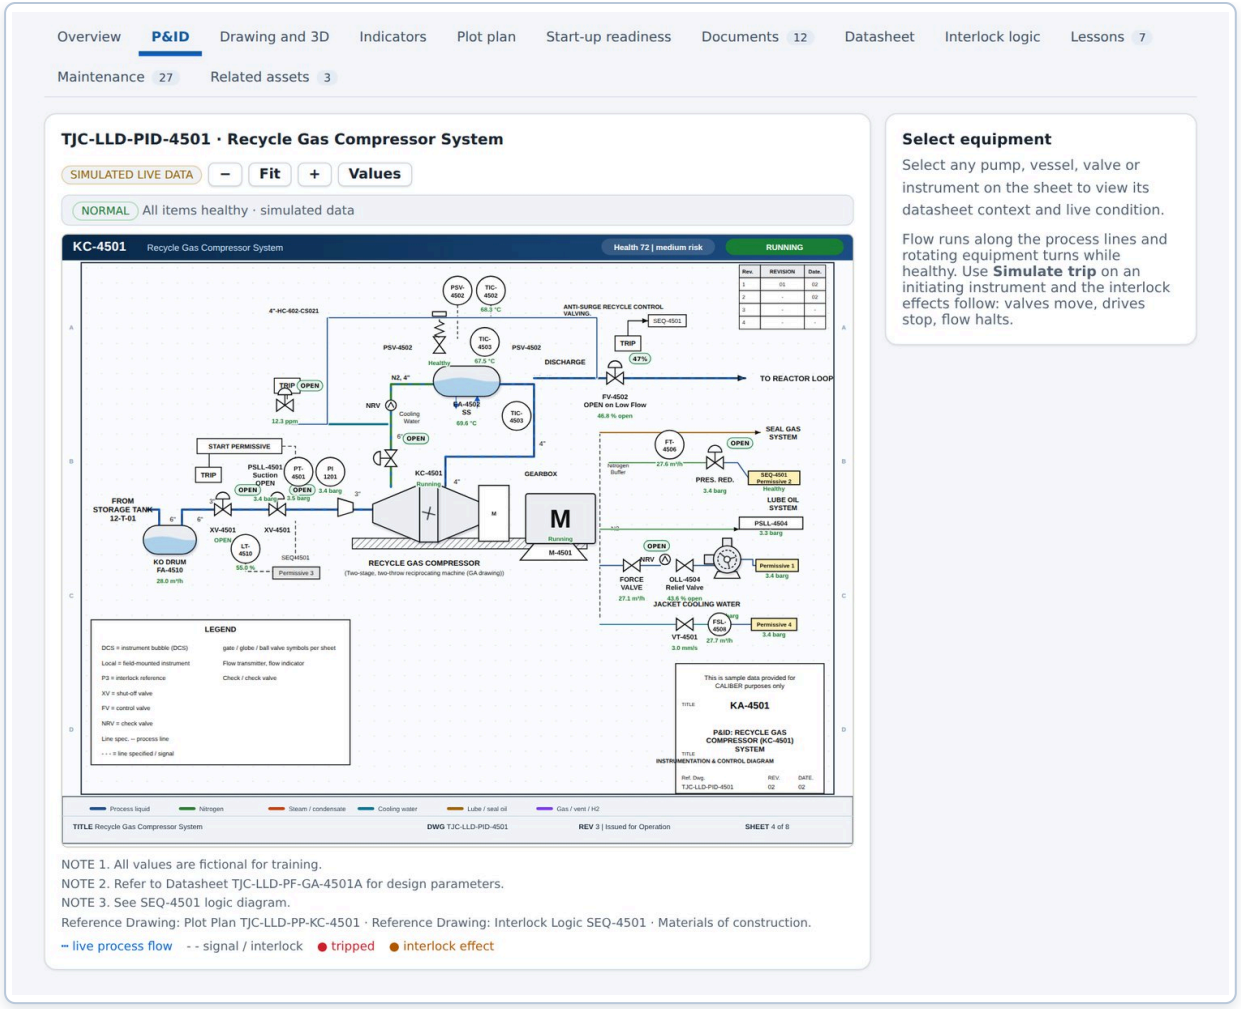

Figure 16. P&ID tab.

13.5 Drawing and 3D tab

This tab shows the general arrangement drawing and the 3D model, with a bill of materials and the work orders for each component. Chapter 14 explains how to select parts.

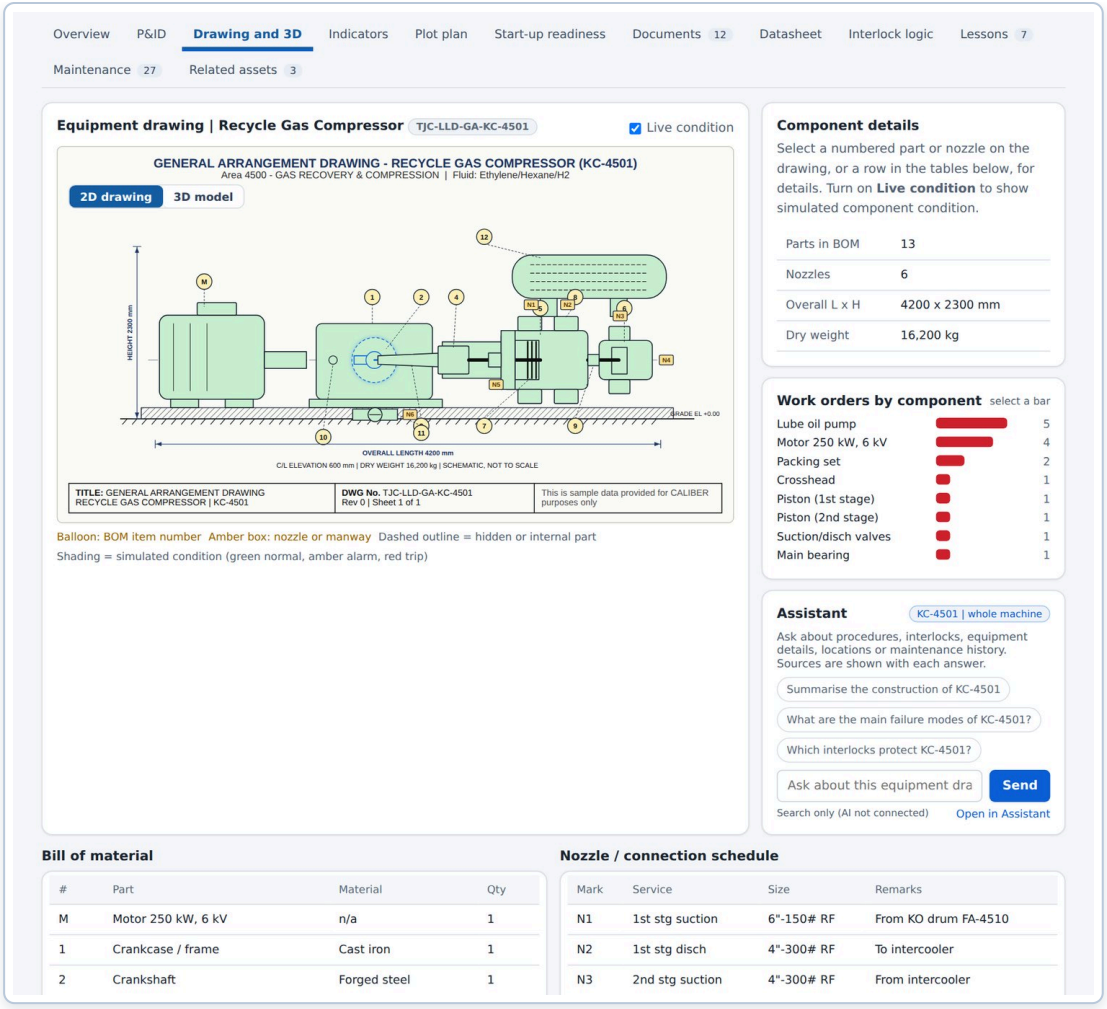

Figure 17. Drawing and 3D tab.

13.6 Indicators tab

The Indicators tab gives the reliability and knowledge figures of the set: availability, mean repair time, mean time between failures, breakdowns, downtime, maintenance cost, the share of planned work, the forecast failure risk for the next 90 days, documents approved, lessons, open data issues and items added by users. A tag next to a figure shows whether it is on or off target. Select **Open the full performance page** to see the same figures for all sets.

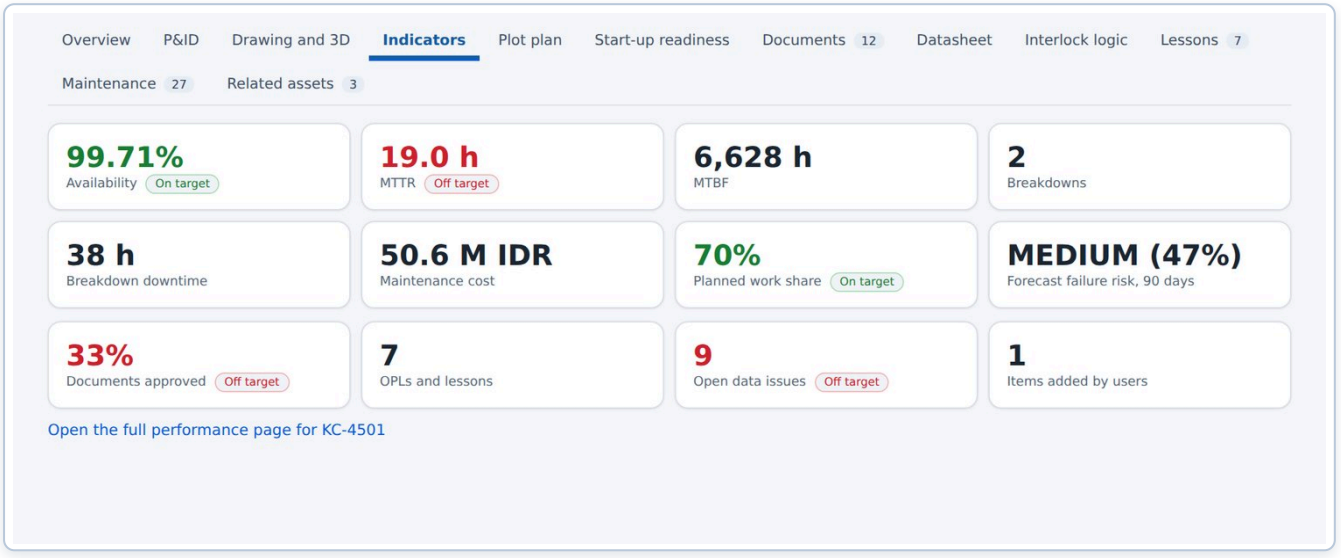

Figure 18. Indicators tab.

13.7 Plot plan tab

The Plot plan tab shows where the unit stands in the plant and what is near it. Layers can be switched on for areas, heat map, hazard zones, muster points and gates, fire protection and walkways.

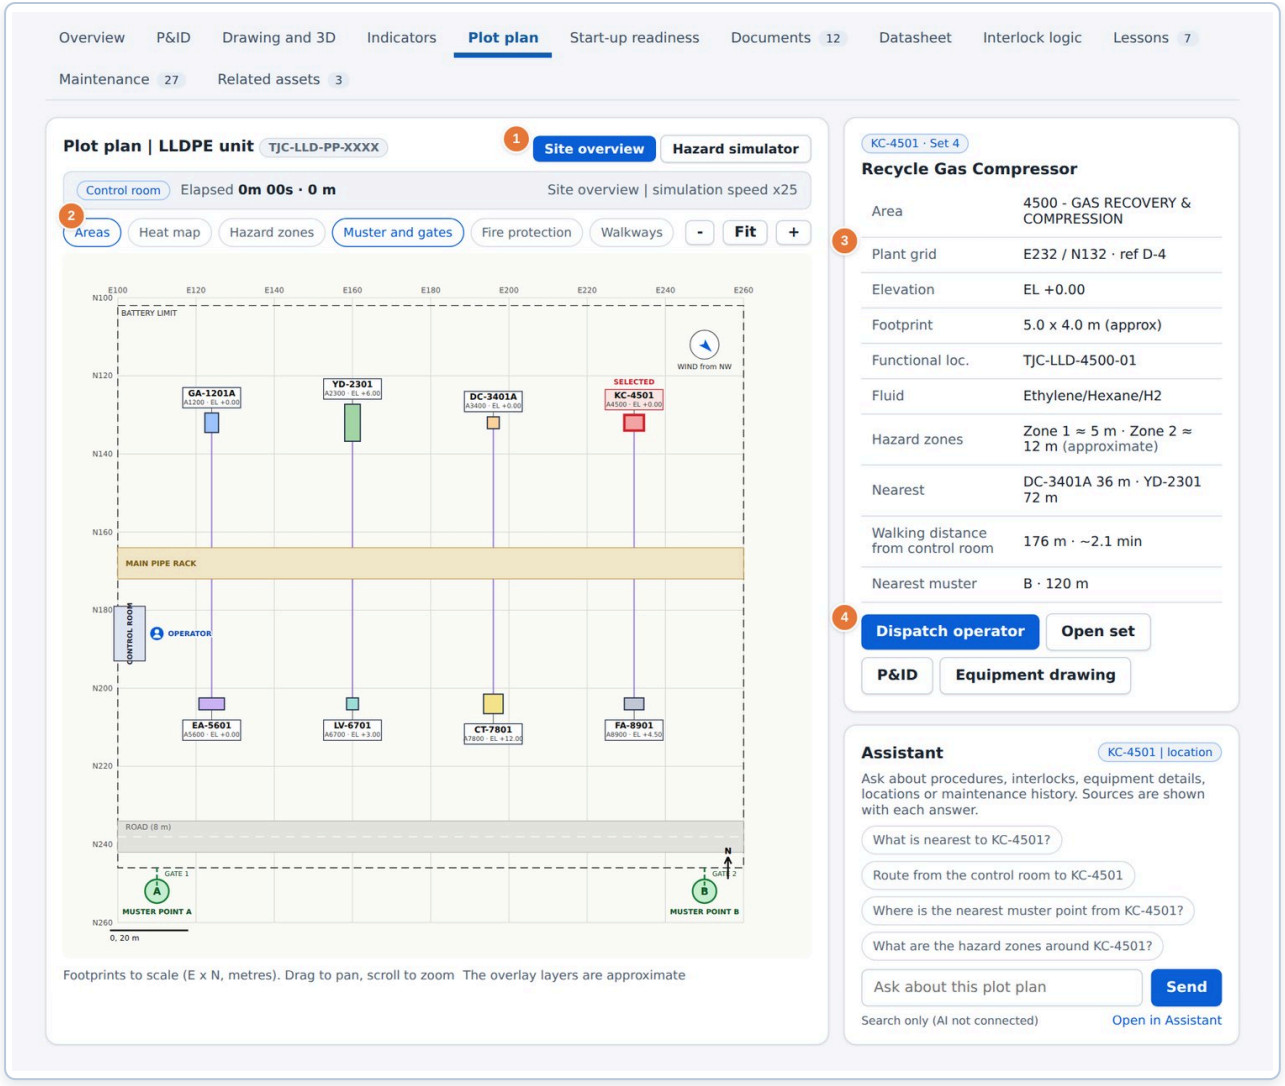

Figure 19. Plot plan tab.

Haz Switch between and the (Chapter 31).

2 Map layers: Areas, Heat map, Hazard zones, Muster and gates, Fire protection and Walkways.

3 Facts about the selected unit: area, grid, elevation, fluid, hazard zones and nearest muster point.

Dis shows the route and walking time from the control room.

13.8 Start-up readiness tab

This tab decides whether the unit is ready to start. Chapter 17 describes it in full.

13.9 Documents tab

The Documents tab lists every document of the set. The top table shows the **document set coverage**: whether a P&ID, an equipment drawing, a datasheet, a plot plan and an interlock logic document exist for the set, and their approval status. The lower table lists all documents with their type, revision, approval status and effective date.

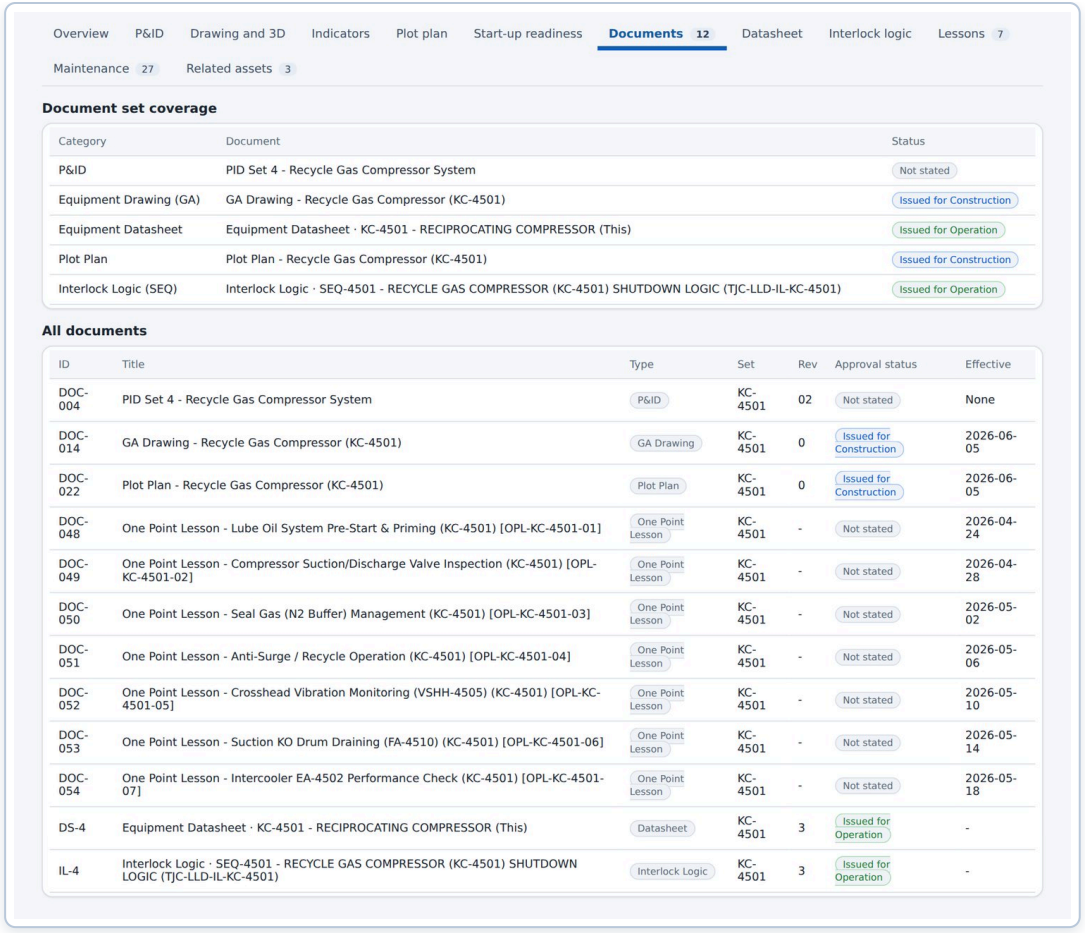

Figure 20. Documents tab.

13.10 Datasheet tab

The Datasheet tab shows the equipment datasheet as a searchable list of specifications, grouped by topic such as identification, driver, design and mechanical data. Use the search box to find a value, for example `Speed`. **Open interlock logic** goes to the interlock sheet of the unit, **Export CSV** saves the datasheet as a table, and **Ask about this datasheet** sends a question to the assistant.

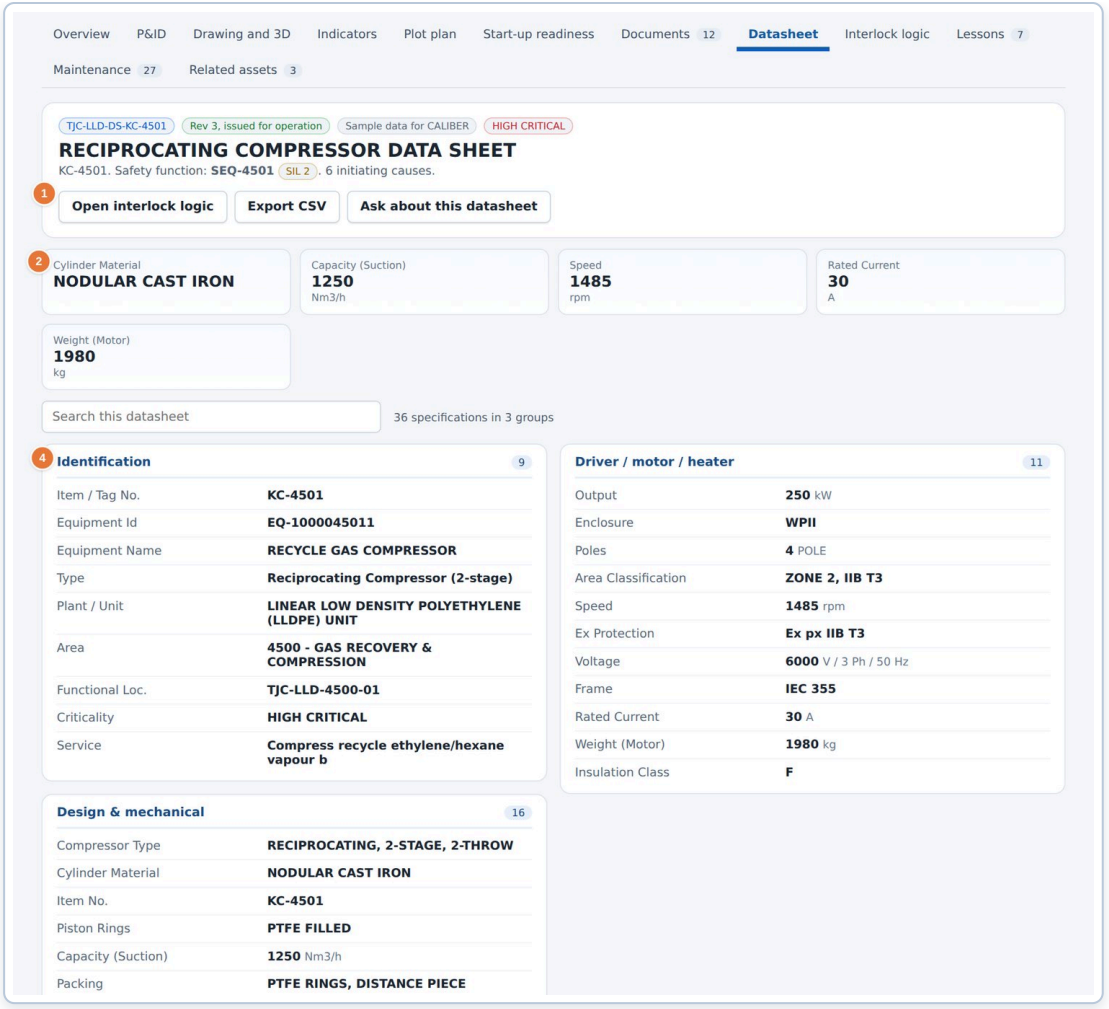

Figure 21. Datasheet tab.

Ask , and .

2 Key values shown as tiles at the top.

4 Specification groups, each with a count.

13.11 Interlock logic tab

The tab shows the cause-and-effect sheet of the unit's interlock, with tabs for the **Function test** and the **Proof test history**. Chapter 16 explains the sheet.

13.12 Lessons tab

The Lessons tab lists the one point lessons that concern the equipment. Each card shows the lesson number, its discipline, its classification and the number of steps. **Open sheet** opens the lesson, and **Simulate** starts the matching exercise (Chapters 28 and 29).

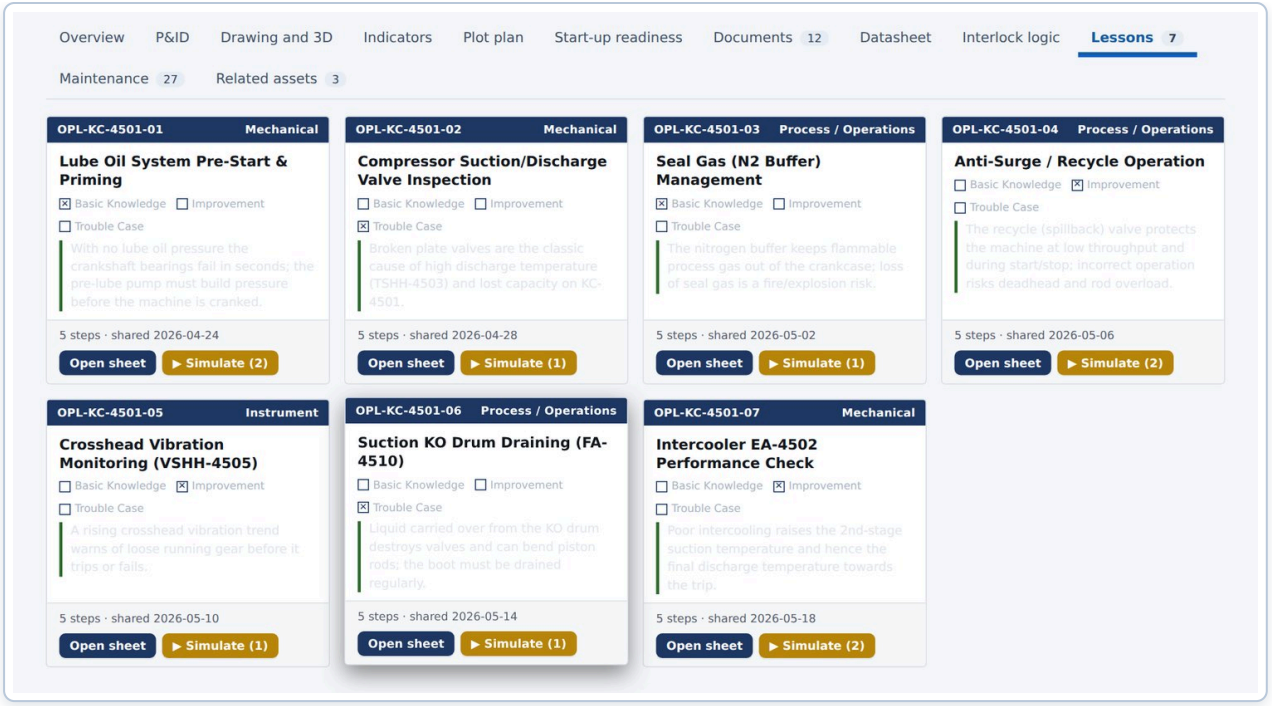

Figure 22. Lessons tab.

13.13 Maintenance tab

The Maintenance tab shows the maintenance dashboard for this one machine: work orders per month and by type, cost split, work by component, failure locations on the drawing and the reliability figures. It uses the same charts as the Maintenance page, limited to this set.

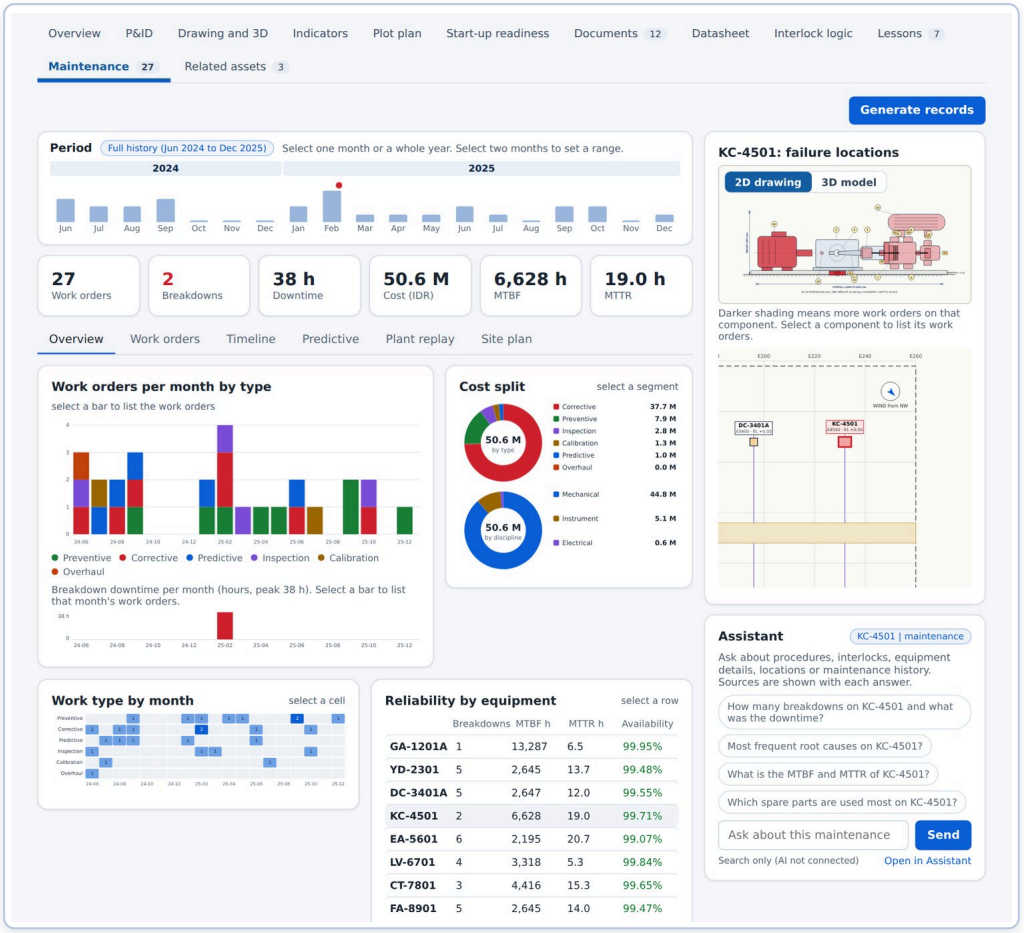

Figure 23. Maintenance tab.

13.14 Related assets tab

The last tab lists assets that are connected to this equipment, such as a cooler or a knock-out drum, with their tag, type and description.

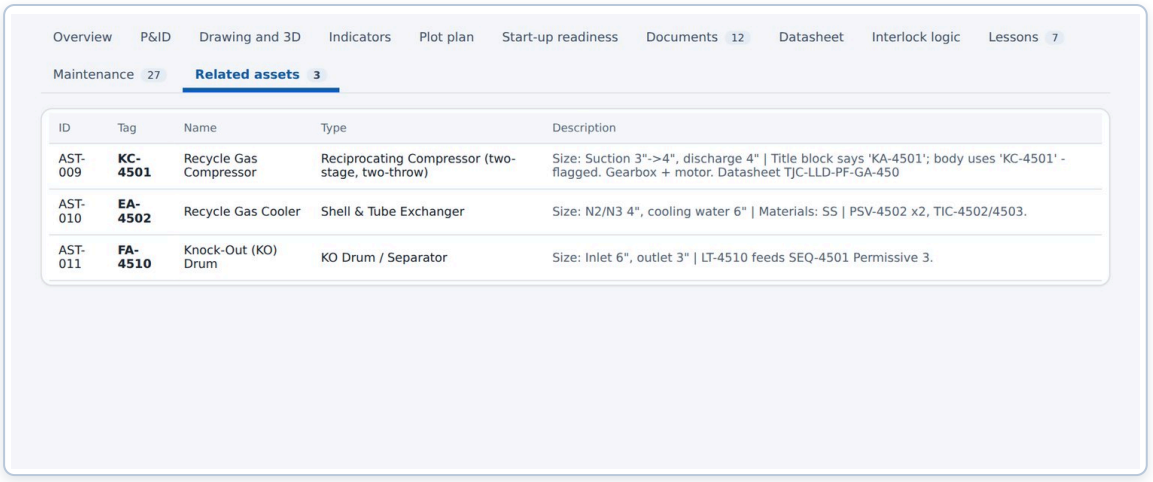

Figure 24. Related assets tab.

14 Equipment drawings in 2D and 3D

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

> Every machine has a general arrangement drawing and a 3D model built from the same list of parts. Selecting a part in either view shows its item number, material, drawing reference and simulated condition.

14.1 The 2D drawing

1. Open an equipment set and select the **Drawing and 3D** tab.
2. Make sure **2D drawing** is selected above the drawing.
3. Select a numbered balloon on the drawing, or a part name in the table below it. The part is highlighted.
4. Read the **Component details** panel. It shows the item number, part, material, quantity and drawing reference.
5. Tick **Live condition** to see a simulated reading for the part, such as bearing temperature or leak rate.

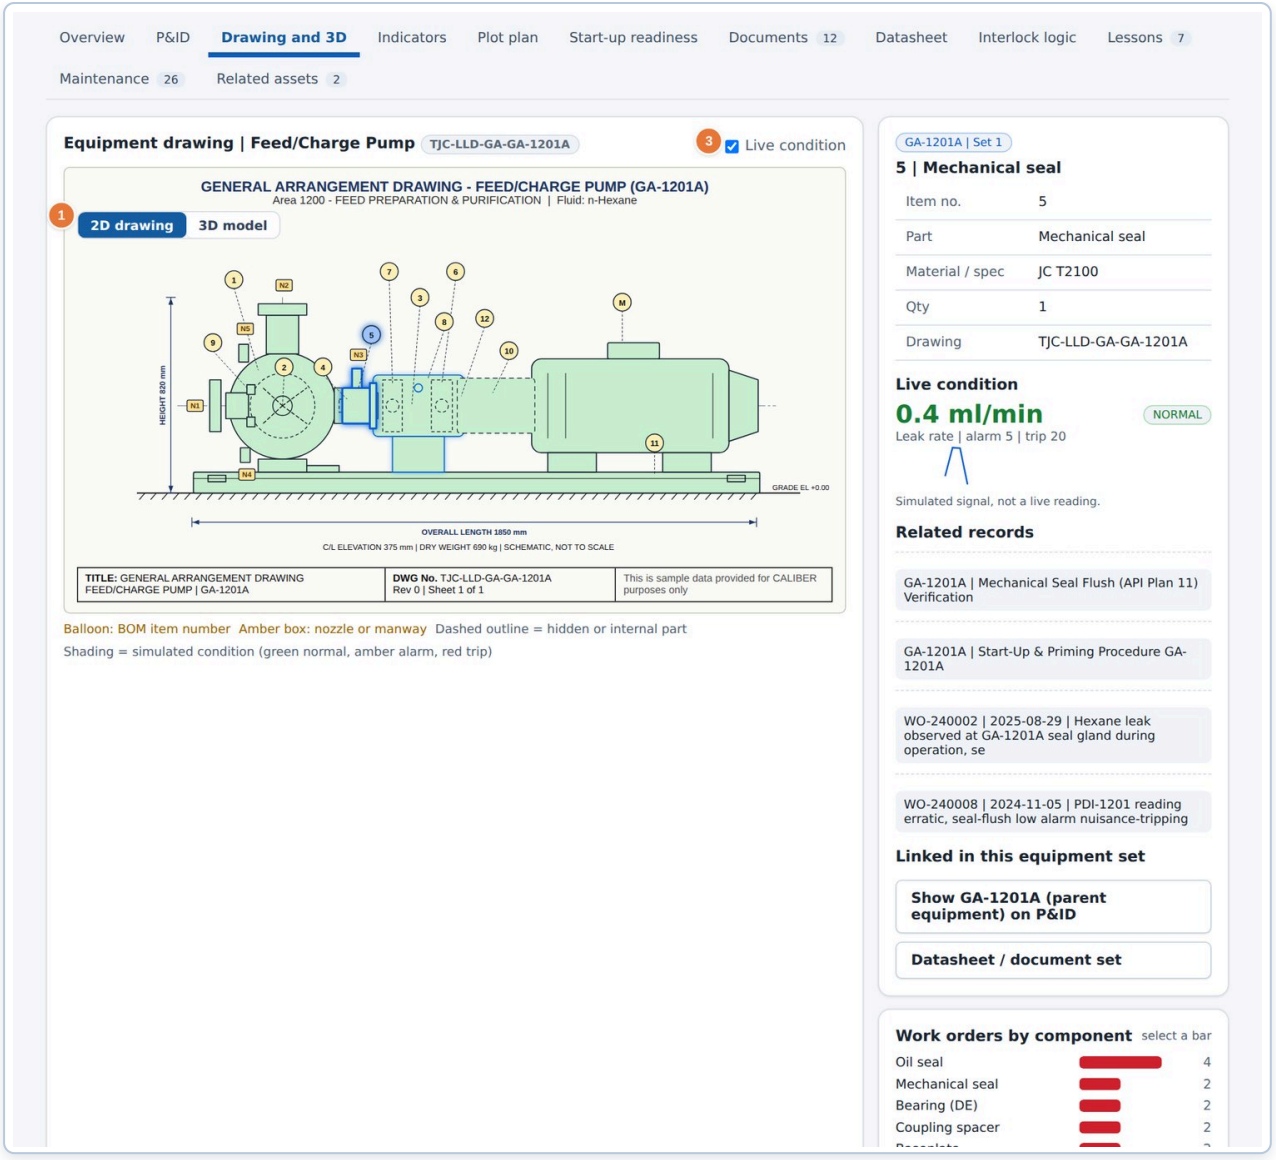

Figure 25. The 2D drawing with the mechanical seal selected.

3D Switch between and .

3 Simulated condition of the part. The signal is a demonstration, not a live reading.

> **NOTE**
>
> Amber boxes on the drawing mark nozzles and manways. A dashed outline means that a part is hidden or internal. The condition shading is green for normal, amber for alarm and red for trip.

14.2 The 3D model

1. Select **3D model** above the drawing.
2. Drag to rotate the machine and scroll to zoom.
3. Select a part on the model. The part is highlighted and an information card shows its item number, material, quantity and live condition.
4. Select another part. The card changes to that part.
5. Use the view buttons **Isometric**, **Front**, **Side** and **Top** to look from a fixed direction, **Auto-rotate** to turn the model, and **X-ray** to see through the casing.
6. Select **Moving parts** to animate shafts, impellers and fans. Select **Reset** to return to the first view.

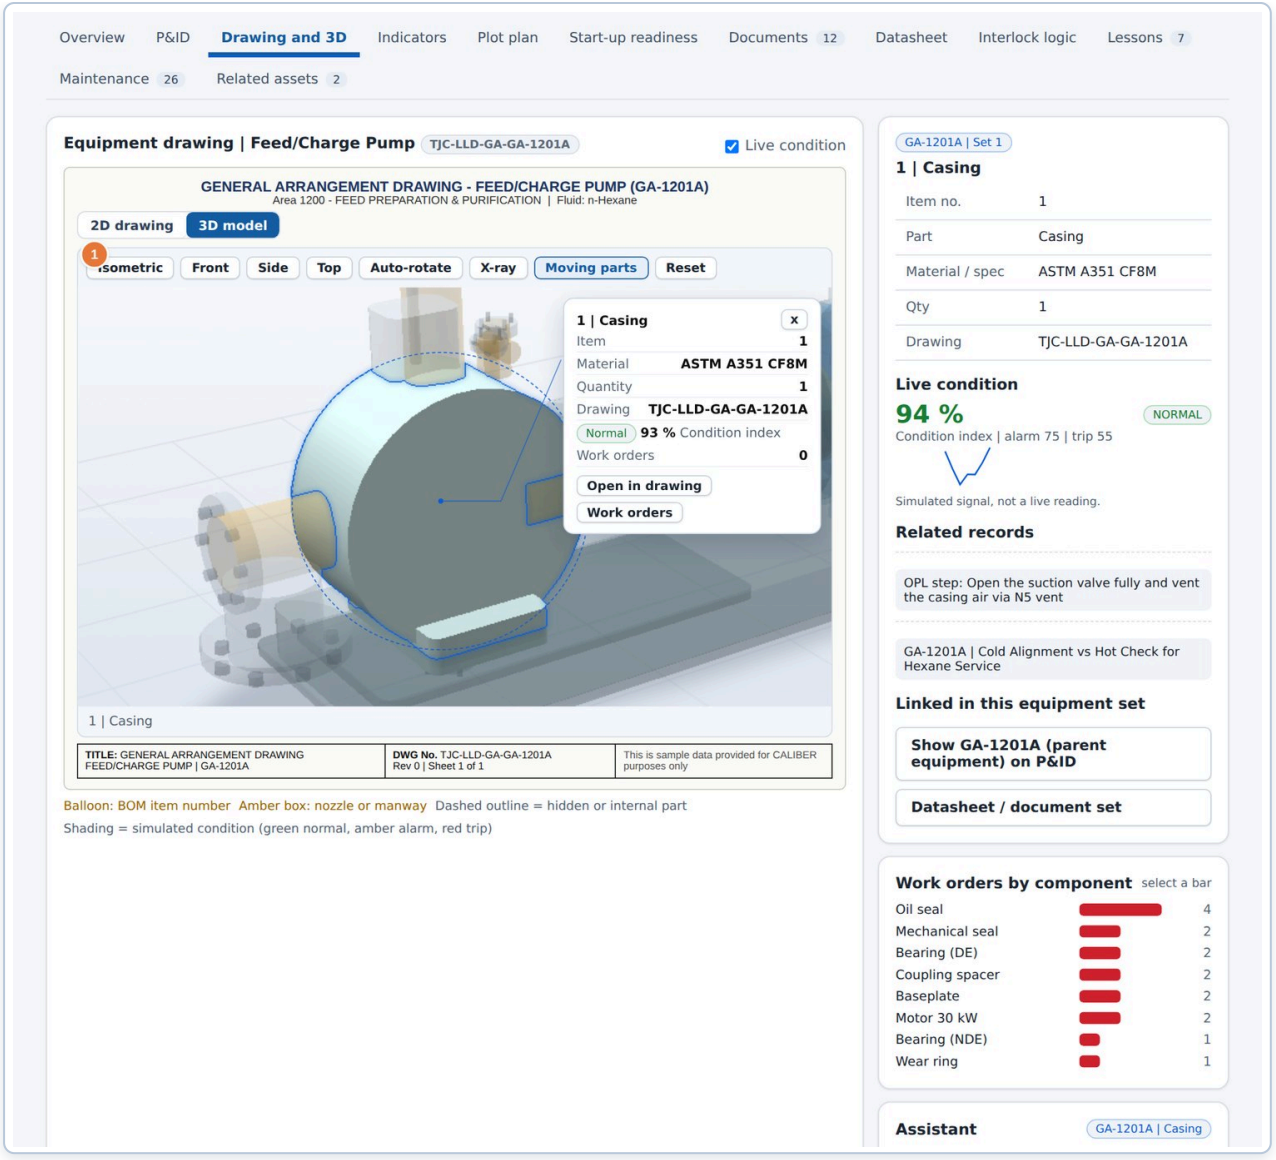

Figure 26. The 3D model of the Feed/Charge Pump with a part selected.

1. View buttons: Isometric, Front, Side, Top, Auto-rotate, X-ray, Moving parts and Reset.

The same approach works on every machine. The platform has separate models for the pump, the dryer, the reactor, the compressor, the heater, the separator, the cooling tower fan and the reflux drum.

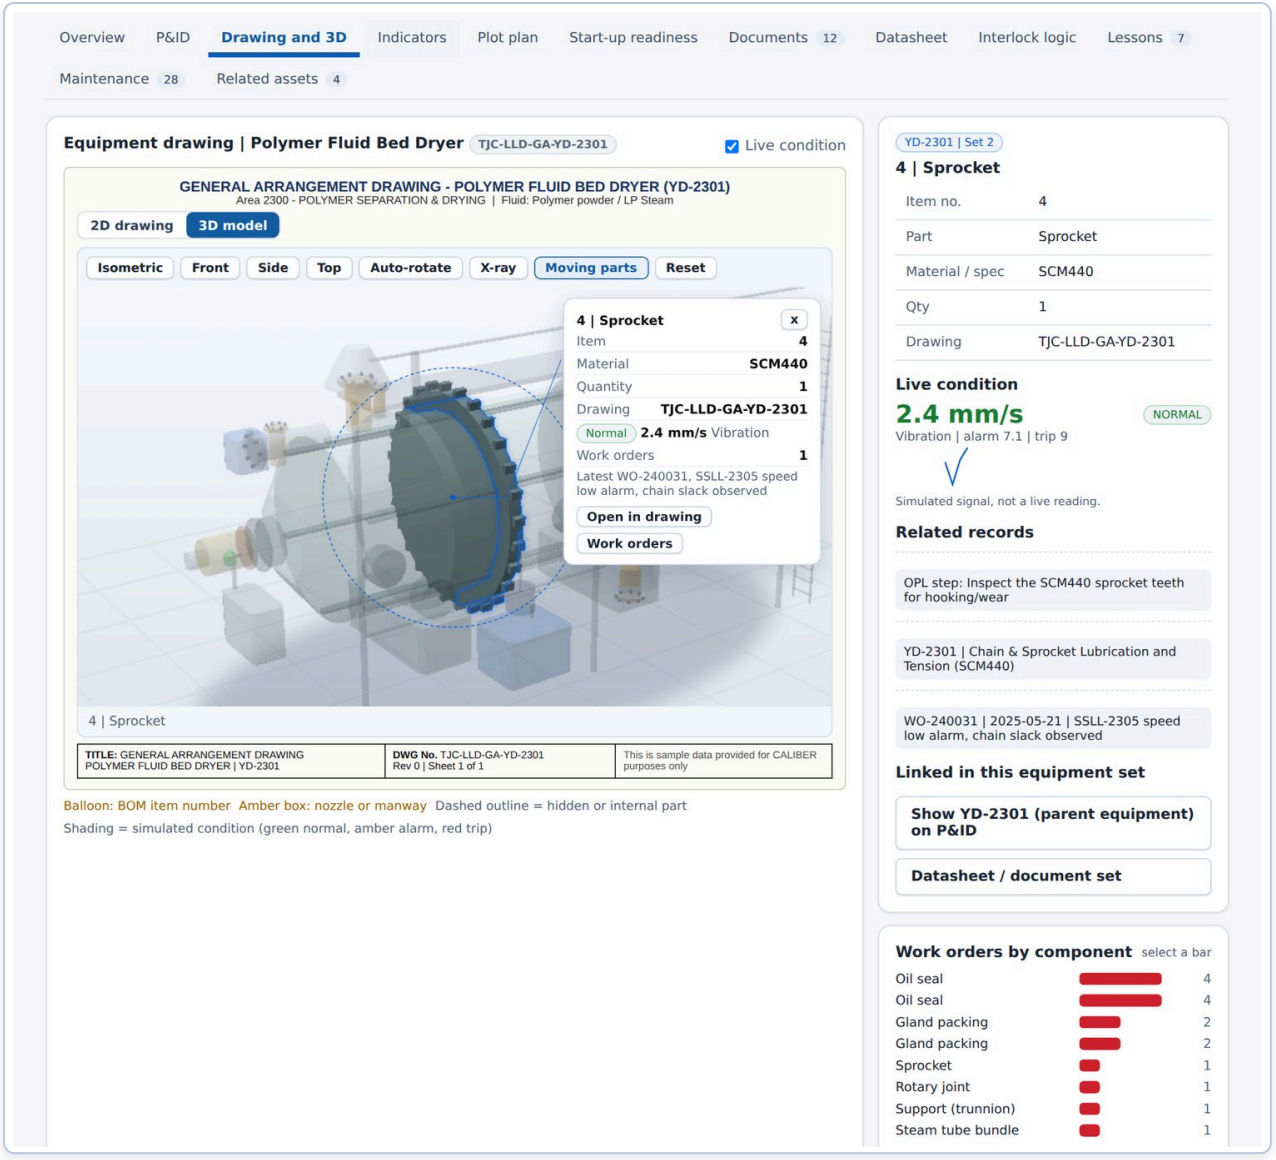

Figure 27. The 3D model of the Polymer Fluid Bed Dryer with a part selected.

14.3 Bill of material and work orders by component

Under the drawing, the **Bill of material** lists the item number, part, material and quantity of every part. The **Nozzle and connection schedule** lists the nozzles with their size and remarks. The **Work orders by component** chart on the right counts the work orders raised for each part; select a bar to see them.

15 Live P&ID

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

> The platform holds eight piping and instrumentation diagrams. Each is drawn in a consistent style, coloured by service, and connected to the interlock model, so that closing a valve or tripping an instrument shows what follows.

15.1 Reading the diagram

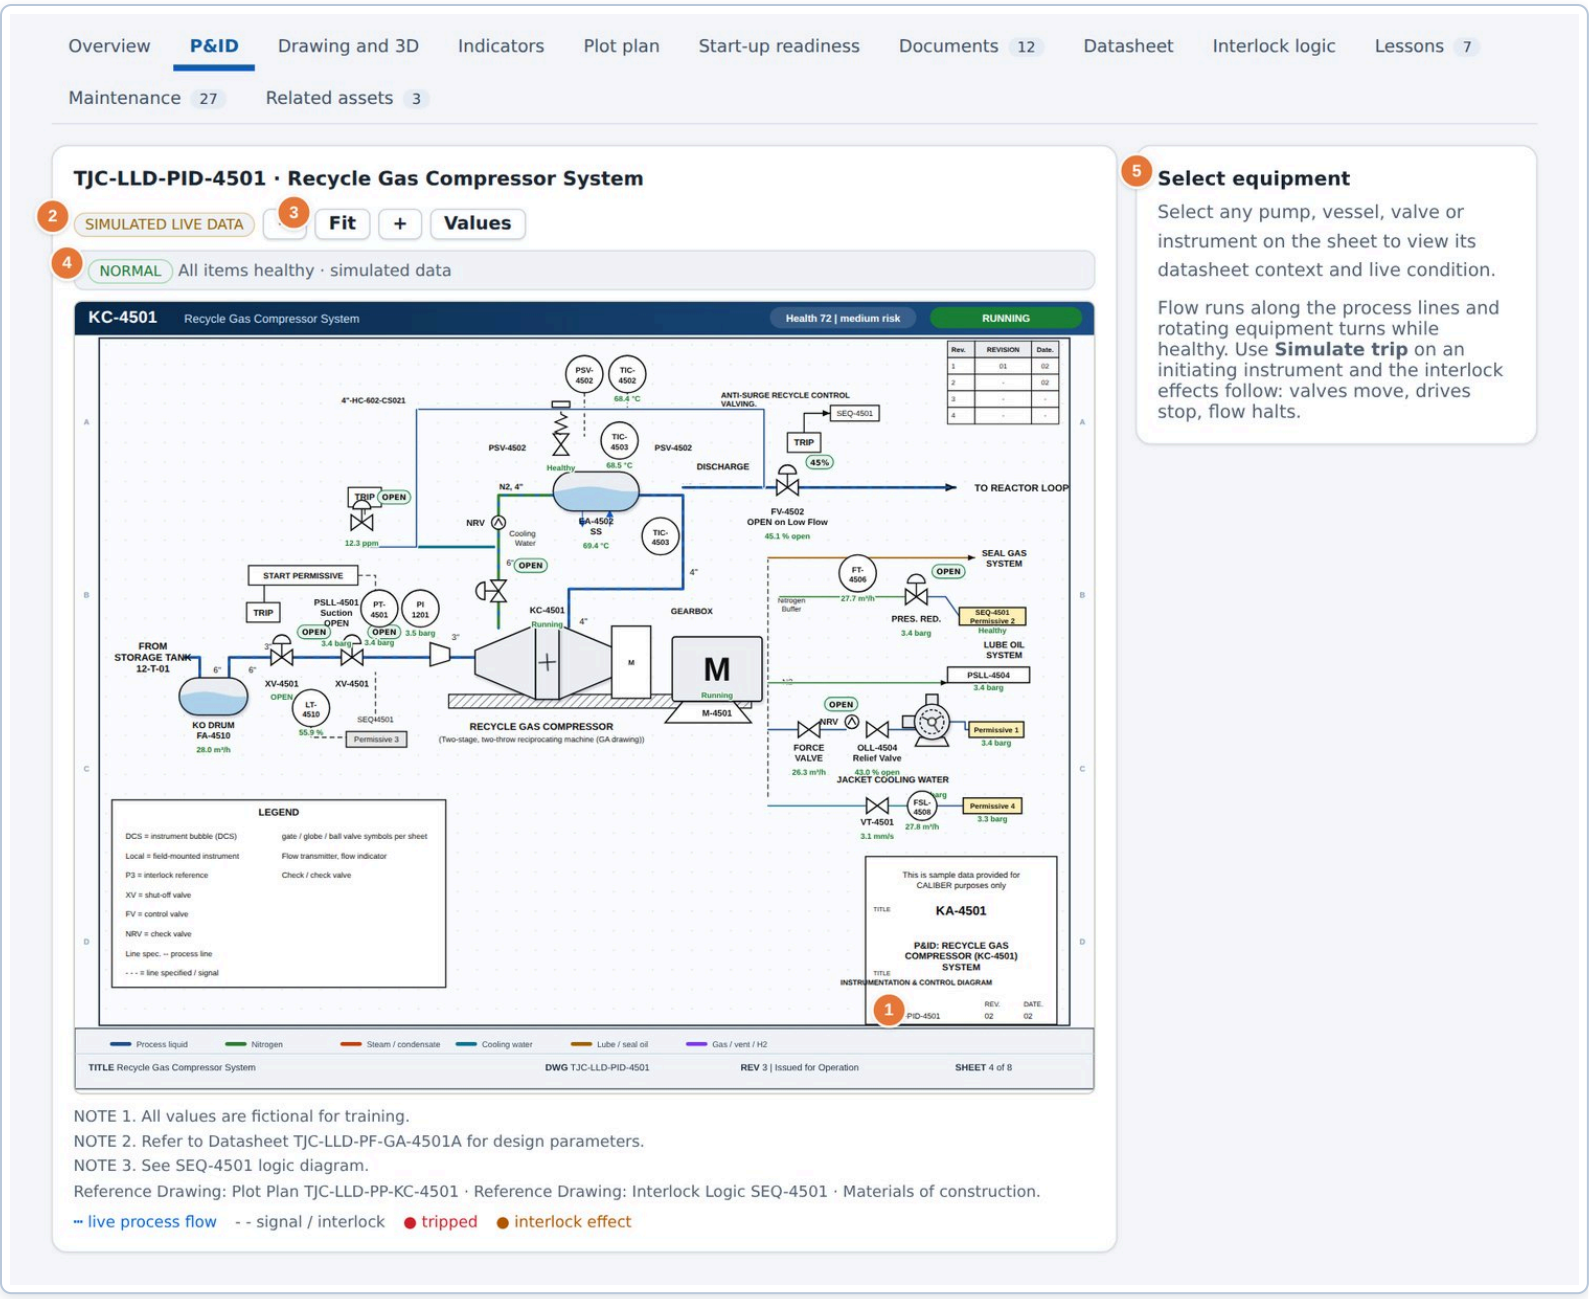

Figure 28. The P&ID of the Recycle Gas Compressor.

1. Title block with the drawing number and revision.
2. Simulated live data badge. The values are generated for demonstration.
3. Zoom controls: , , . The button shows or hides the readings.
4. Status line: whether all items are healthy.
5. Help panel: select any item to open its datasheet context.

- Process lines are coloured by service: process liquid, nitrogen, steam, cooling water, lube oil and gas.
- Instrument bubbles show the tag and, when **Values** is on, the reading.
- Select a pump, vessel, valve or instrument to see its details and linked documents in the panel on the right.
- A red bubble means that the instrument has tripped. Red lines show the interlock effects.

15.2 Operating a valve

1. Select a valve symbol on the diagram, for example `XV-4501`, the compressor suction valve.
2. Choose **Close** in the panel. The valve turns to closed.
3. Watch the flow. The lines downstream stop moving, and the permissives that depend on the valve change to failed.
4. Open the valve again to restore the flow.

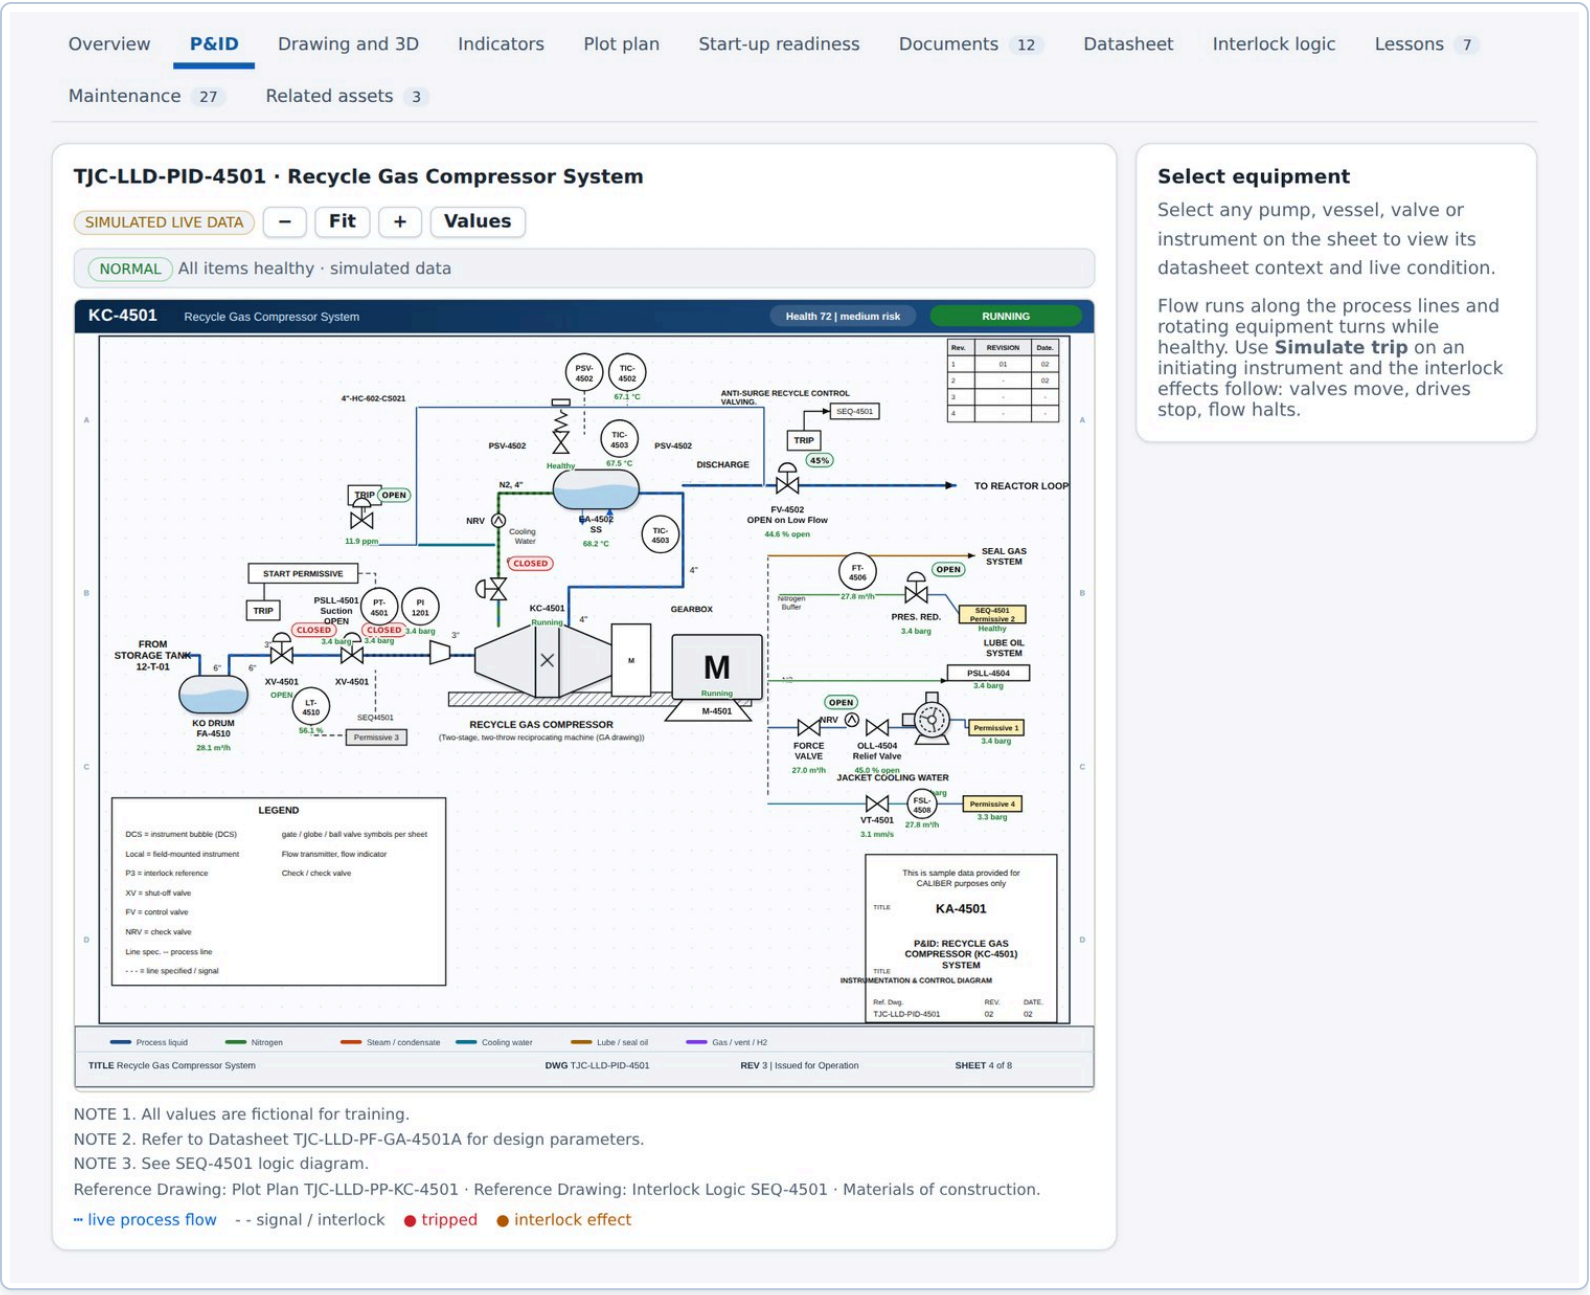

Figure 29. The suction valve XV-4501 closed. Flow downstream has stopped and the dependent permissive is shown as failed.

> **CAUTION**
> The diagram is a simulation. Closing a valve here does not act on the plant.

15.3 Simulating a trip

The help panel states that **Simulate trip** on an initiating instrument makes the interlock effects follow: valves move, drives stop and flow halts. Use it to see which final elements an instrument acts on before you plan a function test.

16 Interlock Library

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

The Interlock Library holds the cause-and-effect logic of every protective system. It shows which instruments initiate a trip, which final elements act and what must be true before the unit can start.

Figure 30. The Interlock Library.

1. Summary tiles: safety instrumented functions, initiators, final elements and proof test records.
2. Voting architecture. Select a segment to filter the cards below.
3. Initiators and final elements by interlock. Select a row to open it.
4. Proof test records. Select a column to see the history.
6. One card for each interlock with its SIL, counts and voting.

16.1 Finding an interlock

1. Use the search box to type a tag, a cause or an interlock name, for example `PSLL-1201`.
2. Filter by equipment or by integrity level (SIL 1, SIL 2 or non-SIS) if needed.
3. Select a card to open the interlock sheet.

16.2 The interlock sheet

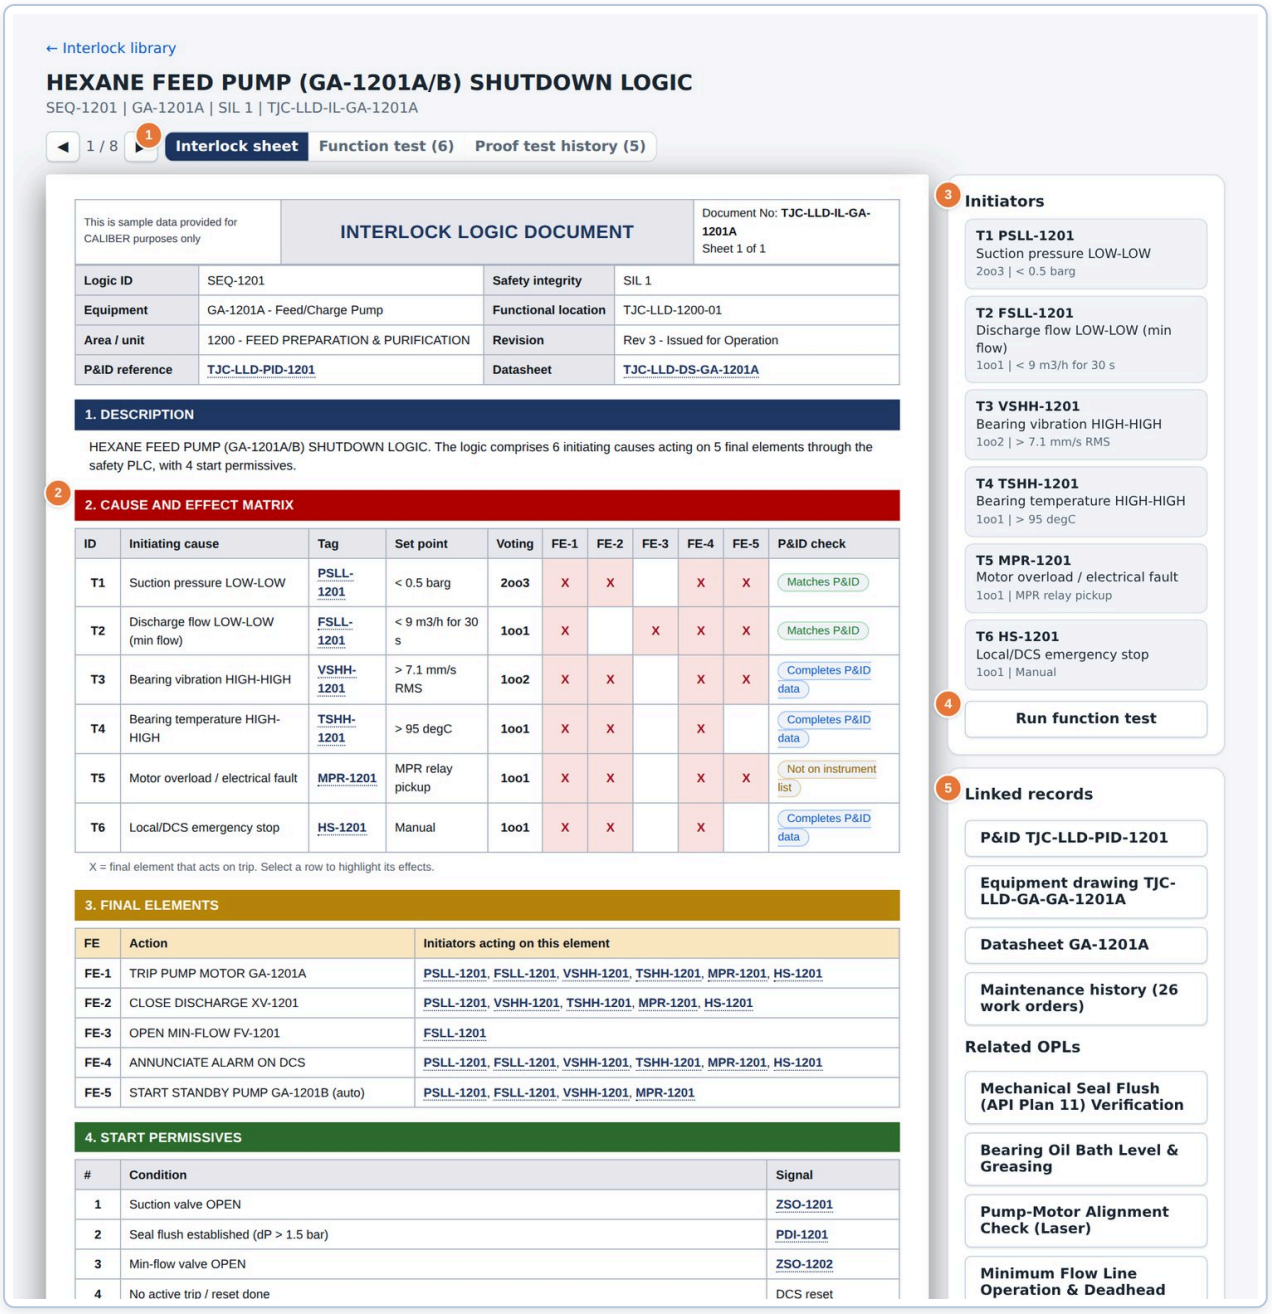

Figure 31. An interlock sheet.

1. Pro Tabs: , and .
2. The cause-and-effect matrix. Each X shows a final element that acts on the trip.
3. Init each tag with its set point and voting.
4. Run starts the simulated test.
5. Lin the P&ID, drawing, datasheet, maintenance history and related lessons.

The sheet has four sections: a description, the cause-and-effect matrix, the final elements with the initiators that act on each, and the start permissives. Select a row of the matrix to highlight its effects. A note such as `Completes P&ID data` means that the platform found the instrument in the interlock document but not on the P&ID, and has added it.

16.3 Function test and proof test history

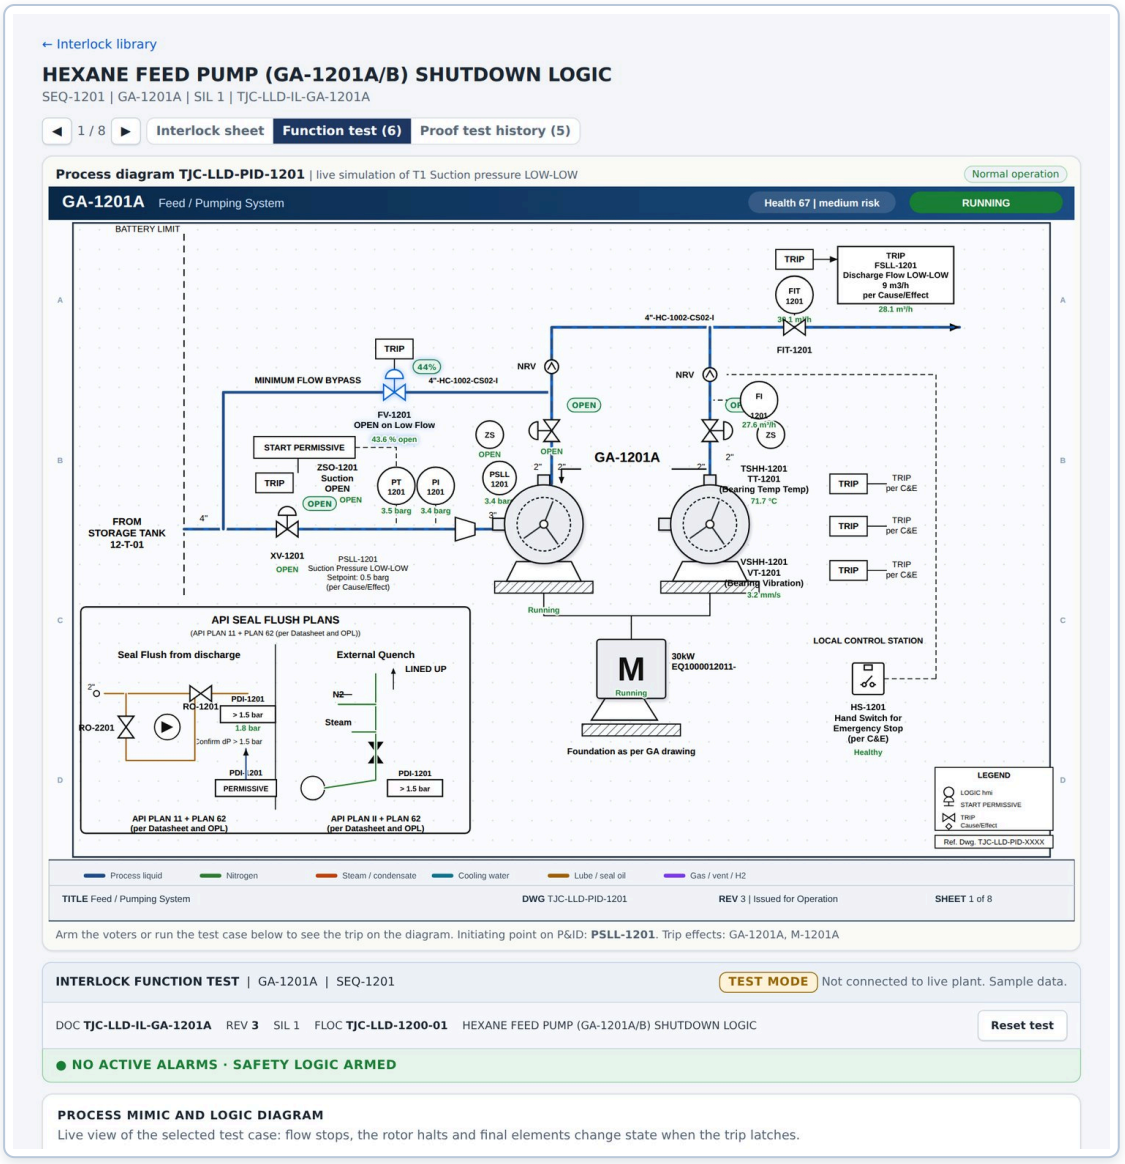

Figure 32. The function test tab.

The **Function test** tab steps through the test of each initiator and shows the expected response of the final elements. The **Proof test history** tab lists the earlier proof tests with their dates and results, so that you can see when each function was last verified.

17 Start-up readiness

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | HSE | Manager

> Before a unit is started or restarted, the checks that normally sit in several places are evaluated on one page. The page ends with a single decision: GO, GO WITH CHECKS or NO-GO.

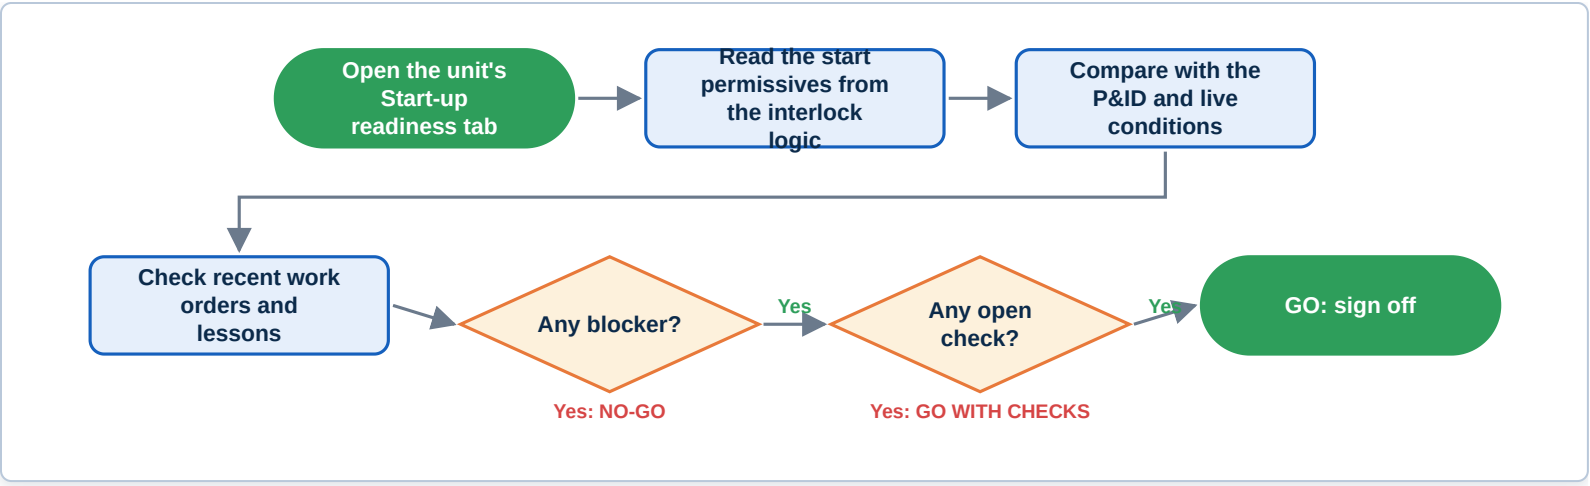

Figure 33. How the readiness decision is reached.

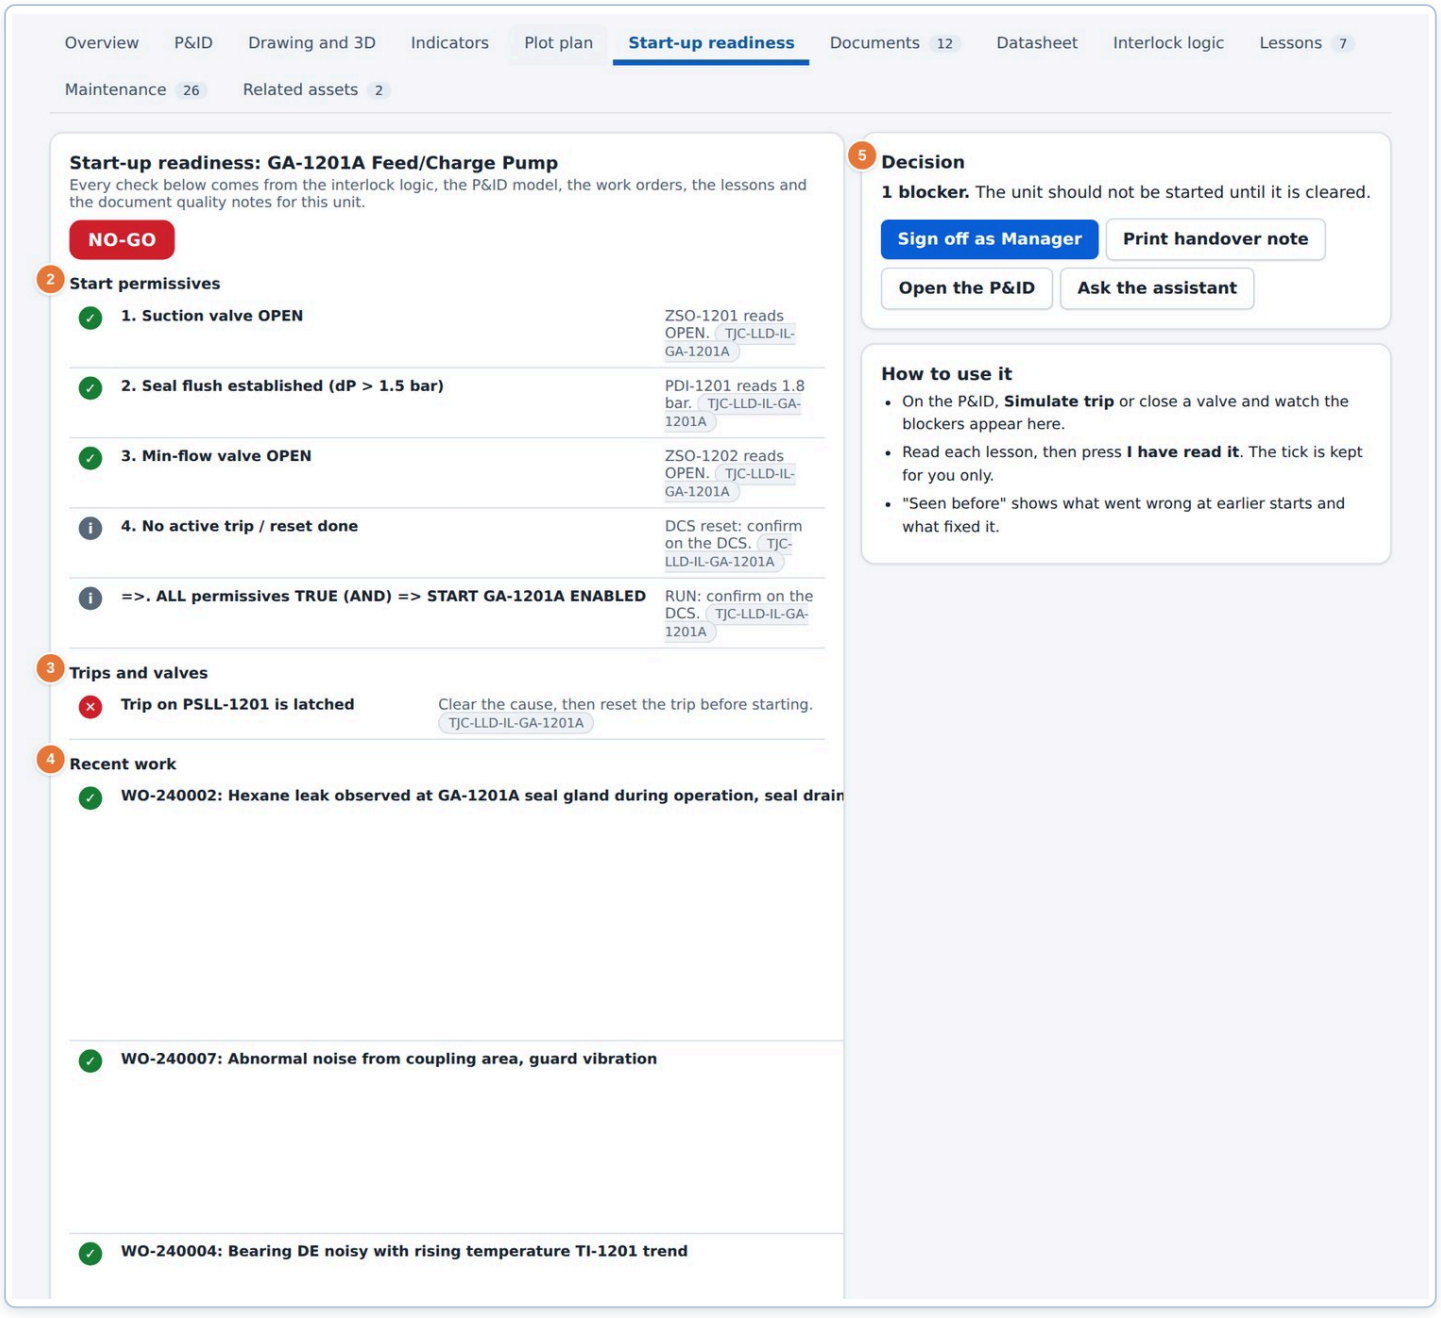

Figure 34. A unit with GO WITH CHECKS and several open checks.

Sta , each with its signal and its current state.

Rec that could affect the start.

Trip : any latched trip or valve out of position.

Prin panel: open checks, and .

17.1 Reading the page

- A green tick means that a permissive is satisfied. A grey circle means that the platform cannot confirm it from the data and that someone must check it in the field.
- A red cross means that the permissive is not satisfied. The page then shows **NO-GO**.
- The rule line at the bottom of the list states the logic, for example `ALL permissives TRUE (AND) => START ENABLED`.

17.2 Signing off

1. Work through each open check. Close it, or accept it with a note.
2. Select **Sign off as** followed by your role. Only roles that may approve see the button.
3. Select **Print handover note** to produce a record of the checks for the next shift.
4. Select **Open the P&ID** to look at the diagram, or **Ask the assistant** to question the data.

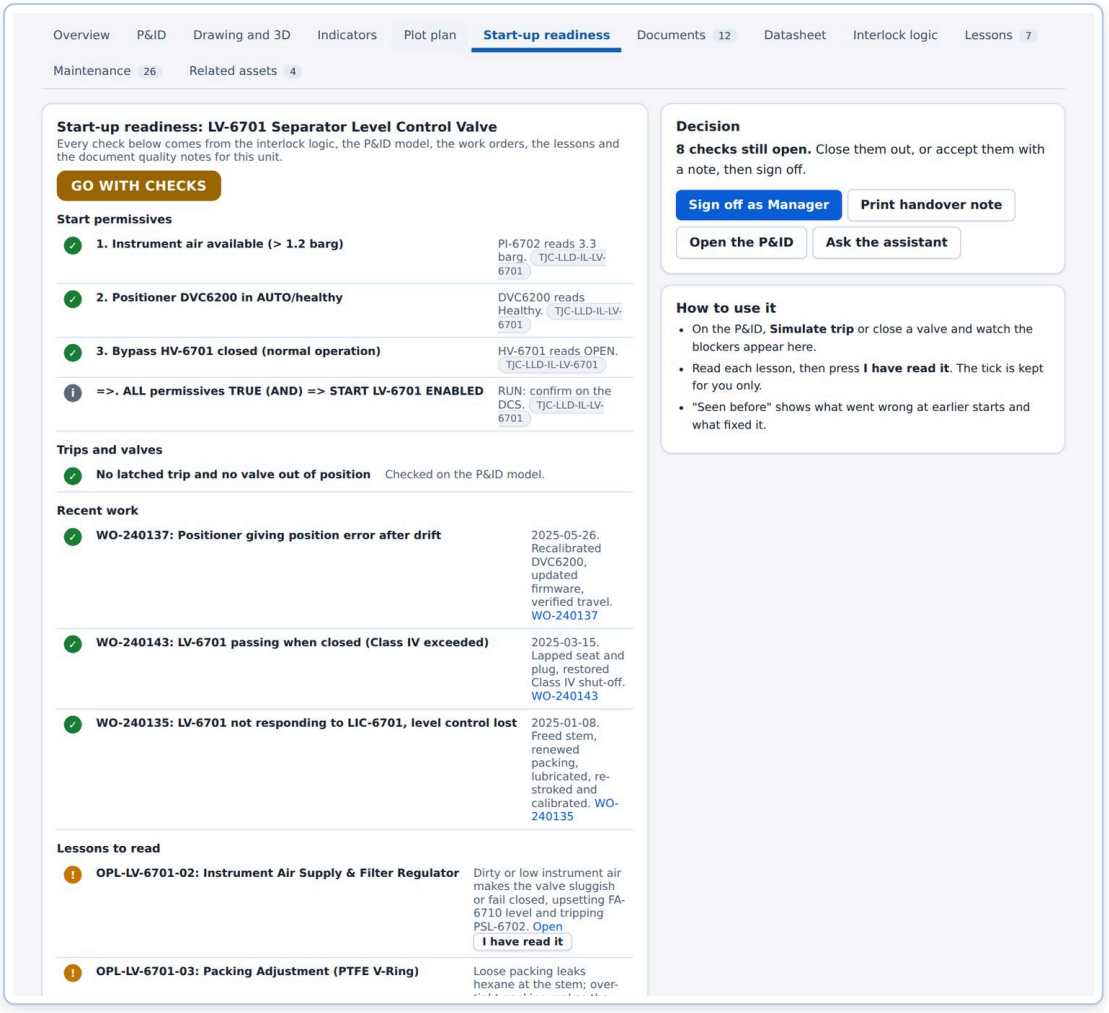

Figure 35. A unit with no open checks.

18 Documents

PART 3. DAILY OPERATIONS

Used by: Operator | Engineer | Reliability | HSE | Manager

> The Documents page lists every controlled document in the knowledge base with its type, set, revision, approval status and effective date.

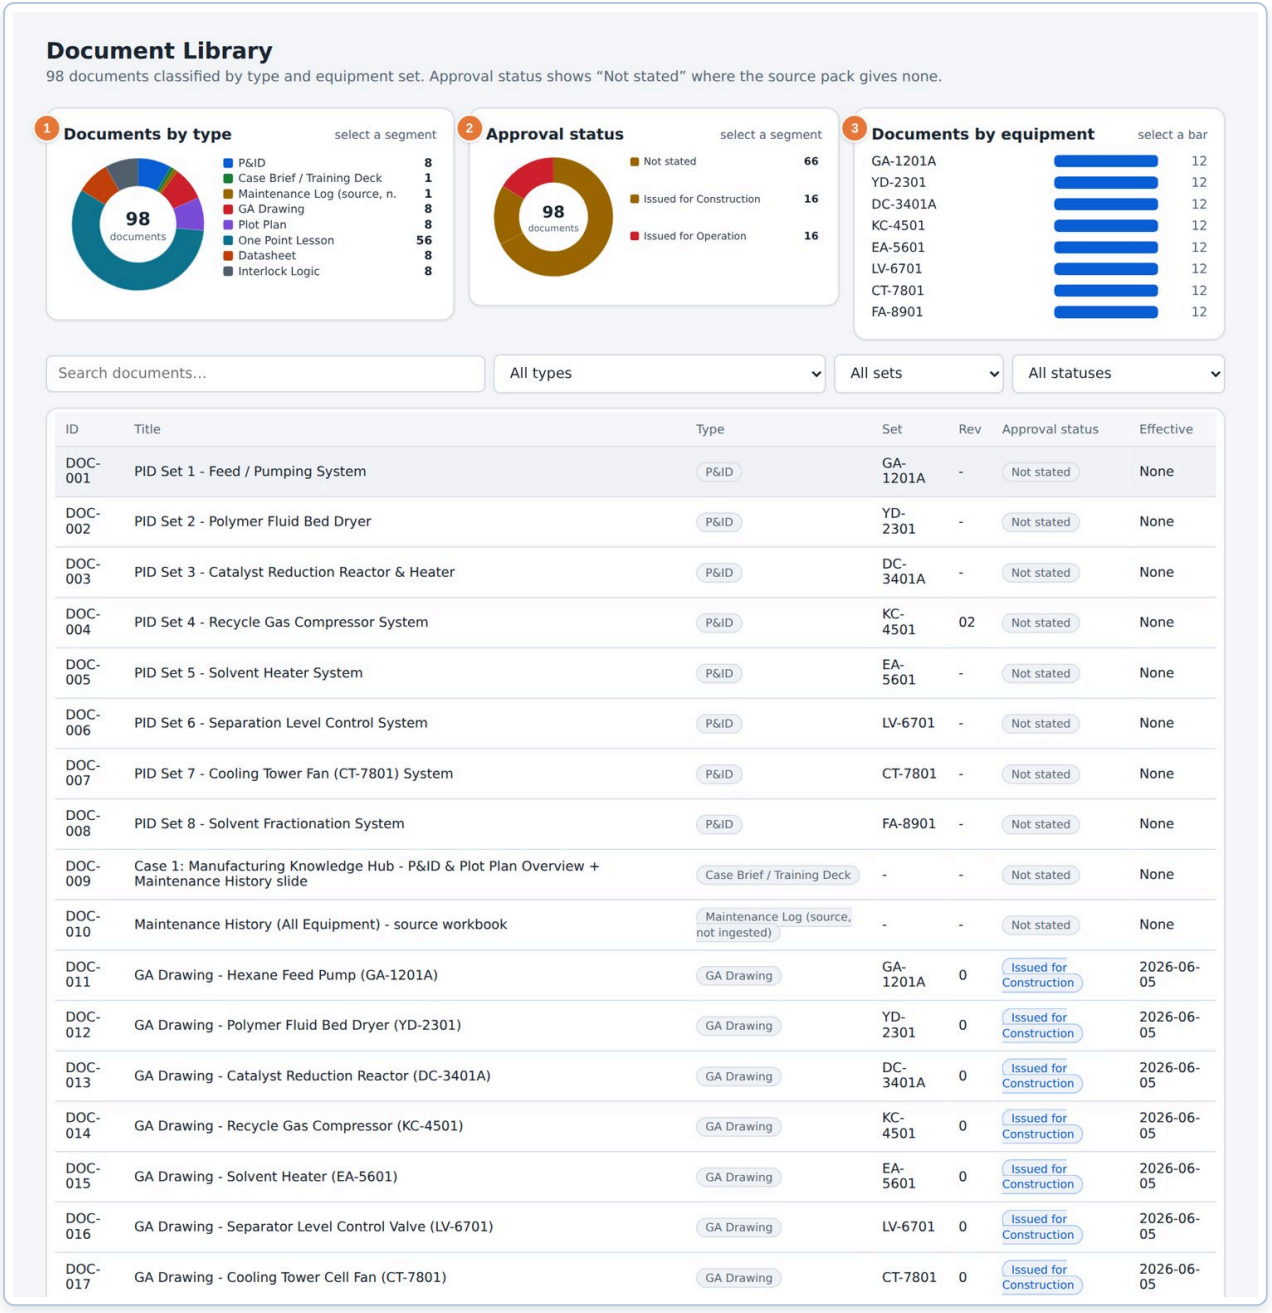

Figure 36. The Documents page.

Doc . Select a segment to filter the list.

Doc . Select a bar to filter by set.

Appr not stated, issued for construction or issued for operation.

18.1 Finding and opening a document

1. Use the three filters to choose a document type, an equipment set and an approval status.
2. Read the table. The columns are the document identifier, the title, the type, the set, the revision, the approval status and the effective date.
3. Select a row to open the document. Its text is shown in sections, with the revision and status at the top.

> **CAUTION**
>
> Check the approval status before you rely on a document. A status of **Not stated** means that the source did not give one. The platform never treats such a document as approved.

18.2 Document conflicts

When two documents disagree, for example when a valve is labelled both trips OPEN and trips CLOSED, the platform records a conflict. The conflict count on the Dashboard links to the Data Quality page (Chapter 35). The AI Assistant also adds an **Open**

document conflict note when its answer touches a document with a recorded conflict.

19 Maintenance overview

PART 4. MAINTENANCE AND RELIABILITY

Used by: Operator | Engineer | Reliability | HSE | Manager

The Maintenance page turns 211 work orders into charts, tables and simulations. Six views share one filter bar, so a choice made once applies to every view.

19.1 The filter bar

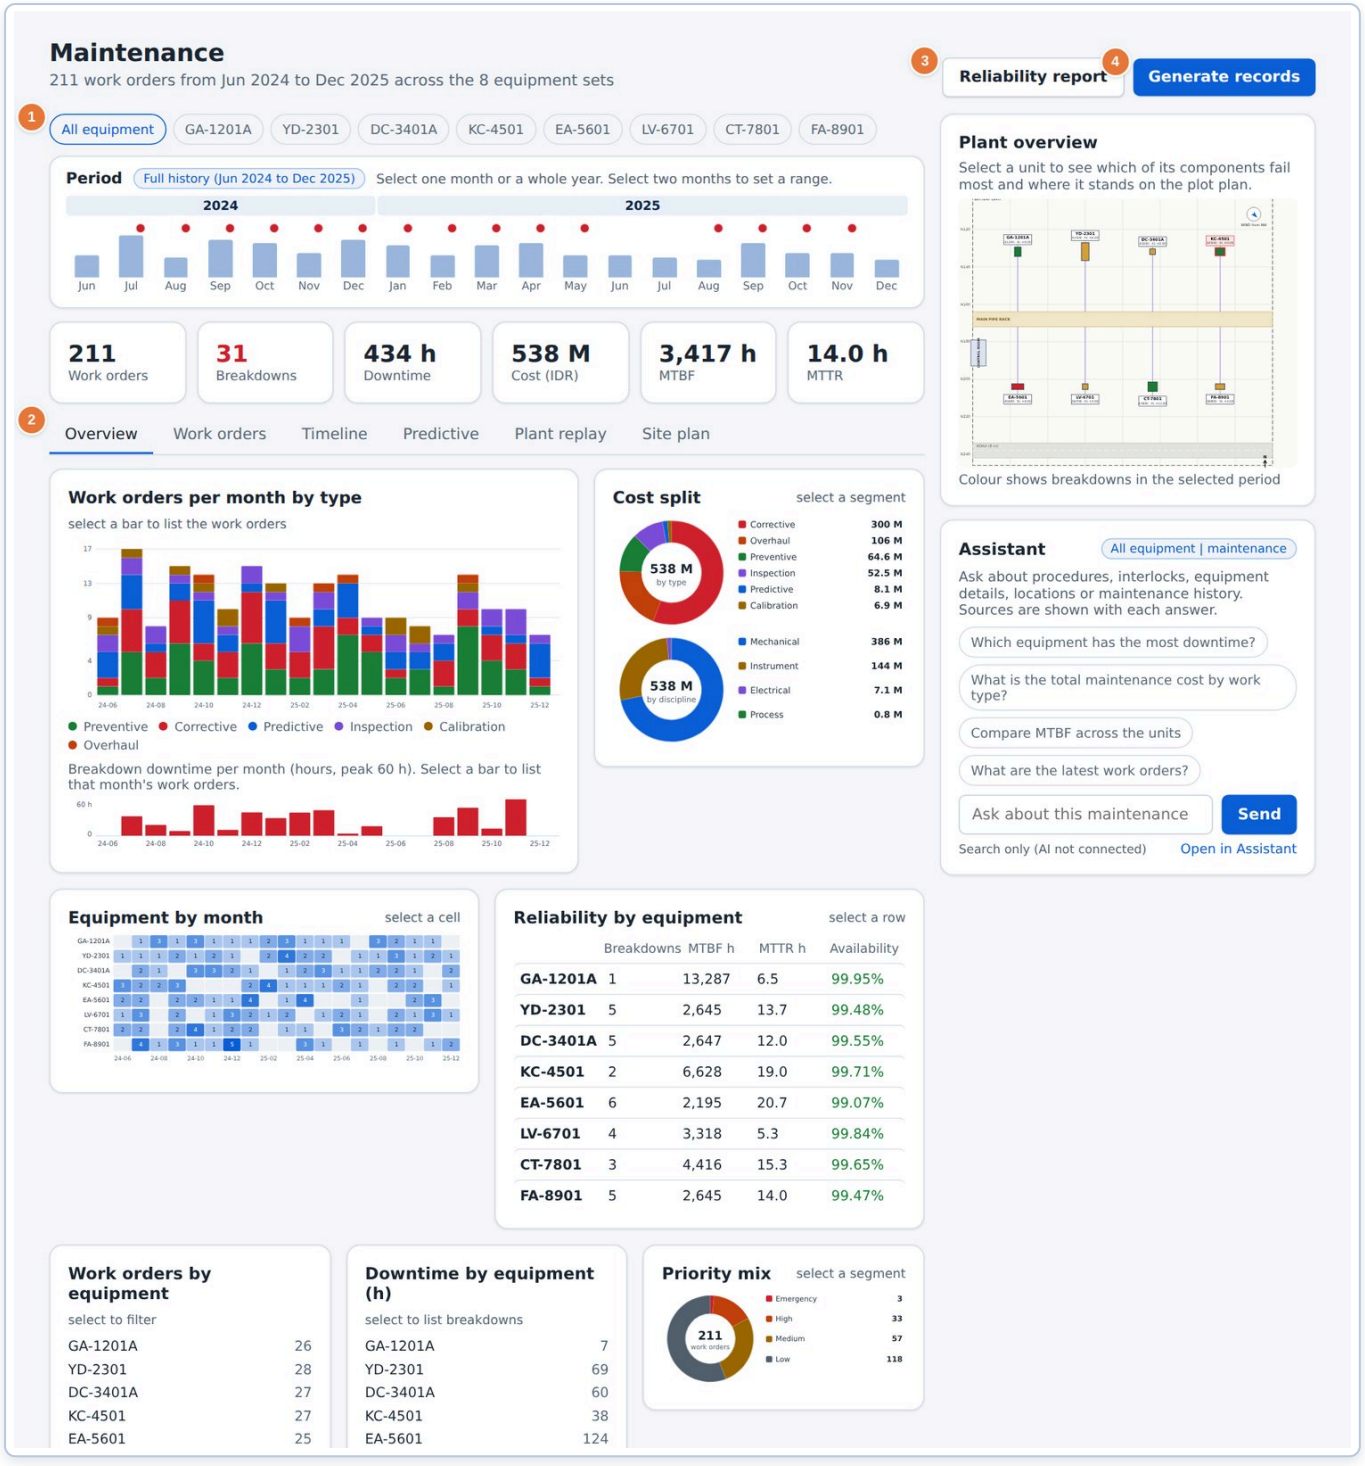

Figure 37. The Maintenance page, Overview view.

All Equipment filter: or one set.

Rel opens a printable report for the selection.

2 The six views: Overview, Work orders, Timeline, Predictive, Plant replay and Site plan.

Ger adds sample work orders for testing. It is limited to Reliability and Manager.

1. Select **All equipment** or one equipment tag.
2. In the **Period** strip, select one month or a whole year. Select a second month to set a range.
3. Read the six tiles under the strip: work orders, breakdowns, downtime, cost, MTBF and MTTR. They follow the selection.
4. Choose a view with the tabs.

> **TIP**
> The charts are also filters. Select a bar, a segment, a row or a cell and the work orders behind it open in a list.

19.2 What the Overview shows

Chart	What it tells you	Select to
Work orders per month by type	Workload split into preventive, corrective, predictive, inspection, calibration and overhaul	List the work orders of a month
Breakdown downtime per month	Hours lost in each month	List that month's work orders
Cost split	Cost by work type and by discipline, in IDR	Filter by type or discipline
Equipment by month	A heat map of work volume for each unit and month	List the work orders of a cell
Reliability by equipment	Breakdowns, MTBF, MTTR and availability for each unit	Filter to one unit
Priority mix	Emergency, high and medium work orders	Filter by priority
Most frequent failure modes	Instrument, seal, valve, bearing, vibration and blockage failures	List the work orders of a mode
Planned versus unplanned	Share of planned, condition-based and breakdown work	List each group

> **NOTE**
> A data note appears under the tiles when some work orders do not state whether they were breakdowns. Those work orders count as work orders but not as breakdowns, and the note gives the number.

20 Work orders

PART 4. MAINTENANCE AND RELIABILITY

Used by: Operator | Engineer | Reliability | HSE | Manager

The Work orders view lists every job in the selection, grouped by equipment. Each work order opens in a report that explains what happened, what caused it and what was done.

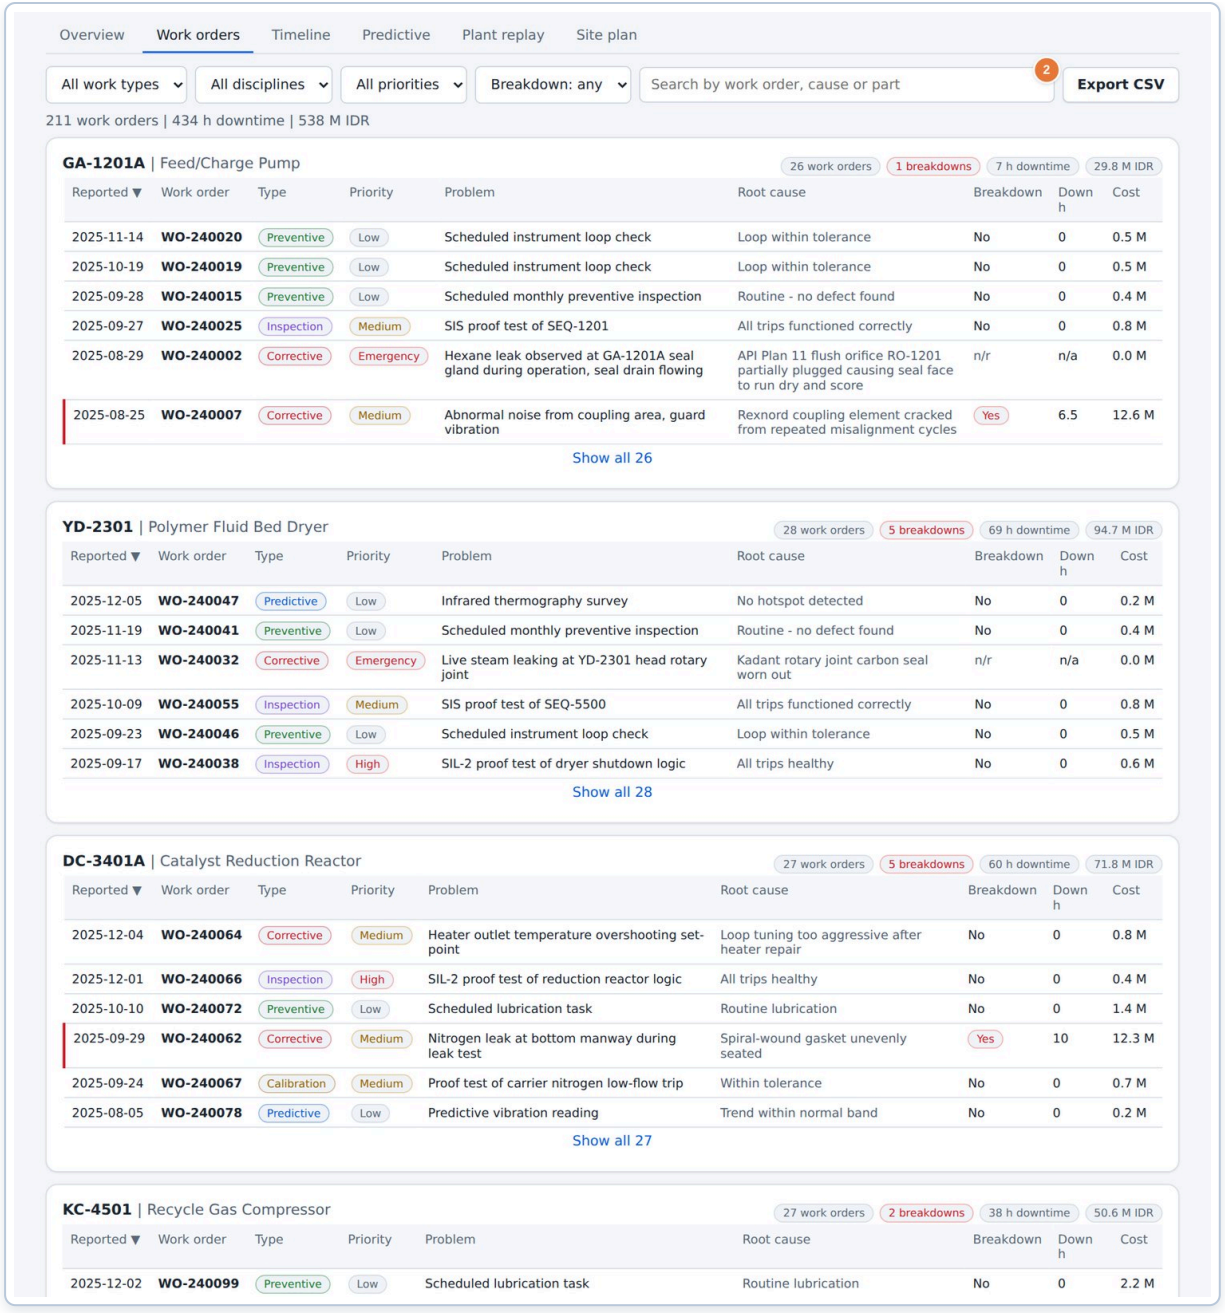

Figure 38. The Work orders view.

Exp saves the filtered list.

1. Use the four filters to narrow the list. The count and the totals update.
2. Select the column heading **Reported** to change the sort order.
3. Select a row to open the work order report.
4. Select **Show all** at the foot of a group to see the rest of its work orders.

20.1 The work order report

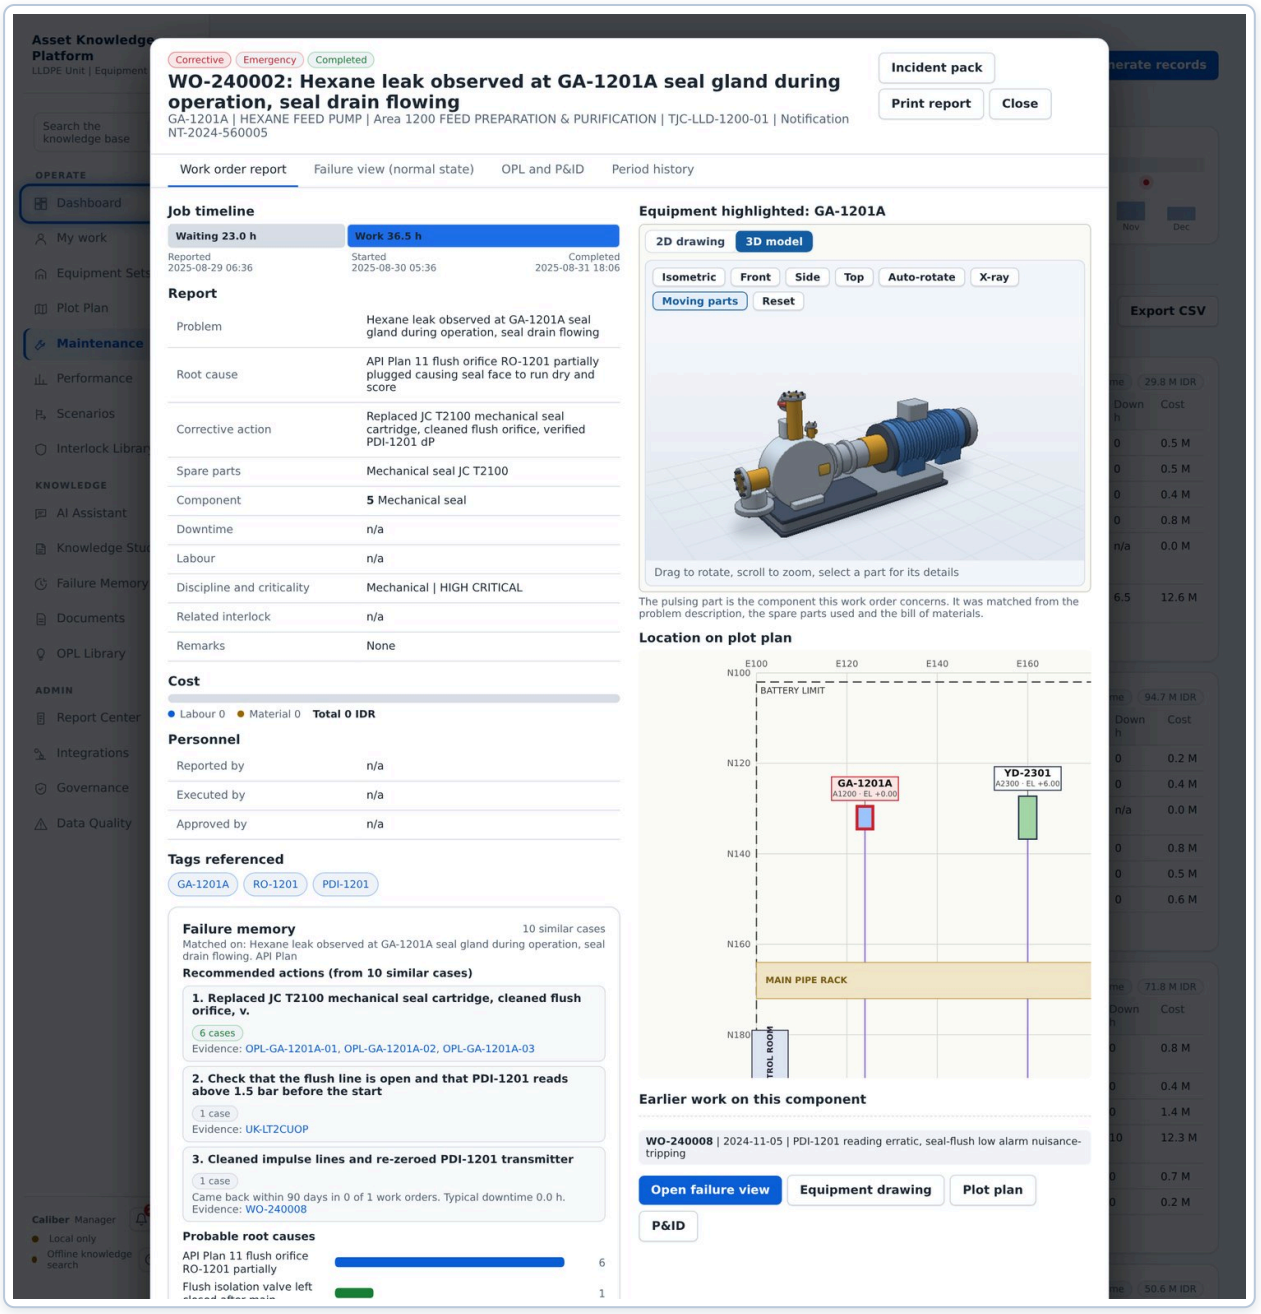

Figure 39. A work order report.

The report has two panes. The left pane gives the problem, the cause, the action taken and the people and parts involved. The right pane shows the equipment drawing with the failed component highlighted and the location of the failure in the unit. Select **Incident pack** to produce a printable investigation pack, or **Print report** for a single page.

20.2 The failure view

When the work order was a breakdown, the report also offers a **Live** view. It replays the event on the P&ID or in 3D, with the failed part flagged and the units affected by the failure shown in turn.

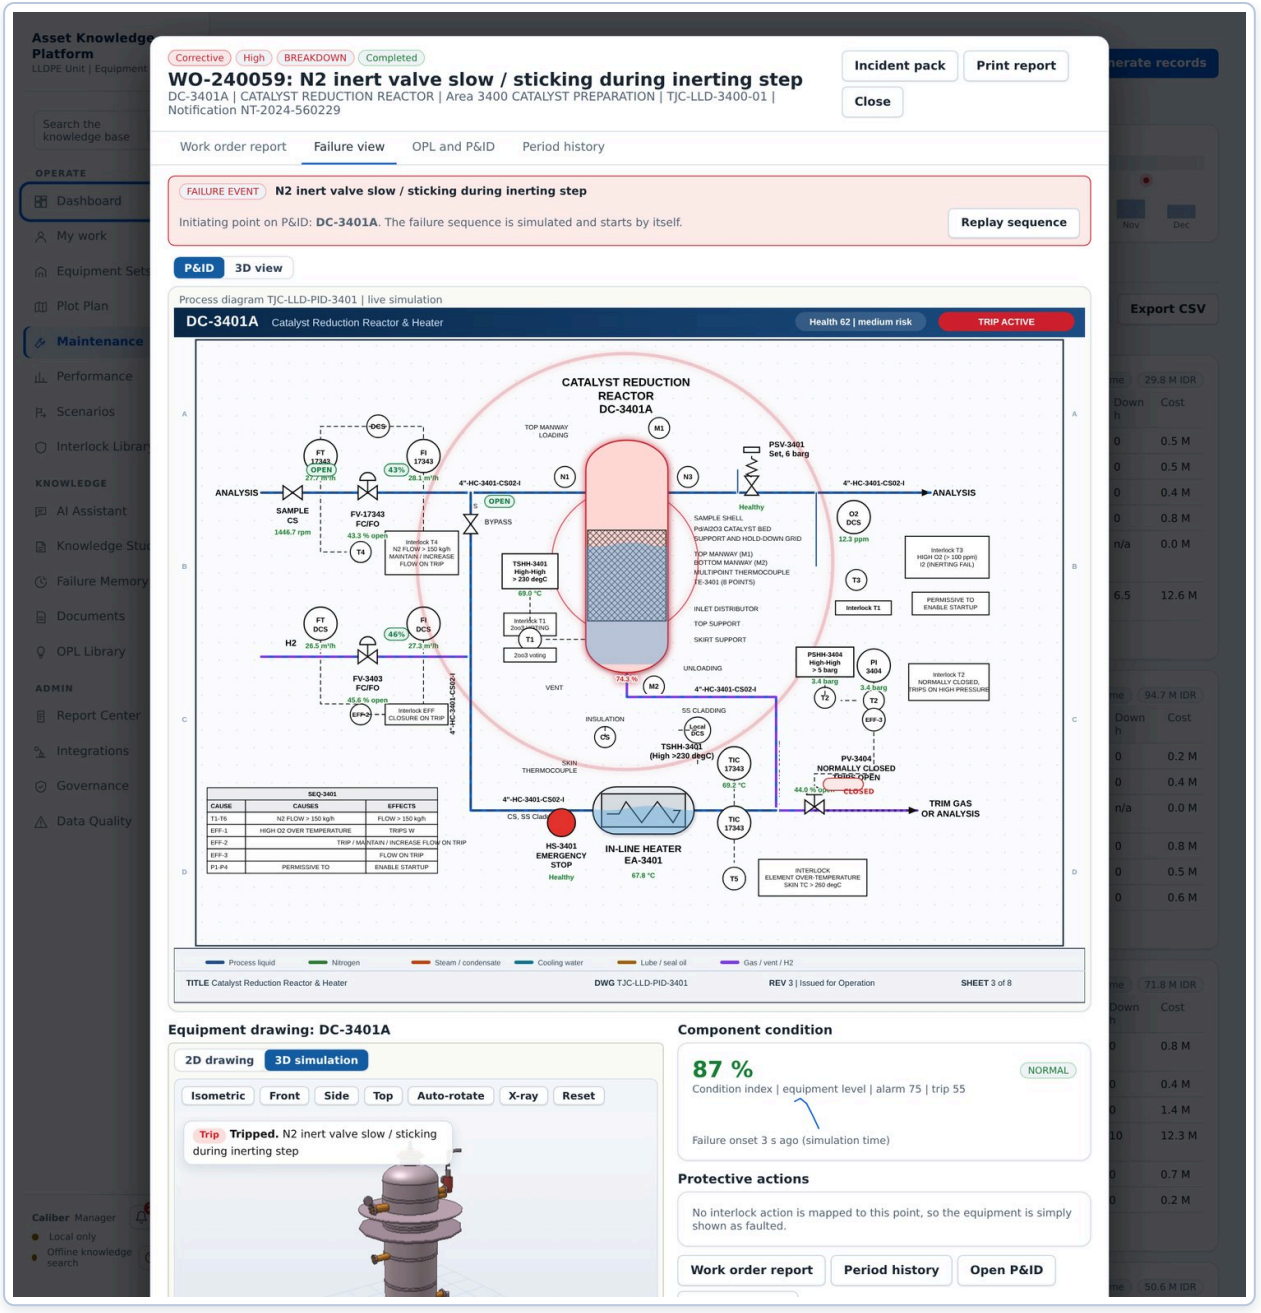

Figure 40. A breakdown work order in the failure view.

21 Timeline

PART 4. MAINTENANCE AND RELIABILITY

Used by: Operator | Engineer | Reliability | HSE | Manager

> The Timeline view shows when work happened. It is the quickest way to see whether jobs cluster, and whether a breakdown follows a particular kind of work.

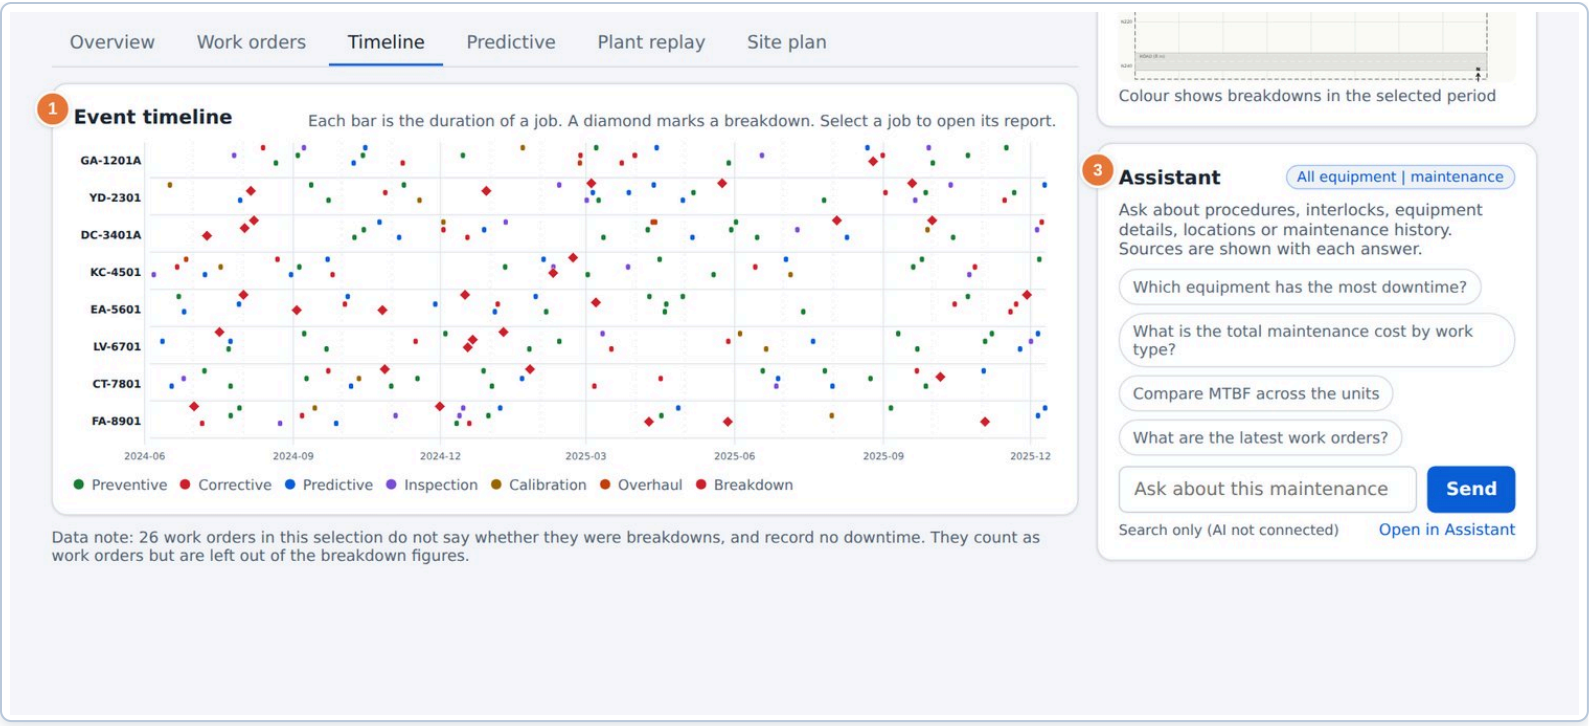

Figure 41. The Timeline view.

1. Each bar is a job. Its length is the duration. A diamond marks a breakdown.
3. A short assistant that answers questions about the selection.
Pla. : a plot plan coloured by the number of breakdowns in the selected period.

- Select a bar to open the work order report.
- Select a unit on the plant overview to see which of its components fail most and where it stands on the plot plan.
- Use the **Period** strip to zoom in on a month.

22 Predictive maintenance

PART 4. MAINTENANCE AND RELIABILITY

Used by: Engineer | Reliability | Manager

> The Predictive view estimates which units are most likely to fail, when, and what that would cost. It is a prioritisation tool. It tells you where to look first; it does not predict a particular failure.

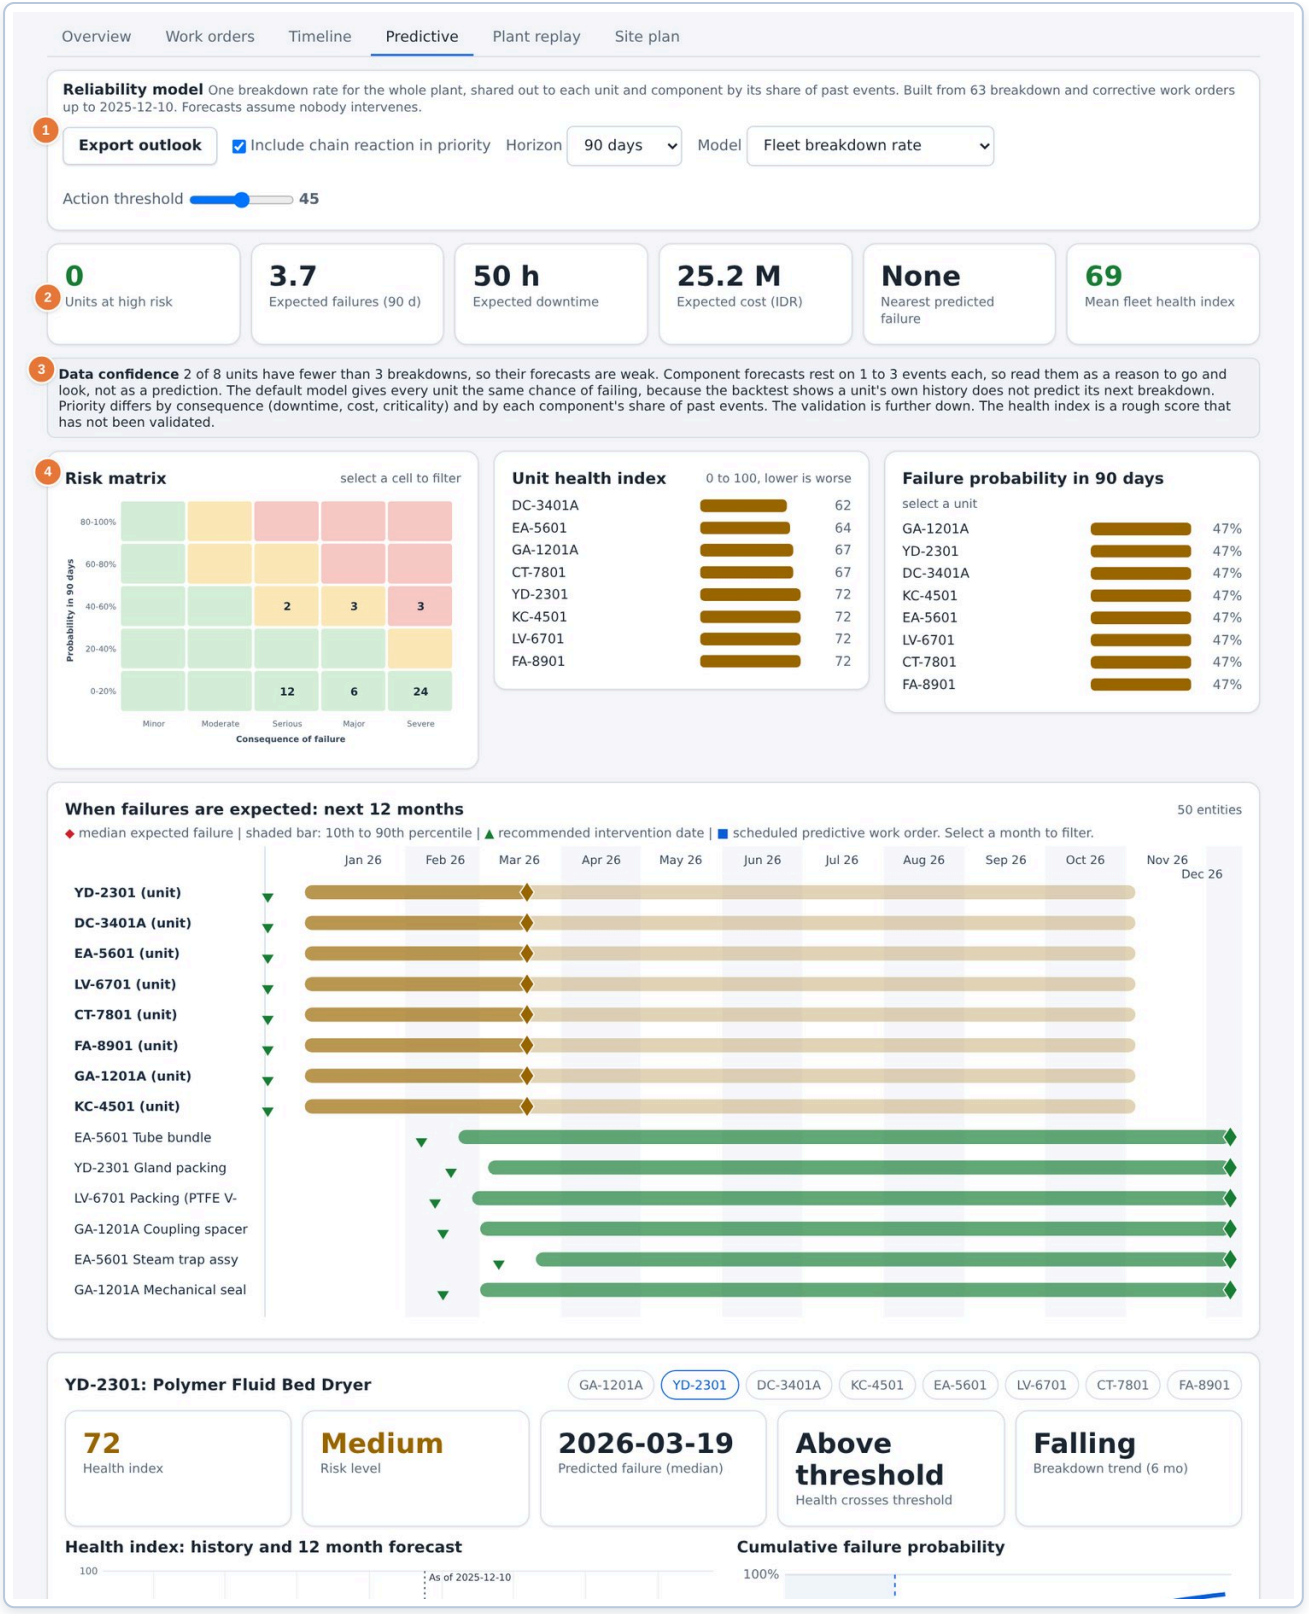

Figure 42. The Predictive view, Failure modes tab.

Exp Controls: , chain reaction in priority, horizon and model.

Dat states how reliable the numbers are.

2 Six tiles: units at high risk, expected failures, downtime, cost, nearest predicted failure and mean health.

4 Risk matrix, health index by unit and failure probability.

22.1 Controls

Control	Use
Horizon	Choose 30, 90, 180 or 365 days. Expected failures, downtime and cost are scaled to the horizon.
Model	**Fleet breakdown rate** gives every unit the same rate and ranks by consequence. **Unit history (experimental)** uses each unit's own record.

Include chain reaction in priority	Adds the effect of a failure on connected units to the ranking.
Action threshold	The priority score above which a unit is flagged as high risk.

CAUTION

Read the **Data confidence** line first. A unit with fewer than three breakdowns has a weak forecast, and component forecasts rest on one to three events. Treat them as a reason to go and look, not as a prediction. The default model uses the same rate for every unit because the backtest shows that a unit's own history does not predict its next breakdown.

22.2 The six tabs

Tab	What it shows
Failure modes	Failure modes ranked by occurrence, severity and how easily they are detected
Reliability measures	MTBF, MTTR and availability for the units in the selection
Next 90 days by mode	The expected window of each failure over the coming period, with the health index and cumulative failure probability of the unit you select
Lessons in play	The one point lessons that apply to the failure modes in view
Lesson use	How often those lessons were opened and used
Combined score	The priority score that combines the history, the consequence and the lessons

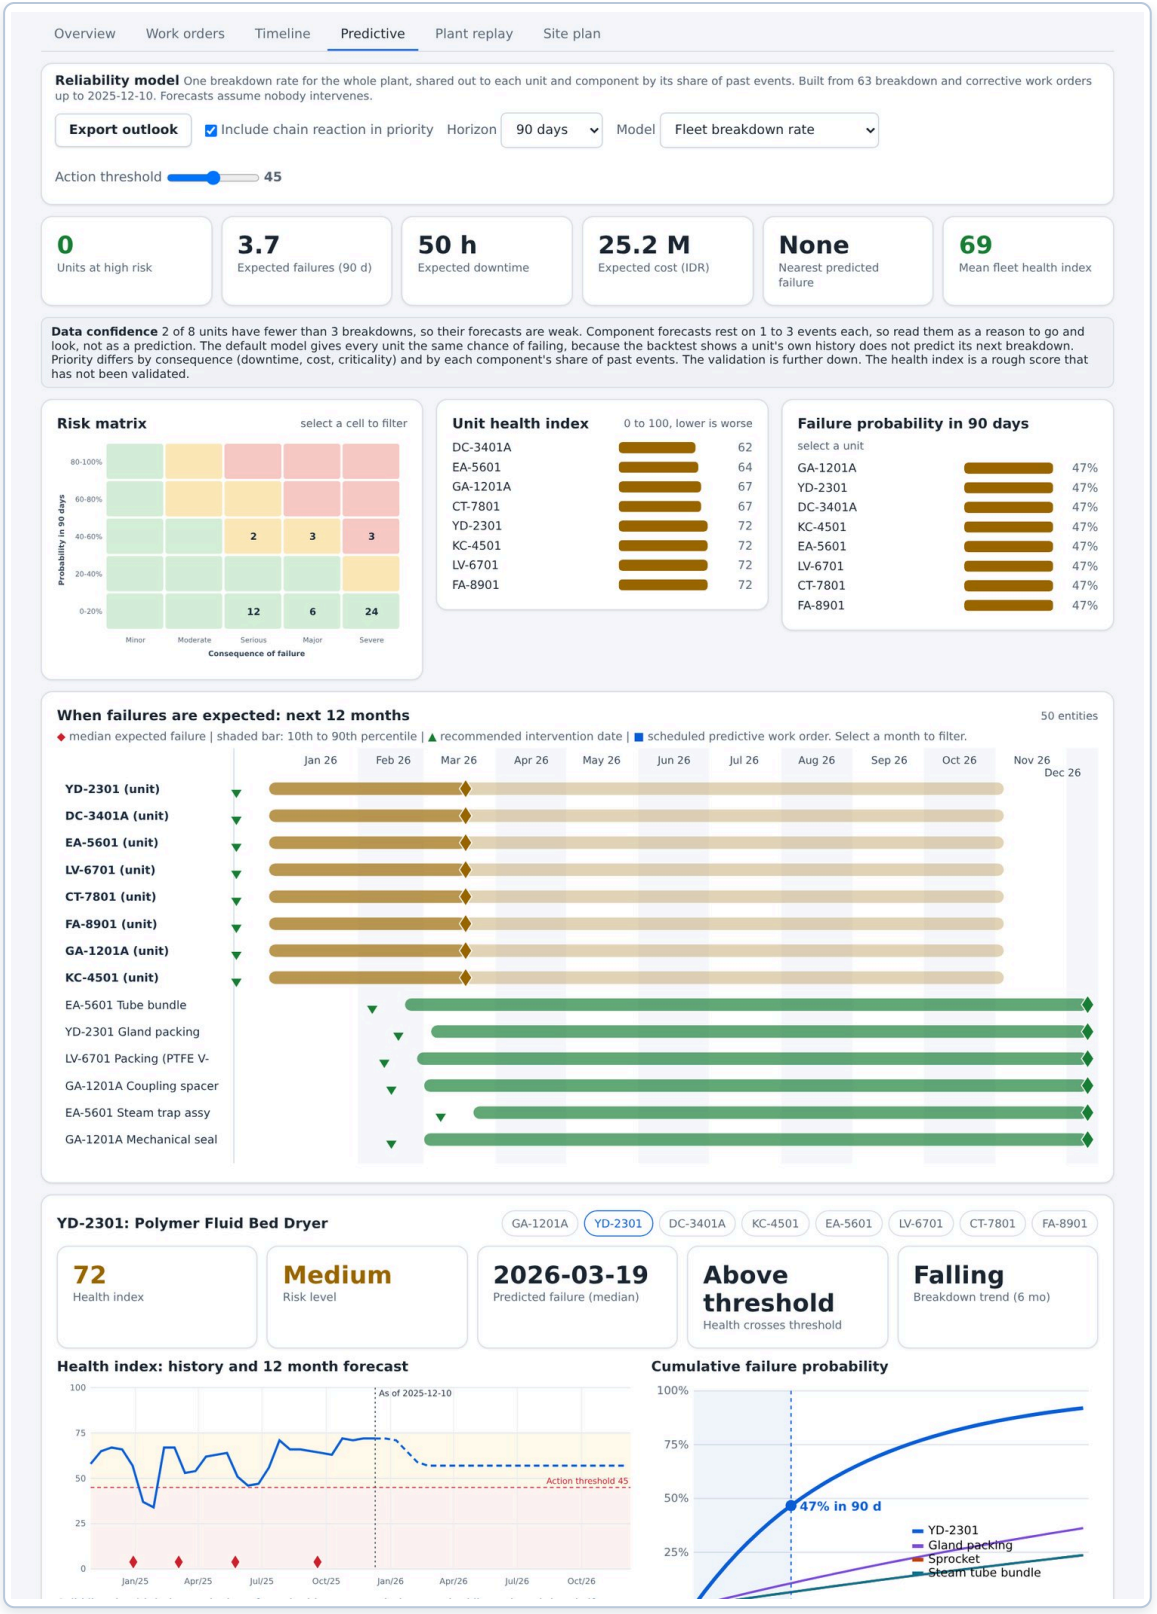

Figure 43. The Next 90 days by mode tab.

23 Reliability analysis

PART 4. MAINTENANCE AND RELIABILITY

Used by: Engineer Reliability Manager

Reliability analysis connects what is failing to why. Use it to rank failure modes, find repeating causes and decide which preventive task earns its place.

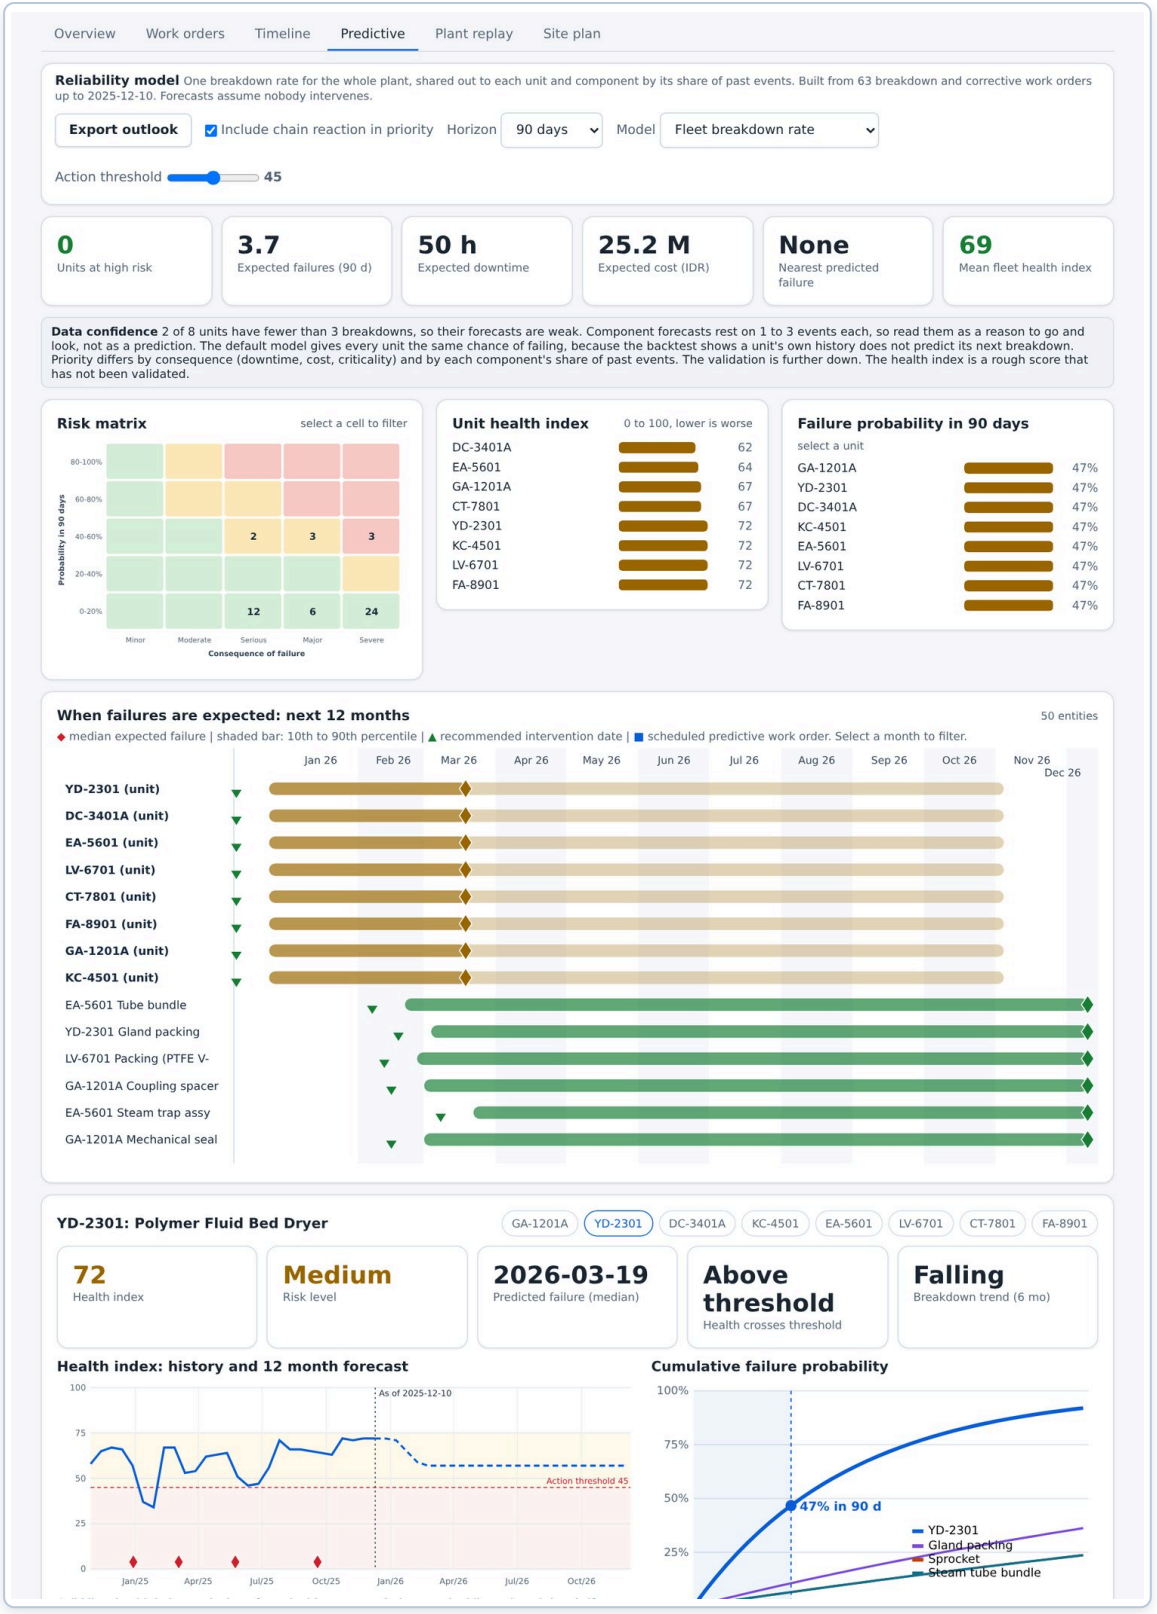

Figure 44. The failure modes and the reliability figures of a unit.

1. Open **Maintenance**, then the **Predictive** view.
2. Select the **Failure modes** tab, then the **Reliability measures** tab.
3. Select a unit in the health index list. The lower part of the page shows its health index, its risk level, the date it crosses the threshold and its cumulative failure probability.
4. Compare the **Mean time between failures** of units on the **Reliability by equipment** chart (Chapter 19) or the **Equipment compared** table (Chapter 27).
5. Open **Reliability report** to print the Pareto of root causes, the largest downtime events and the trends for the selection.

TIP

A repeated root cause across several units is a stronger signal than a single unit with many breakdowns. Check the **Most frequent failure modes** chart before you plan a task for one unit.

24 Plant replay

PART 4. MAINTENANCE AND RELIABILITY

Used by: Operator Engineer Reliability HSE Manager

Plant replay plays back the maintenance history over the plant. As the date moves forward, units change state, work orders appear and breakdowns are flagged, so a sequence of events becomes easy to follow.

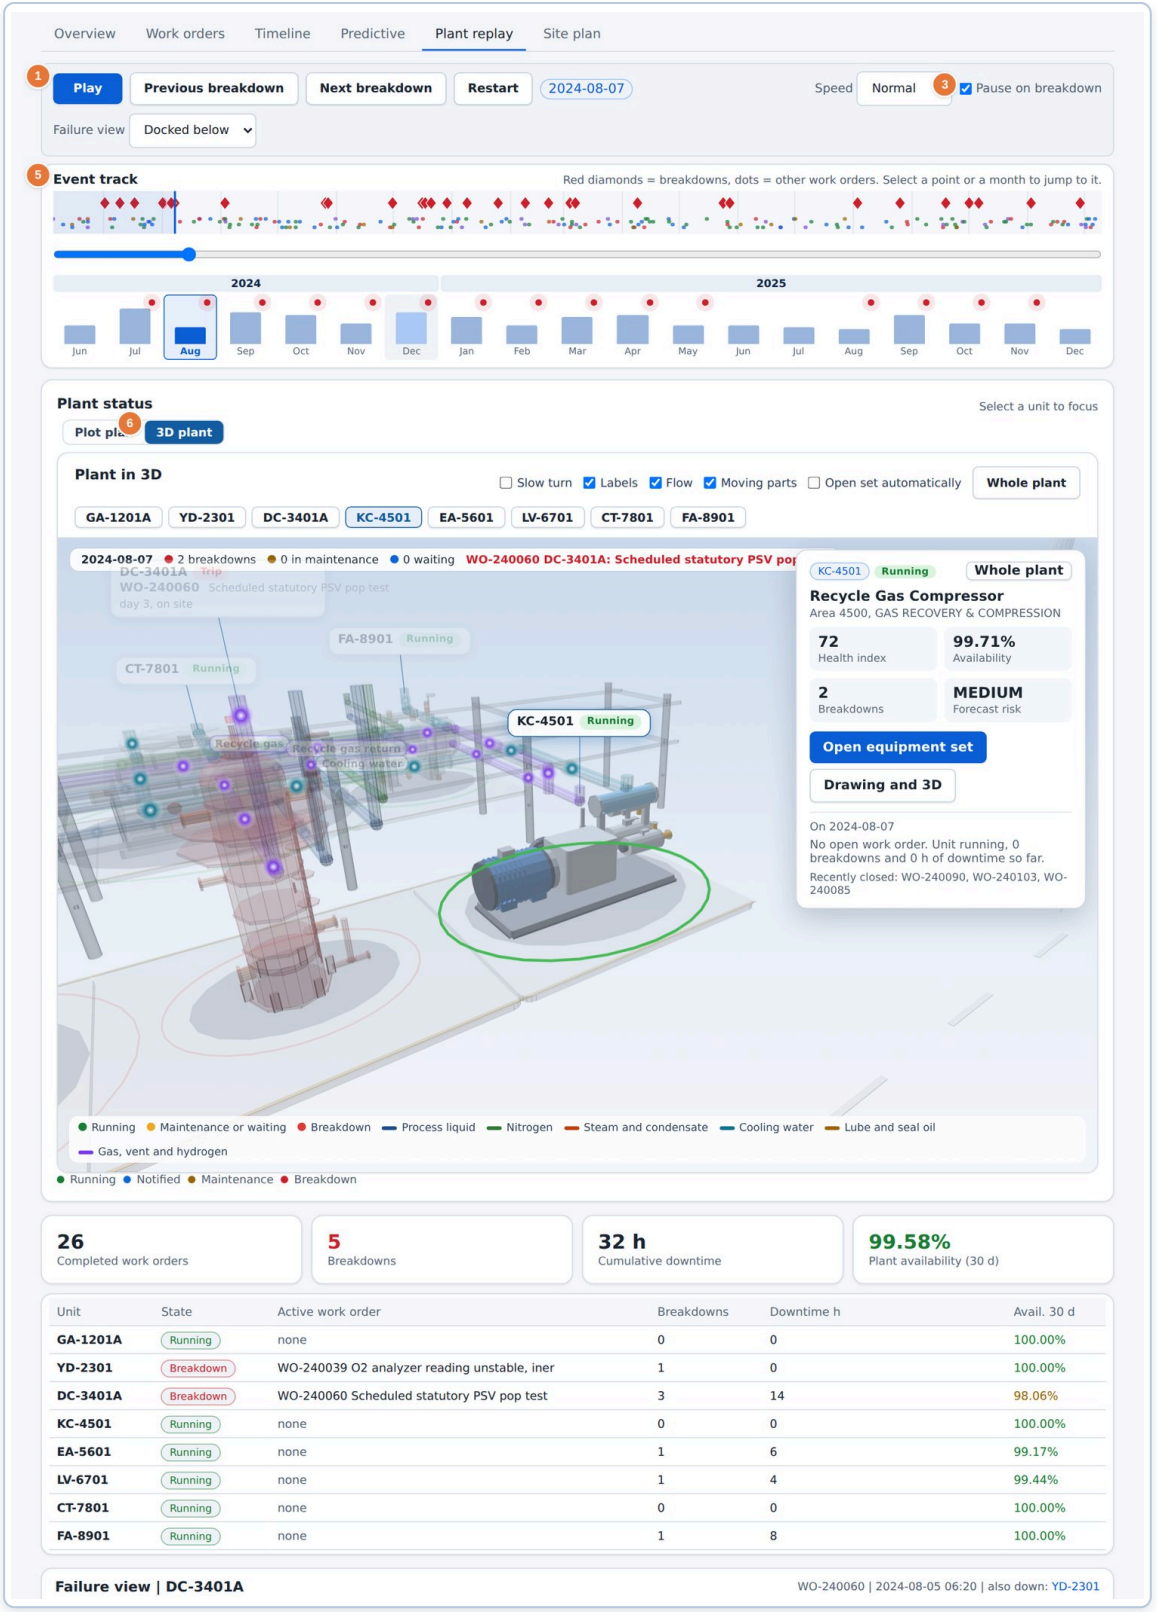

Figure 45. Plant replay with the 3D plant.

Res Playback buttons: , , and .

Eve The . Red diamonds are breakdowns and dots are other work orders.

Pau stops the replay at each breakdown.

3D Switch between and .

1. Open **Maintenance** and select **Plant replay**.
2. Select **3D plant** to see the plant in three dimensions, or **Plot plan** for the flat map.
3. Tick **Pause on breakdown**, then select **Play**. The replay stops at the first breakdown.
4. Read the **Plant status** panel and the failure view. They show which unit is down and which work order is active.
5. Select **Play** again to continue, or select a point on the event track to jump to it.

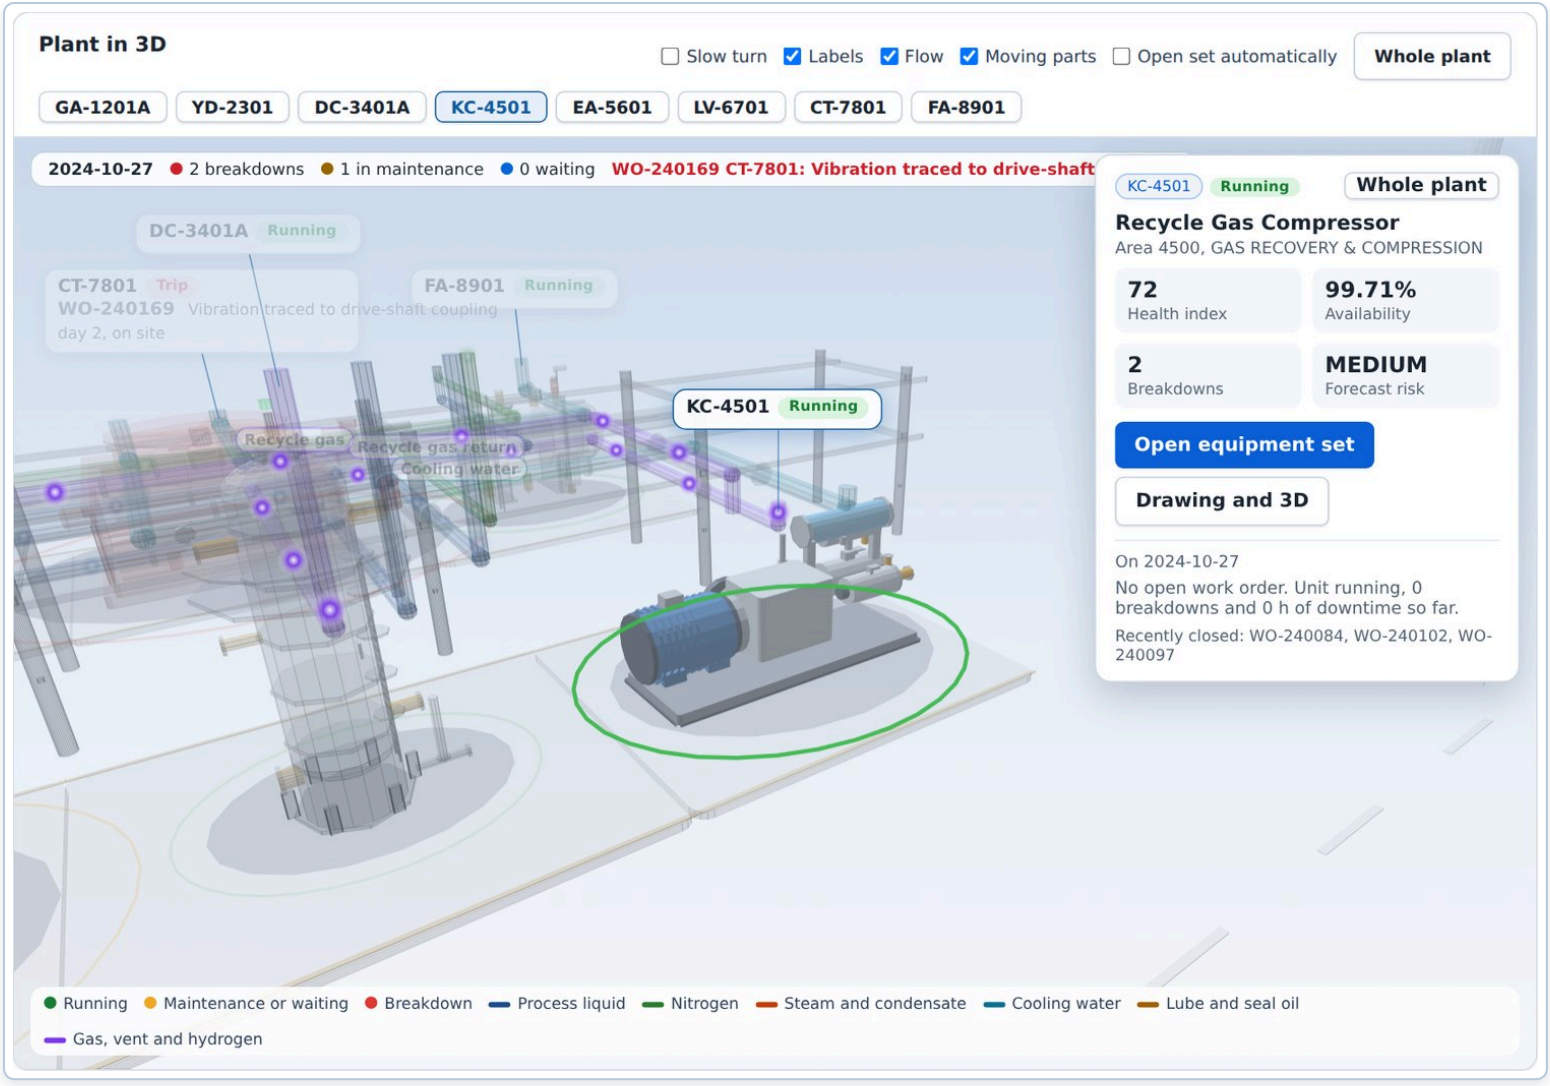

Figure 46. The 3D plant at a breakdown, with the failed unit flagged.

Units are coloured **Running**, **Notified** or **Breakdown**. The table under the plant lists, for each unit, its state, the active work order, its breakdowns, its downtime and its availability over the last 30 days.

25 Site plan

PART 4. MAINTENANCE AND RELIABILITY

Used by: Engineer | Reliability | HSE | Manager

The Site plan view plans the next 28 days of work. It turns routine intervals and forecast failures into jobs, fills crew days, adds the permits each job normally needs and checks the work next door.

CAUTION

The planner is a planning aid built on the history. It is not a permit system.

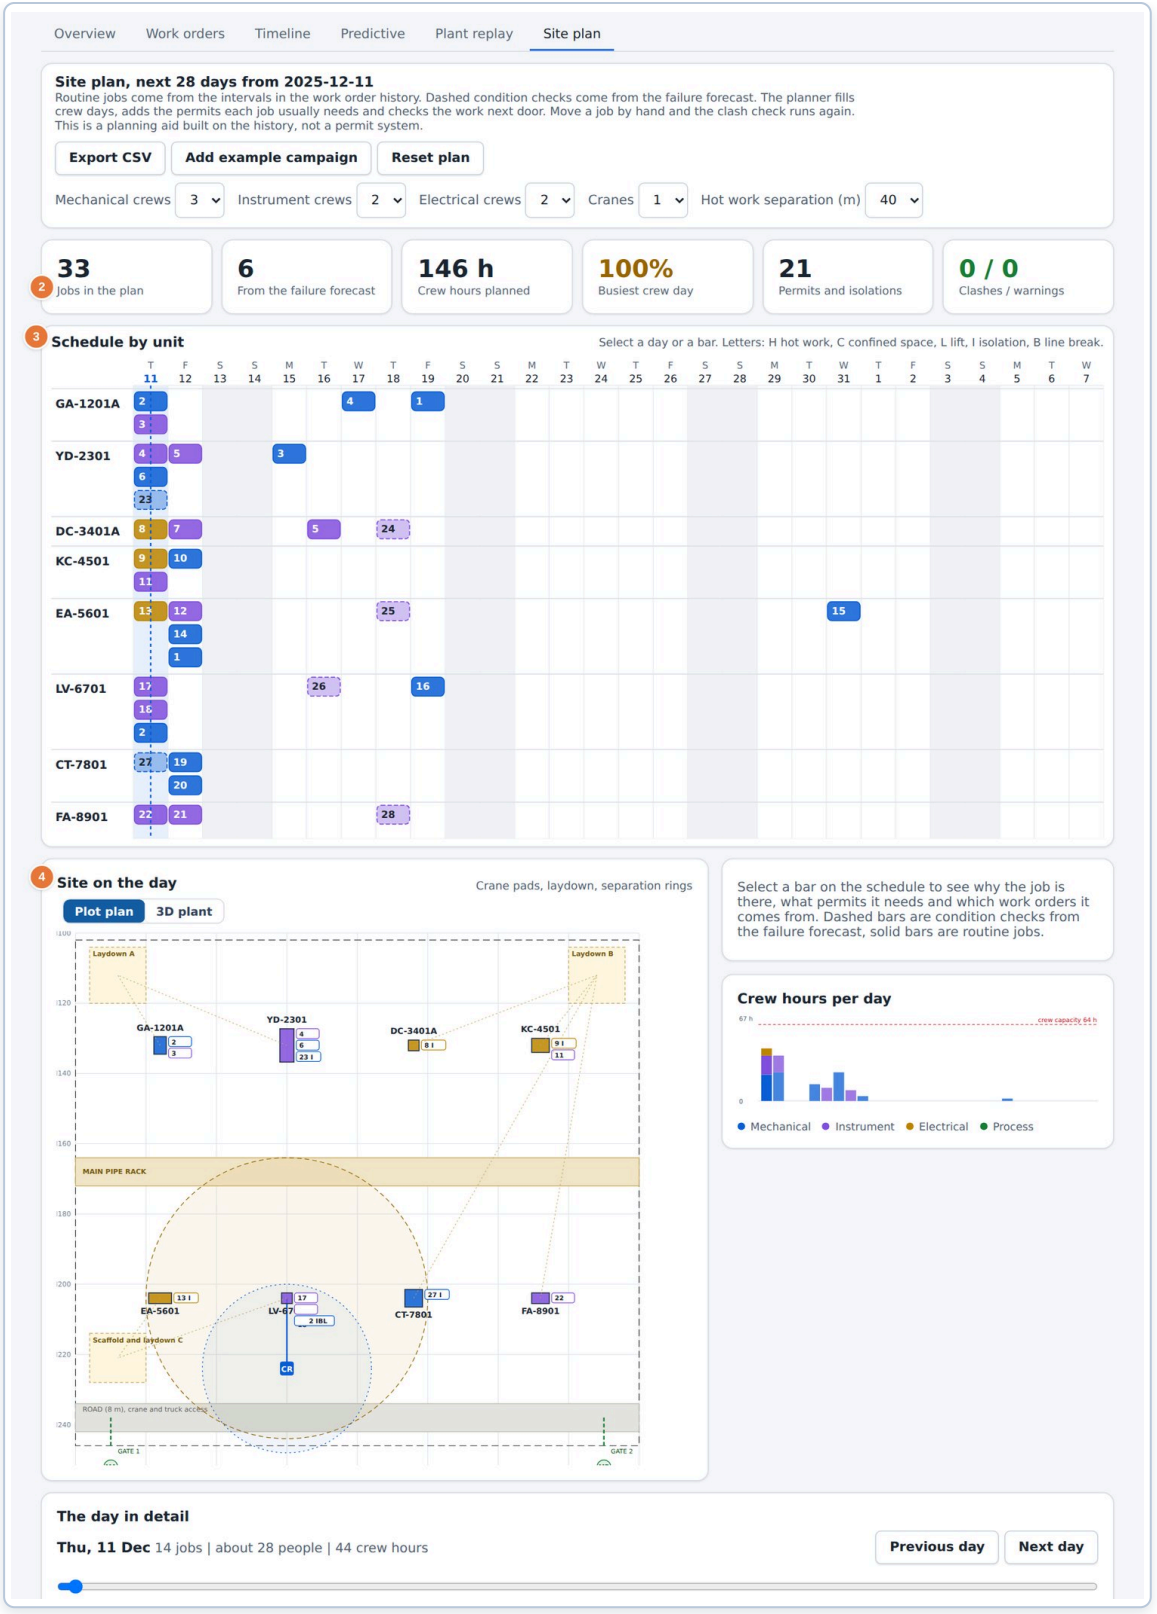

Figure 47. The Site plan view.

2. Summary tiles: jobs, jobs from the forecast, crew hours, busiest day and permits.
3. Letters mark the permits: H hot work, C confined space, L lift, I isolation, B line break.
4. with crane pads, laydown areas and separation rings.

1. Select **Add example campaign** to load a sample campaign, or leave the plan as built from the history.
2. Set the number of crews and cranes, and the hot work separation in metres.
3. Read the **Clashes / warnings** tile. A clash means that two jobs conflict on crew, crane or separation.
4. Select a bar in the schedule to see why the job is there and which permits it needs. Move it to another day and the clash check runs again.
5. Select **Export CSV** to save the plan, or **Reset plan** to start again.

26 Failure Memory

PART 4. MAINTENANCE AND RELIABILITY

Used by: Operator | Engineer | Reliability | HSE | Manager

Failure Memory finds earlier cases that look like the one you have now. The search covers work orders, one point lesson troubleshooting cases and approved knowledge items.

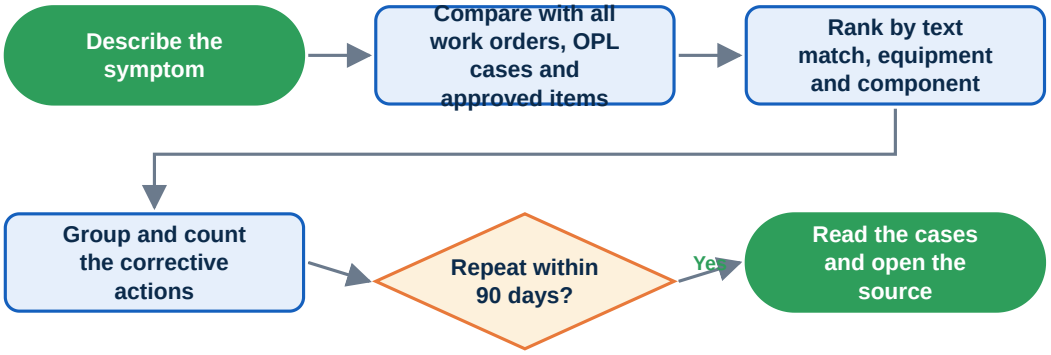

Figure 48. How Failure Memory finds similar failures.

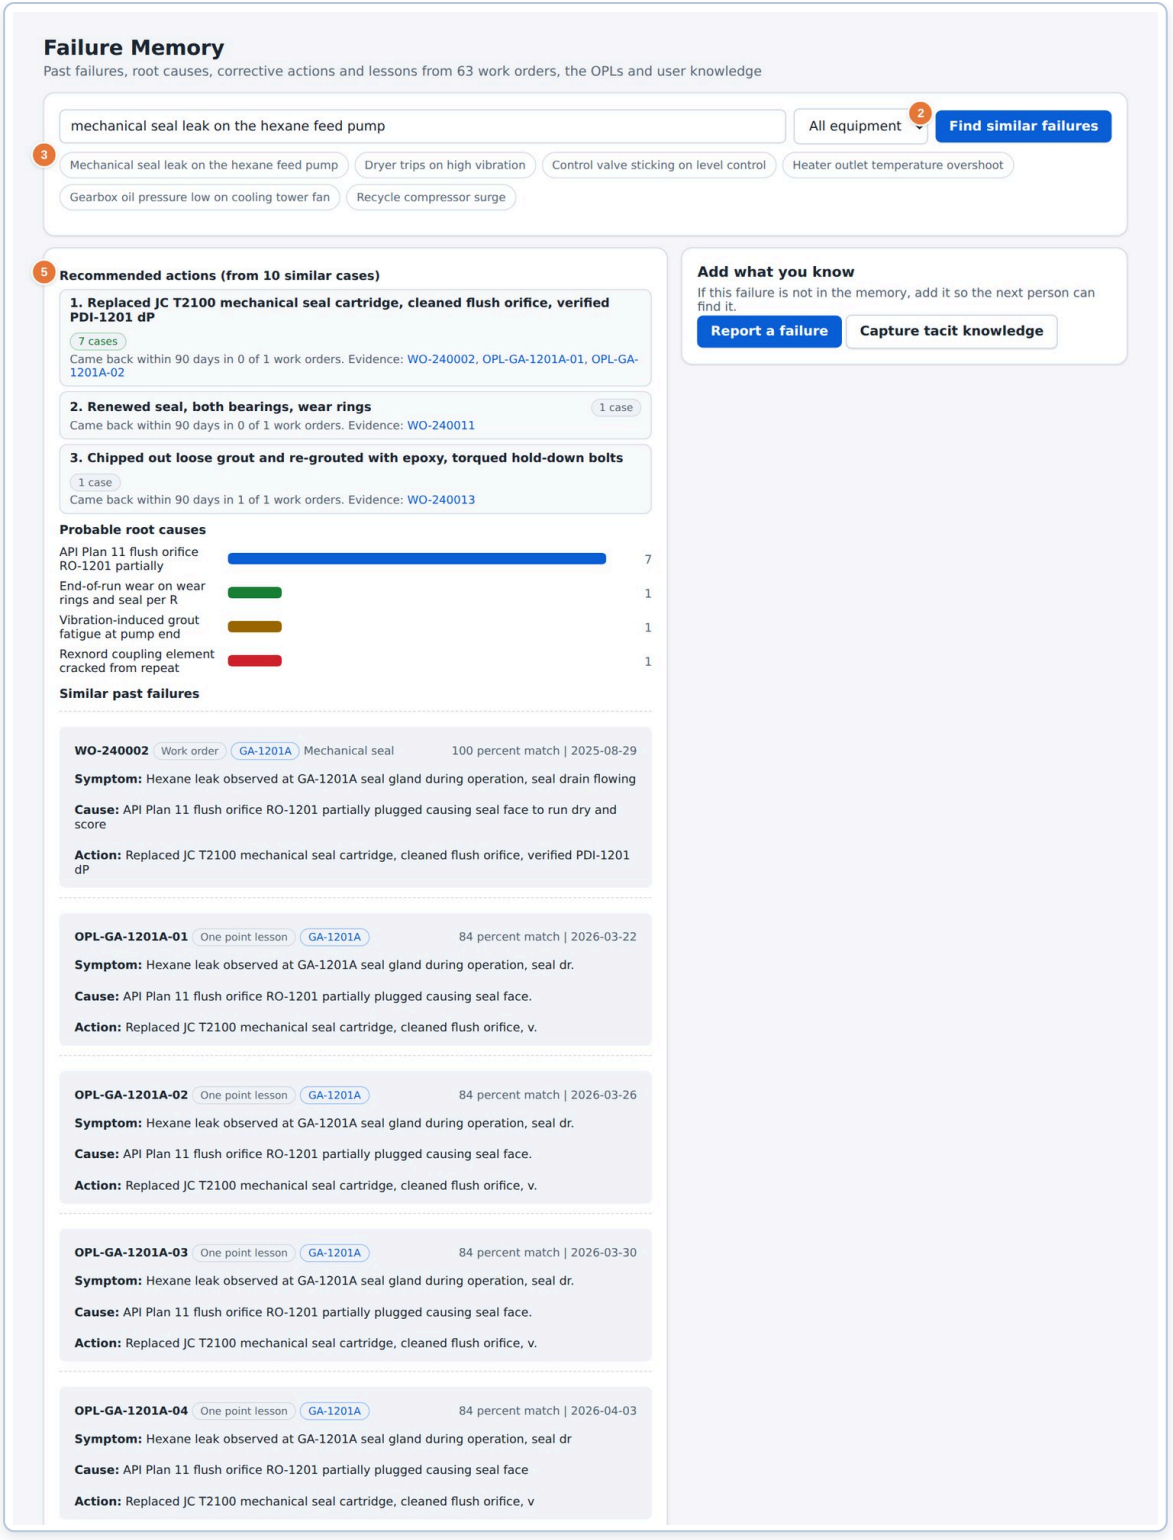

Figure 49. Failure Memory with the results for a seal leak.

Fin runs the search.

Rec , the likely causes and the similar cases that support them.

3 Example symptoms. Select one to fill the box.

1. Select an equipment set, or leave **All equipment**.
2. Type the symptom in your own words, or select one of the example symptoms.
3. Select **Find similar failures**.
4. Read the **Recommended actions**. Each action shows how often it was used and whether the same failure was repeated within 90 days.
5. Read the **Probable root causes** and the **Similar past failures**. Select a case to open its work order or its lesson.
6. If your case is new, select **Report a failure** or **Capture tech knowledge** to record it (Chapter 34).

27 Performance

PART 4. MAINTENANCE AND RELIABILITY

Used by: Operator | Engineer | Reliability | HSE | Manager

The Performance page shows the key indicators of the whole plant and of each equipment set, with targets, so that you can see at a glance what is on target and what is not.

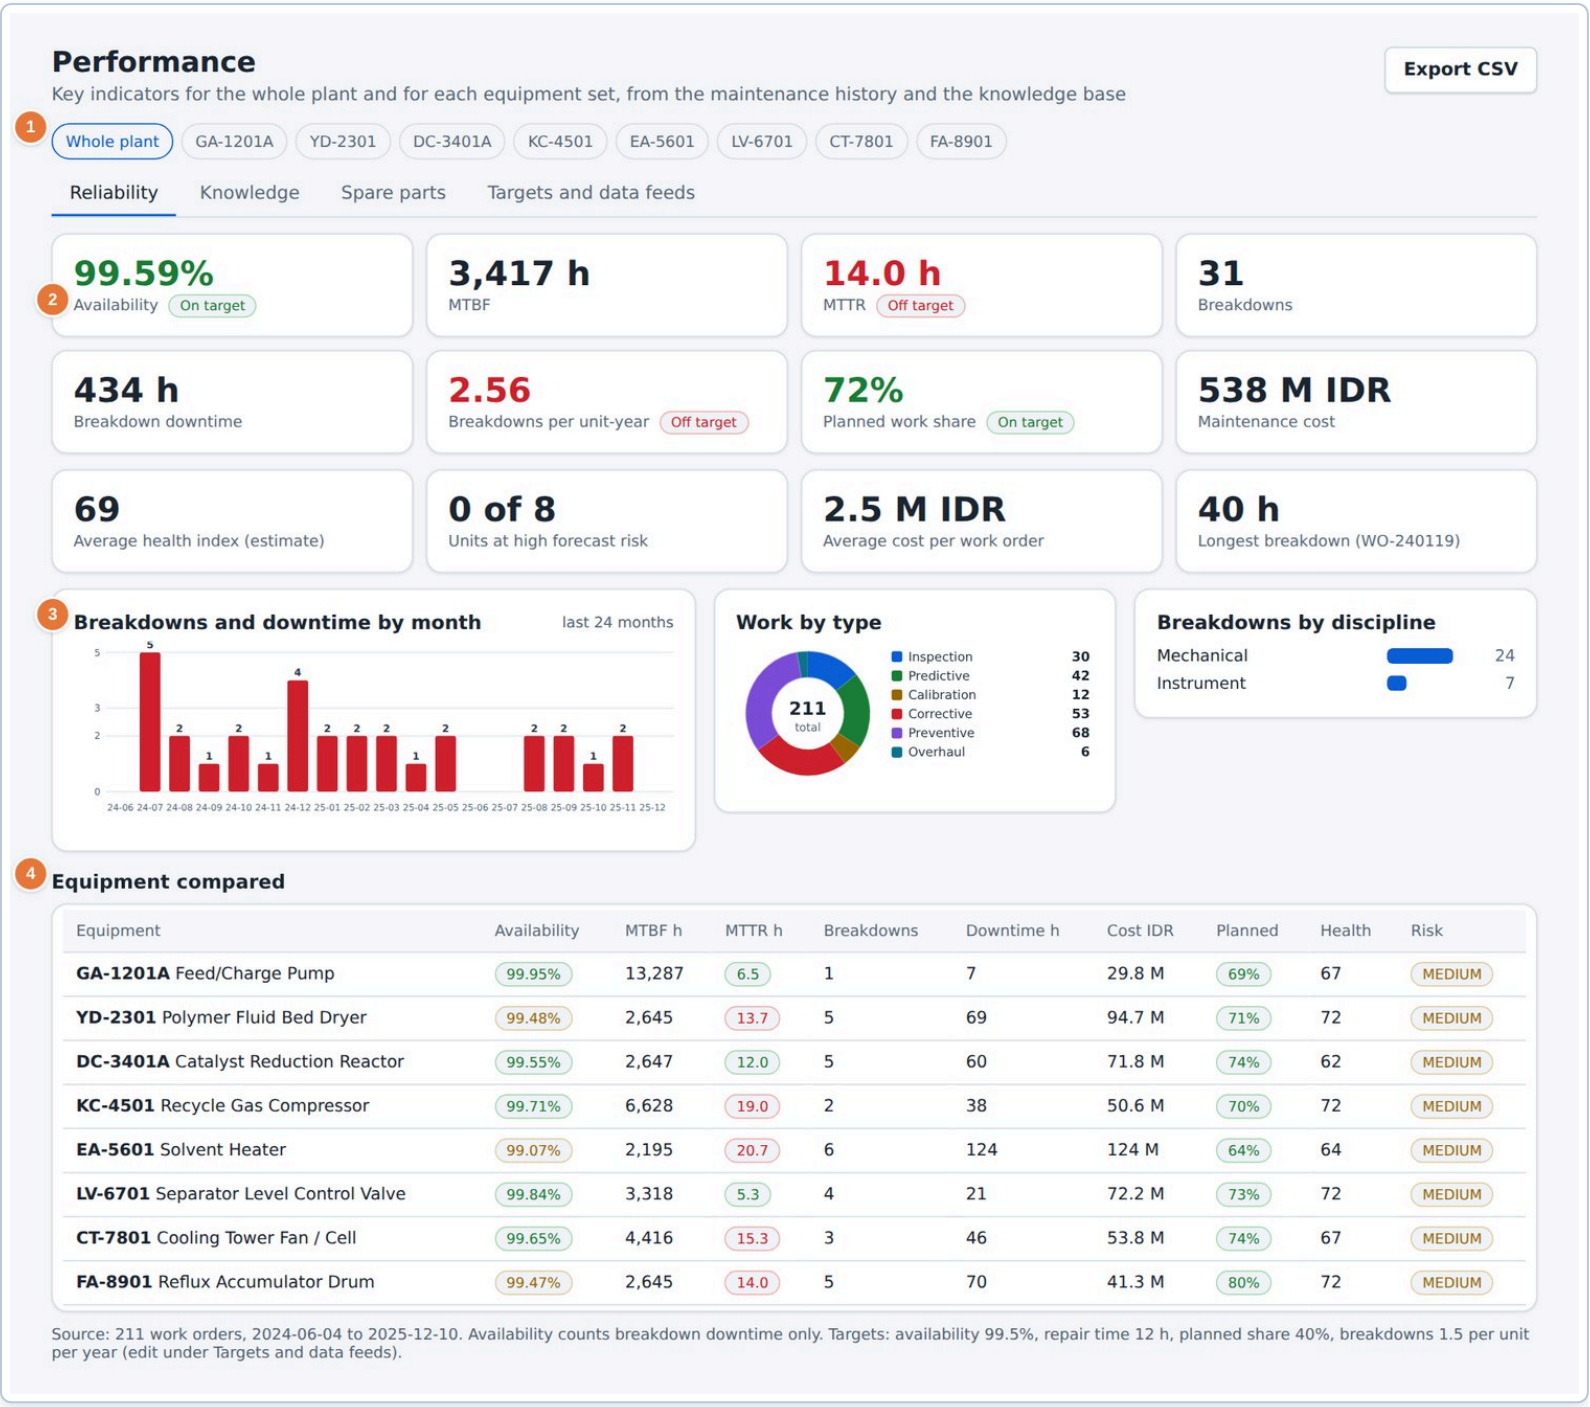

Figure 50. The Performance page, Reliability tab.

Exp Equipment filter: or one set. saves the figures.

3 Breakdowns and downtime by month, and work by type.

Off Indicator tiles. A tag shows whether each is or .

Equ al units side by side, with availability, MTBF, MTTR, cost, planned share, health and risk.

27.1 Reliability tab

The tiles show availability, MTBF, MTTR, breakdowns, breakdown downtime, breakdowns per unit-year, the planned work share, maintenance cost, the average health index, the number of units at high forecast risk, the average cost per work order and the longest breakdown.

27.2 Knowledge tab

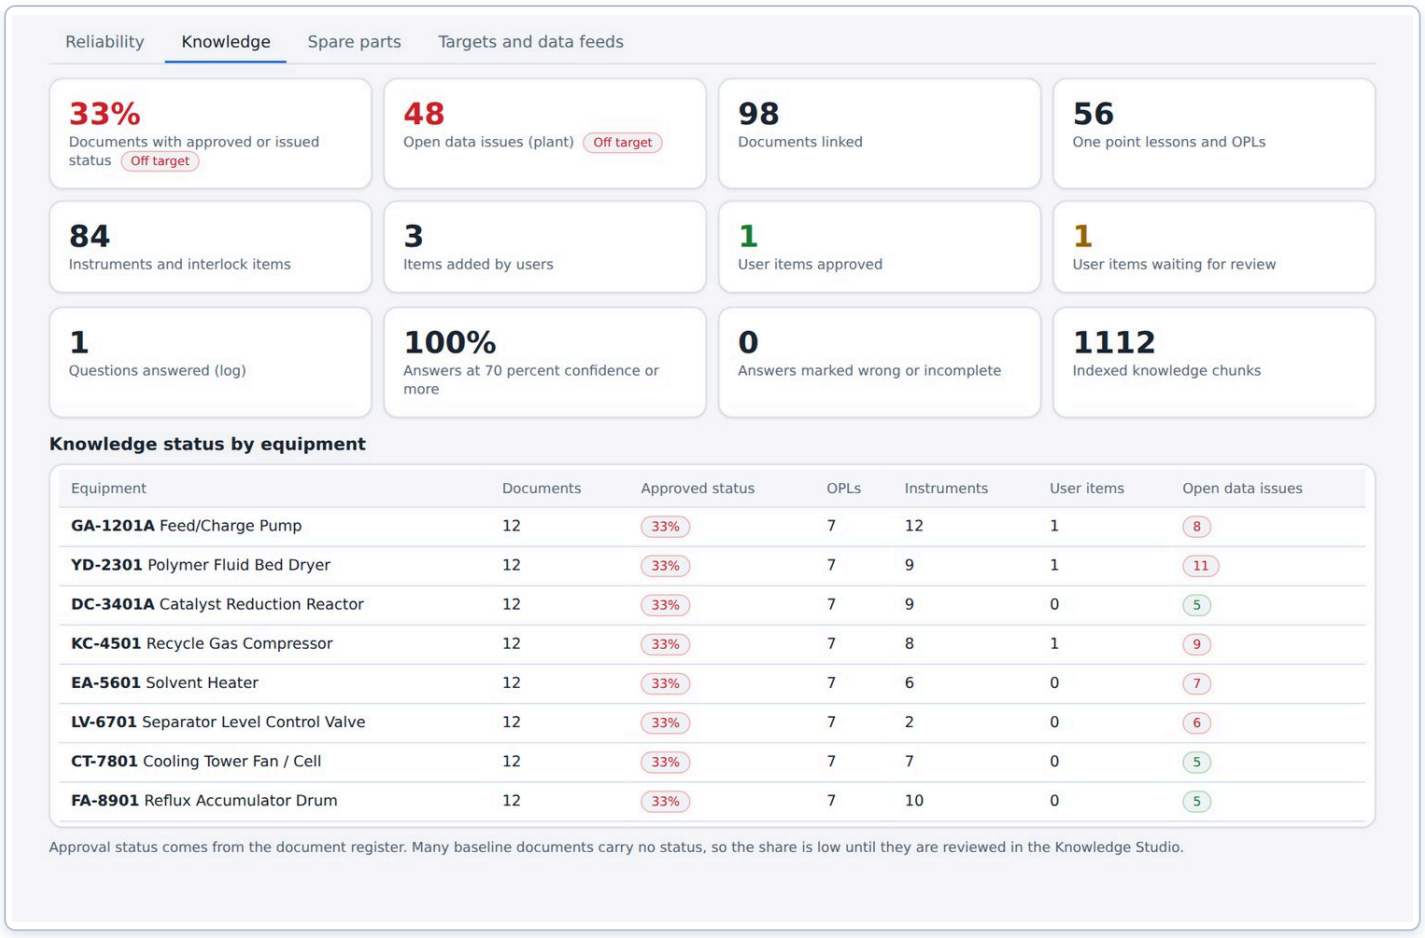

Figure 51. The Knowledge tab.

This tab measures the knowledge base: the share of documents with an approval status, the open data issues, the number of documents, the lessons and the user items. The table **Knowledge base status by equipment** shows, for each set, how many documents are approved and how many lessons and issues it has.

27.3 Spare parts tab

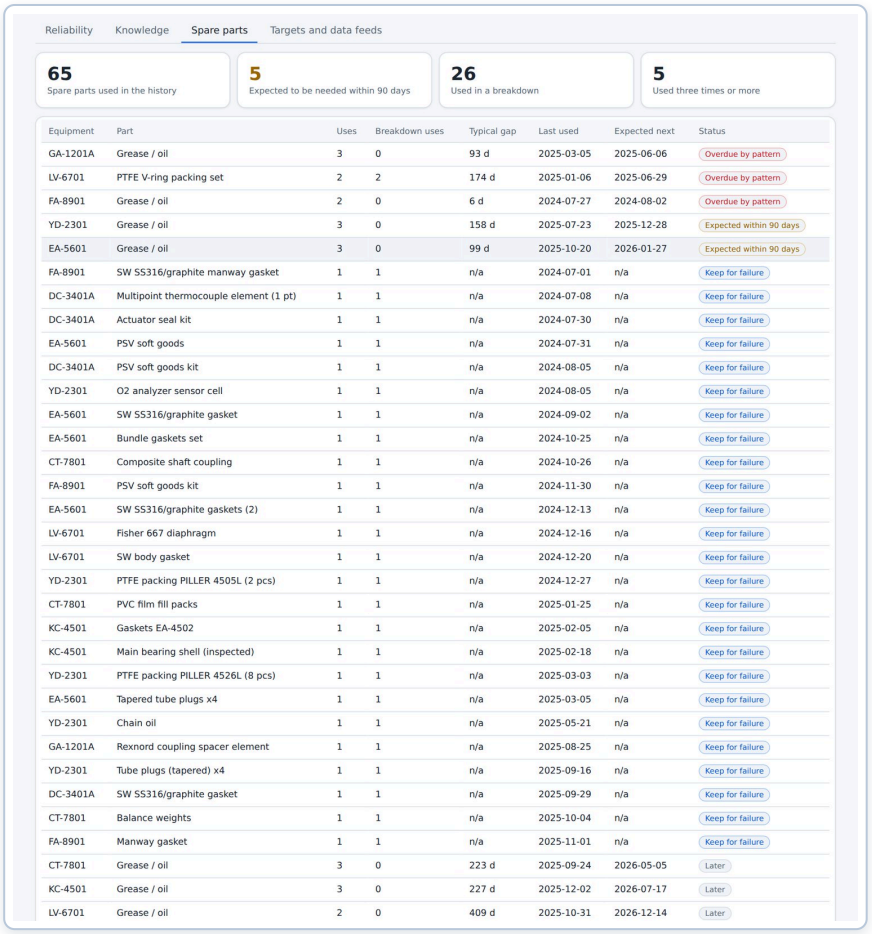

Figure 52. The Spare parts tab.

The Spare parts tab counts the parts used in the history, the parts expected to be needed within 90 days, the parts used in a breakdown and the parts used three times or more. A table lists each part with its use. Use it to decide which spares justify holding stock.

27.4 Targets and data feeds tab

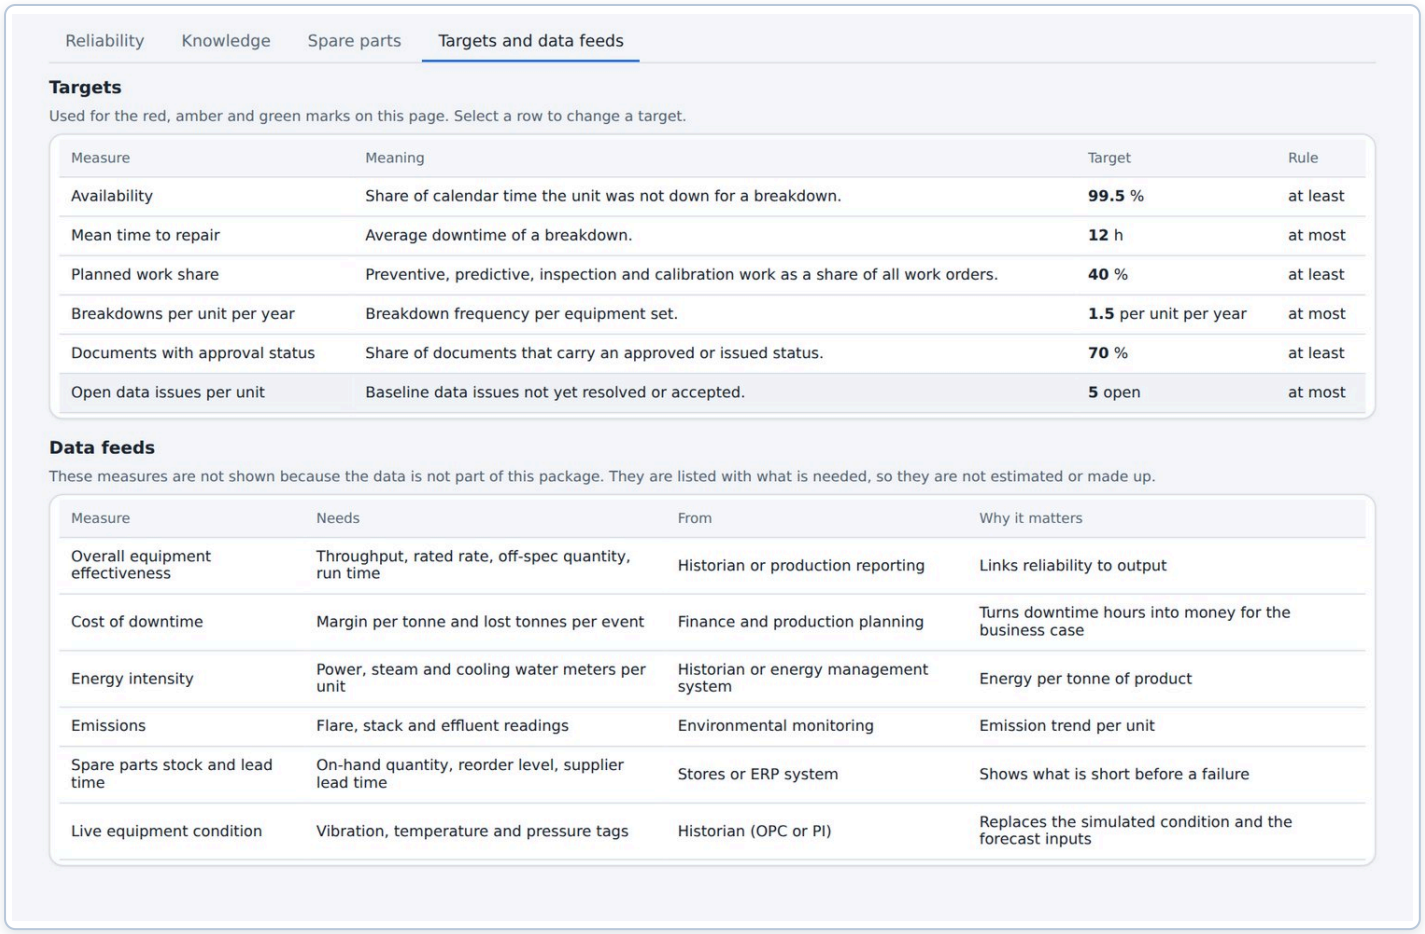

Figure 53. The Targets and data feeds tab.

The **Targets** table shows each measure, its meaning and the target, such as the share of calendar time that a unit is ready to run. The **Data feeds** table lists the indicators that need live data, such as overall equipment effectiveness, energy use and throughput, with the system they come from and the reason they matter. These indicators are shown as not available until the feed is connected.

28 One Point Lesson Library

PART 5. SAFETY, LESSONS AND SCENARIOS

Used by: Operator | Engineer | Reliability | HSE | Manager

A one point lesson (OPL) is a short sheet that teaches one thing about one machine. The library holds 56 sheets, with 83 scenarios that let you practise the lesson on the P&ID or in 3D.

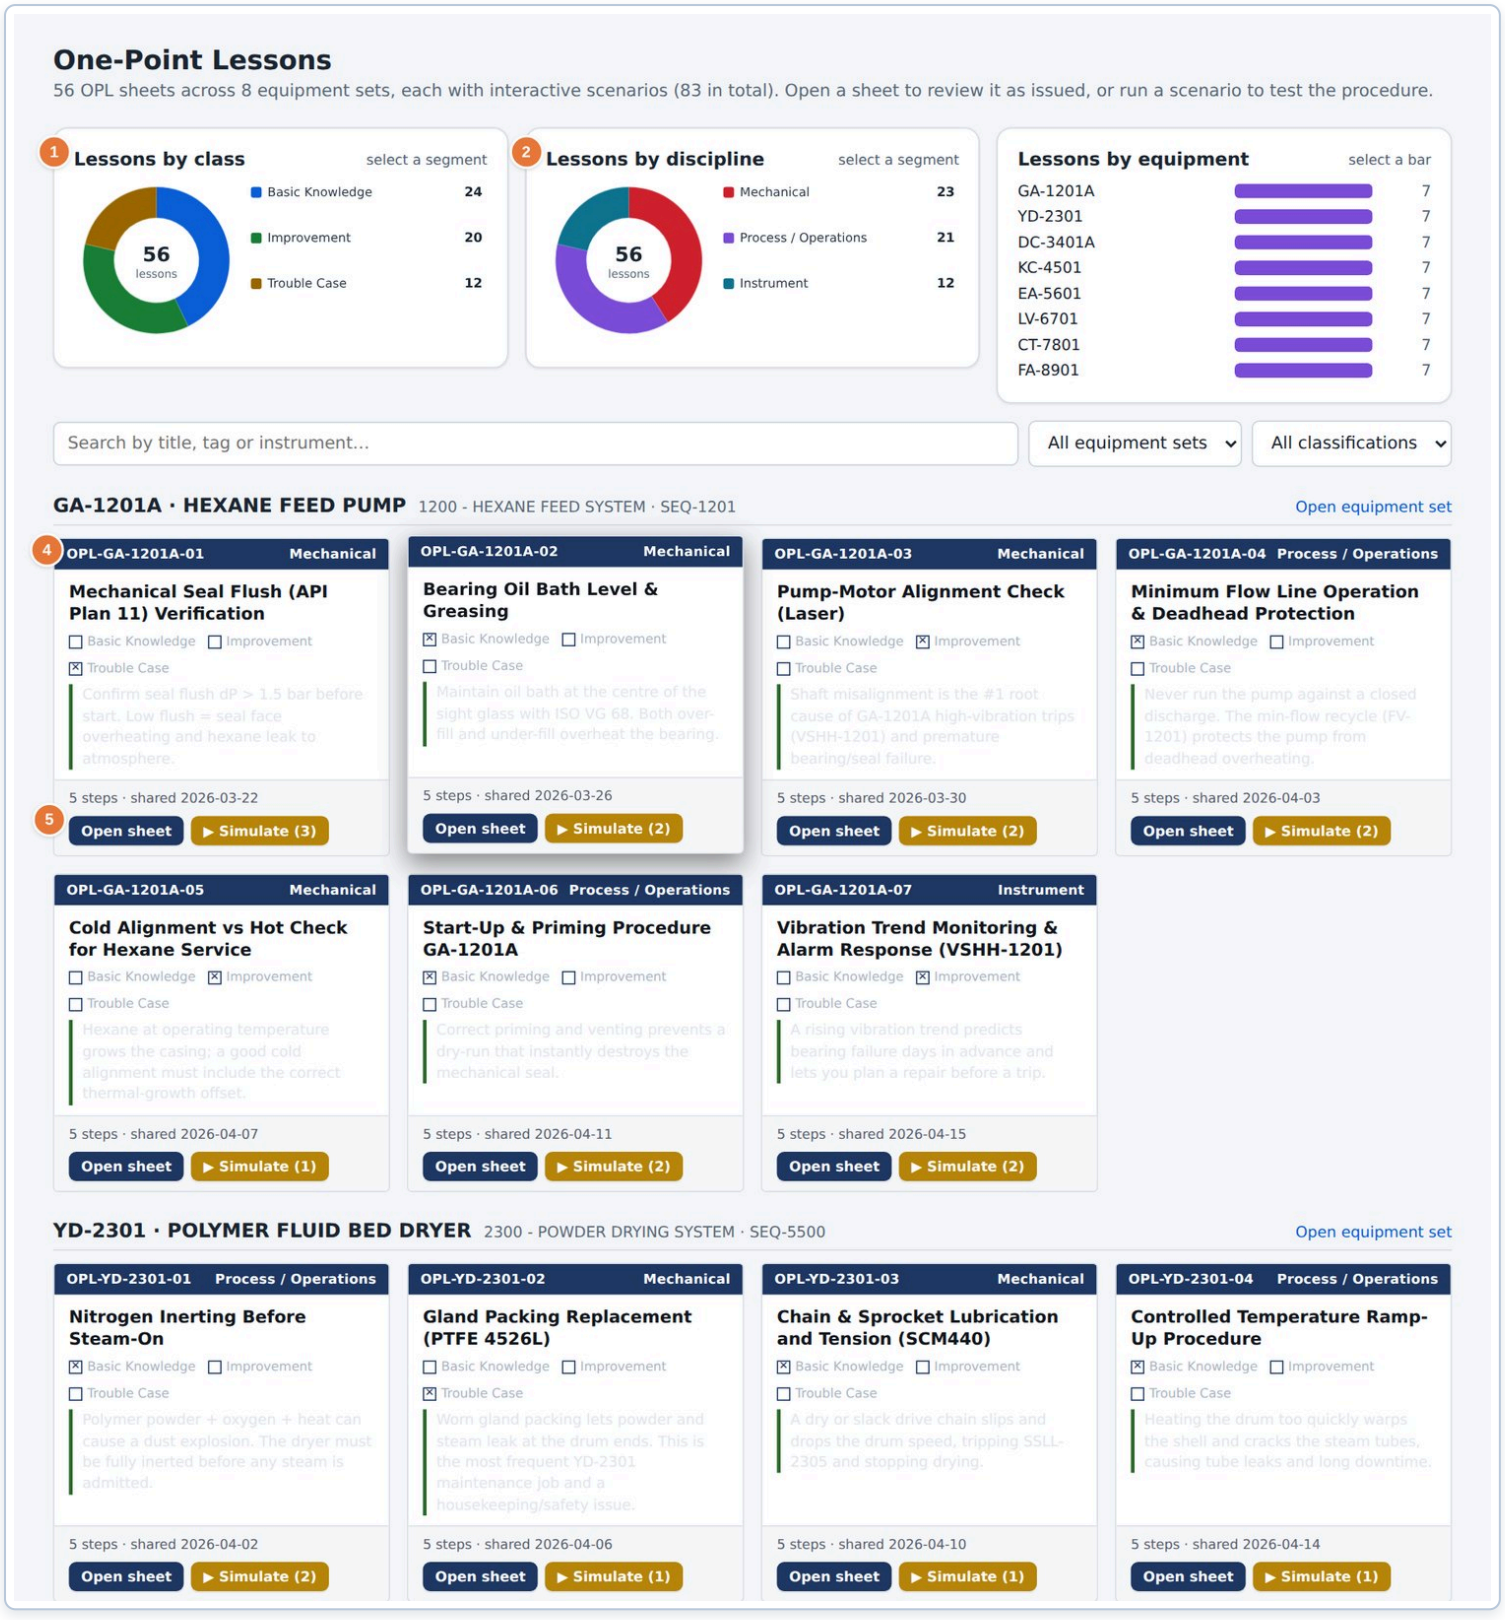

Figure 54. The One Point Lesson Library.

1. Lesson class: Basic Knowledge, Improvement and Trouble Case.
2. Lessons by discipline and by equipment. Select a segment or a bar to filter.
3. Search and filters.
4. A lesson card with its number, title, key message, step count and date.
5. Open sheet and Simulate for each lesson.

1. Filter by equipment set or classification, or select a segment on the charts.
2. Read the card. The first line of text states the lesson in one sentence.
3. Select **Open sheet** to read the full lesson.
4. Select **Simulate** to practise it. The number in brackets is the number of scenarios for the lesson.

28.1 The lesson sheet

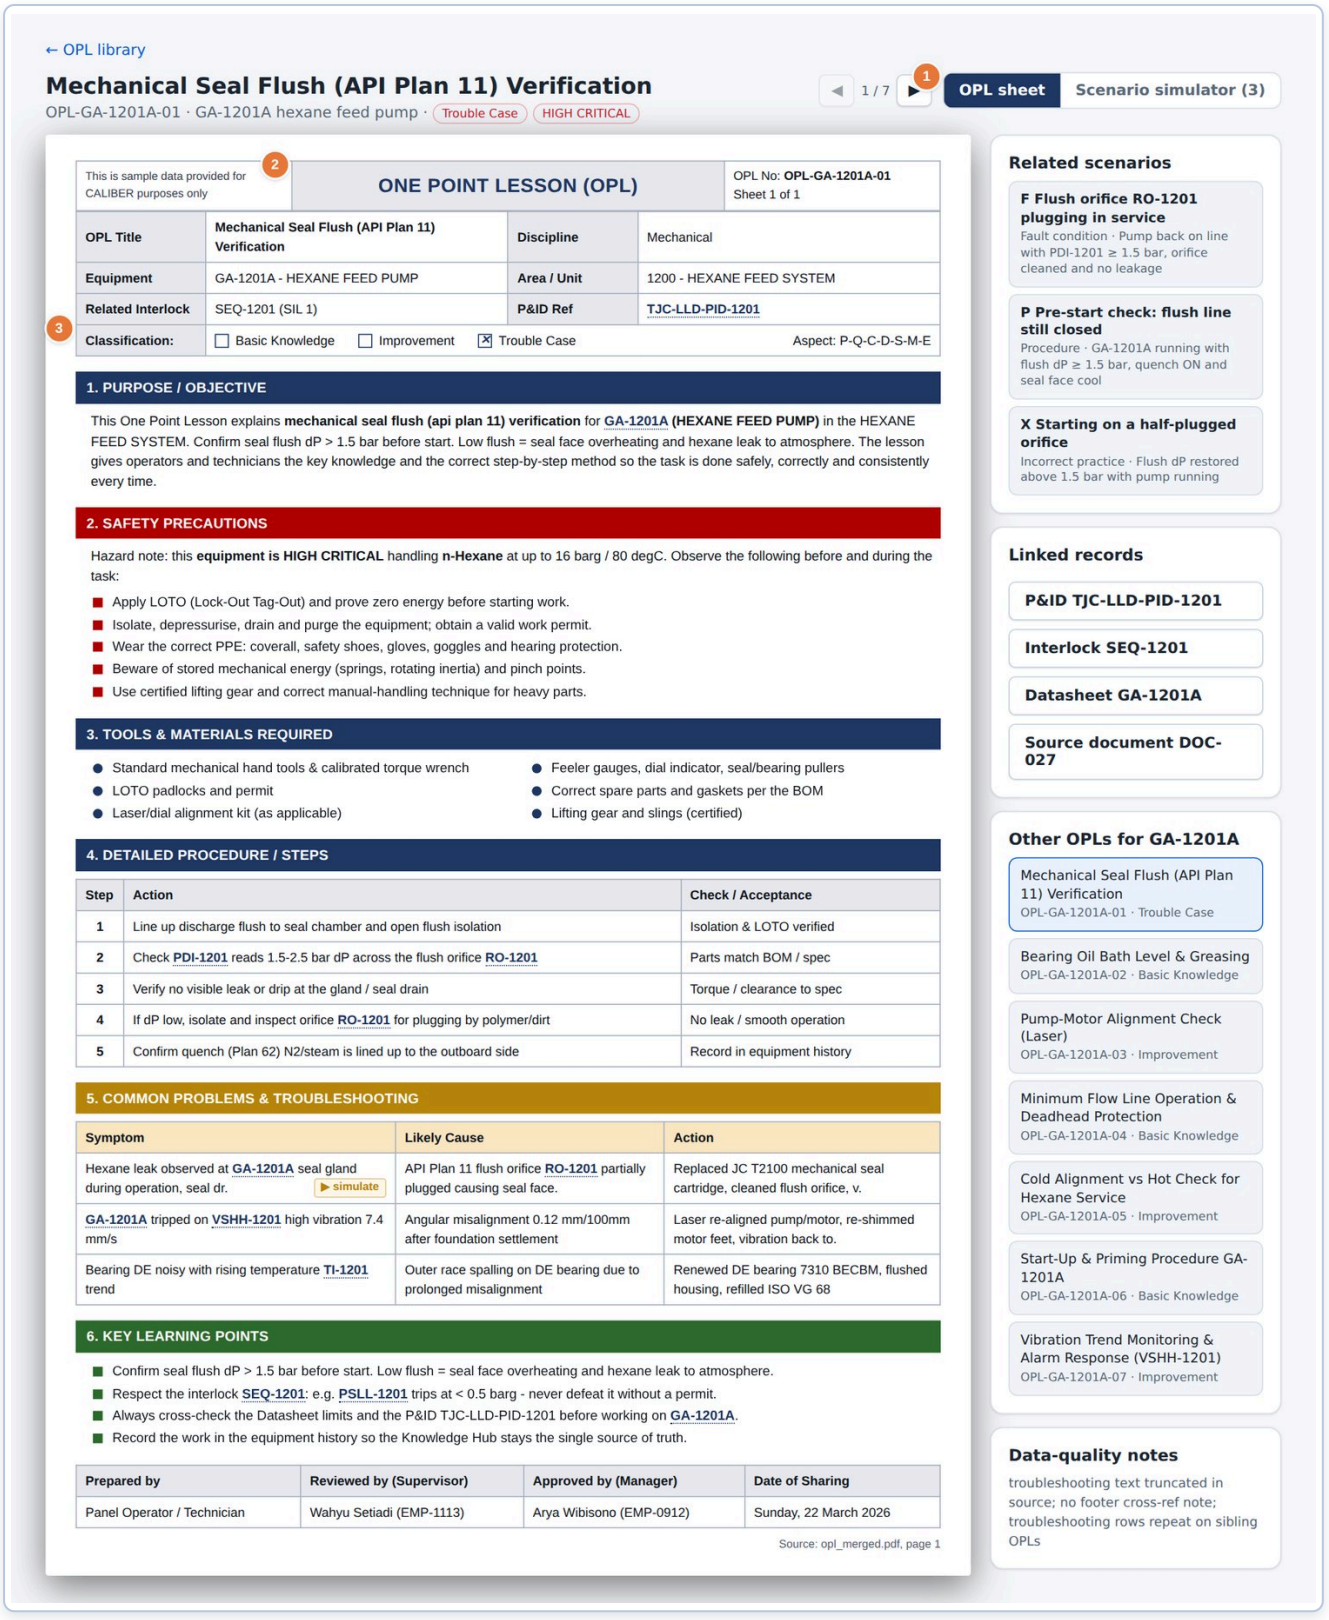

Figure 55. An OPL sheet in the plant's standard layout.

1. Switch between and .
2. Header: number, title, discipline, equipment, area, related interlock and P&ID reference.
3. The classification and the aspect code.

Each sheet follows the same order: purpose, safety precautions, the steps, the quantitative values to check and a troubleshooting table. The hazard note on the sheet states the fluid, pressure and temperature of the machine, and the precautions that apply before the work starts.

29 OPL scenario simulator

PART 5. SAFETY, LESSONS AND SCENARIOS

Used by: Operator Engineer Reliability HSE Manager

> The scenario simulator lets you practise a lesson without risk. You see the P&ID or the 3D model of the machine, you act in the field and at the panel, and the simulation shows what follows.

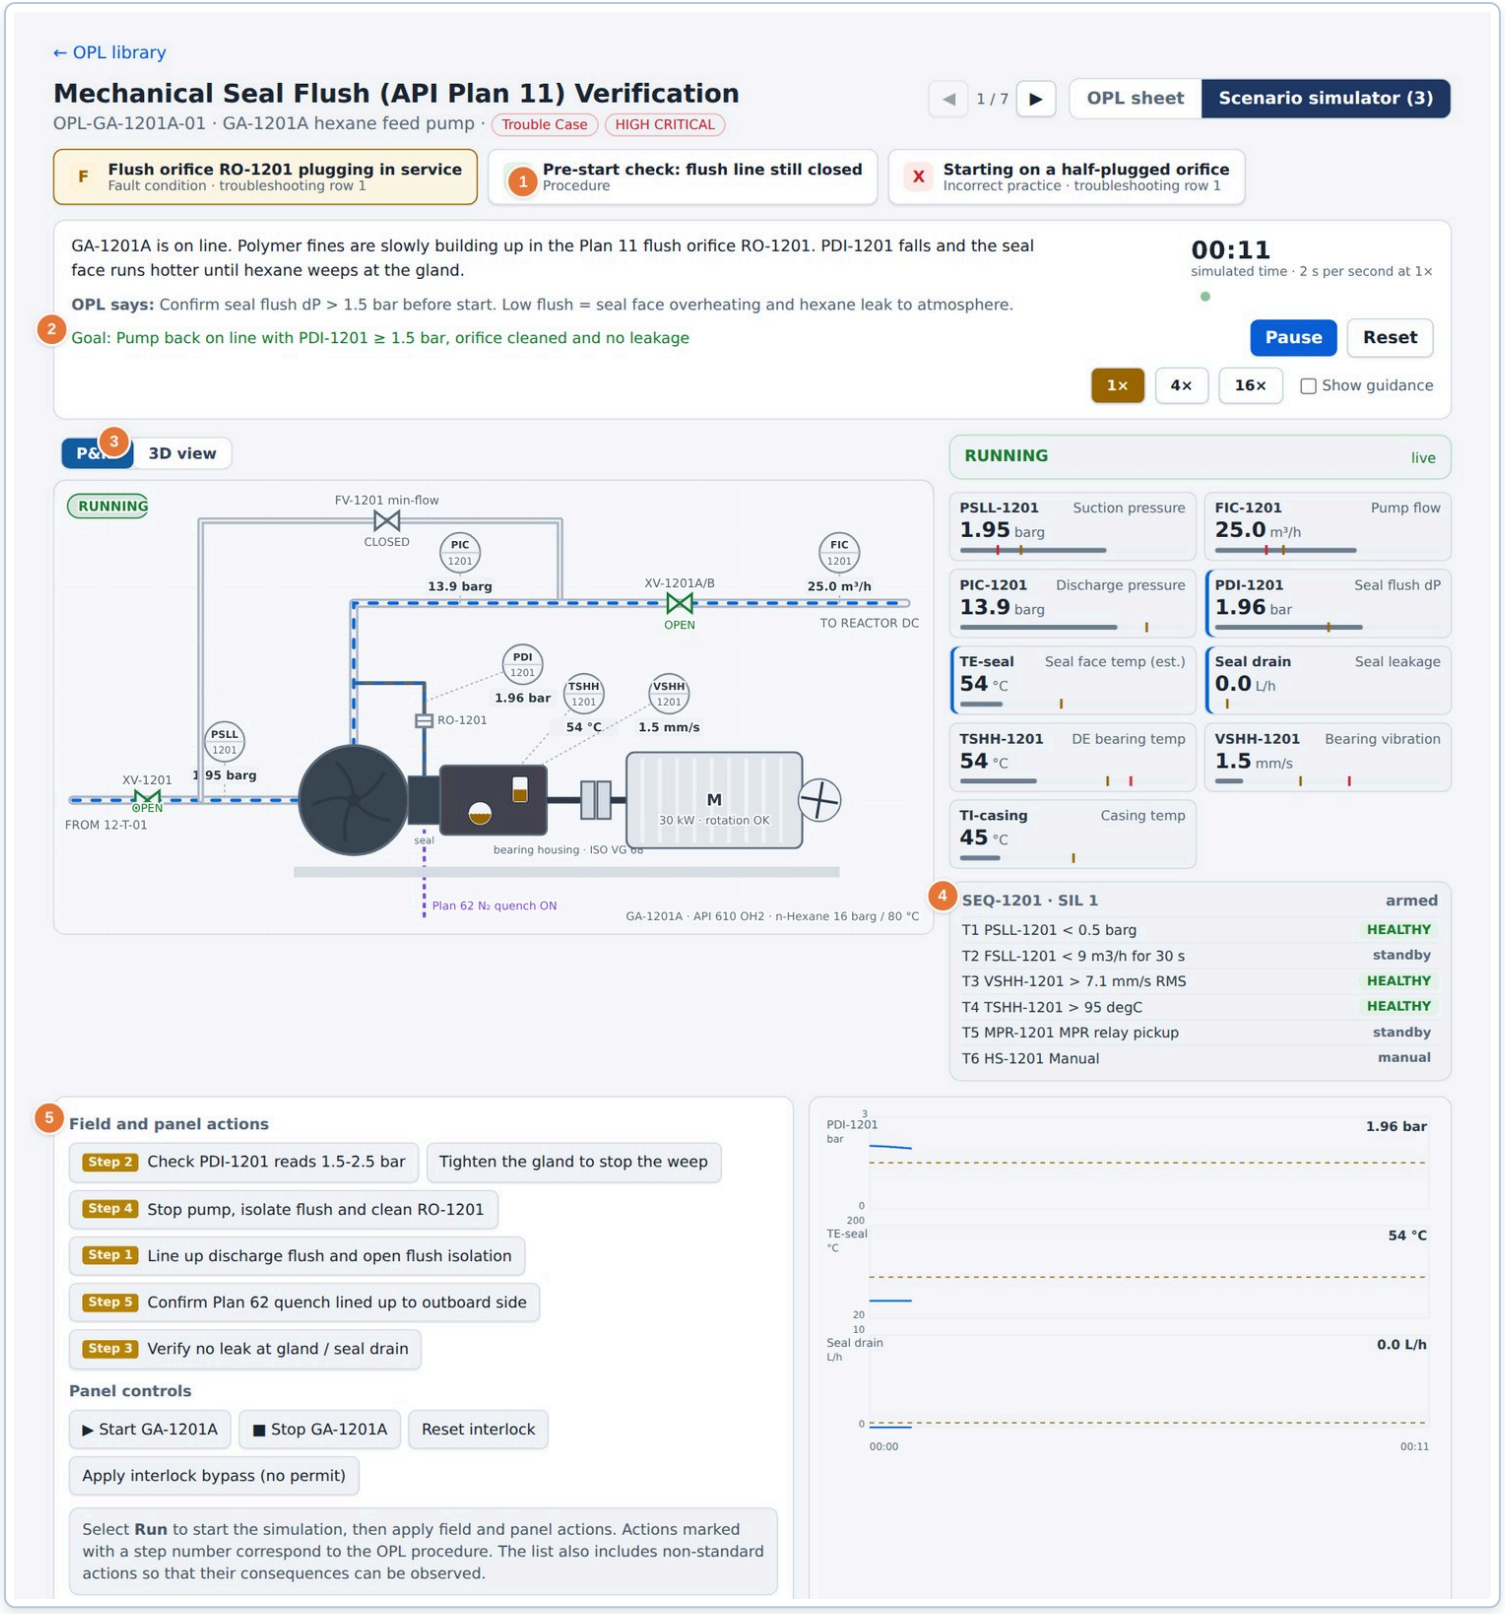

Figure 56. A scenario on the P&ID.

1. The scenarios of the lesson. Each has a name and a type: fault condition, incorrect practice or pre-start check.
2. The story and the goal of the scenario.
3. , , and the and switch.
4. Readings and the state of the interlock.

Par and the .

1. Open a lesson and select **Scenario simulator**, or select **Simulate** on the lesson card.
2. Choose a scenario in the list. Read the story and the goal.
3. Select **Run** to start the simulation.
4. Select the field and panel actions in the order you think correct. Actions marked with a step number match a step of the lesson.
5. Select **Show guidance** if you need a hint. Select **Reset** to start the scenario again.

29.1 Switching to 3D

Select **3D view** to see the same scenario on the 3D model. Rotate and zoom as in Chapter 14. The animation is the same as on the P&ID: flows stop, parts move and alarms change colour as the simulation runs.

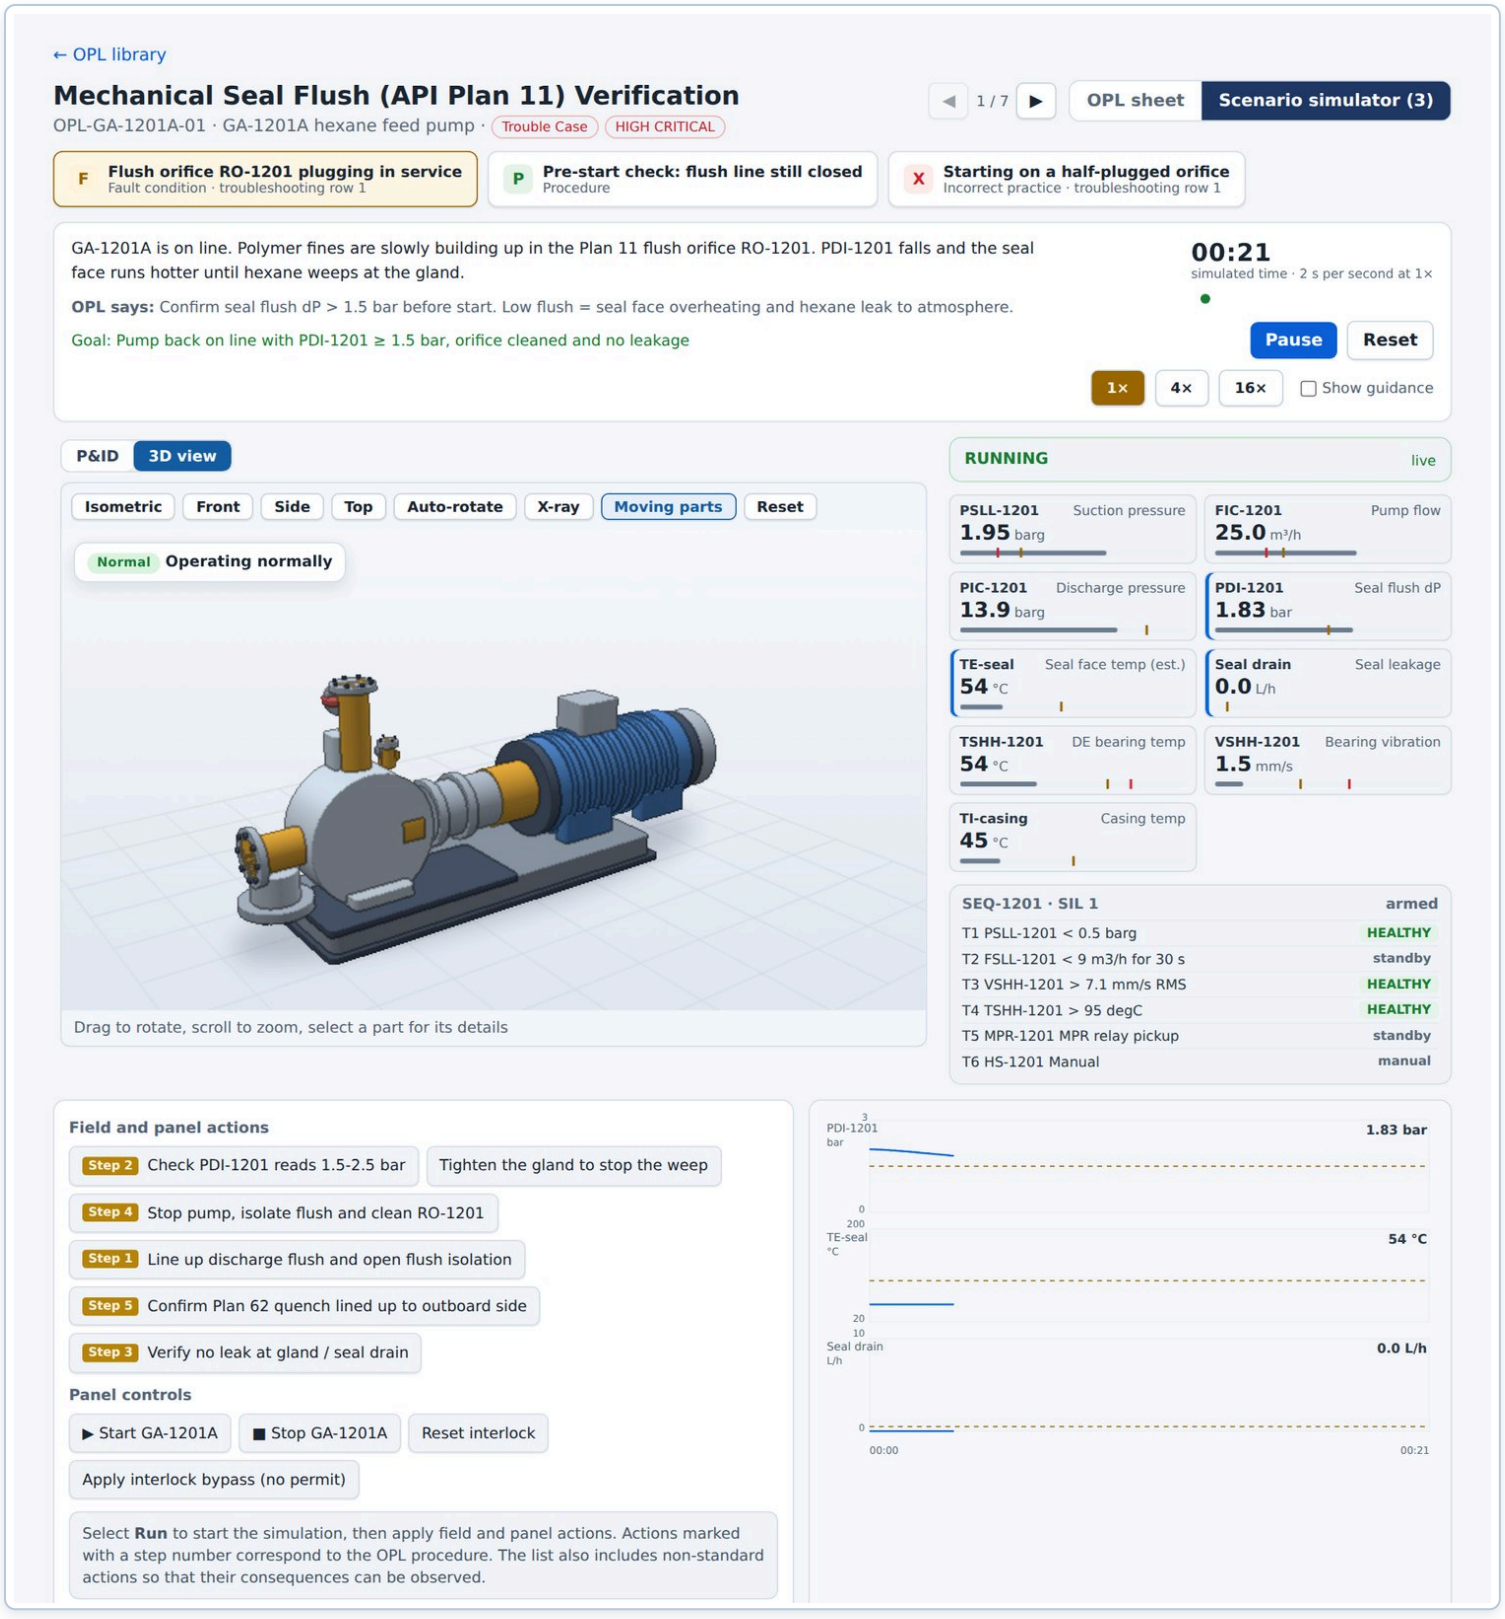

Figure 57. The same scenario in 3D.

CAUTION

The simulator uses simulated values. It is a training aid and does not act on the plant. Panel controls such as **Apply interlock bypass (no permit)** exist to show the consequence of a wrong action.

30 Scenarios and chain reaction

PART 5. SAFETY, LESSONS AND SCENARIOS

Used by: Operator | Engineer | Reliability | HSE | Manager

The Scenarios page shows how a failure on one unit spreads to the others. It also replays an OPL case or a work order on the P&ID. A third tab records the assumptions behind the numbers.

30.1 Plant chain reaction

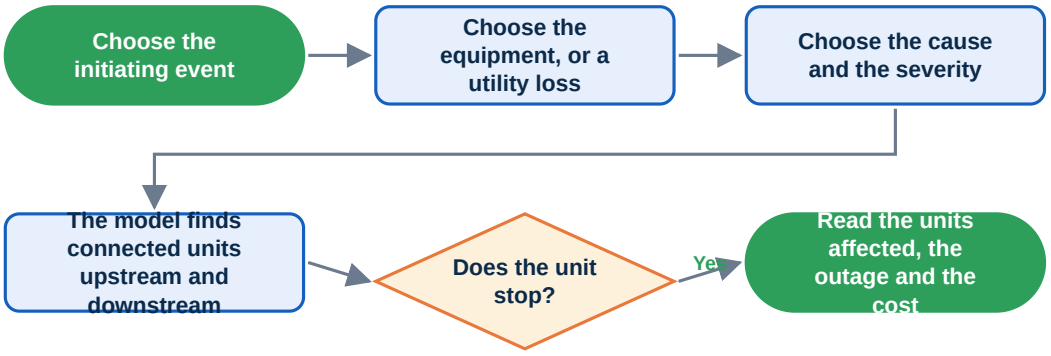

Figure 58. How the chain reaction is set up and read.

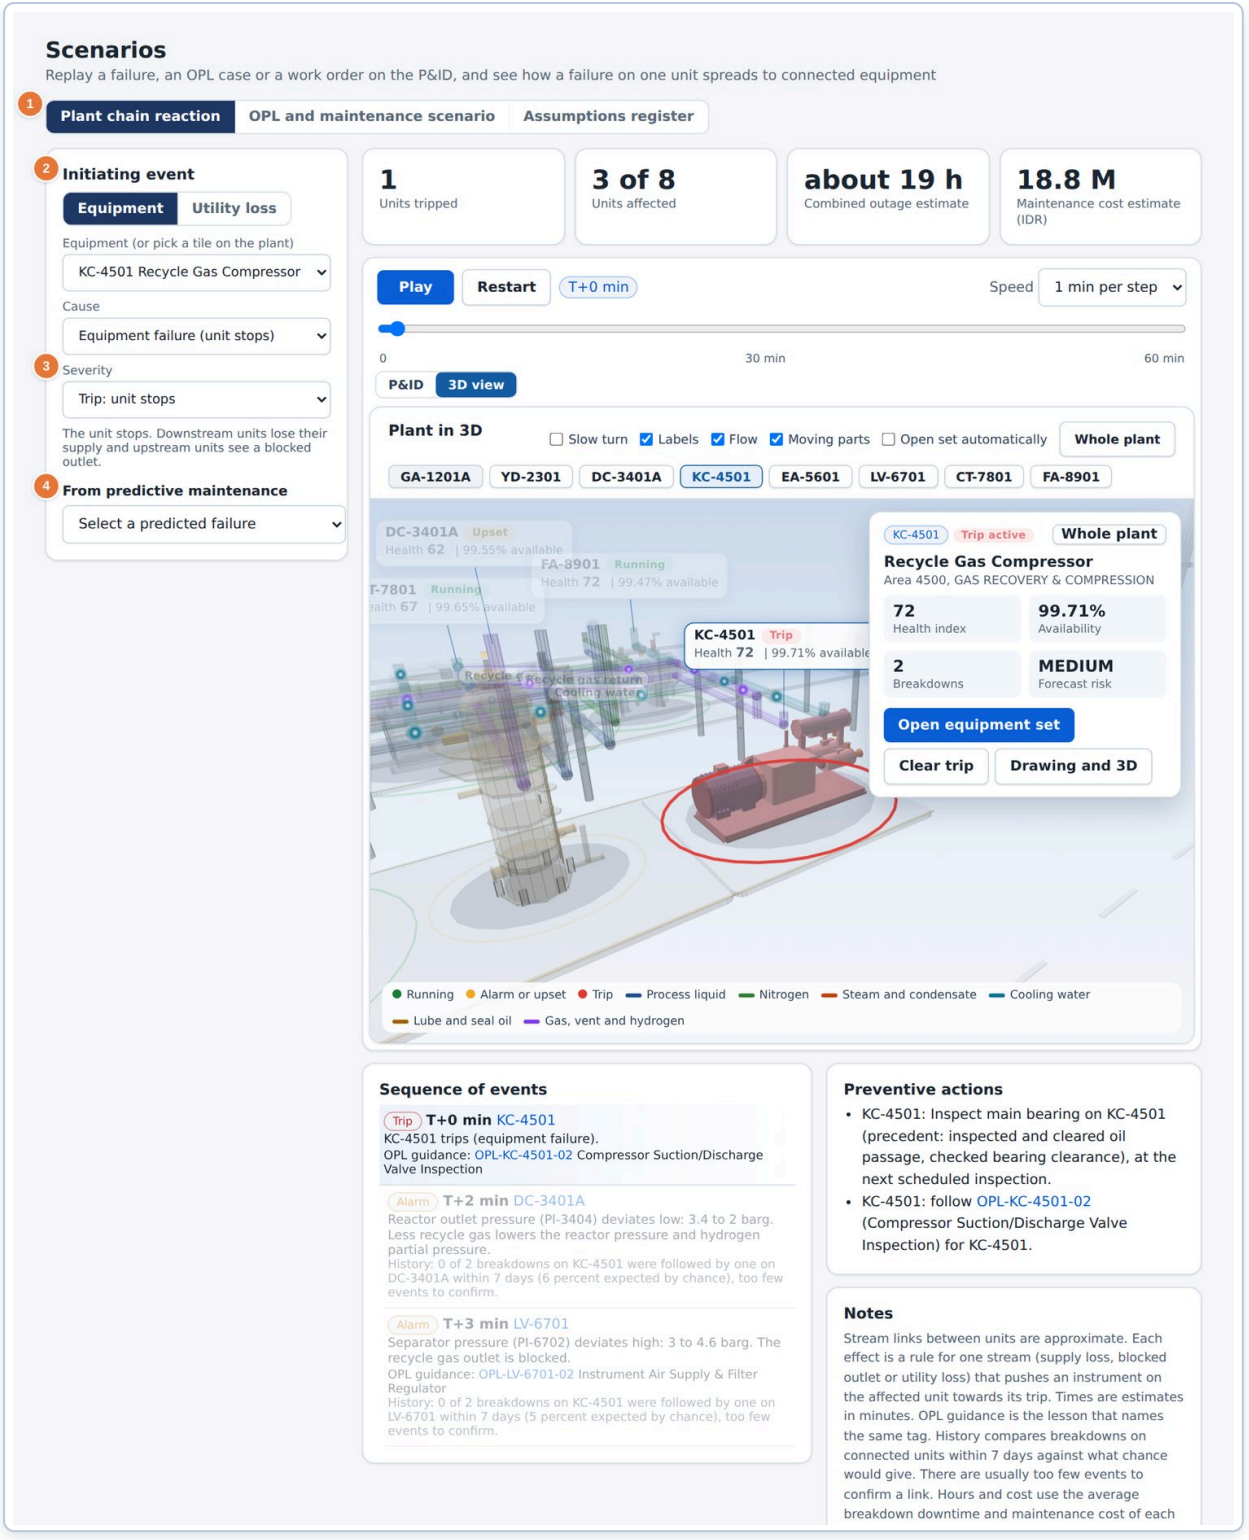

Figure 59. The Plant chain reaction tab.

1 The three tabs of the page.

Init : Equipment or utility loss.

Sev ity : a unit trip or degraded operation.

Fro : choose one of the forecast failures.

1. Choose **Equipment** or **Utility loss** as the initiating event.
2. Choose the equipment set, or select a unit tile on the plant.
3. Choose a cause. For the compressor, the list shows the trips T1 to T6 with their set points.
4. Choose the severity: **Trip: unit stops** or **Degraded: about half output, no trip**.
5. Select **Play** to watch the failure spread. Use **Speed** to set the step from one minute to sixty minutes.
6. Read the result tiles: units tripped, units affected, the combined outage estimate and the maintenance cost estimate.

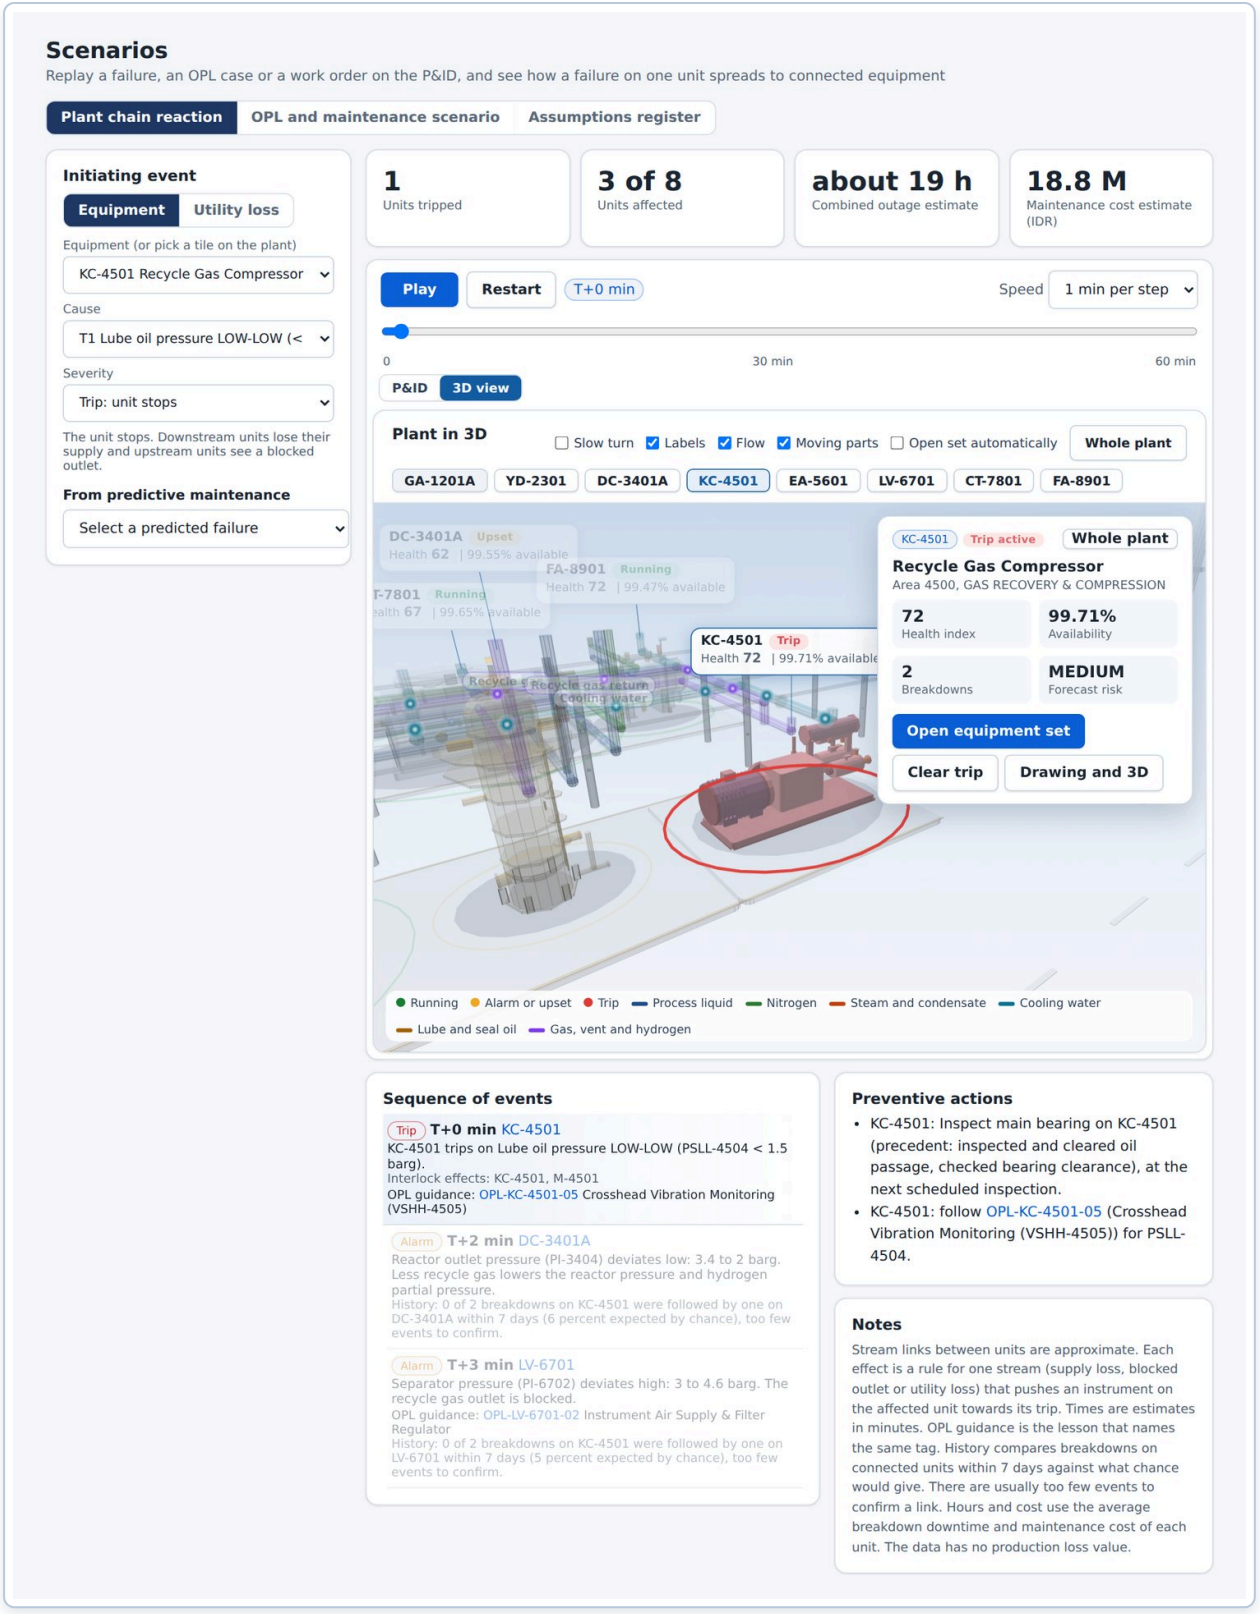

Figure 60. A chain reaction in progress.

30.2 OPL and maintenance scenario

This tab replays one case on the P&ID: a lesson scenario or a work order. The symptom, the cause and the action steps are shown beside the diagram, and the tags involved are highlighted.

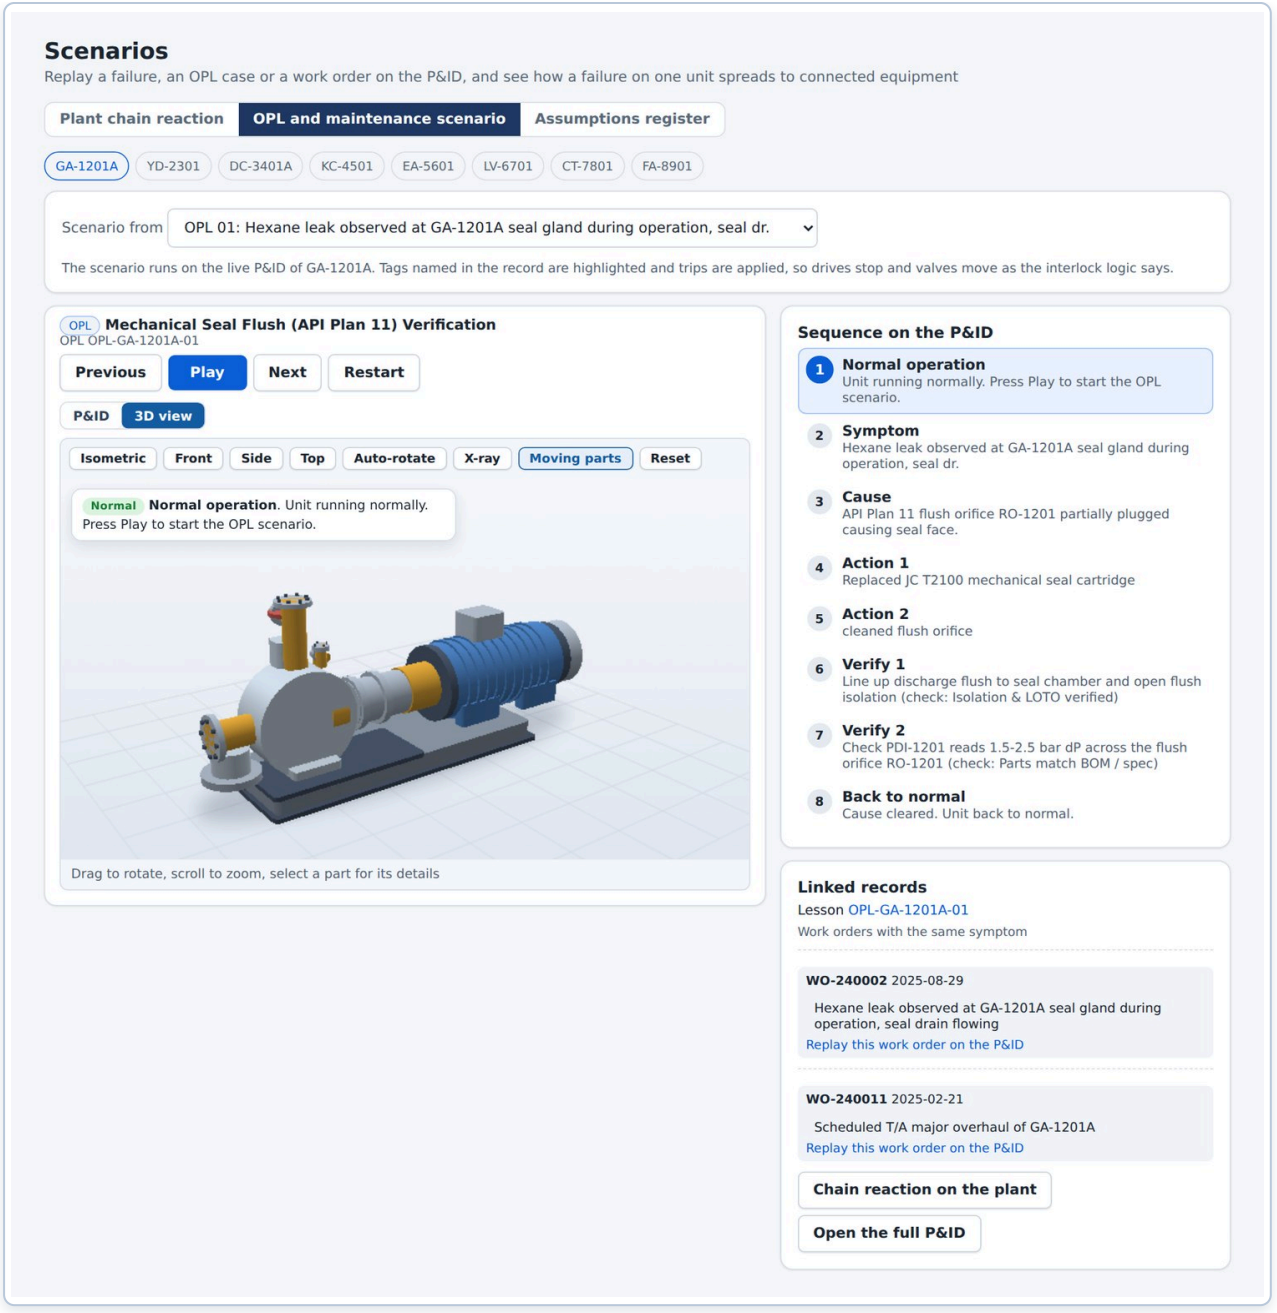

Figure 61. The OPL and maintenance scenario tab.

30.3 Assumptions register

Every number on the page rests on an assumption, such as how long a unit takes to restart or how much a day of downtime costs. The register lists each assumption with its value and its source, so that you can judge how far to trust the result.

Figure 62. The Assumptions register.

31 Plot Plan and hazard simulator

PART 5. SAFETY, LESSONS AND SCENARIOS

Used by: Operator | Engineer | Reliability | HSE | Manager

The Plot Plan shows the site layout to scale. The hazard simulator shows how a gas cloud, a fire or a blast would spread from a chosen unit, which units and routes are affected and how long it takes to reach a muster point.

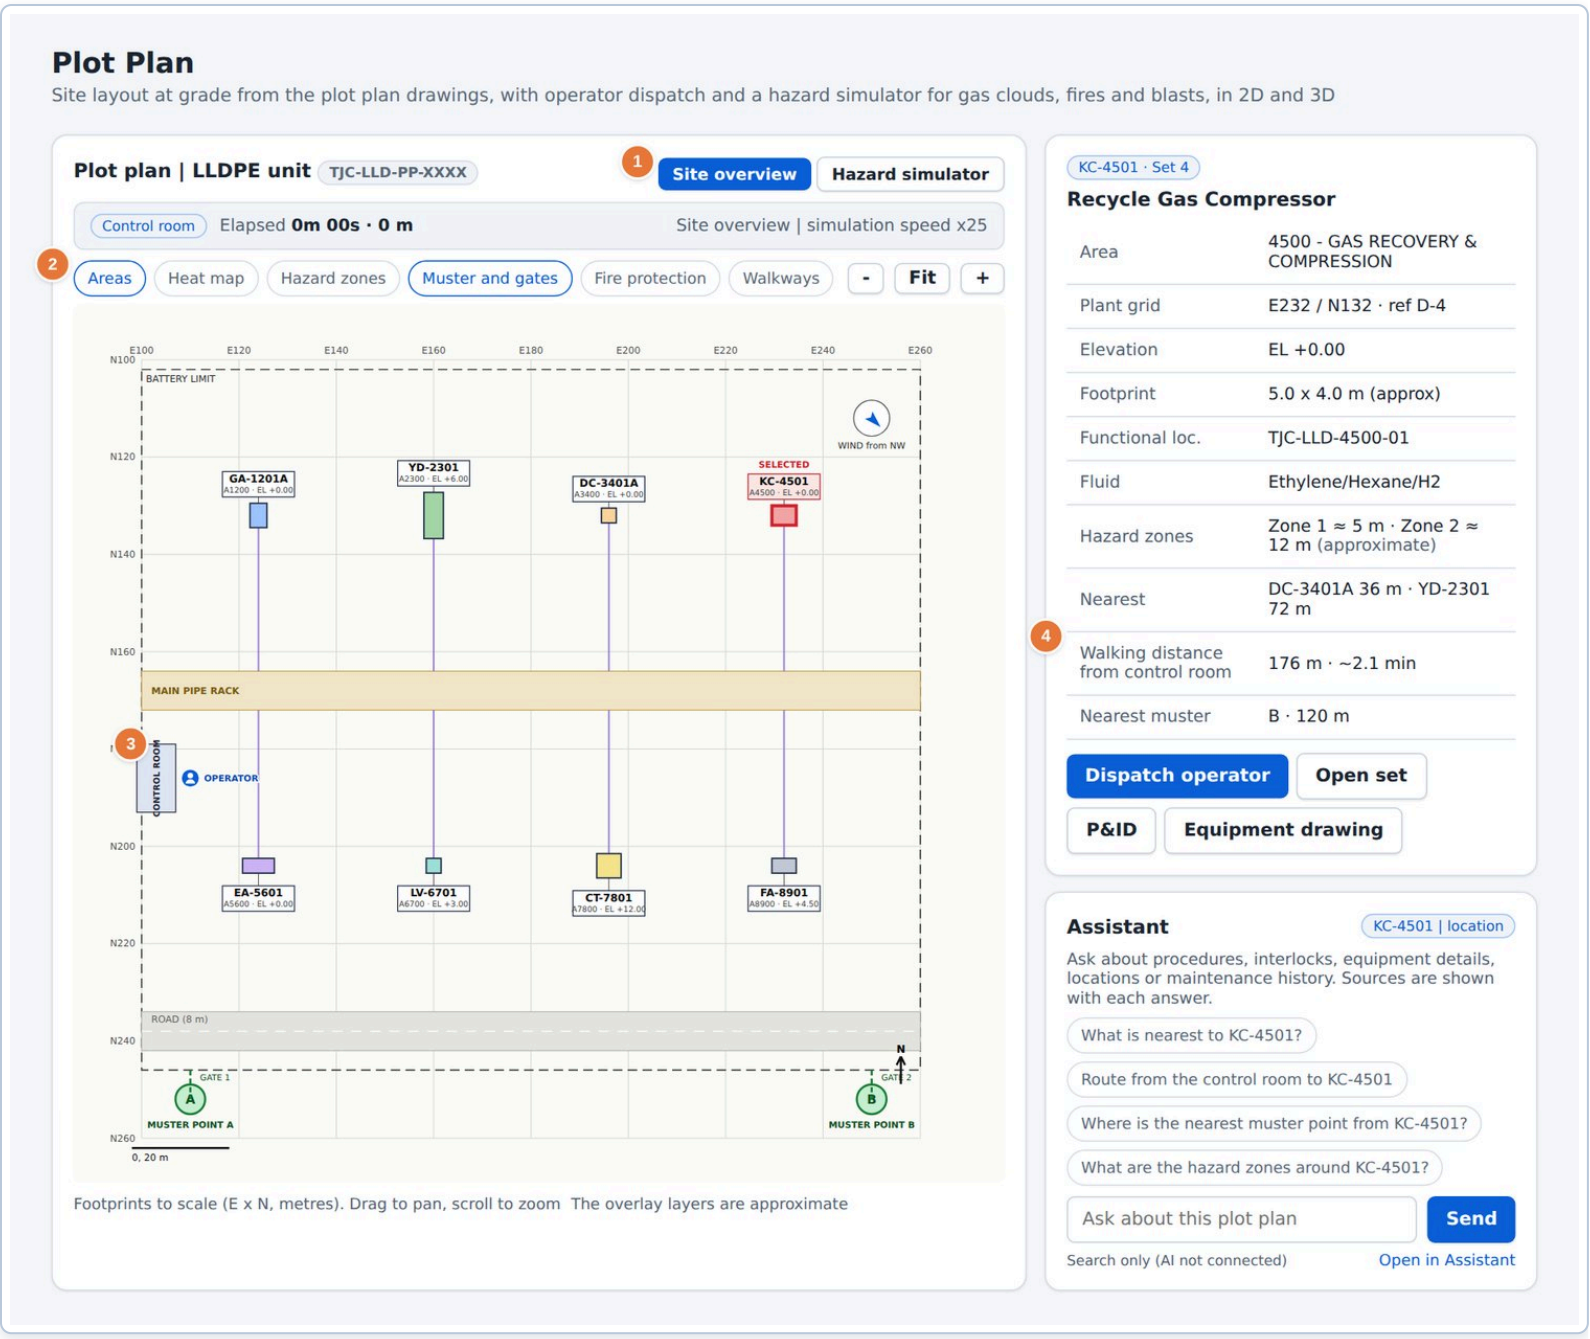

Figure 63. The Plot Plan, Site overview.

Haz Switch between and .

2 Map layers: Areas, Heat map, Hazard zones, Muster and gates, Fire protection and Walkways.

3 The control room, muster points and gates.

Rec ord by unit.

- Drag to pan and scroll to zoom. Footprints are to scale, in metres.
- Select a unit to see its location and send the operator to it. The route and the walking time are shown.
- Use **Heat map** to colour the units by the number of recorded breakdowns.

> **NOTE**
>
> Unit positions and footprints come from the plot plan drawings. The overlay layers for hazard zones, muster points, fire protection and walkways are approximate.

31.2 Hazard simulator in 2D

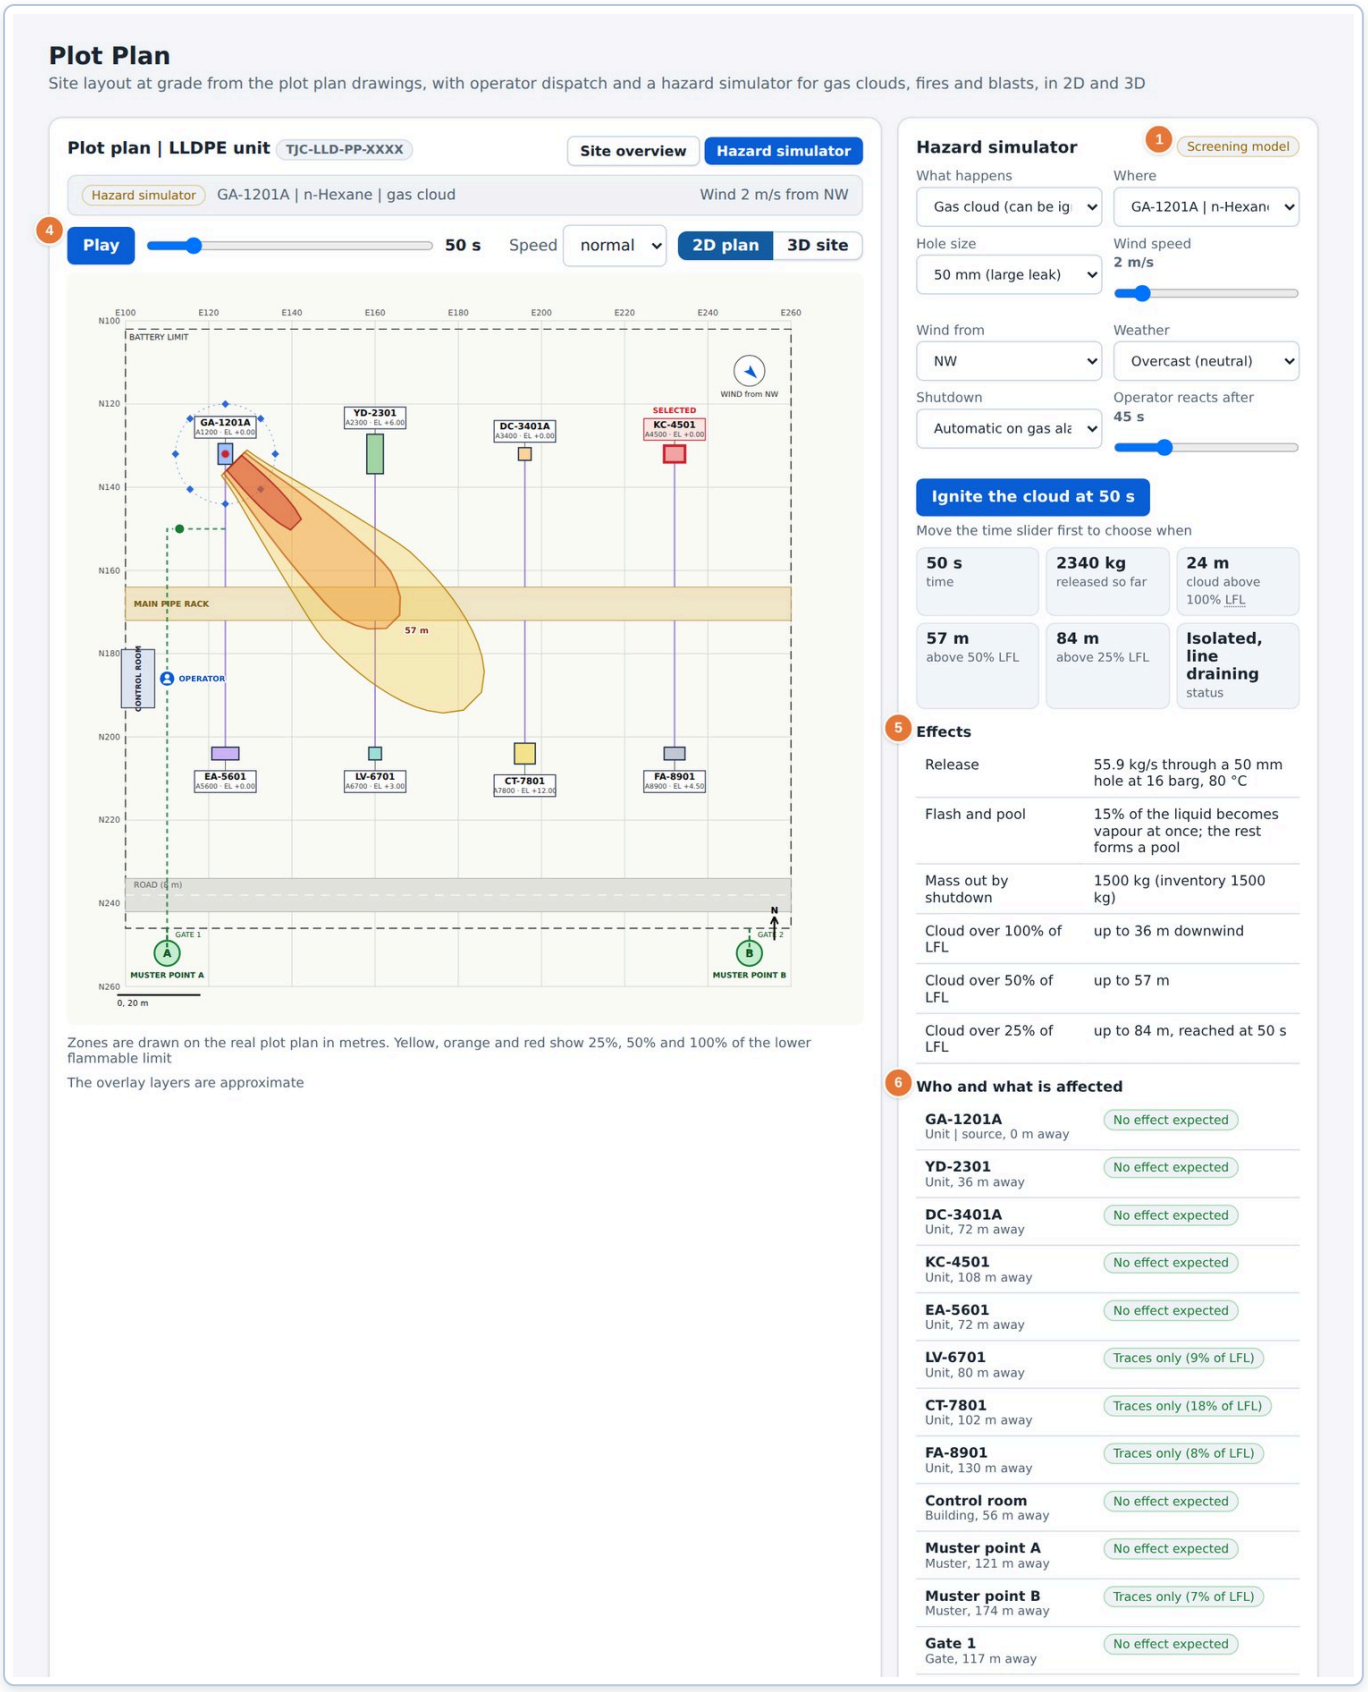

Figure 64. The hazard simulator on the 2D plan.

1 Choose the source unit, its fluid and the scenario: gas cloud, jet fire or pool fire.

5 Release figures and the cloud extent at 100, 50 and 25 percent of the lower flammable limit.

Ign , and the time slider. sets the ignition time.

Bar , and .

1. Select **Hazard simulator**.
2. Choose the source unit and the scenario.
3. Set the hole size, the wind speed, the wind direction and the weather.

4. Choose how the unit shuts down: automatic on gas alarm, manual by the operator, or fails to close. For a manual shutdown, set the operator reaction time.
5. Select **Play** or drag the time slider. The coloured zones show 25, 50 and 100 percent of the lower flammable limit (LFL).
6. Read **Who and what is affected** for the distance to each unit, building, muster point and gate.
7. Read **Walk to muster** to compare the routes. The better route is marked.

31.3 Hazard simulator in 3D

Select **3D site** to see the cloud as a volume over the plant. Rotate the view to look at the cloud from the side or from above. The same controls apply.

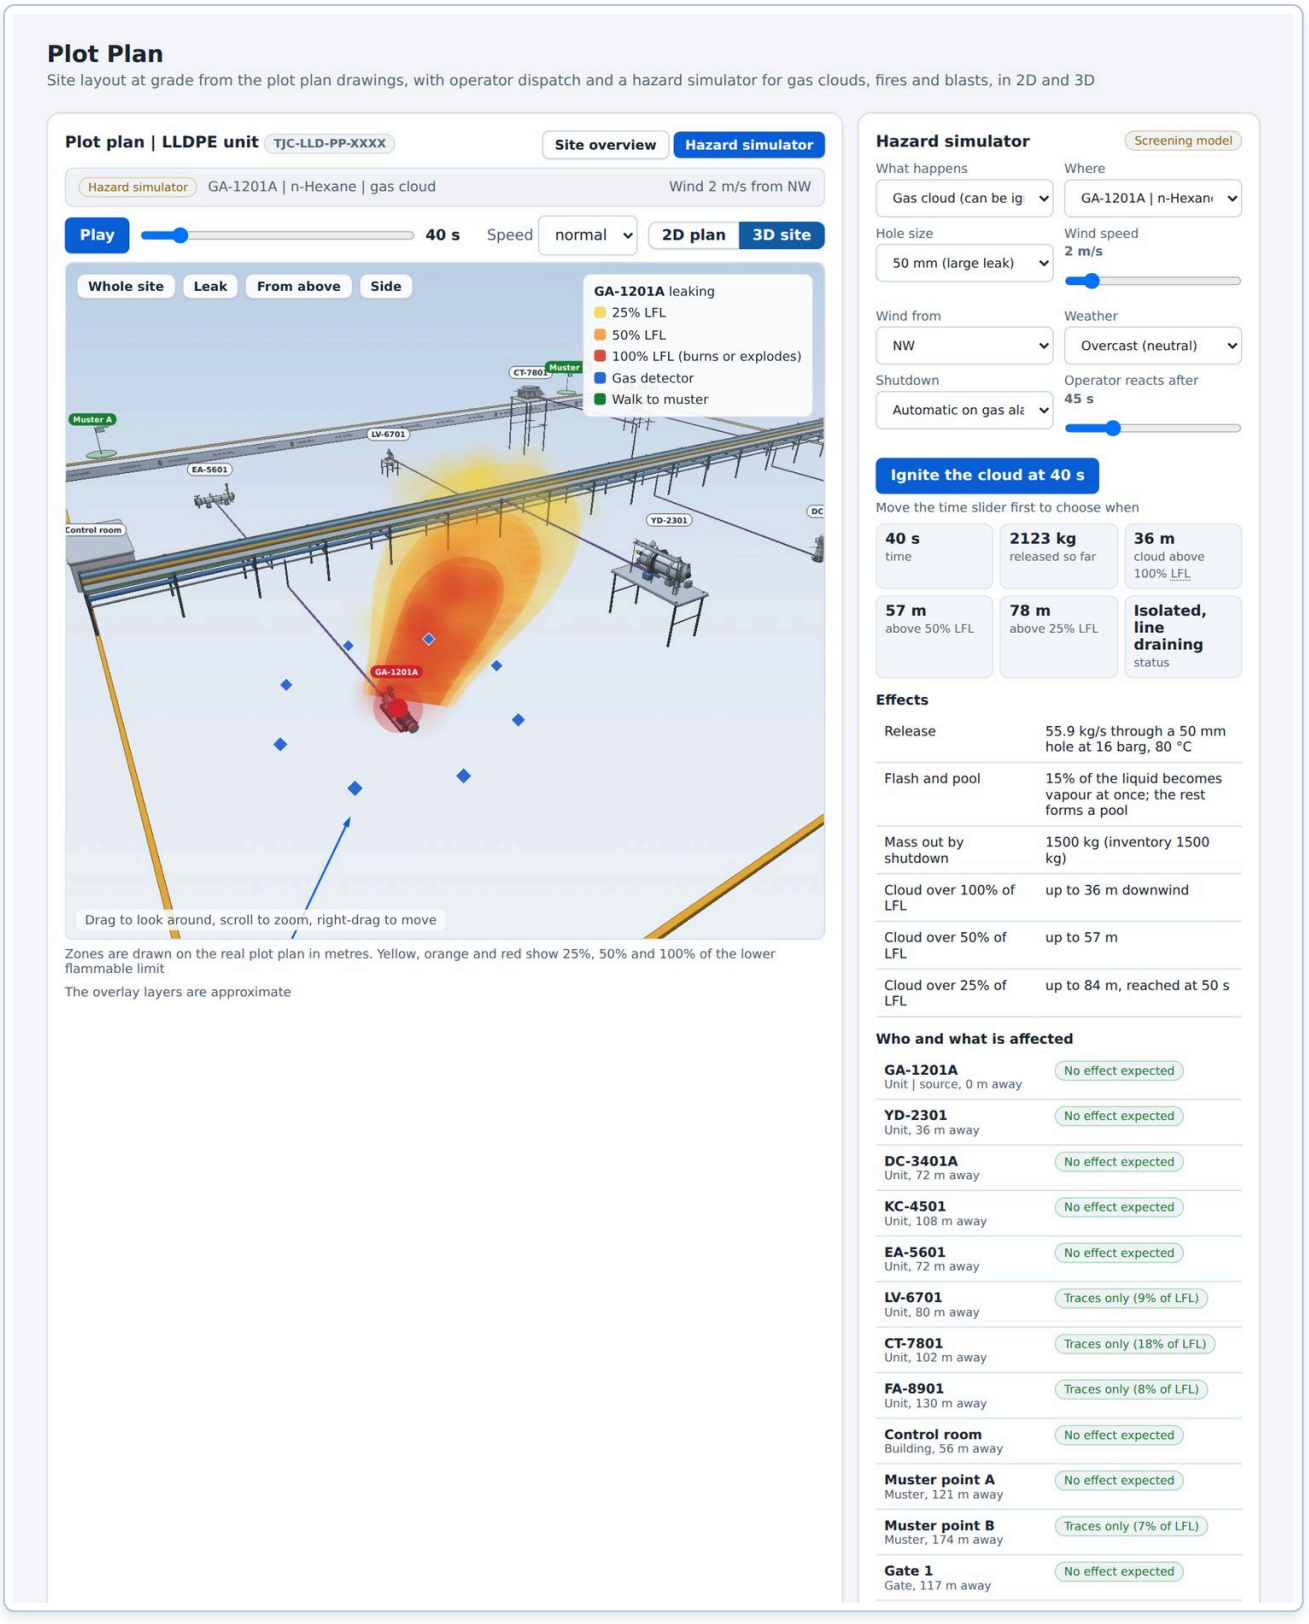

Figure 65. The hazard simulator in 3D.

CAUTION

The simulator is a screening model. It supports planning and training. It does not replace a formal consequence study.

32 AI Assistant

PART 6. KNOWLEDGE AND AI

Used by: Operator | Engineer | Reliability | HSE | Manager

The AI Assistant answers questions in plain language from the documents, the drawings, the interlock logic, the lessons and the work orders. Each answer lists its sources and their approval status.

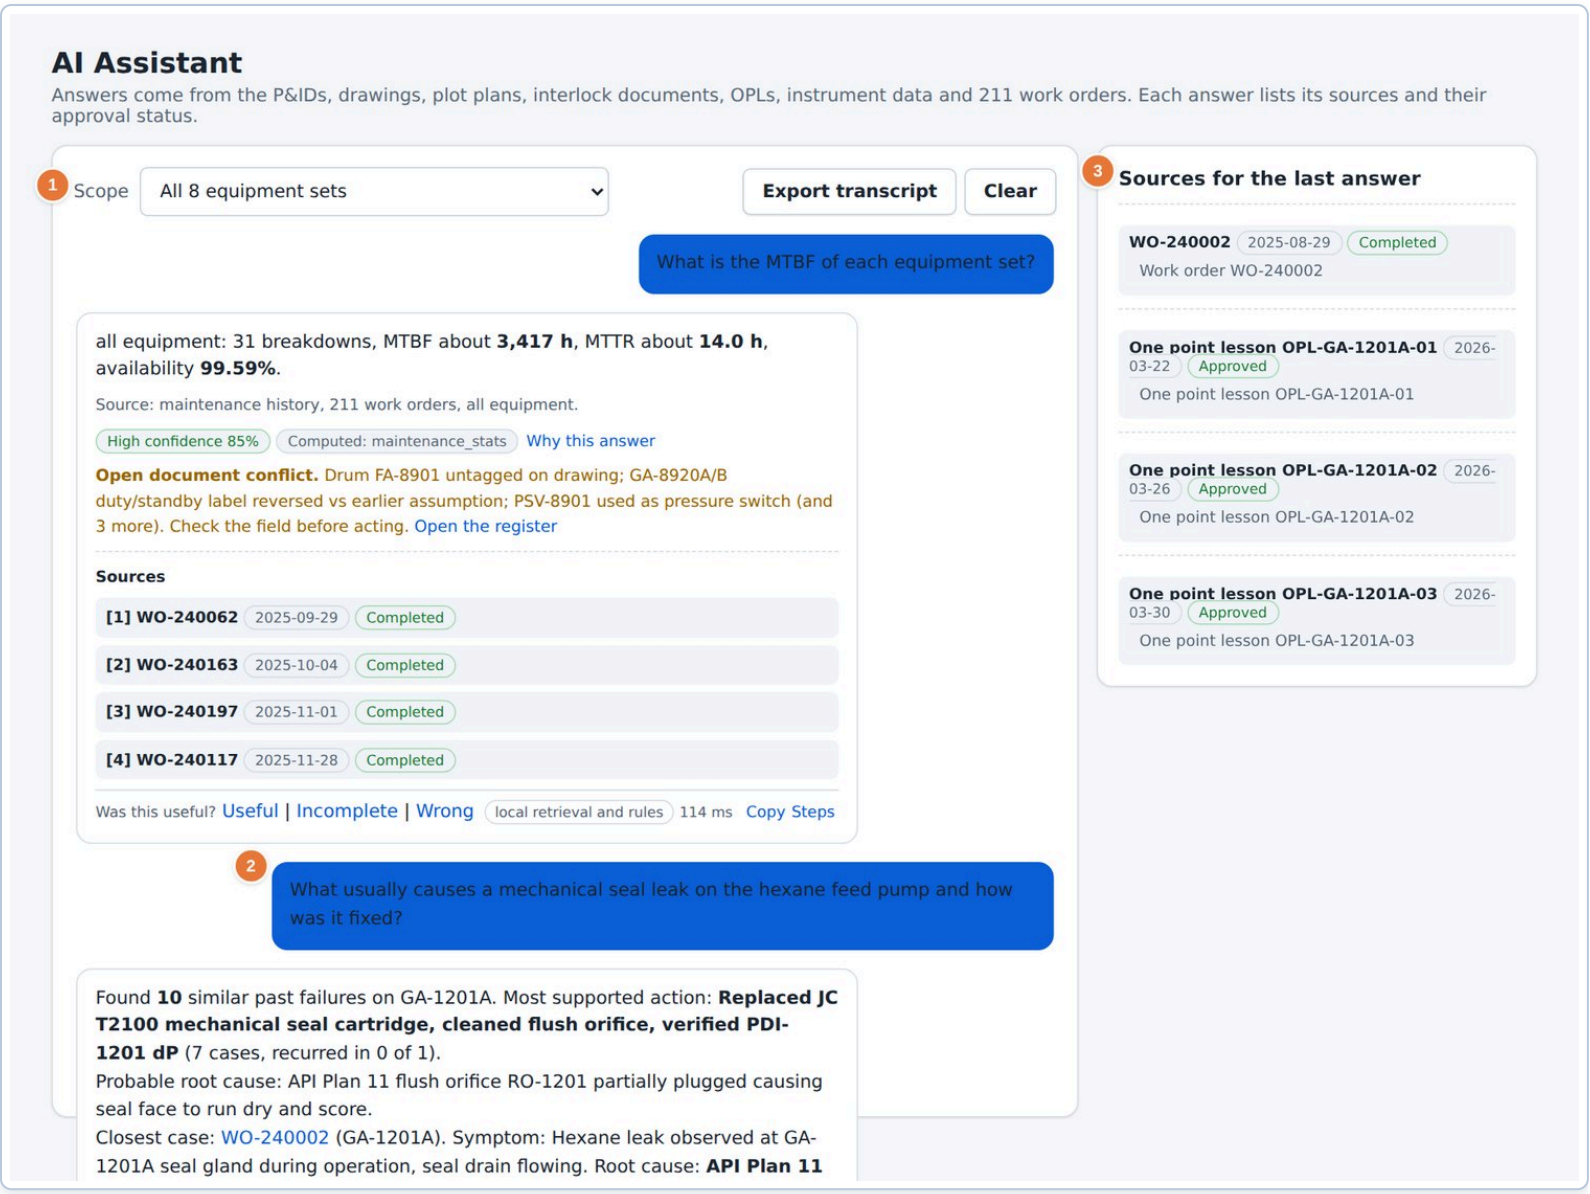

Figure 66. An answer from the AI Assistant.

Sco : all equipment sets or one set.

Sou with revision and approval status.

2 Your question and the answer, with numbered source tags.

Ser The question box and .

32.1 Asking a question

1. Open **AI Assistant** in the sidebar.
2. Choose the **Scope**. A narrower scope gives a more precise answer.
3. Type a question in the box, or select one of the example questions.
4. Select **Send**.
5. Read the answer. Each statement carries a source number. Select a number to open the source.

6 Use **Export transcript** to save the conversation, or **Clear** to start again.

32.2 What you can ask

Kind of question	Example
Procedure	How is a mechanical seal leak on the hexane feed pump resolved?
Interlock	What is the start permissive for the recycle gas compressor KC-4501?
Location	Where is the cooling tower fan CT-7801 located?
Equipment facts	What is the trip set point of the suction pressure low-low switch on the hexane feed pump?
Maintenance history	What usually causes a mechanical seal leak on the hexane feed pump and how was it fixed?
Comparison and ranking	Which equipment set has the highest failure risk now?
Calculation	What is the MTBF of each equipment?

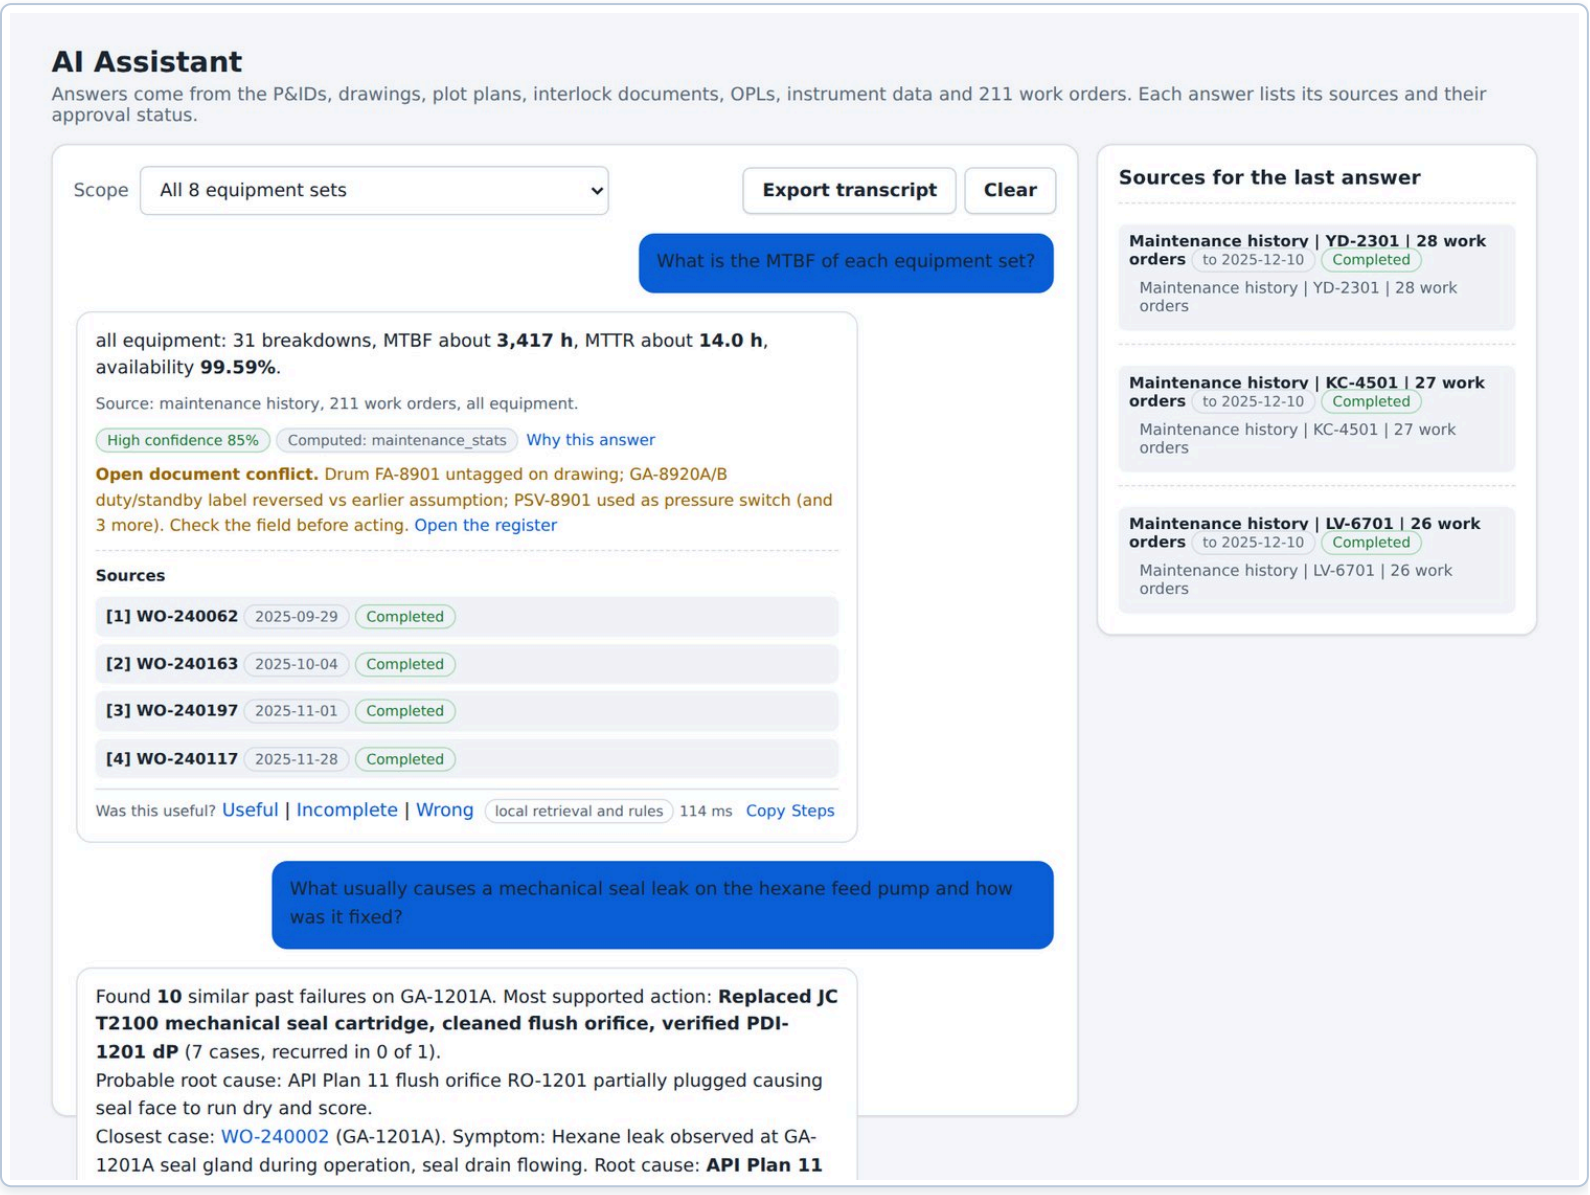

Figure 67. A ranking question. The answer is computed from the maintenance history and says so.

32.3 Why this answer

Select **Why this answer** under an answer to see how it was built: the type of question the assistant recognised, the records it retrieved, their approval status and the check of every number against the sources.

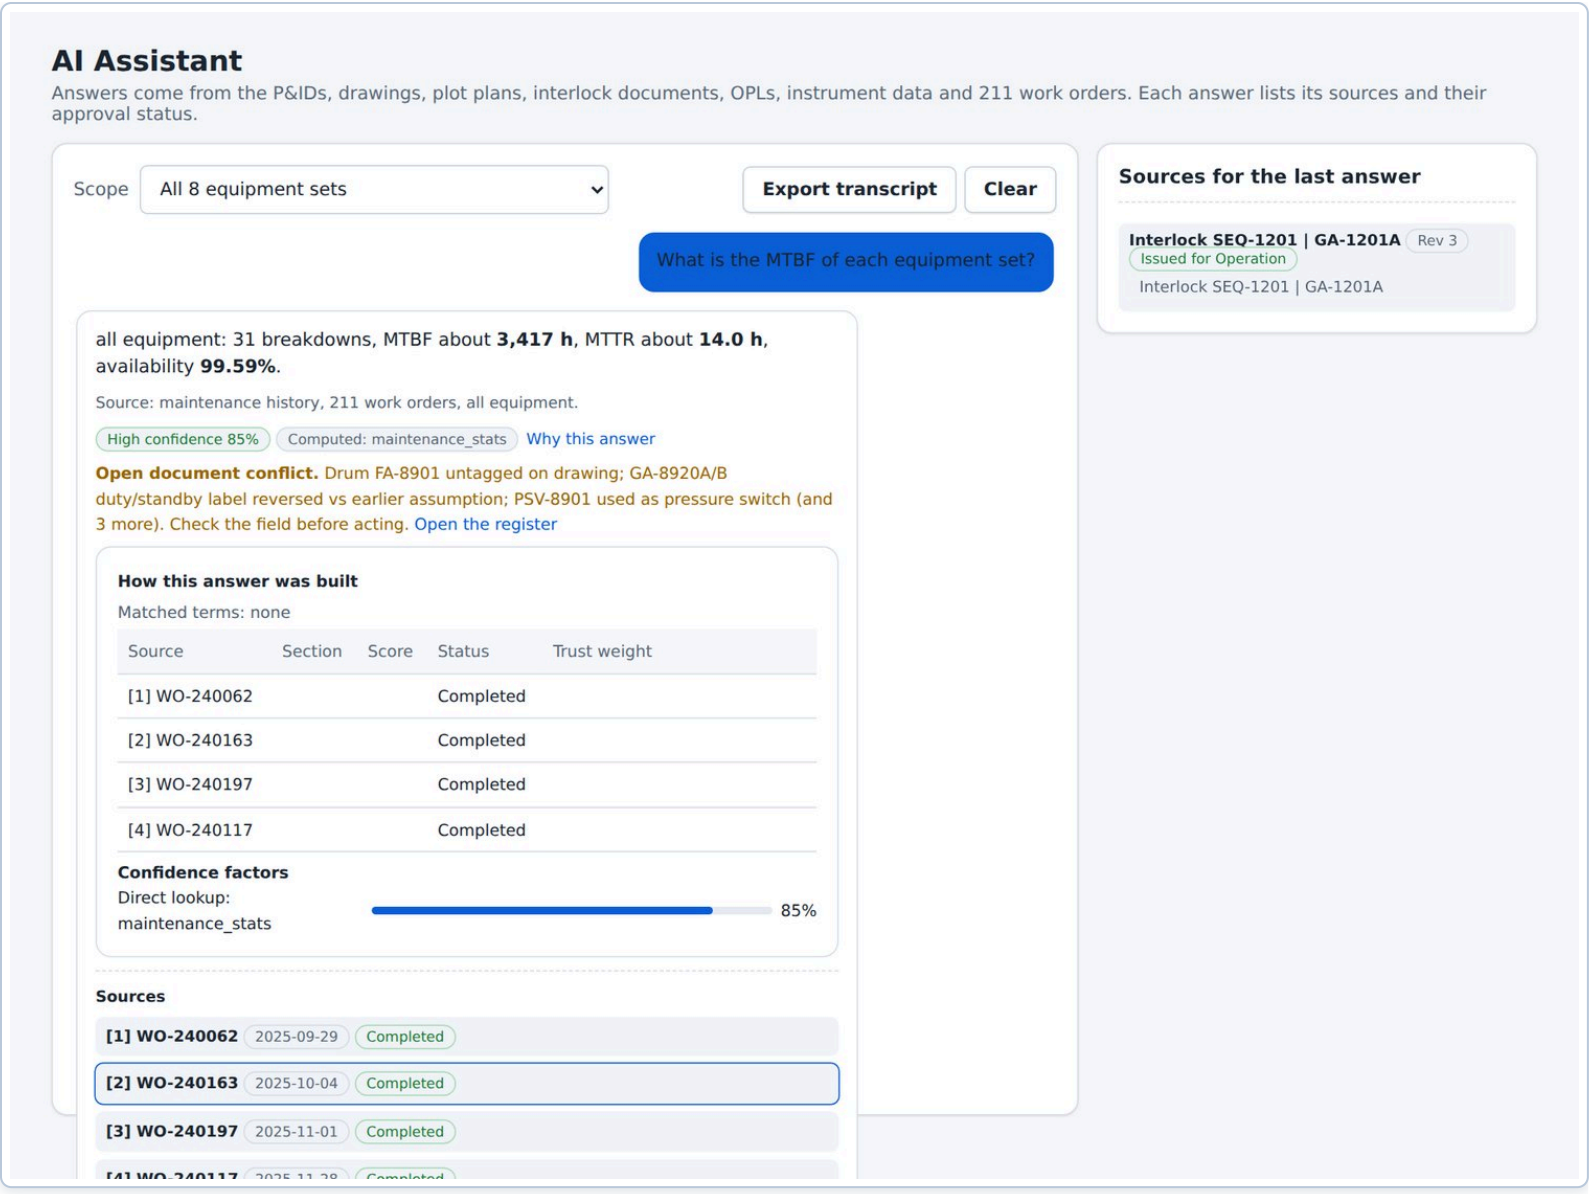

Figure 68. The Why this answer panel.

32.4 Questions the assistant will not answer

The assistant refuses requests to bypass, defeat or override a trip, an interlock, an alarm or a permissive. The refusal happens in the page, and the request is never sent to an AI service. The assistant points to the approved procedure instead.

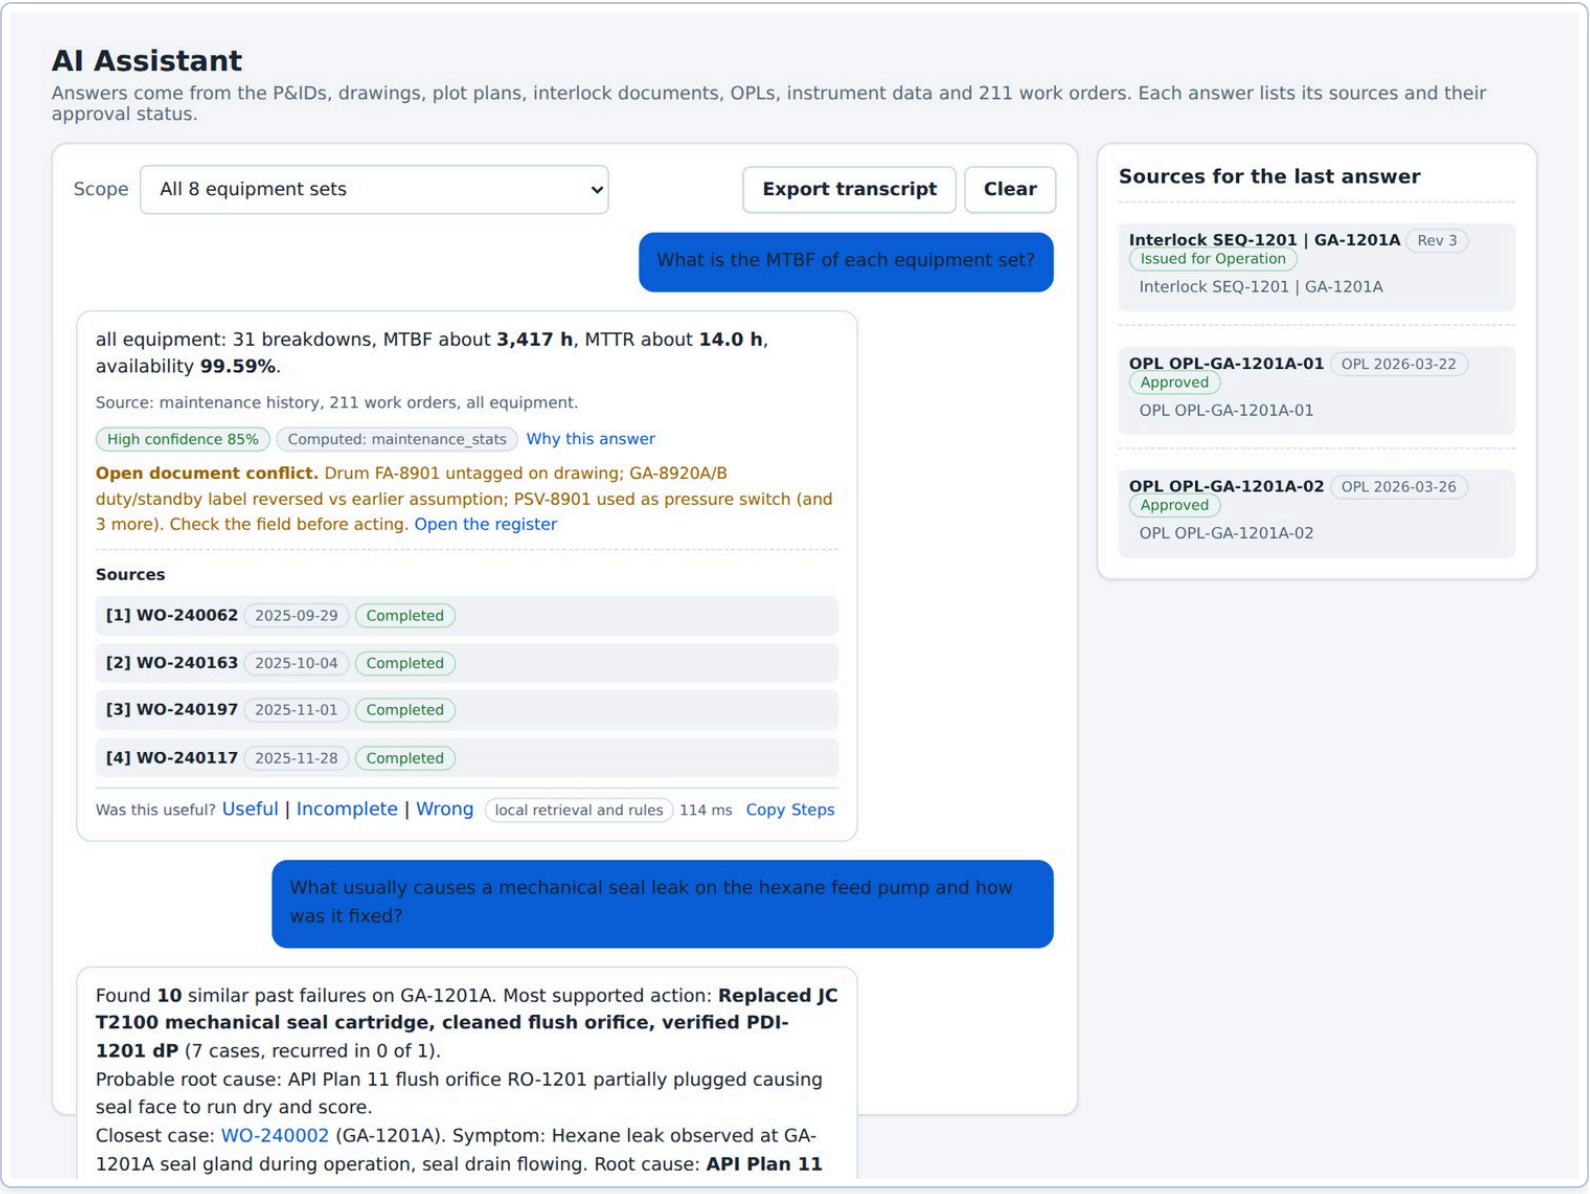

Figure 69. A request to bypass a trip is refused.

32.5 Feedback

Use the feedback links under an answer to mark it **Incomplete** or **Wrong**. The report goes to the review queue in Knowledge Studio (Chapter 34), where a person with approval rights can correct the knowledge.

33 How answers are produced

PART 6. KNOWLEDGE AND AI

Used by: **Operator** **Engineer** **Reliability** **HSE** **Manager**

> This chapter explains what happens between a question and an answer, so that you know how far to trust it.

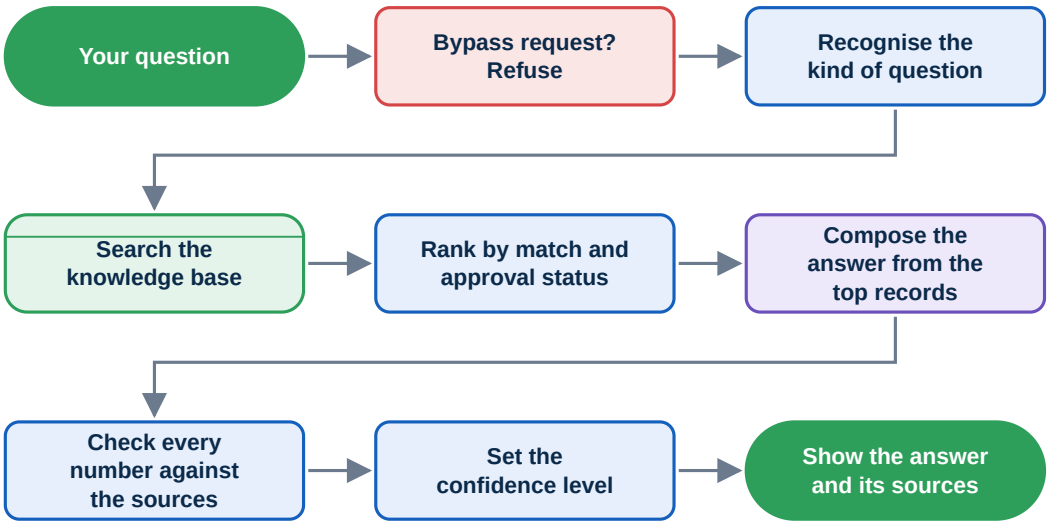

Figure 70. The path from question to answer.

1. **Safety check.** A request to bypass a protective function is refused at once.
2. **Recognition.** The assistant decides whether the question is about a procedure, an interlock, a location, a number, a history or a ranking.
3. **Search.** The knowledge base is searched by keyword and by meaning. Typed facts and computed figures, such as MTBF, are read directly from the data.
4. **Ranking.** Records are ranked by how well they match and by their approval status.
5. **Composition.** The answer is written from the top records. When an administrator has connected an AI service, it words the answer from those records. Otherwise a built-in method writes it.
6. **Verification.** Every number in the answer is compared with the sources. A statement without support is stated as a gap.
7. **Delivery.** The answer is shown with numbered sources, their revision and status, and a confidence level.

33.1 How approval status affects ranking

Status	Weight in the ranking
Approved	1.0
Not stated	0.8
In review	0.7
Draft	0.55
Superseded	0.35
Rejected	Left out

ROLES

Operators see only approved items in the typed facts. Engineers, Reliability, HSE and Managers can also see items that are in review.

CAUTION

A low confidence level, or a statement that the data has a gap, is a result. Check the source document or ask a colleague before you act.

34 Knowledge Studio

PART 6. KNOWLEDGE AND AI

Used by: Operator | Engineer | Reliability | HSE | Manager

Knowledge Studio is where plant knowledge is added, reviewed and approved. Approved items are searchable at once, and the assistant cites them with their revision and status.

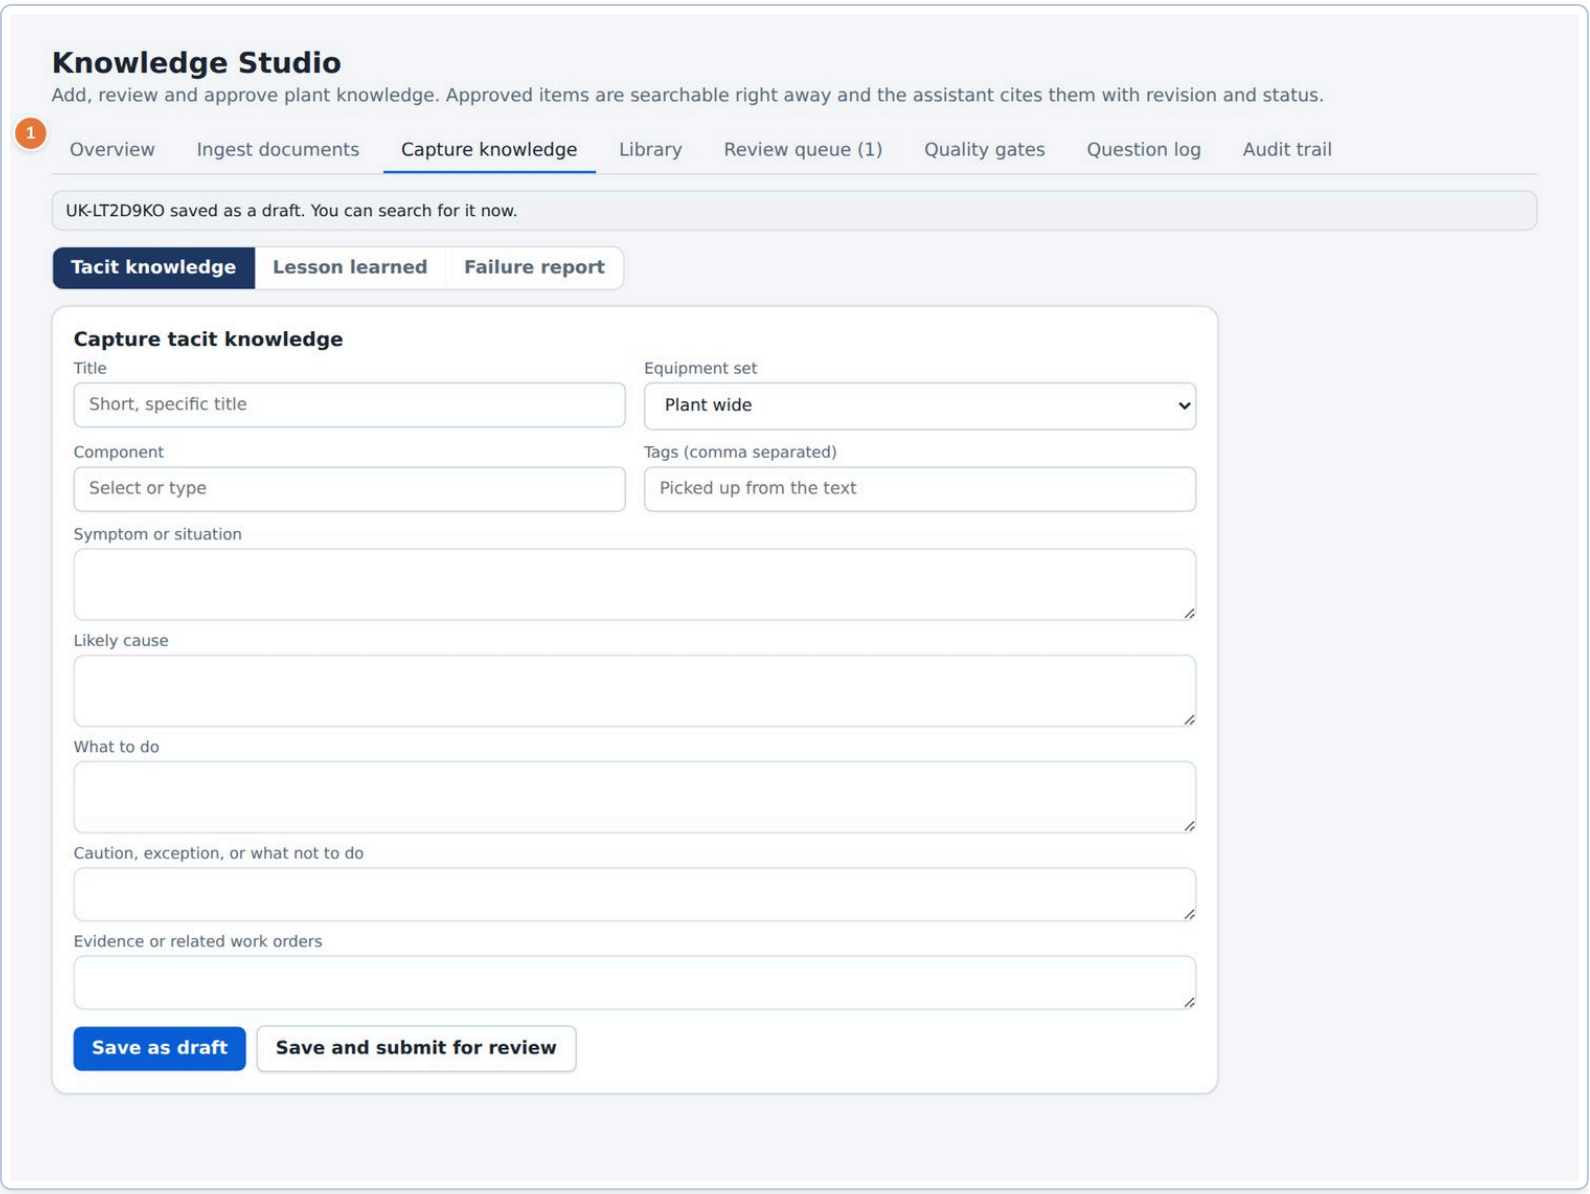

Figure 71. Knowledge Studio, Overview tab.

1 The eight tabs.

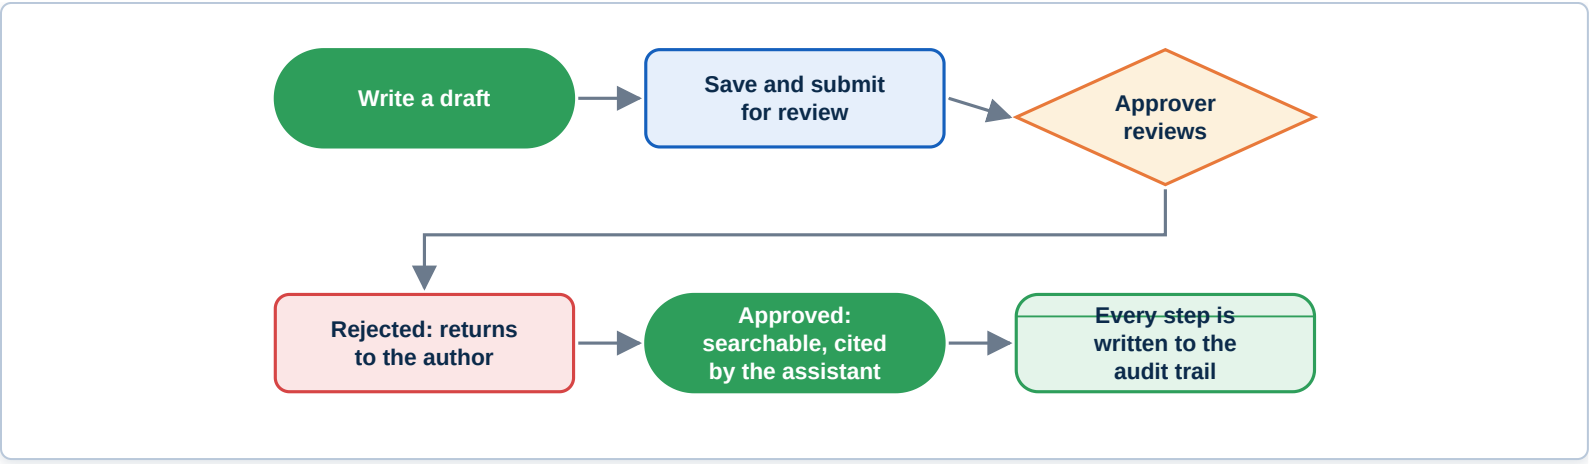

Figure 72. The approval workflow.

34.1 Ingest documents

The ingestion wizard turns a file or pasted text into searchable knowledge in six steps: **Source**, **Kind**, **Structure**, **Details**, **Checks** and **Create**.

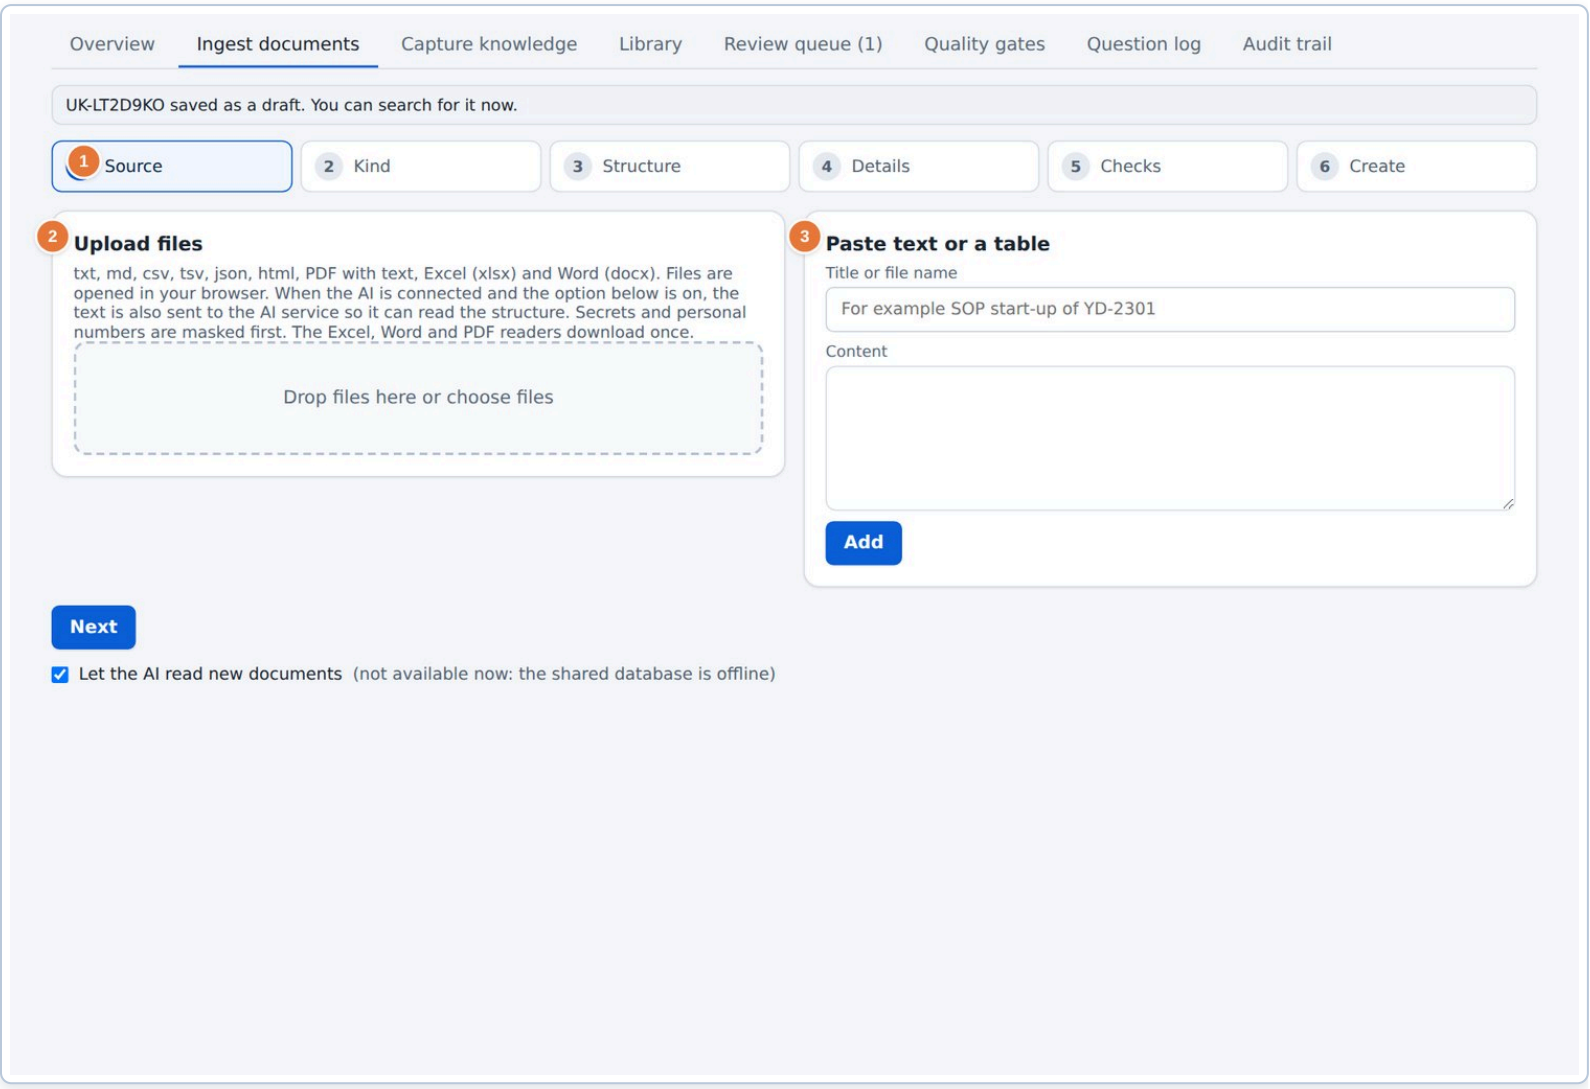

Figure 73. The ingestion wizard, first step.

1. The six steps of the wizard.
2. Choose files, or drop them on the box. The wizard reads text, CSV, JSON, HTML, PDF with a text layer, Excel and Word files.
3. Or paste text or a table, with a title.

1. Add the file or paste the text, then select **Next**.
2. Choose the kind of document: for example an SOP, a datasheet, a P&ID, an interlock sheet, a maintenance log, an instrument list, an OPL, an incident report or notes.

3. Check the structure the wizard found: headings, steps, tables and tags.
4. Confirm the details: title, equipment set, revision and date.
5. Read the checks. They flag missing tags, an unknown equipment set and duplicate content.
6. Select **Create**. The item is saved as a draft and appears in the Library.

> **TIP**
> Secrets and personal numbers are masked before any text is sent to an AI service.

34.2 Capture knowledge

Three forms record what people know. **Tacit knowledge** records an expert's symptom, cause, action and caution for an asset. **Lesson learned** records what changed after an incident. **Failure report** goes into the failure memory and can also create a work order.

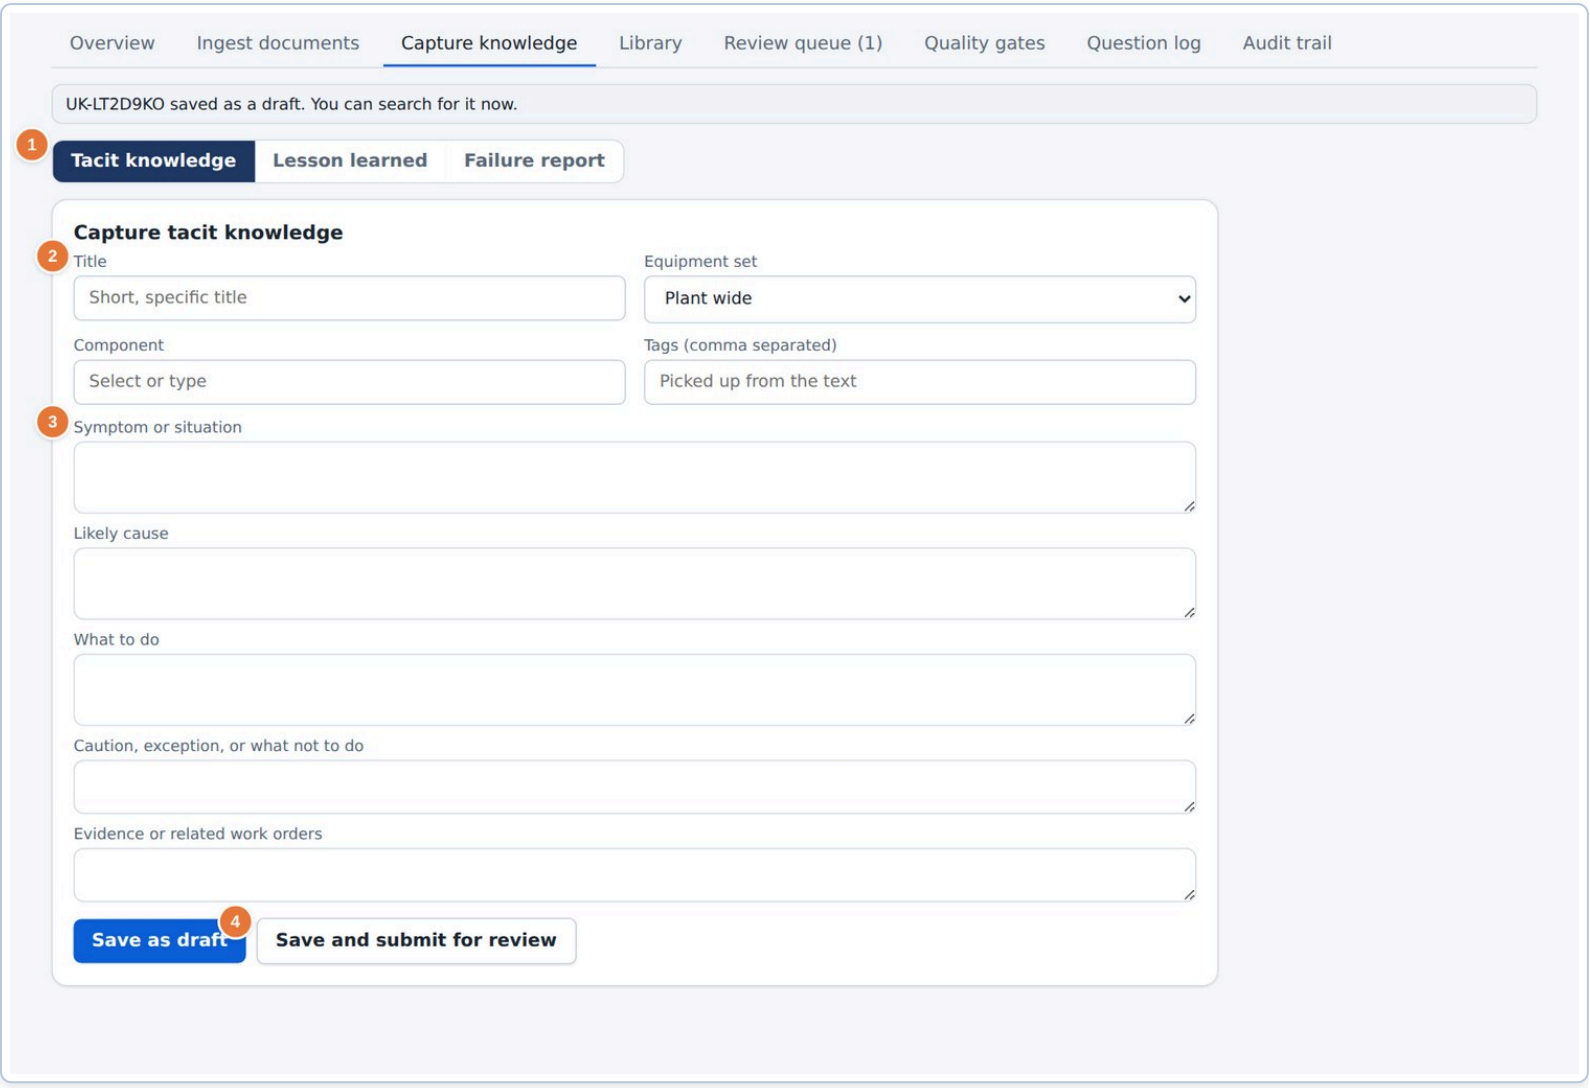

Figure 74. The tacit knowledge form.

1. Choose the type of record.
2. Title, equipment set, component and tags.
3. Symptom, likely cause, action and caution.
4. or .

34.3 Library

The Library lists every item added by users with its identifier, title, type, asset, revision, status, author and date. Use the filter box to find an item. Select an item to read it. The buttons on each row depend on the status: **Submit** for a draft, **Approve** and **Reject** for an item in review, **Withdraw** for an approved item and **Reopen as draft** for a rejected or withdrawn one. Drafts can also be edited or deleted.

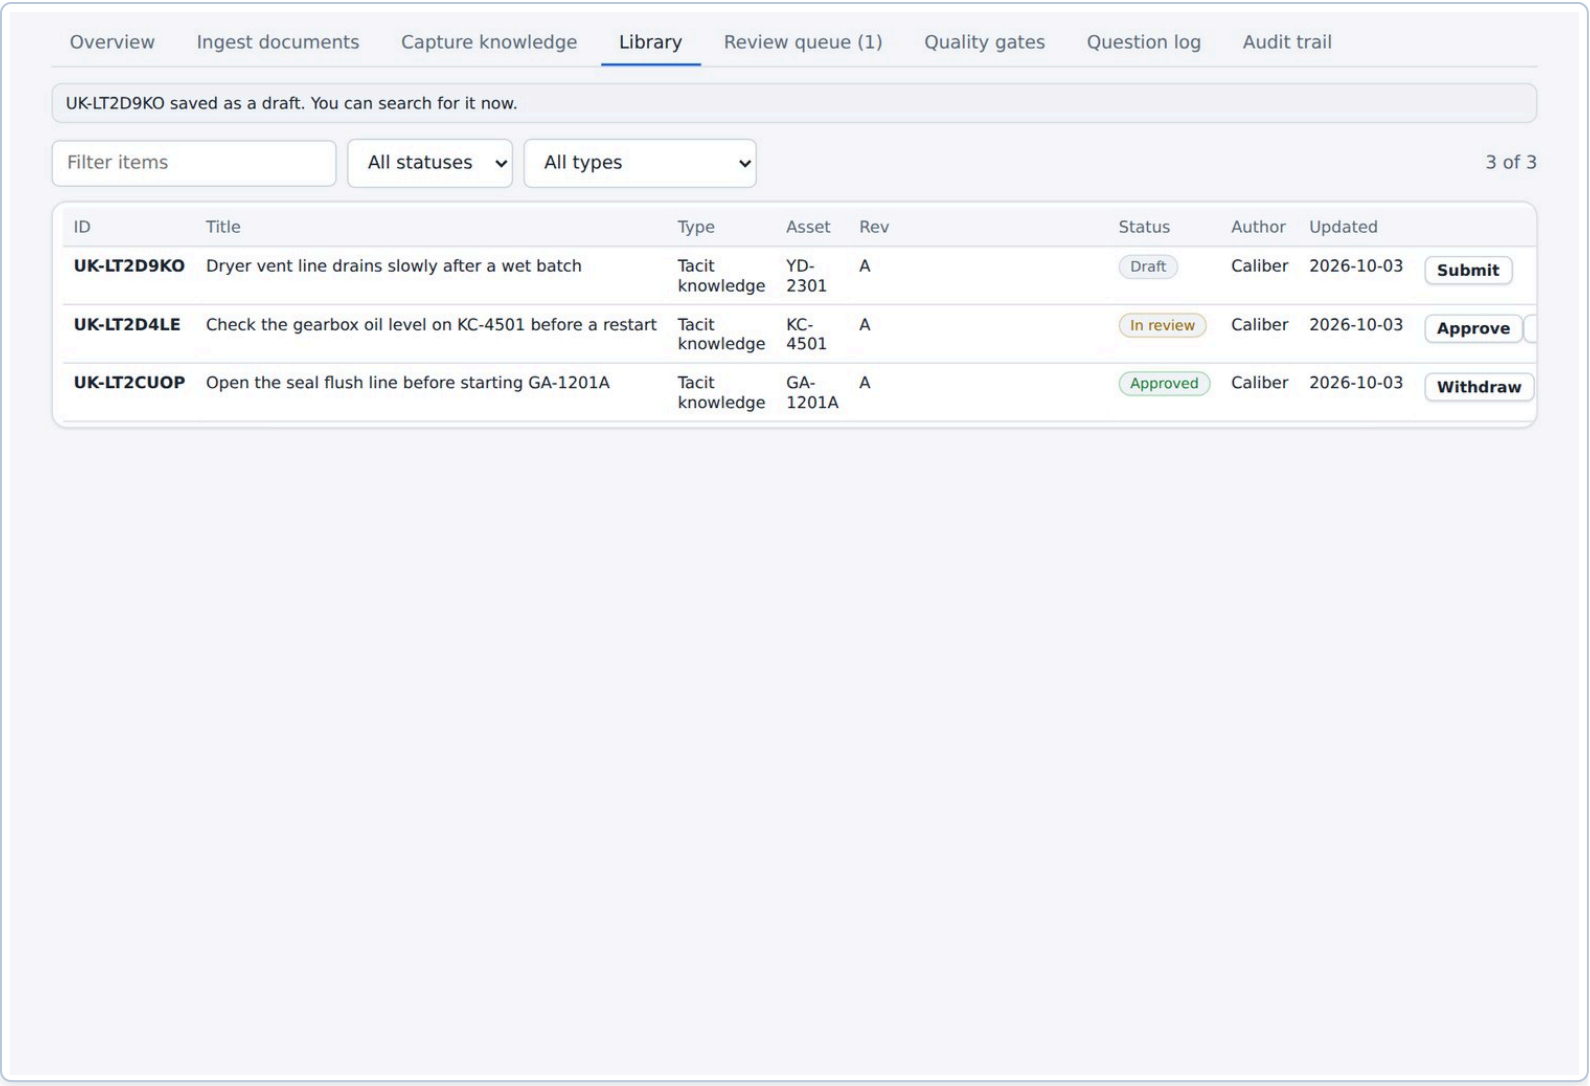

Figure 75. The Library.

34.4 Review queue

The Review queue lists the items waiting for approval and the answer feedback reported by users. Operators can draft and submit. Engineers, Reliability, HSE and Managers can approve. Nobody approves their own item except a Manager.

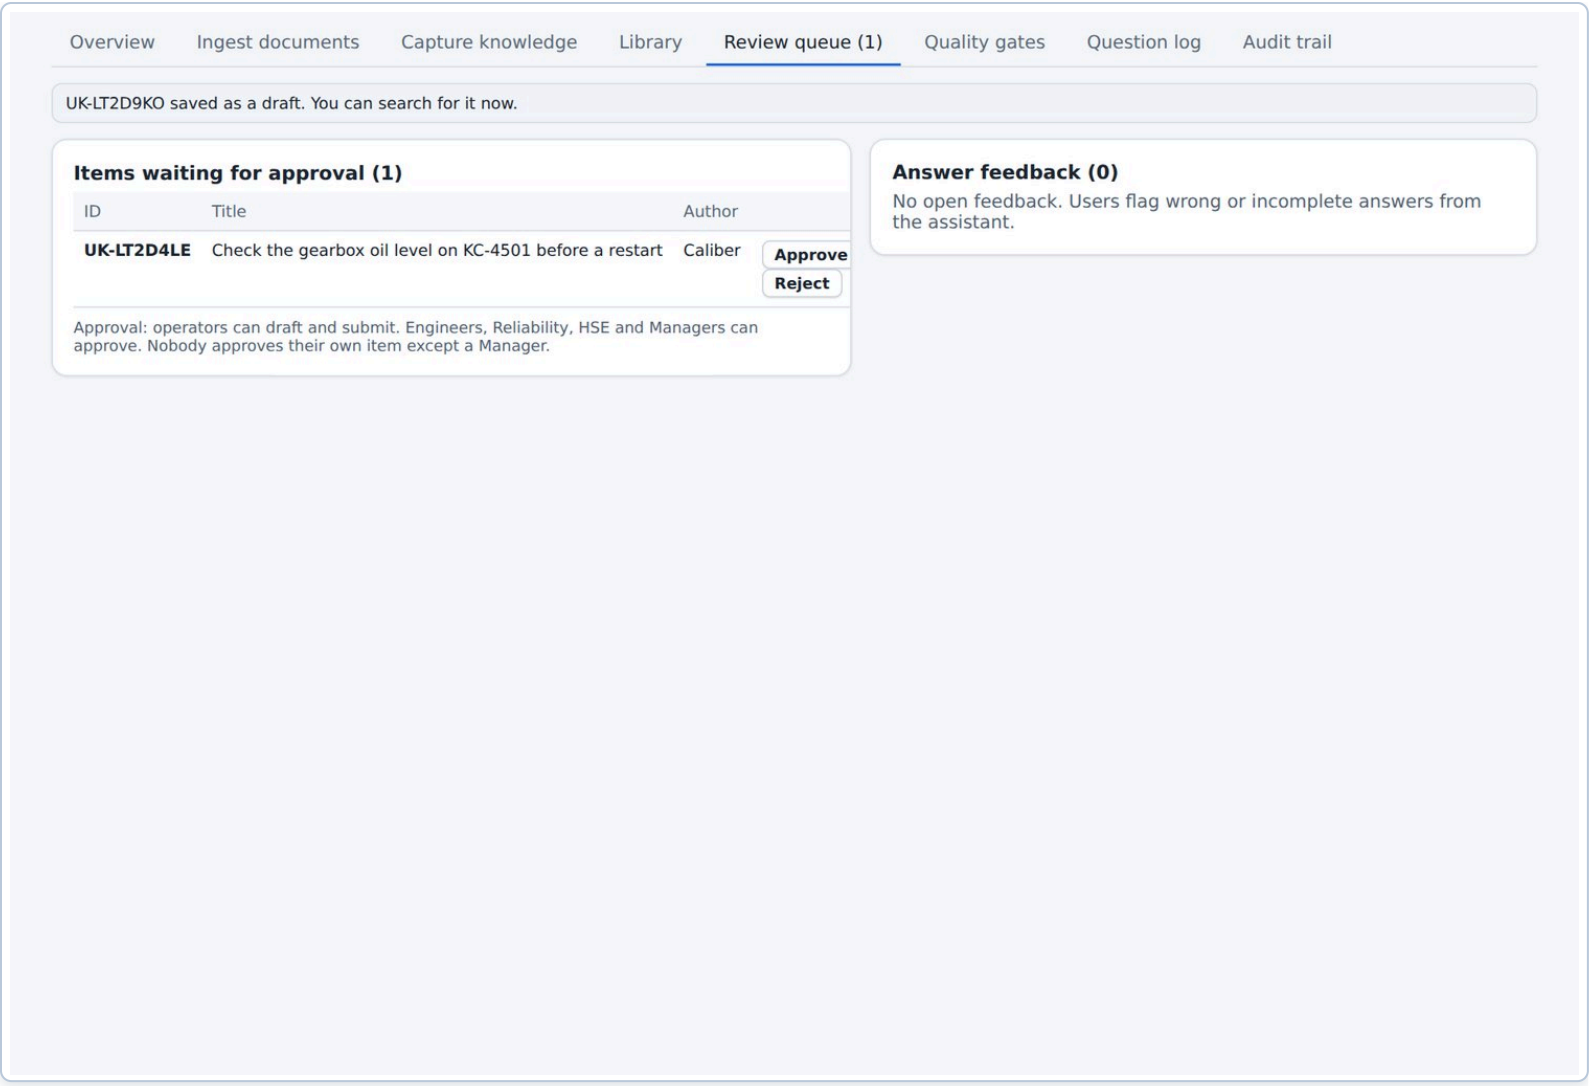

Figure 76. The Review queue.

1. Open the item from the queue and read it.
2. Check the equipment set, the facts and the caution.
3. Select **Approve** to publish the item, or **Reject** and give a reason. The reason goes into the history.
4. For answer feedback, select **Create knowledge item** to start a correction, or **Mark reviewed** if no change is needed.

34.5 Quality gates

The Quality gates tab runs checks on the knowledge base: drafts older than 14 days, items in review longer than 7 days, items without a linked asset or tags, approved items that cannot be found by their own title and open answer feedback. Each check shows a result and a pass or fail status. A second table shows the baseline data quality of the source documents.

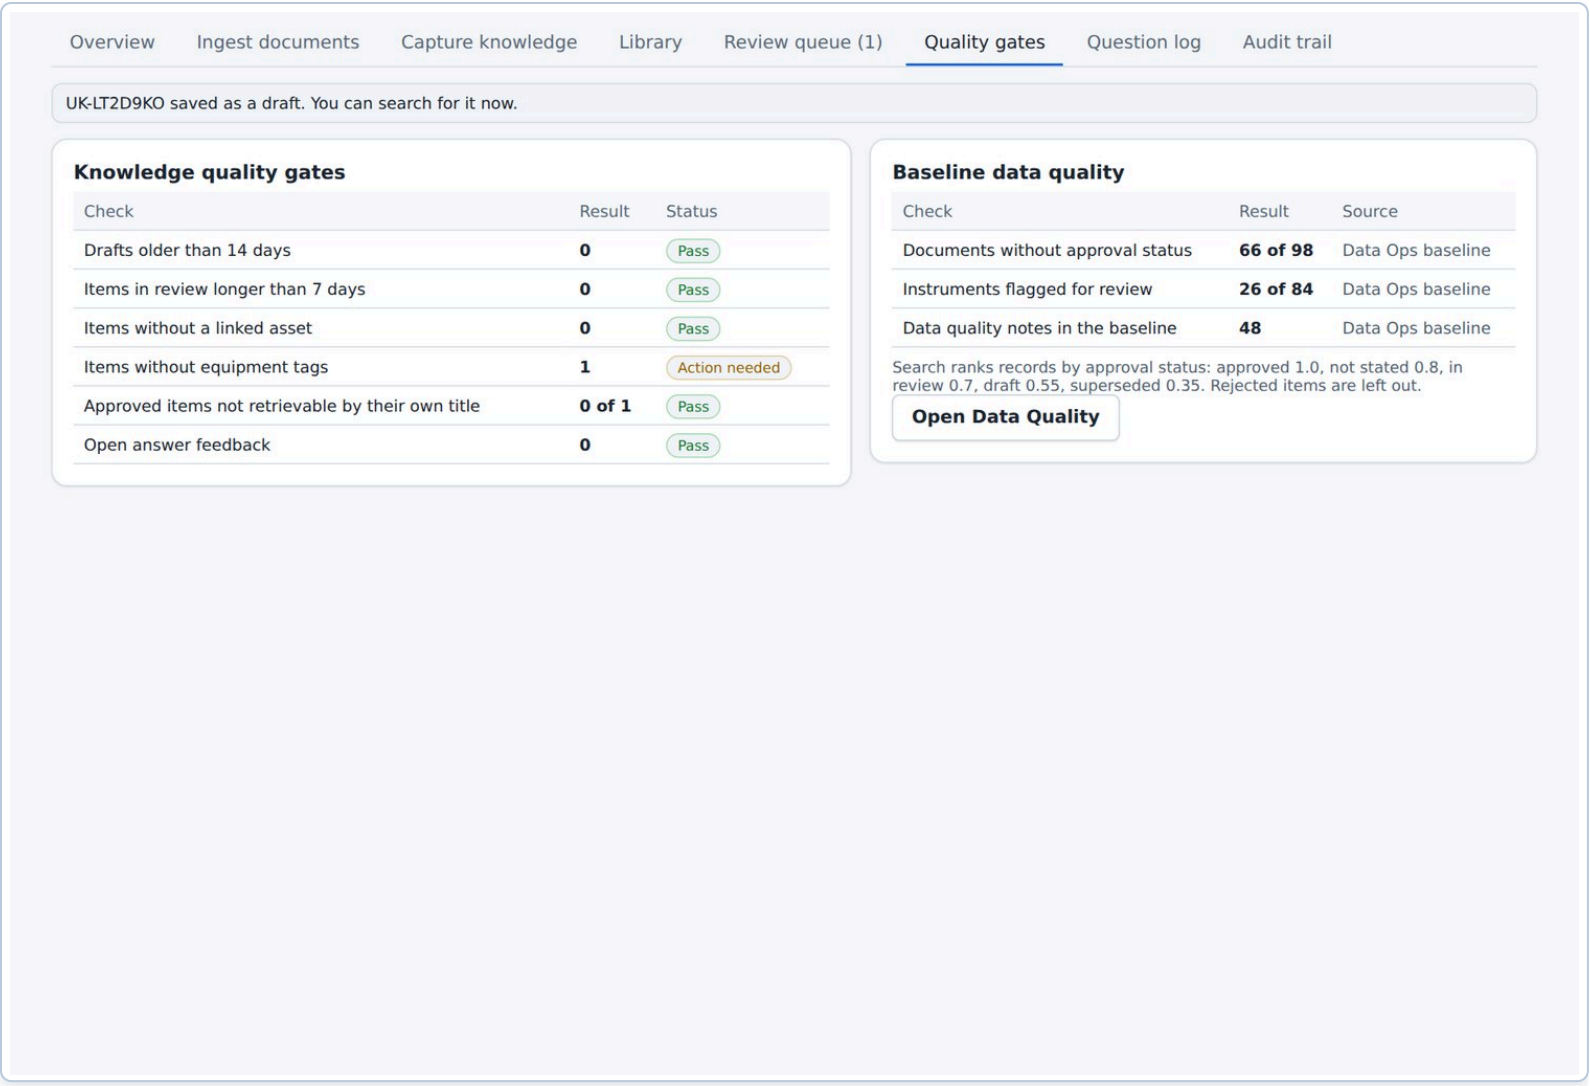

Figure 77. Quality gates.

34.6 Question log

The Question log lists the questions asked of the assistant, with the role of the person, the handler, the confidence, the response time, the number of sources cited and the feedback. The last 500 are kept in the browser. Use **Export JSONL** or **Export CSV** to save them.

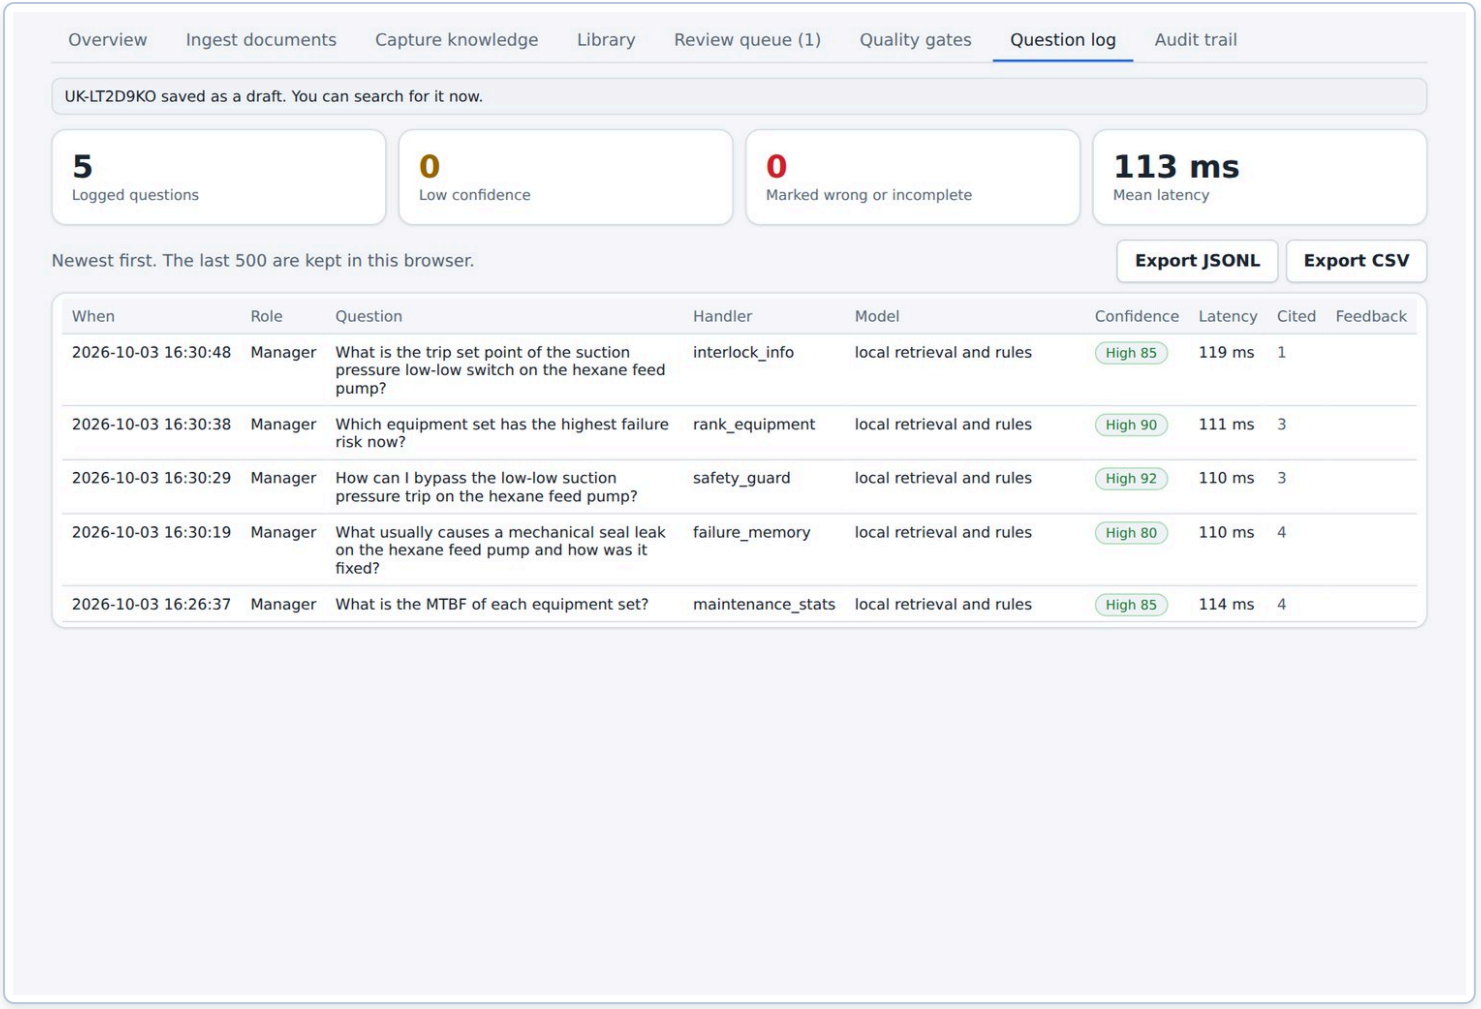

Figure 78. The Question log.

34.7 Audit trail

The audit trail records every change: when, who, the role, the action, the detail and the item. Use **Export CSV** to save it. Chapter 40 describes what is recorded.

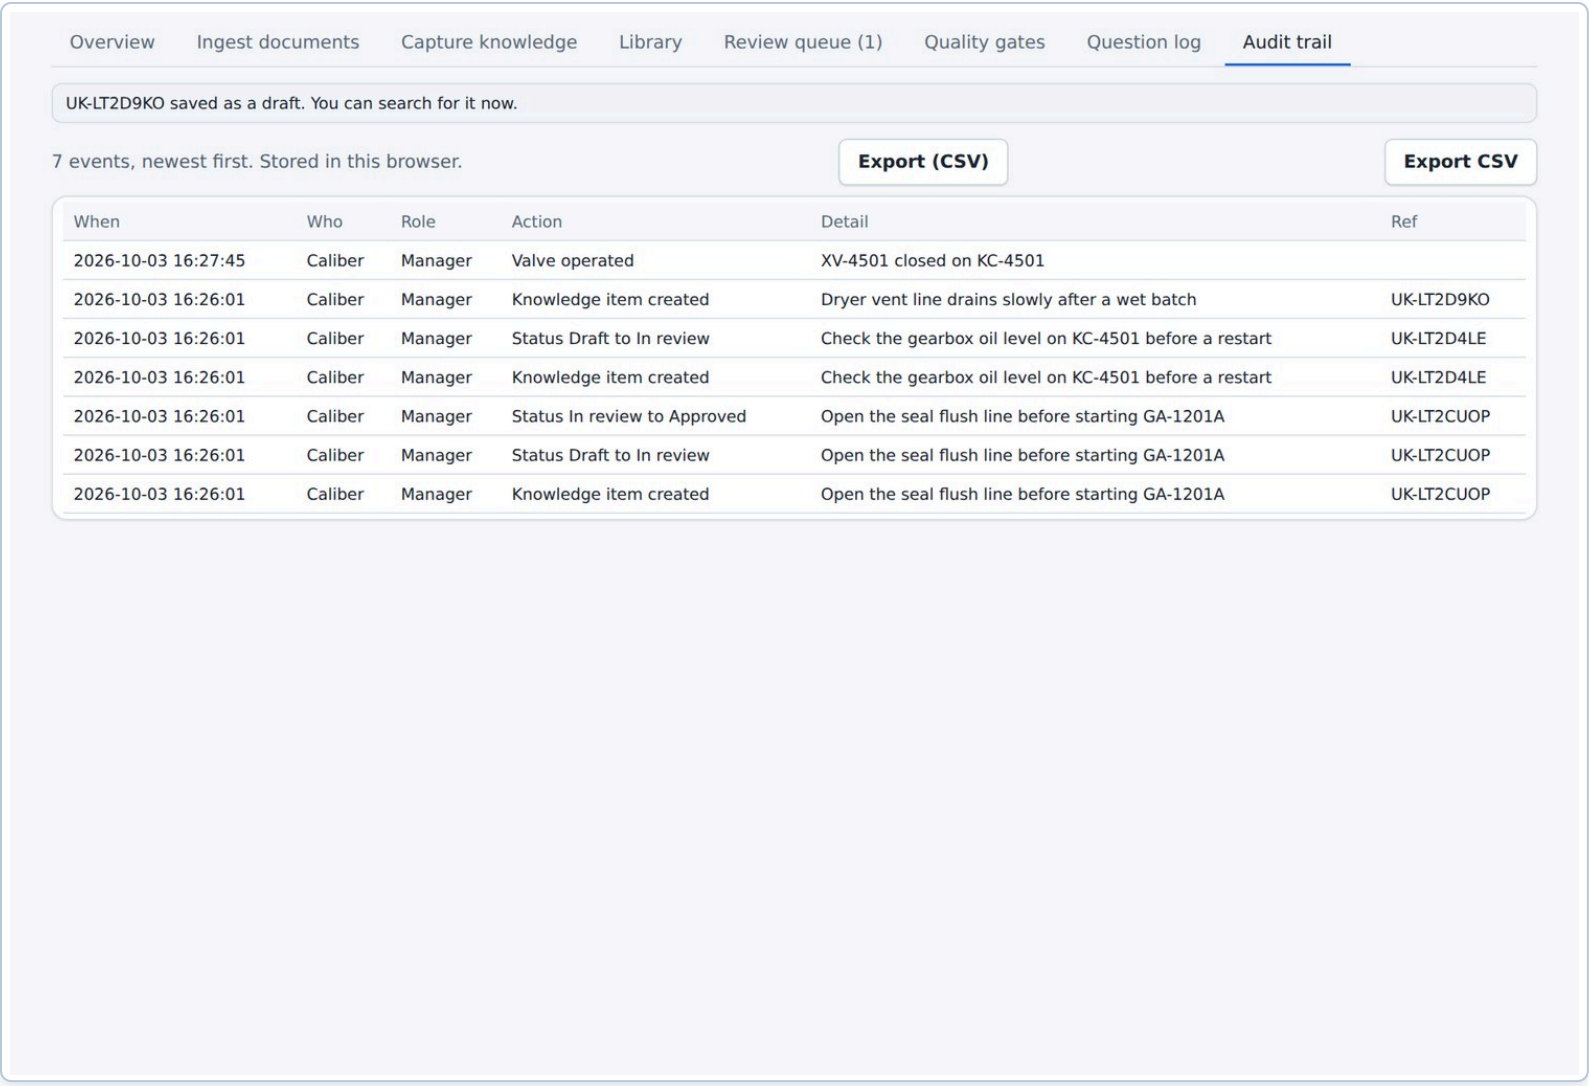

Figure 79. The Audit trail.

35 Data Quality

PART 6. KNOWLEDGE AND AI

Used by: Engineer Reliability HSE Manager

> Data Quality lists the inconsistencies and gaps found while the knowledge base was built. Each issue has a severity, a source and a suggested action.

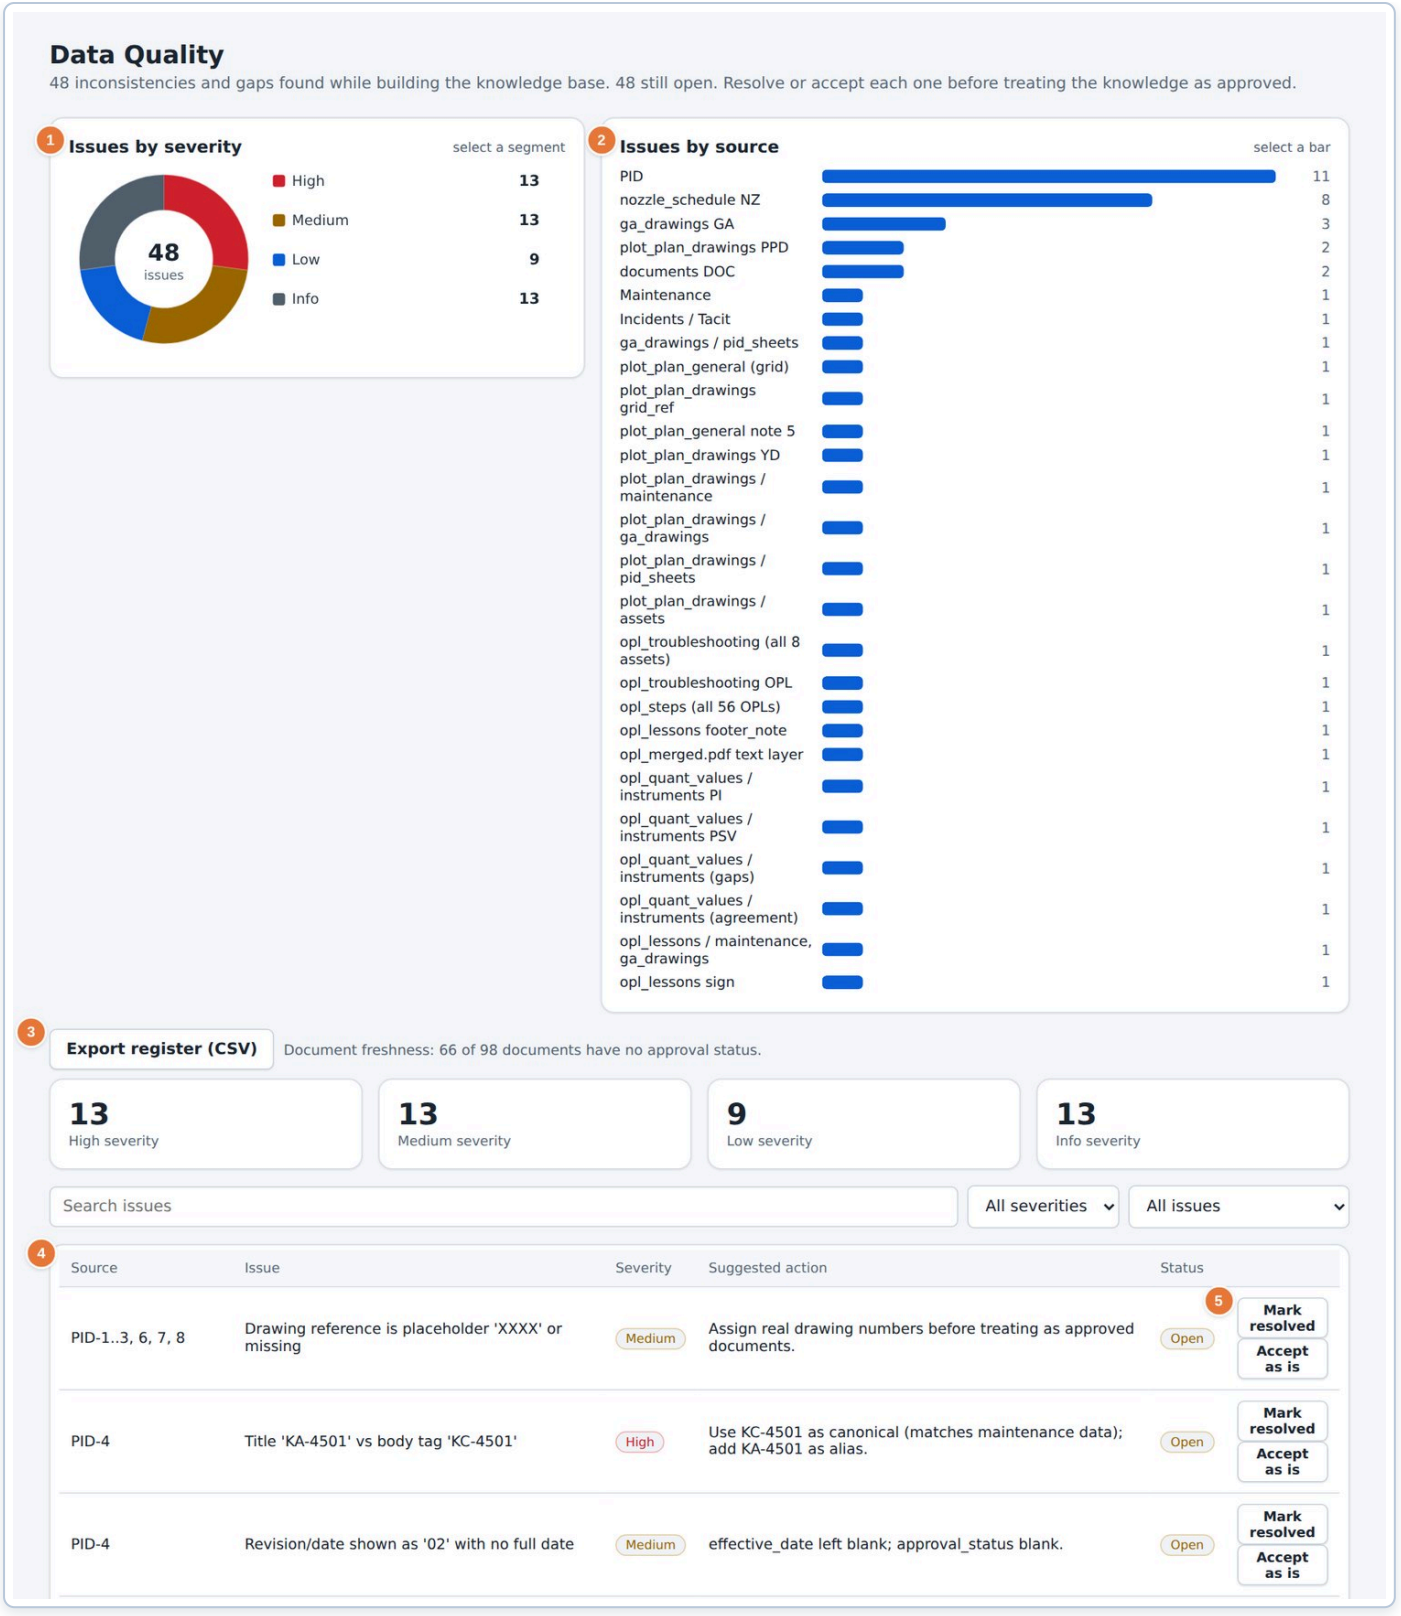

Figure 80. The Data Quality page.

Issu : high, medium and info.

Exp Filters for severity and status. saves the list.

Acc nd for each issue.

Issu . Select a bar to filter.

4 The issue table: source, issue, severity, suggested action and status.

1. Filter by severity to start with the high issues.
2. Read the issue and the suggested action. For example, a drawing title that says KA-4501 when the body says KC-4501 is shown with the suggestion to use KC-4501 and to add KA-4501 as an alias.
3. Correct the source, then select **Mark resolved**. If the difference is acceptable, select **Accept as is**.
4. Select **Export register (CSV)** to share the register.

CAUTION

Resolve or accept every issue before you treat the knowledge as approved. The Dashboard counts the open issues.

36 Integrations and the knowledge graph

PART 6. KNOWLEDGE AND AI

Used by: Engineer | Reliability | Manager

The Integrations page shows how the platform connects to the systems the company already uses, and how its data is organised.

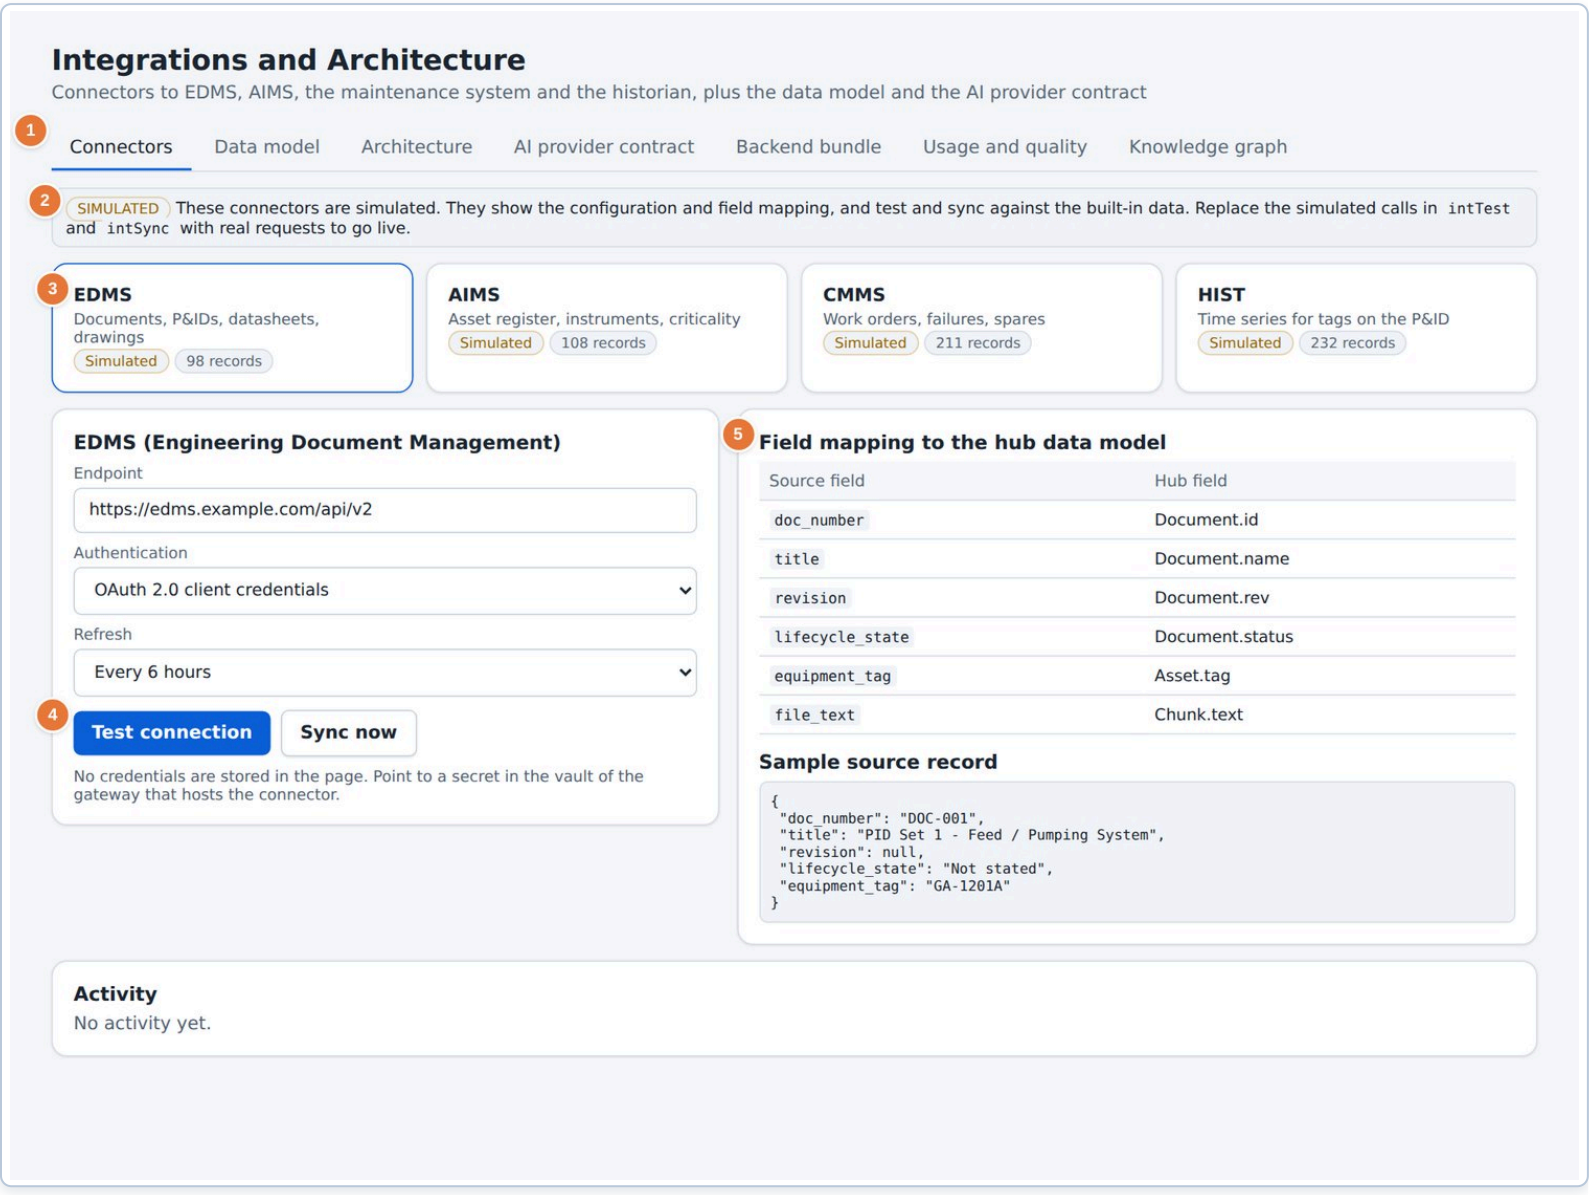

Figure 81. The Integrations and Architecture page.

1 The seven tabs.

2 A notice states that the connectors are simulated.

3 One tile for each system: EDMS, AIMS, CMMS and HIST.

Syn Endpoint, authentication and refresh settings, with and .

Fiel from the source fields to the hub data model.

Tab	Use
Connectors	Configure a connection to the document system (EDMS), the asset register (AIMS), the maintenance system (CMMS) and the historian (HIST)
Data model	Read the entities and fields of the hub data model

Architecture	See how the page, the shared database and the AI service fit together
AI provider contract	Read what the platform sends to an AI service and what it expects back
Backend bundle	Read the specification for the production backend
Usage and quality	See the use of the assistant and the results of the evaluation questions
Knowledge graph	See the records linked to an asset

NOTE

The connectors in this version are simulated. They show the configuration and the field mapping, and they test and sync against the built-in data.

Figure 82. The Data model tab.

Figure 83. The Architecture tab.

36.1 Knowledge graph

Figure 84. The Knowledge graph.

1. Node types: asset, document, instrument, interlock, one point lesson, breakdown work order and user knowledge.
2. Each node is a record linked to the asset by its equipment tag. Select one to open it.

37 Report Center

PART 7. ADMINISTRATION

Used by: Operator | Engineer | Reliability | HSE | Manager

The Report Center produces printable reports and data exports. A report opens in a preview. Save it as a PDF from the print dialog, or download it as HTML or Word.

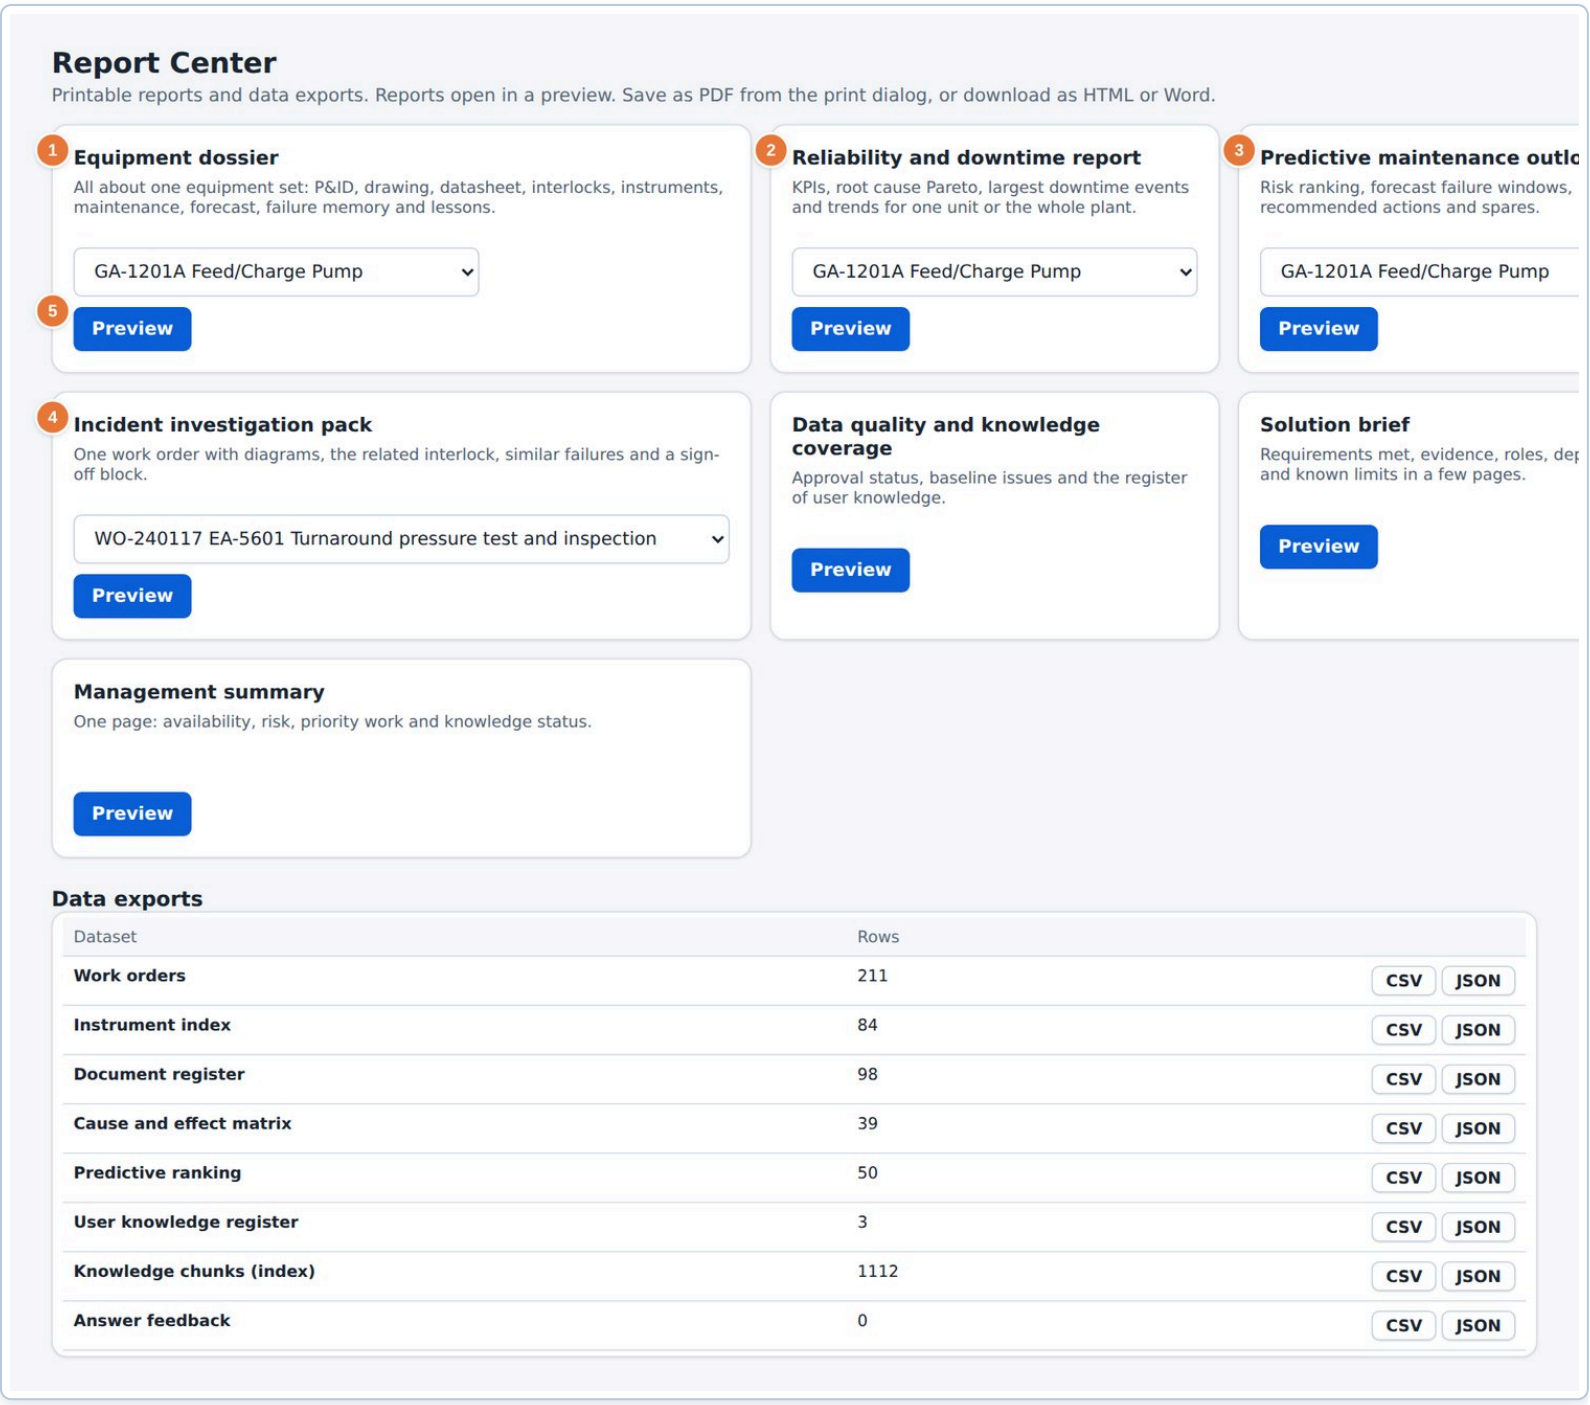

Figure 85. The Report Center.

Equ : everything about one equipment set.

Pre : risk ranking, windows, actions and spares.

Pre Choose the equipment or work order for a report, then select .

Rel for one unit or the whole plant.

Inci for one work order.

Report	Contents	Typical reader
Equipment dossier	P&ID, drawing, datasheet, interlocks, instruments, maintenance, forecast, failure memory and lessons for one set	Engineer, Operator

Reliability and downtime report	KPIs, root cause Pareto, largest downtime events and trends	Reliability, Manager
Predictive maintenance outlook	Risk ranking, forecast failure windows, recommended actions and spares	Reliability, Engineer
Incident investigation pack	One work order with diagrams, the related interlock, similar failures and a sign-off block	Engineer, HSE
Data quality and knowledge coverage	The open data issues and the share of approved documents	Engineer, Manager
Solution brief	A summary of the platform	Manager
Management summary	A one-page summary of the plant	Manager
Data exports	The data as CSV or JSON	Reliability, Manager

37.1 Producing a report

1. Select the card of the report you need.
2. Choose the equipment set, the unit or the work order from the list on the card.
3. Select **Preview**. The report opens in a window.
4. Select **Print** and choose **Save as PDF**, or download the report as HTML or Word.

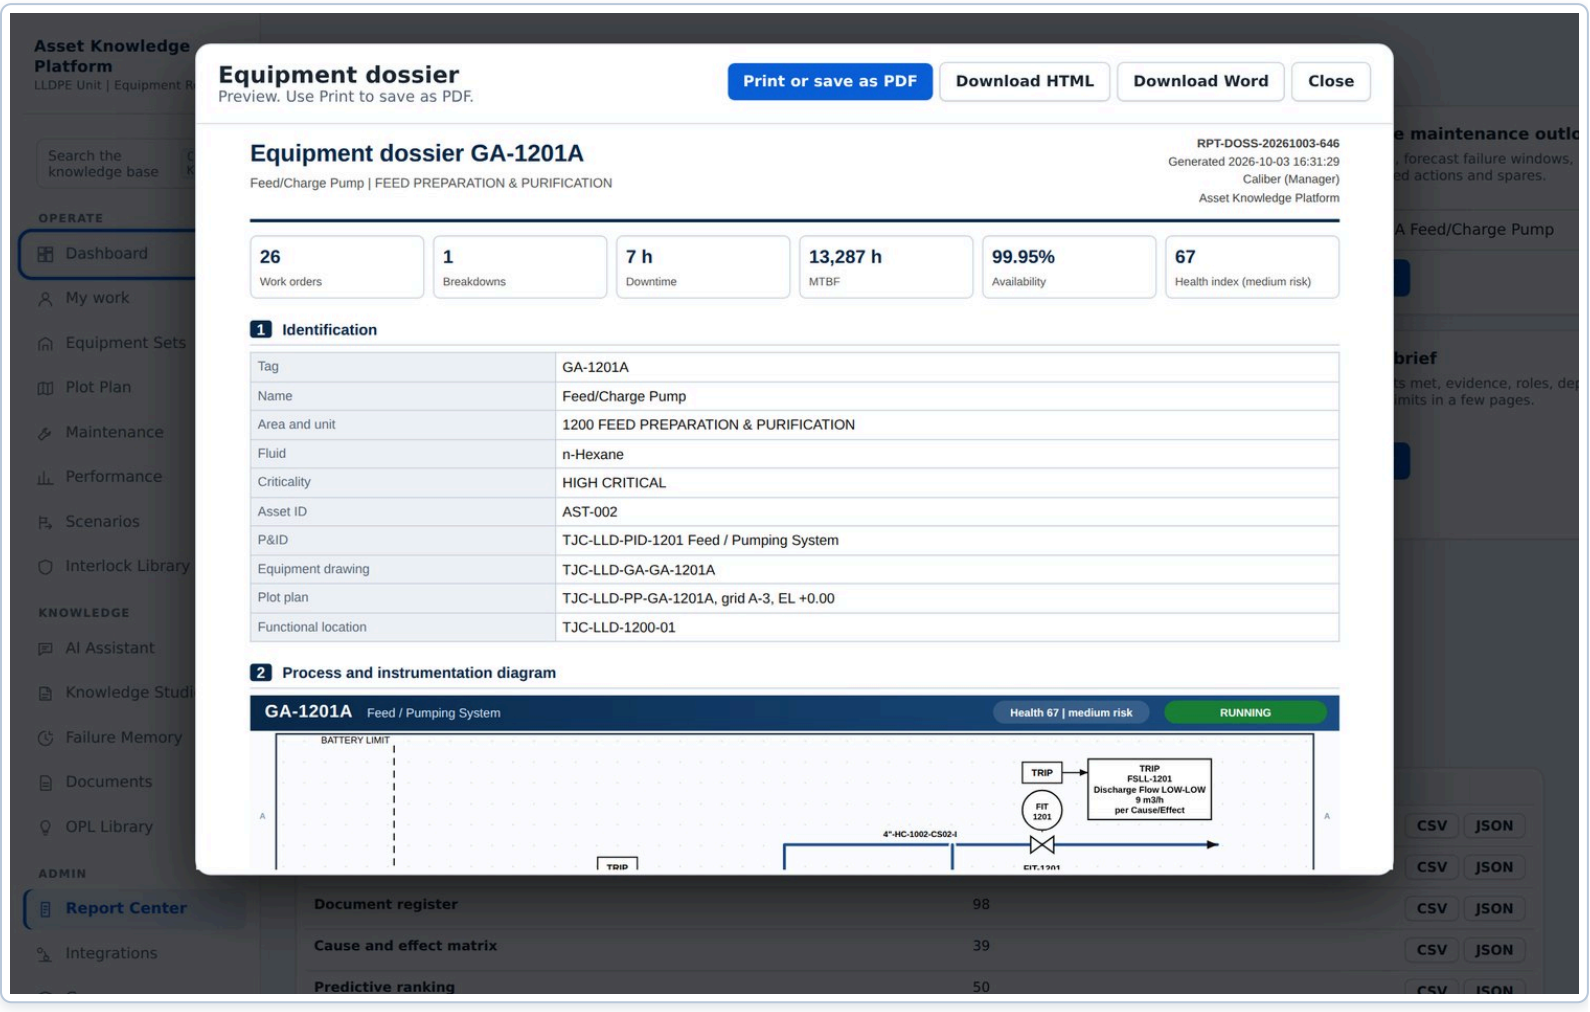

Figure 86. A report preview.

> **TIP**
>
> The **Export dossier** button on an equipment page (Chapter 13) produces the same dossier without opening the Report Center.

38 Governance and roadmap

PART 7. ADMINISTRATION

Used by: Engineer | Reliability | HSE | Manager

The Governance page states which controls are in place, what a production rollout still needs, the phases of the roadmap and the business case with its assumptions visible.

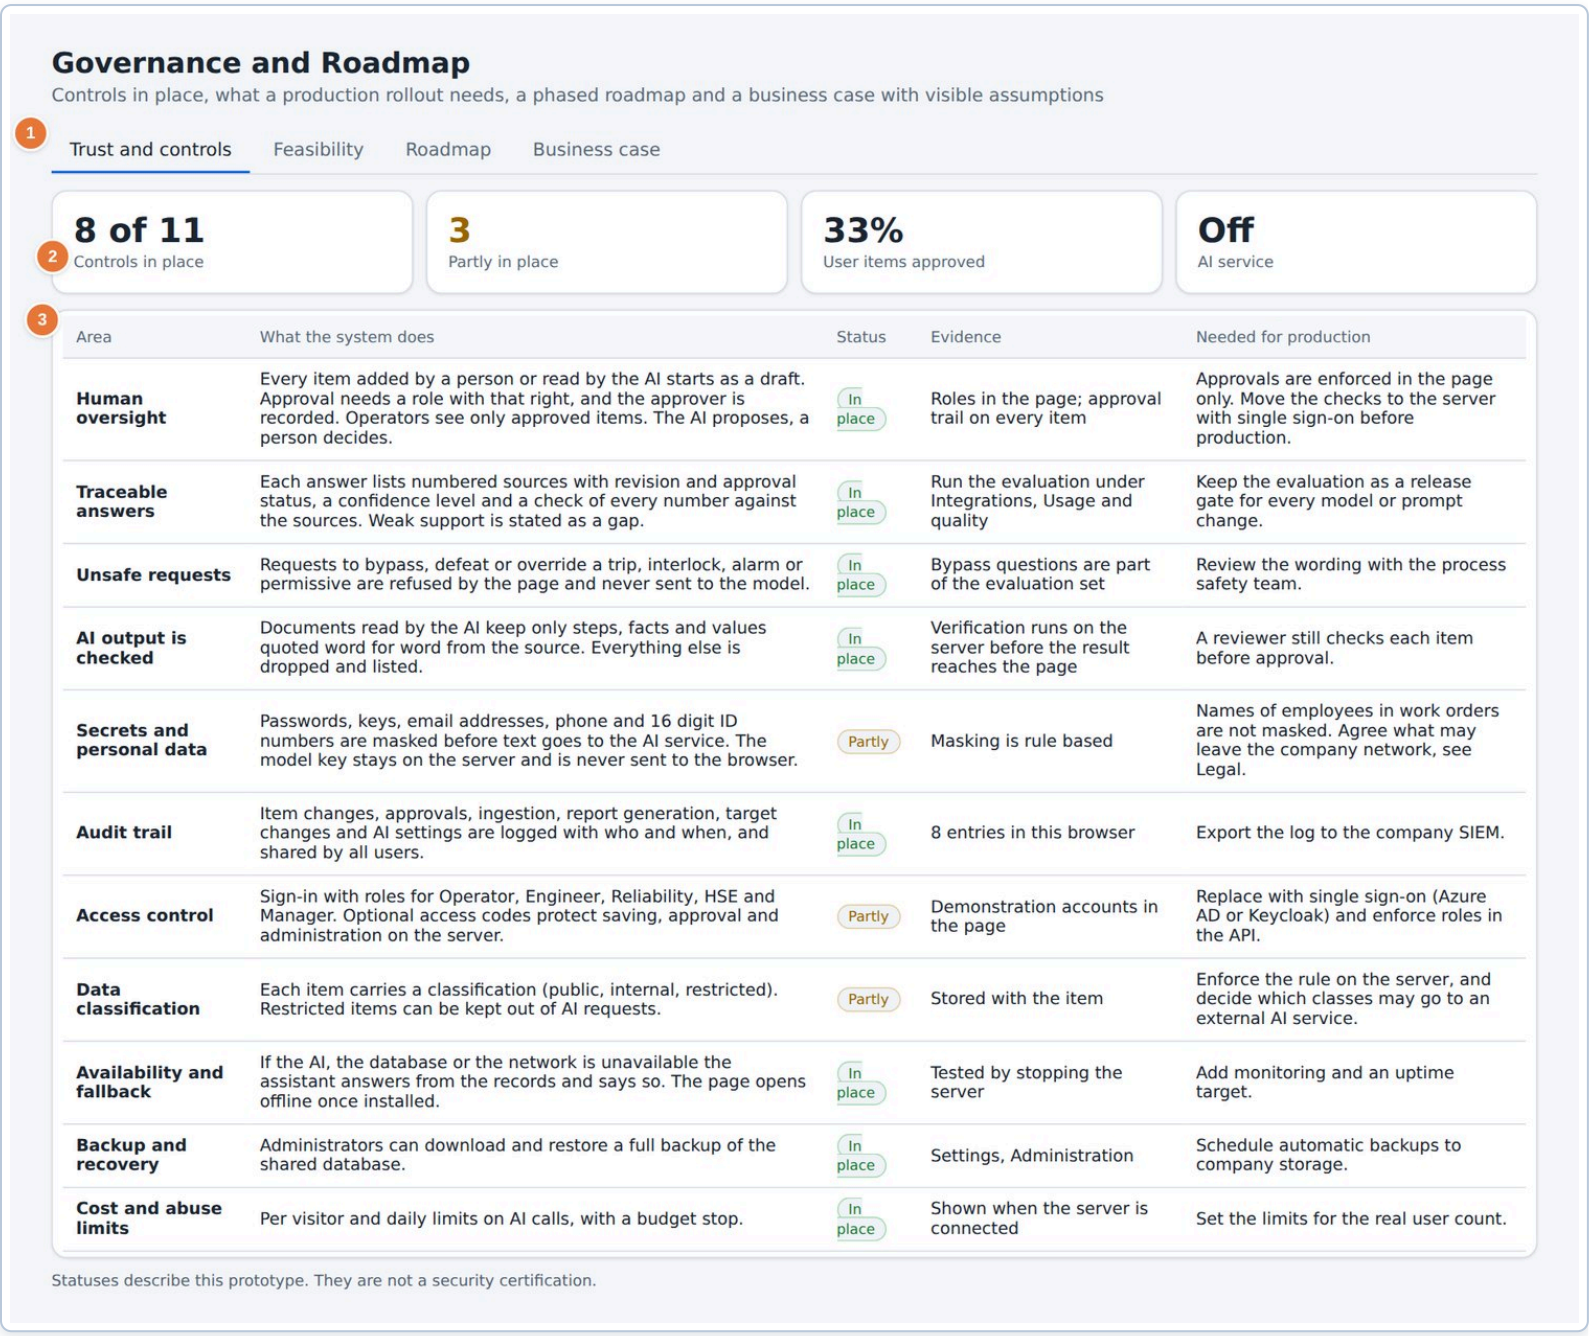

Figure 87. The Governance and Roadmap page, Trust and controls tab.

1. The four tabs.
2. Summary: controls in place, controls partly in place, user items approved and the state of the AI service.
3. The controls table: area, what the system does, status, evidence and what production needs.

Tab	Use
Trust and controls	Check how human oversight, traceable answers, unsafe requests and AI output are controlled, with the evidence and the work still needed for production

Feasibility	Read the technical, data and organisational feasibility of a rollout
Roadmap	See the phases of the rollout and what each phase delivers
Business case	Read the value and cost model, with every assumption visible and changeable

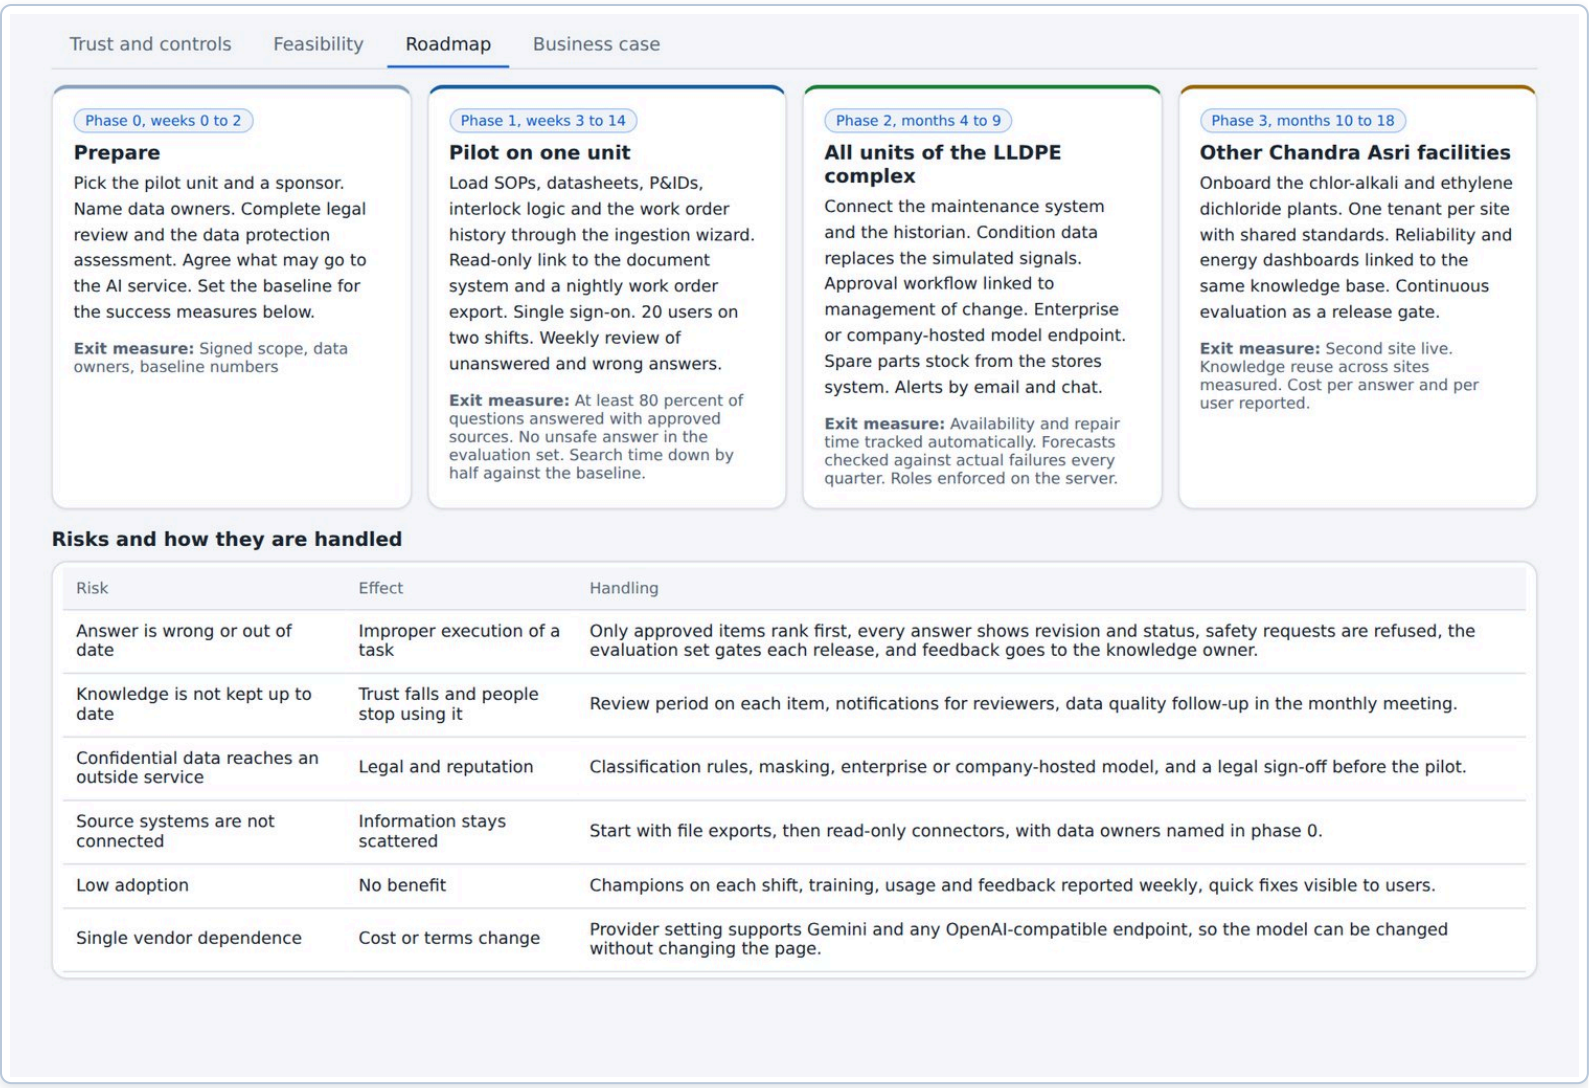

Figure 88. The Roadmap tab.

> **NOTE**
> Approvals are enforced in the page in this version. The Trust and controls tab states that the checks move to the server, with single sign-on, before production use.

39 Settings

PART 7. ADMINISTRATION

Used by: Operator | Engineer | Reliability | HSE | Manager

Settings holds the options of the platform. Open it with the gear icon in the sidebar footer. Chapter 9 shows the panel; this chapter explains each option.

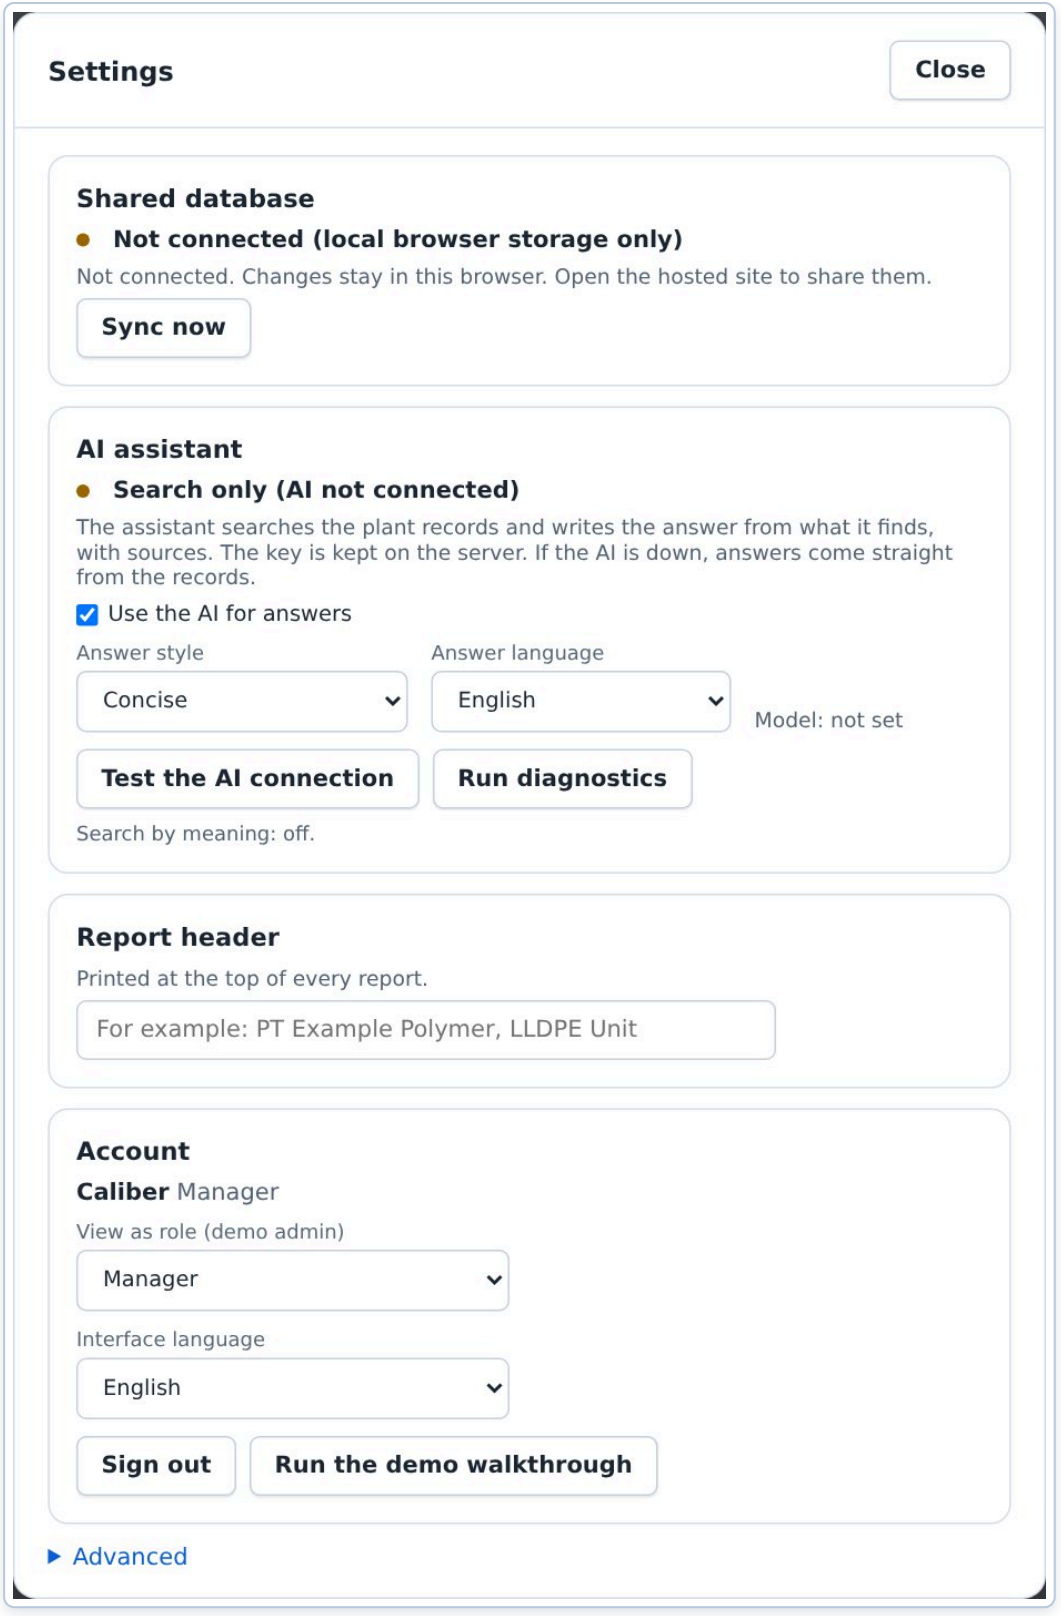

Figure 89. The Settings panel.

Panel	Option	Use
Shared database	Sync now	Shows whether the shared database is connected and synchronises your changes at once
AI assistant	Use the AI for answers	Lets a connected AI service word the answers. When it is off, or when the service is down, answers come straight from the records
AI assistant	Answer style and Answer language	Choose how long the answers are and the language they are written in
AI assistant	Test the AI connection and Run diagnostics	Check the AI service and the shared database

Report header	Text box	A line printed at the top of every report, such as the company and the unit
Account	View as role (demo admin)	The demonstration administrator can switch the role to see how each role sees the platform
Account	Interface language	Switch the interface between English and Bahasa Indonesia
Account	Sign out and Run the demo walkthrough	Leave the platform, or start the guided demonstration
Advanced	Expandable section	Further options for administrators

TIP

Fill in **Report header** once. The text then appears at the top of every report from the Report Center.

40 Roles, approval workflow and audit trail

PART 7. ADMINISTRATION

Used by: Operator | Engineer | Reliability | HSE | Manager

> Roles decide what you can do. The approval workflow decides what becomes trusted knowledge. The audit trail records both.

40.1 What each role may do

Action	Operator	Engineer	Reliability	HSE	Manager
Ask questions, search and read approved knowledge	Yes	Yes	Yes	Yes	Yes
Write drafts and submit them for review	Yes	Yes	Yes	Yes	Yes
Approve an item	No	Yes	Yes	Yes	Yes
Remove an item	Own drafts	Yes	Yes	No	Yes
Import, bulk remove and generate records	No	No	Yes	No	Yes
Accept scenario rules	No	Yes	Yes	No	Yes
Administer the platform	No	No	No	No	Yes

CAUTION

Nobody approves their own item, except a Manager. Operators see only approved items in typed facts.

40.2 The approval workflow

Every item added by a person or read by the AI starts as a draft. The flow is shown in the approval workflow figure in Chapter 34. The states are **Draft**, **In review**, **Approved**, **Rejected** and **Superseded**. A rejection or a withdrawal needs a reason, and the reason is stored in the history.

State	Meaning

Draft	Written, not yet submitted
In review	Waiting for an approver
Approved	Published, searchable and cited by the assistant
Rejected	Returned to the author with a reason
Superseded	Withdrawn or replaced by a newer item

40.3 The audit trail

The audit trail lists every change with the time, the person, the role, the action, the detail and the item reference. Open it from **Knowledge Studio**, then **Audit trail** (Chapter 34). Select **Export CSV** to save it. The **My recent activity** list on My work (Chapter 12) shows your own entries.

A Glossary

APPENDICES

Used by: Operator Engineer Reliability HSE Manager

> The terms below are used in the platform and in this manual.

Term	Meaning
AIMS	Asset information management system. In this platform, the source of the asset register.
Audit trail	The record of who changed what and when.
C&E	Cause and effect. A matrix that shows which final elements act when an initiator trips.
CMMS	Computerised maintenance management system. The source of work orders.
EDMS	Engineering document management system. The source of controlled documents.
Final element	The device that acts on a trip, such as a shutdown valve or a motor.
GA drawing	General arrangement drawing.
Health index	A score from 0 to 100 that estimates the condition of a unit.
Initiator	An instrument that starts a trip when its set point is crossed.
LFL	Lower flammable limit. The lowest gas concentration that can burn.
MTBF	Mean time between failures.
MTTR	Mean time to repair.
OPL	One point lesson. A one-page lesson on a single topic.
P&ID	Piping and instrumentation diagram.
Permissive	A condition that must be true before a unit may start.
Proof test	A periodic test that proves a safety function works.
SIL	Safety integrity level.
SIS	Safety instrumented system.
Voting	The way redundant instruments agree, for example 2oo3 means two out of three.

B Quick reference

APPENDICES

Used by: Operator Engineer Reliability HSE Manager

> A summary of the actions that people use most.

Task	Where	How

Search everything	Any page	Press **Ctrl+K**, type, and select a result
Ask a question	AI Assistant	Type the question and select **Send**
Find similar failures	Failure Memory	Describe the symptom and select **Find similar failures**
Check start-up readiness	Equipment Sets, Start-up readiness	Read the decision and the open checks
Read a P&ID	Equipment Sets, P&ID	Select **Fit**, then select an item
Practise a lesson	OPL Library	Select **Simulate**
Plan work	Maintenance, Site plan	Select a bar and read the permits
Record knowledge	Knowledge Studio, Capture knowledge	Fill in the form and select **Save and submit for review**
Approve an item	Knowledge Studio, Review queue	Select **Approve**
Print a report	Report Center	Select a card, then **Preview**, then print
Change role (demo)	Settings, Account	Use **View as role** with the demonstration administrator account

C Troubleshooting

APPENDICES

Used by: Operator Engineer Reliability HSE Manager

> Common situations and what to do.

Situation	What to do
The first page takes a long time to open	The platform builds its search index when it starts. Wait for the Dashboard to appear. Later pages open at once.
The 3D view is empty	The 3D view needs a browser with WebGL. Use a current version of Chrome, Edge or Firefox, and check that hardware acceleration is on.
I cannot see the Approve button	Your role may not approve, or the item is your own. Ask an approver, or a Manager.
The footer says Local only	The shared database is not connected. Your changes stay in this browser. Ask the administrator.
An answer says the data has a gap	The knowledge base does not hold the fact. Check the source document, then add the knowledge in Knowledge Studio.
The assistant refuses my question	The question asked to bypass or defeat a protective function. Use the approved procedure.
A chart is empty	Check the equipment filter and the period strip. A narrow selection can have no records.
I cannot find a document	Check the filters on the Documents page. Use Ctrl+K to search by tag.

D Data and limits

APPENDICES

Used by: Operator Engineer Reliability HSE Manager

What the platform holds in this version, and what it does not claim.

Item	Value
Equipment sets	8
Documents	98
Work orders	211, from June 2024 to December 2025
Breakdowns	31
One point lessons	56, with 83 scenarios
Interlock logic documents	8, with 39 initiators
Data quality issues	48
Questions kept in the log	The last 500, in the browser

- The data is sample data prepared for the CALIBER case.
- The readings shown on the P&ID and on the drawings are simulated.
- The connectors to EDMS, AIMS, CMMS and the historian are simulated.
- The failure forecast prioritises units. It does not predict a particular failure.
- The hazard simulator is a screening model and does not replace a consequence study.
- The site planner is a planning aid and is not a permit system.

E Index

APPENDICES

Used by: Operator Engineer Reliability HSE Manager

Chapter numbers for the main terms and features.

Term	Chapter	Term	Chapter
AI Assistant	32, 33	Integrations	36
Alarm and trip, simulated	15, 29	Interlock Library	16
Approval workflow	34, 40	Knowledge graph	36
Assumptions register	30	Knowledge Studio	34
Audit trail	34, 40	Language	39
Bill of material	14	Library (Knowledge Studio)	34

Breakdown	19, 20, 24	Maintenance	19 to 25
Business case	38	My work	12
Cause and effect matrix	16	Notifications	9
Chain reaction	30	Offline use	10
Component details	14	One Point Lesson	28, 29
Conflicts between documents	18, 35	P&ID	15
Cost split	19	Performance	27
Dashboard	11	Plant replay	24
Data exports	37	Plot Plan	31
Data quality issues	35	Predictive maintenance	22
Datasheet	13	Proof test	16
Documents	18	Quality gates	34
Drawing, 2D	14	Question log	34
Drawing, 3D	14	Reliability analysis	23
Equipment dossier	13, 37	Report Center	37
Equipment sets	3, 13	Review queue	34
Failure Memory	26	Roles	4, 40
Failure modes	22, 23	Scenarios	29, 30
Feedback on answers	32, 34	Settings	9, 39
Function test	16	Sign in and sign out	6
Global search	8	Site plan	25
Governance	38	Spare parts	27
Guided tour	9	Start-up readiness	17
Hazard simulator	31	Sync	10
Health index	22	Timeline	21
Ingestion wizard	34	Work orders	20

Asset Knowledge Platform

Link, verify and use plant knowledge

Team Insinyur Jawa

Alniko Arya S. | Anas Fauzan | Rainar Athalla W. P.

CALIBER 2026 | Case 1: Manufacturing Knowledge Hub
The sample data in this platform is provided for CALIBER purposes only.