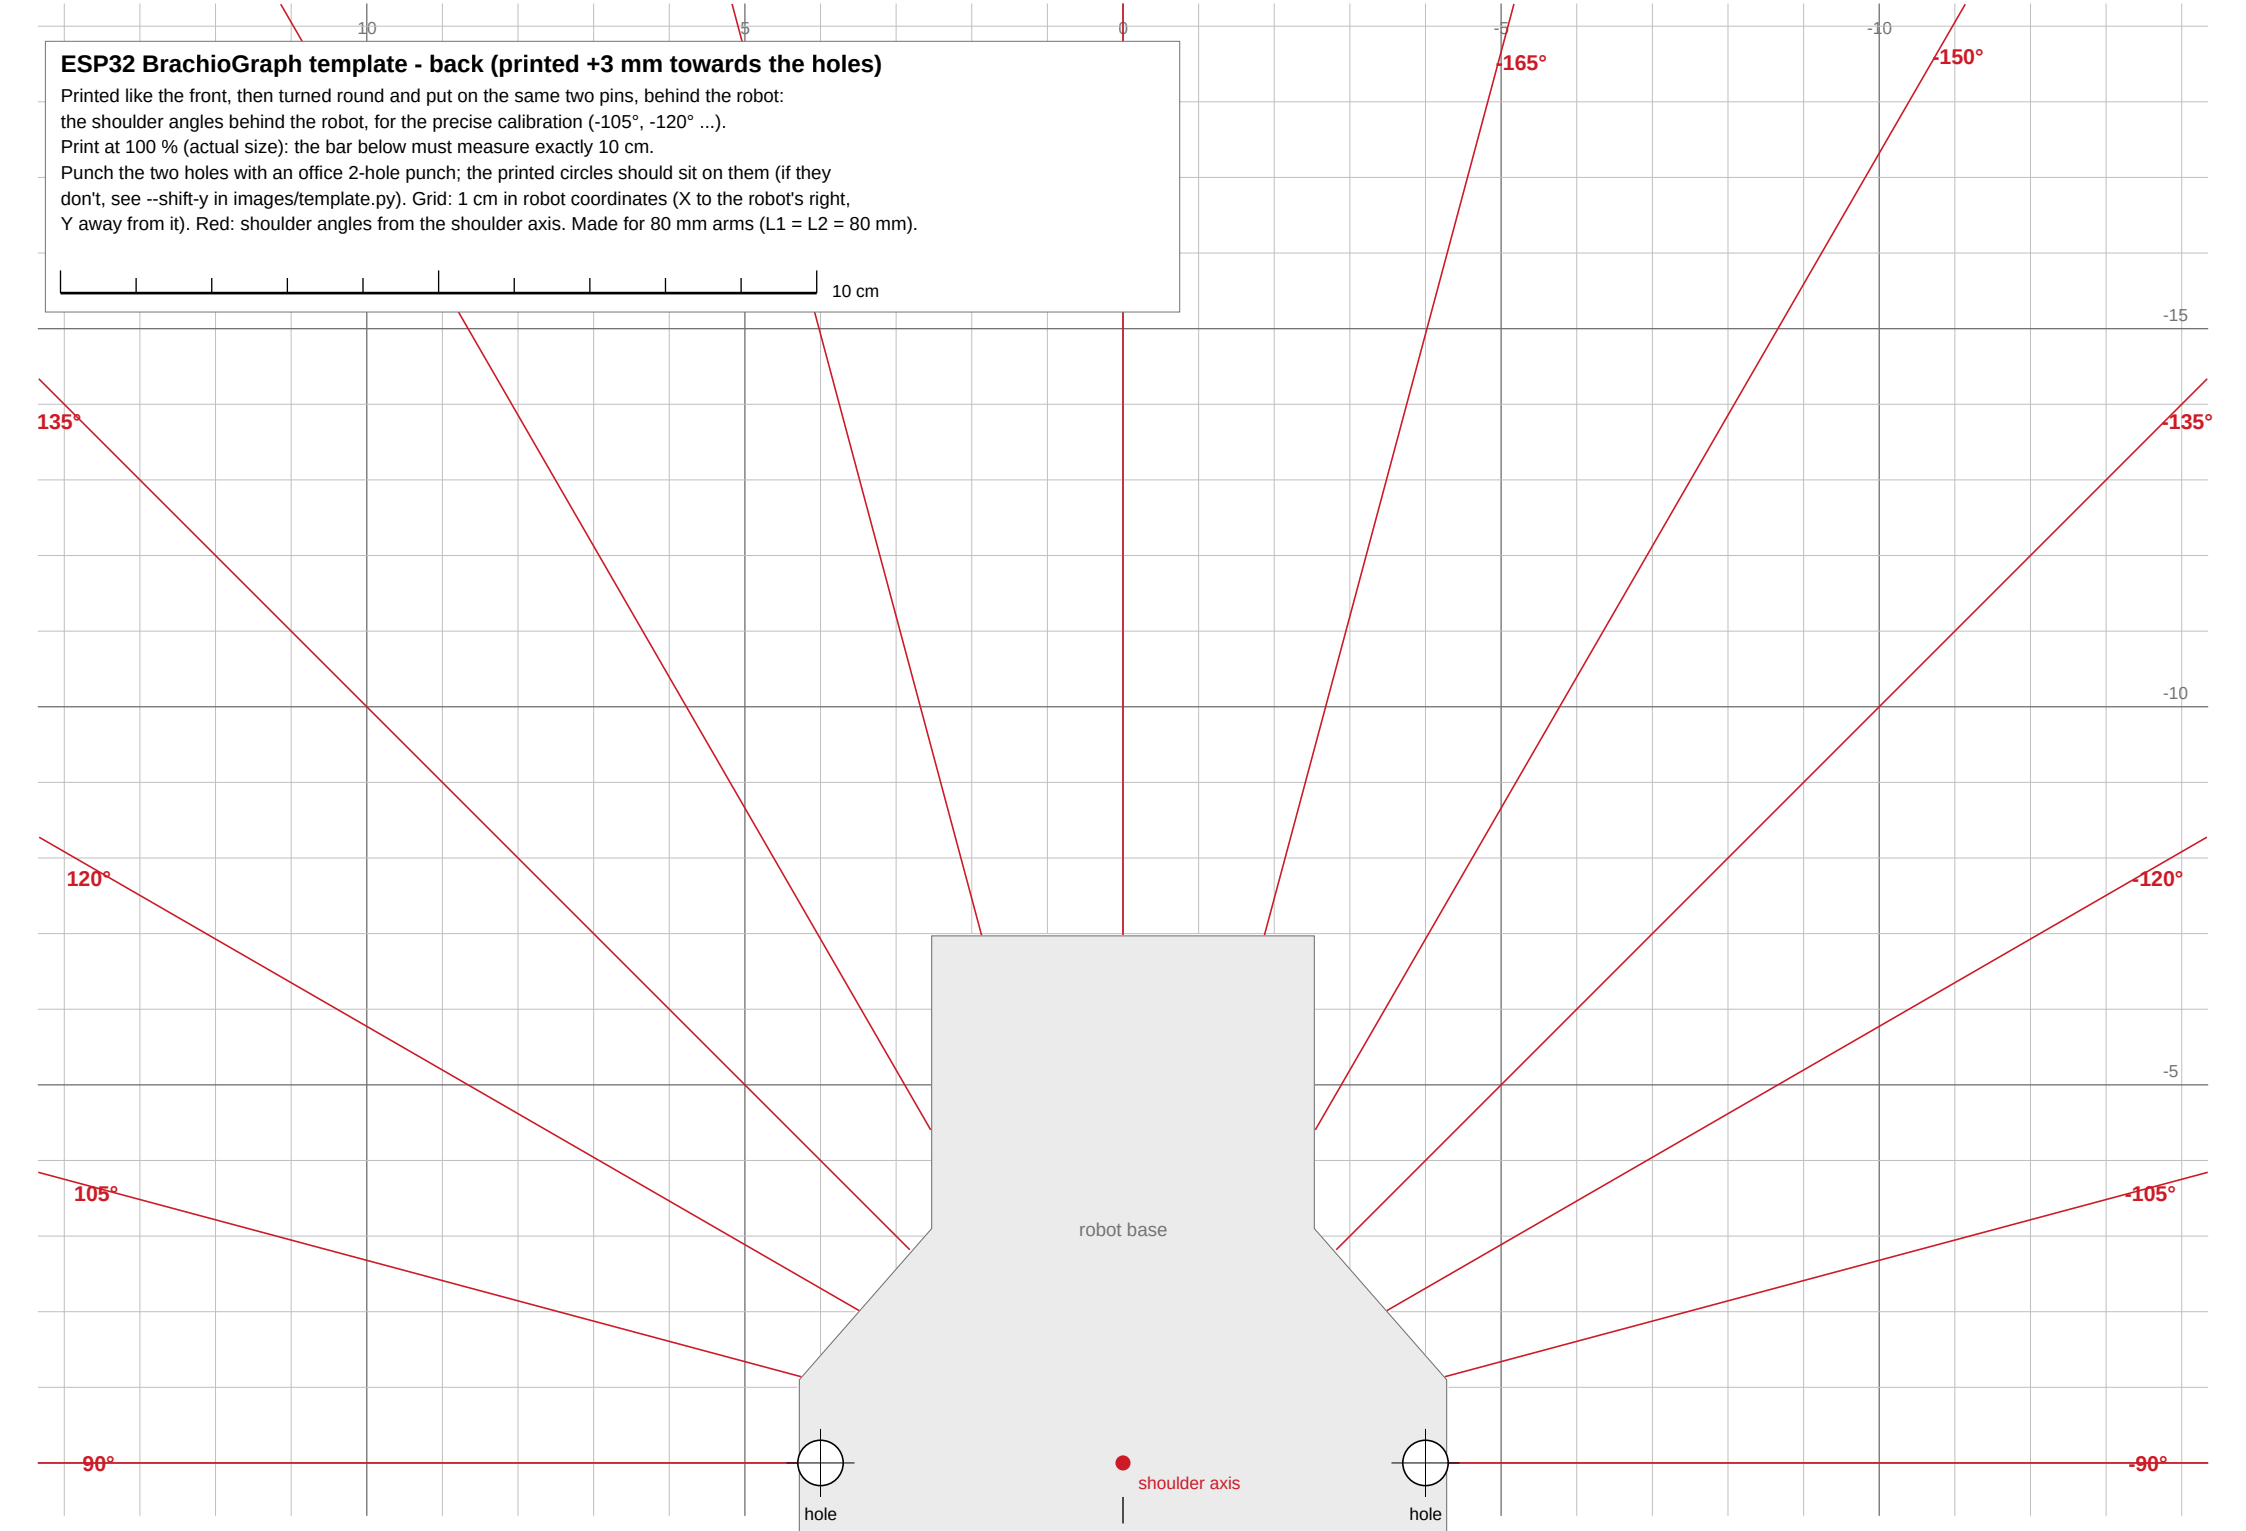
ESP32 BrachioGraph template - back (printed +3 mm towards the holes)
Printed like the front, then turned round and put on the same two pins, behind the robot:
the shoulder angles behind the robot, for the precise calibration (-105°, -120° ...).
Print at 100 % (actual size): the bar below must measure exactly 10 cm.
Punch the two holes with an office 2-hole punch; the printed circles should sit on them (if they
don't, see --shift-y in images/template.py). Grid: 1 cm in robot coordinates (X to the robot's right,
Y away from it). Red: shoulder angles from the shoulder axis. Made for 80 mm arms (L1 = L2 = 80 mm).
10 cm
10
5
0
-5
-10
-15
-165°
-150°
135°
-135°
120°
-120°
105°
-105°
90°
-90°
robot base
shoulder axis
hole
hole