


NECROMANCER DICE TOWER — RAMP ASSEMBLY GUIDE

Print at 100% on 200–300 gsm cardstock. Use a bone folder or butter knife to score ALL fold lines before folding.


A — HOW TO FOLD A RAMP (applies to RAMP A, B and C)

1. CUT OUT FLAT

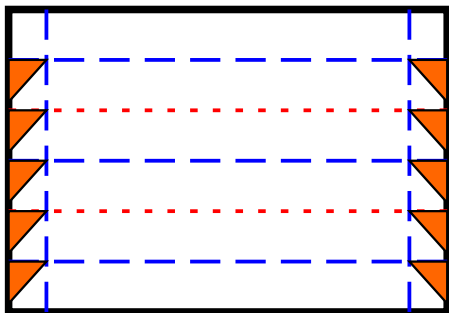


All fold lines printed.
ORANGE = notch to cut.

2. SCORE + CUT NOTCHES

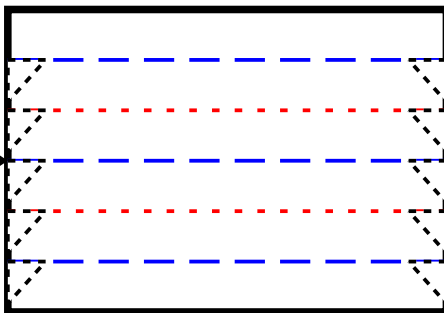

Score BLUE + RED lines.
Cut & remove ORANGE triangles.

3. FOLD STEPS

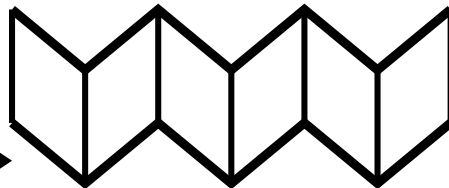


Result: stepped profile
side walls stand vertical.


B — WHY THE ORANGE NOTCH CUTS

At each step fold, the side-wall strip must bend 90°. Without removing the orange triangle, excess paper bunches at the inner corner and prevents the fold from lying flat.

WITHOUT notch (wrong):

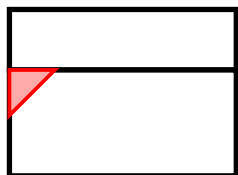

WITH notch (correct):

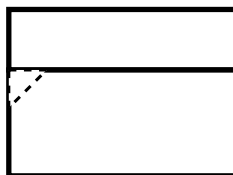

C — OVERALL ASSEMBLY ORDER

1. Print all sheets at 100% — do NOT scale to fit.
2. SCORE all blue dashed (valley) and red dotted (mountain) fold lines BEFORE cutting.
3. CUT all solid black lines. Remove orange notch triangles on each ramp.
4. Assemble BASE TRAY (Sheet 05): fold F1–F4 valley, F5 mountain, glue corner tabs.
5. Assemble BODY A (Sheet 01): fold panels to form front + left side.
6. Assemble BODY B (Sheet 02): fold panels to form back + right side. Glue A+B together.
7. Pre-fold RAMP C first (lowest ramp), dry-fit, then glue onto anchor marks C-L / C-R.
8. Pre-fold RAMP B, dry-fit on B-L / B-R anchors. Verify HIGH/LOW orientation.
9. Pre-fold RAMP A, dry-fit on A-L / A-R anchors. Verify flow direction.
10. Glue one side-tab first; verify ramp lays flat; then glue the opposite tab.
11. Attach base tray. Drop test with d6 from the top to verify free passage.

D — MATERIALS & TOOLS

- Cardstock: 200–250 gsm recommended. 300 gsm possible but harder to fold ramp steps.
- Scoring tool: bone folder, blunt back of scissors, or empty ballpoint pen.


LEGEND

- Cutting: craft knife + metal ruler on cutting mat. Scissors for gentle curves only.
- Glue: PVA (white craft glue) or glue stick. Apply thin bead; hold 30 s with finger.
- Do NOT use hot glue.
- Do NOT use bone folder too fast before alignment is correct.



GLUE TAB

NOTCH – CUT & REMOVE



20 x 20 mm