


Sheet 07 - Baffle Core Isometric Guide

v004 — 3D ISOMETRIC ASSEMBLY REFERENCE

Visual guide: how to glue bulkheads B1/B2 and stagger fins D1..D6.

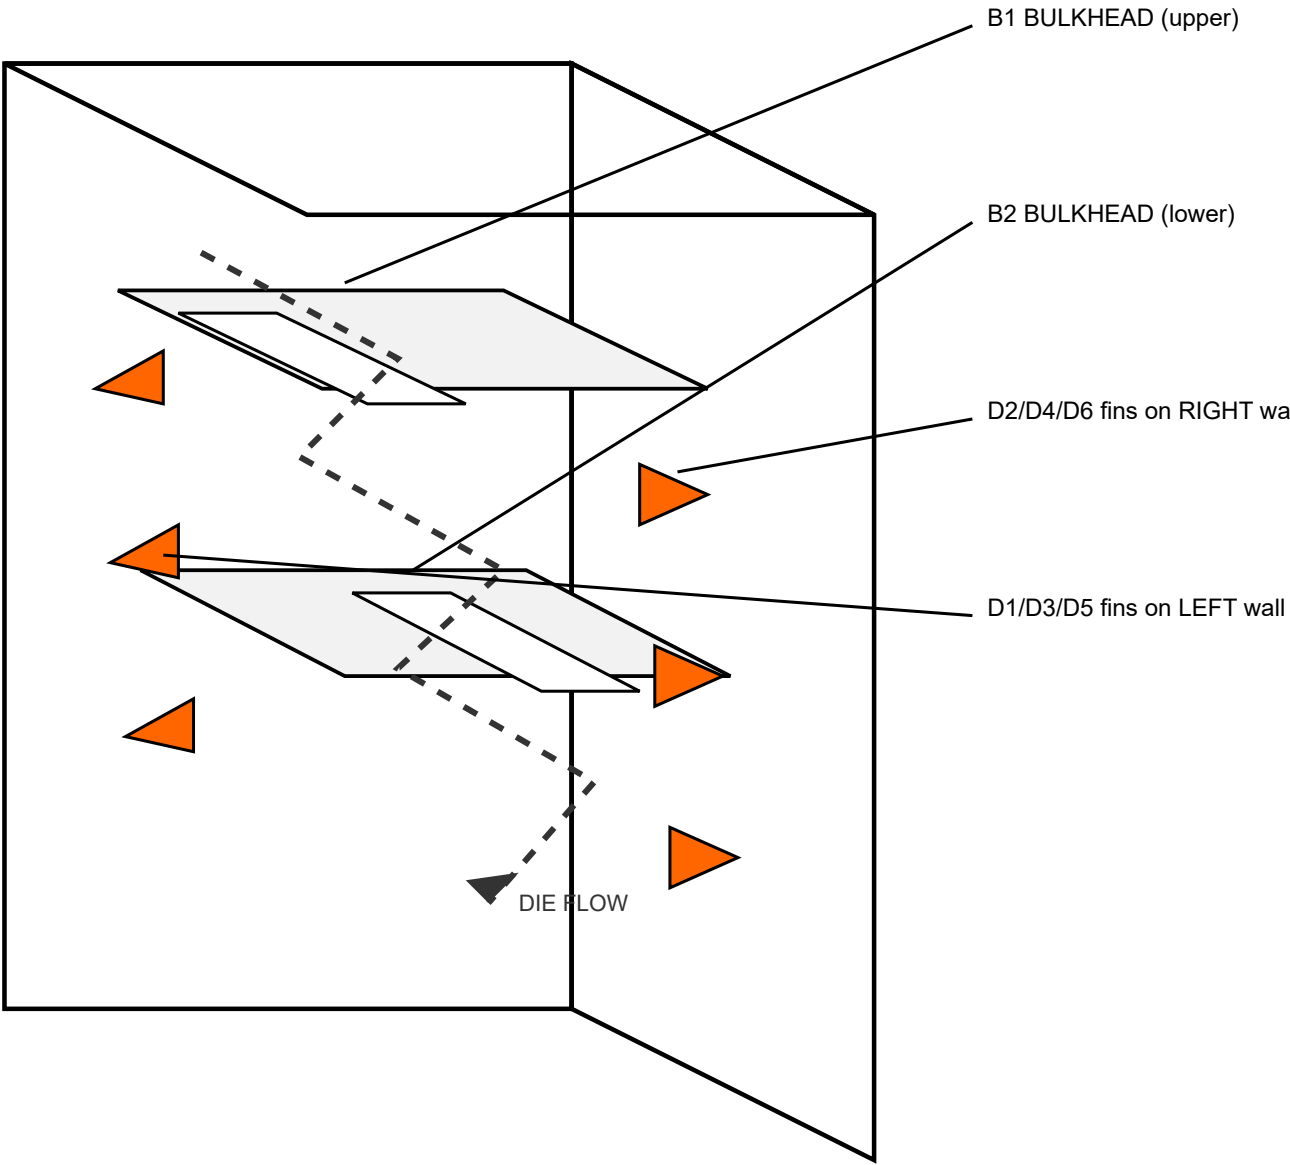

Fold fins toward center at 30–45°
Keep central clear channel ≥ 30 mm
Install B1 and B2 with vertical gap 25–30 mm

FIN FOLD EXAMPLE

LEGEND

CUT

BLUE = fold

BLACK = cut


VALLEY FOLD

MOUNTAIN FOLD

GLUE TAB

NOTCH – CUT & REMOVE

20 x 20 mm



20 x 20 mm