Tertiary Infotech Academy Pte Ltd

UEN: 201200696W

LEARNER GUIDE

For

Innovating Product Development with 3D Printing and Additive Manufacturing

TGS Ref No: TGS-2022017597

Conducted by

Tertiary Infotech Academy Pte Ltd

UEN: 201200696W

Version 8.0

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

DOCUMENT VERSION CONTROL RECORD

Version Number	Effective Date of Release	Summary of Included Changes	Author
7.0	1 June 2025	Legacy release accompanying the v7 trainer deck.	Dr Alfred Ang
8.0	18 August 2026	Full regeneration: 16 hands-on labs with detailed step-by-step guides (Fusion 360 design labs, Cura slicing/adhesion/support labs, optimisation and post-processing labs), enriched AM theory, revision section mapped to K1–K7 / A1–A5, and expanded glossary.	Dr Alfred Ang

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

TABLE OF CONTENTS

Introduction **4**
Course Learning Outcomes **4**
Before You Start — Environment Setup **4**
Topic 01 — Overview of Additive Manufacturing and 3D Scanning **5**
Lab 1 — Extrude — Personalised Keychain Token 6
Lab 2 — Sweep — Giant Paper Clip Bookmark 8
Lab 3 — Loft — Mini Plant Pot with Custom Rails 10
Lab 4 — Revolve — Funnel from a 2D Profile 12
Lab 5 — Tolerance — Container and Lid (0.2 mm Fit) 15
Lab 6 — 3D Scan and Print a Real Object 17
Topic 02 — Process Related Issues for AM **20**
Lab 7 — Install Cura and Slice Your First Model 20
Lab 8 — Bed Adhesion — Skirt vs Brim vs Raft 22
Lab 9 — Support Structures for Overhangs 24
Lab 10 — Filament Diagnostics — Diameter, Temperature and Flow 26
Topic 03 — Process Improvement for AM **28**
Lab 11 — Perimeters and Infill — Strength vs Speed 29
Lab 12 — Infill Patterns — Zigzag vs Grid Strength Test 30
Lab 13 — Layer Height and Top Thickness — Surface Quality 32
Lab 14 — Ironing — Glass-Smooth Top Surfaces 34
Lab 15 — Fuzzy Skin — Textured Walls on a Vase 36
Lab 16 — Post-Processing — Support Removal and Sanding 38
Revision — What to Master for the Assessment **40**
Glossary **41**

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

Introduction

This Learner Guide accompanies the WSQ course Innovating Product Development with 3D Printing and Additive Manufacturing (TGS-2022017597), conducted by Tertiary Infotech Academy Pte Ltd. It provides step-by-step instructions for all 16 hands-on labs, organised by the three course topics, and supports the TSC Additive Manufacturing (PRE-OPR-4012-1.1).

Use this guide alongside the course slides and the per-lab folders in labs/ of the course repository. Each lab folder carries this guide's steps plus any sample model files (STL) the lab needs. The written and practical assessments are open book — bring this guide.

Course Learning Outcomes

- LO1: Analyze the AM and evaluate the use of reverse engineering using 3D scanning
- LO2: Analyze the issues and determine the requirements for AM processes
- LO3: Apply AM optimization techniques and assess the impact of process improvement

TSC coverage

- A1: Analyse and determine material considerations of components to be manufactured
- A2: Analyse process-related issues for using DMLS, SLS, SLM, powder bed and inkjet head, and/or 3D printing for AM
- A3: Determine processes and procedures for manufacturing metallic and non-metallic components using AM
- A4: Evaluate use of reverse engineering processes for components through 3D scanning and subsequent AM
- A5: Apply optimisation techniques to improve efficiency of AM processes and product quality
- A6: Assess the impact of manufacturing process improvements on business operations
- K1: AM characteristics, techniques and systems
- K2: Requirements of different AM processes
- K3: Factors to be considered when selecting AM solutions
- K4: Impact of AM on manufacturing operations
- K5: Methods for reviewing AM performance
- K6: Benefits and trade-offs of AM
- K7: Methods of ensuring long-term sustainability of AM

Before You Start — Environment Setup

What you need

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

- A computer with Autodesk Fusion 360 installed — the free personal-use or education licence is sufficient (https://www.autodesk.com/products/fusion-360).
- Ultimaker Cura slicing software — free from https://ultimaker.com/software/ultimaker-cura (installed in Lab 7; install early if you want a head start).
- An FDM 3D printer with PLA filament (provided in class), plus digital calipers, pliers and sandpaper (120–400 grit) for the tolerance and post-processing labs.
- A smartphone with a 3D-scanning app for Lab 6 — Polycam or Kiri Engine (Android/iOS), or Scandy Pro / Heges on LiDAR iPhones/iPads.
- The sample models from the labs/ folders: cube10.stl, twist.stl, open vase.stl and token.stl.

Fusion 360 quick orientation

- Sketch-driven CAD: draw 2D profiles on sketch planes, then turn them 3D with Extrude, Revolve, Sweep and Loft.
- The browser (left panel) lists bodies, sketches and construction planes; the timeline (bottom) records every operation for editing.
- Export any body for printing via File ▸ Export ▸ STL, or right-click the body ▸ Save As Mesh.

Conventions used in every lab

- Menu paths are written as Tool ▸ Menu ▸ Command (e.g. Create ▸ Extrude).
- Values shown (dimensions, temperatures, percentages) are tested starting points — your printer may need small adjustments.
- Every lab ends with a 'Test it' check — do not move on until it passes.
- Safety: hot nozzles (200 °C+), moving axes and sharp tools — keep hands clear while printing and use pliers for support removal.

Topic 01 — Overview of Additive Manufacturing and 3D Scanning

AM systems · material considerations · benefits & trade-offs · 3D scanning and reverse engineering (K1, K3, K6 · A1, A4)

Key concepts

- Additive manufacturing — Builds parts layer by layer directly from a CAD file — no part-specific tools, dies or molds.
- Seven process families — Material extrusion, vat photopolymerisation, powder bed fusion, material jetting, binder jetting, directed energy deposition, sheet lamination.
- Material considerations — Mechanical/thermal properties, design complexity, volume, post-processing and cost drive the choice of AM solution.
- Benefits & trade-offs — Design freedom, rapid prototyping and low-waste versus slower throughput, material limits and post-processing.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

- 3D scanning — Captures real-world geometry so worn or legacy parts can be reverse-engineered into CAD and re-manufactured with AM.
- Design for AM — Fusion 360 extrude, sweep, loft and revolve; stress concentration and tolerance-aware design.


Lab 1 — Extrude — Personalised Keychain Token

TSC objective: A1 — determine material and design considerations while modelling a printable part with the extrude technique.

Goal: Model an elliptical keychain token in Fusion 360, personalise it with the first letter of your name, then slice it in Cura and 3D print it.


What you'll build

A personalised elliptical keychain token, sliced and 3D printed in PLA. (Tools: Fusion 360, Ultimaker Cura, FDM printer (PLA).)

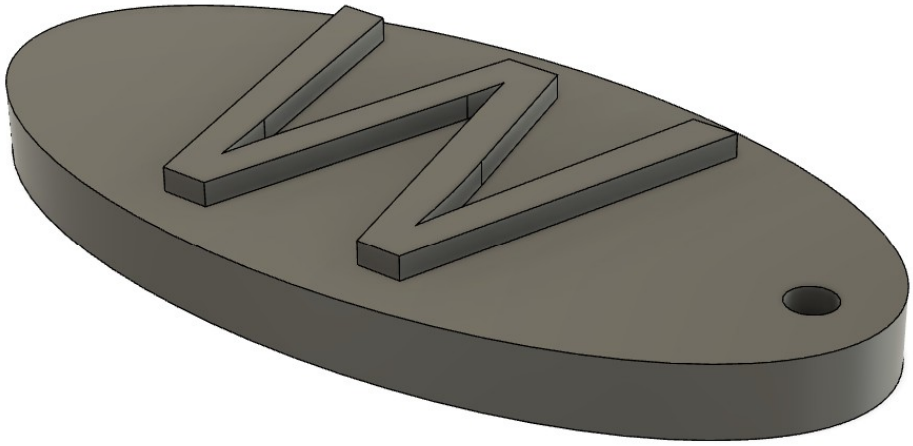

Lab 1 reference — target model / setting

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

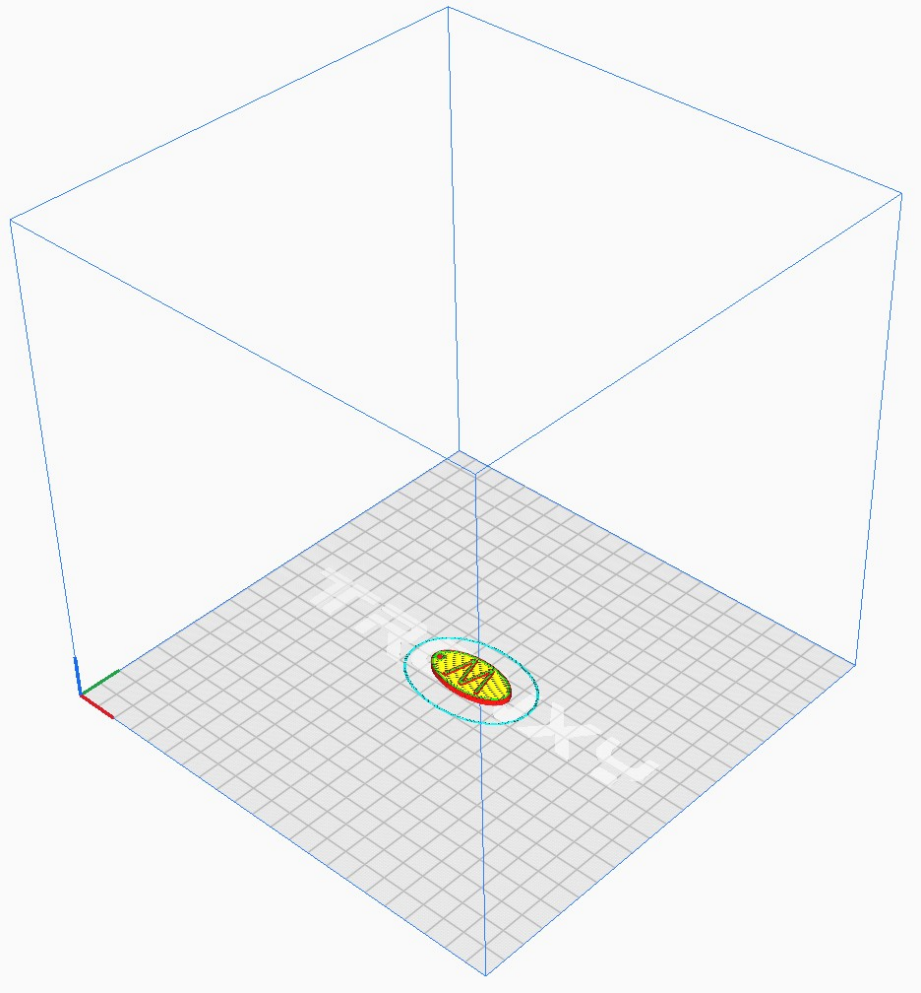

Lab 1 reference — as prepared in the tool

Step-by-step

1. Create a new design in Fusion 360 and start a sketch on the XY plane.

```
Fusion 360 ▸ File ▸ New Design ▸ Create Sketch ▸ XY plane
```

2. Draw an ellipse about the origin — approximately 50 mm long and 30 mm wide.

```
Sketch ▸ Ellipse — major 50 mm, minor 30 mm
```

3. Add a 4 mm circle near one end of the ellipse for the keyring hole, then finish the sketch.

```
Sketch ▸ Circle — Ø 4 mm ▸ Finish Sketch
```

4. Extrude the ellipse profile (excluding the circle) to 3 mm to form the token body.

```
Create ▸ Extrude — profile: ellipse, distance 3 mm
```

5. Sketch the first letter of your name on the token's top face and extrude it 1 mm.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Create Sketch ▸ Text — height 18 mm ▸ Extrude 1 mm (Join)
```

6. Export the body as an STL mesh for slicing.

```
File ▸ Export ▸ STL  (or Utilities ▸ Make ▸ 3D Print)
```

7. Open the STL in Cura, keep the flat face on the build plate, and slice with the default 0.2 mm profile.

```
Cura ▸ Open File ▸ token.stl ▸ Slice
```

8. Save the G-code and print the token; remove it from the bed once cooled.

```
Cura ▸ Save to Disk ▸ print
```

Test it

The sliced preview shows the token printing flat with no supports; the printed token carries your raised letter and the keyring hole is clear.

Note: This lab lives in labs/lab-01-extrude-personalised-keychain-token/ together with any sample files it needs.

Lab 2 — Sweep — Giant Paper Clip Bookmark


TSC objective: A1 — apply the sweep technique to produce a printable path-driven part.

Goal: Model a giant paper clip bookmark in Fusion 360 by sweeping a circular profile along a paper-clip path, then slice and 3D print it.


What you'll build

A giant paper clip bookmark modelled with the sweep technique and 3D printed flat. (Tools: Fusion 360, Ultimaker Cura, FDM printer (PLA).)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

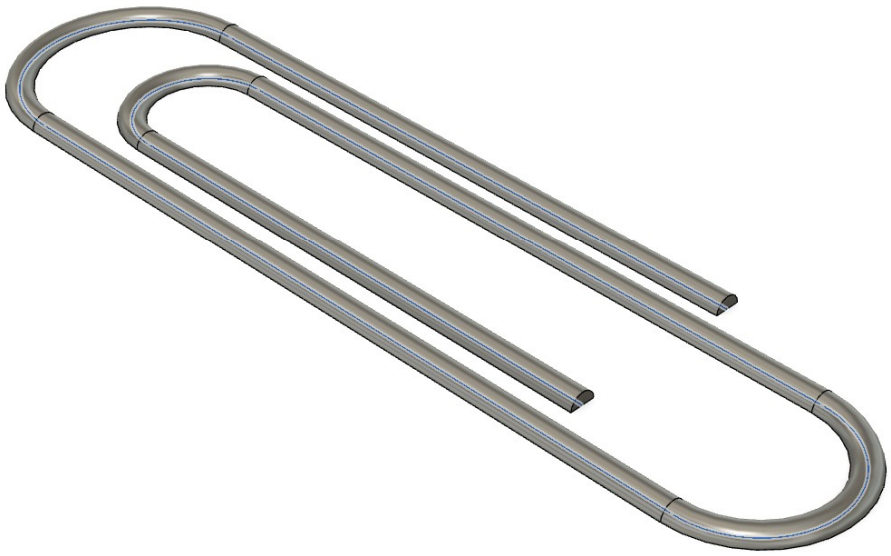

Lab 2 reference — target model / setting

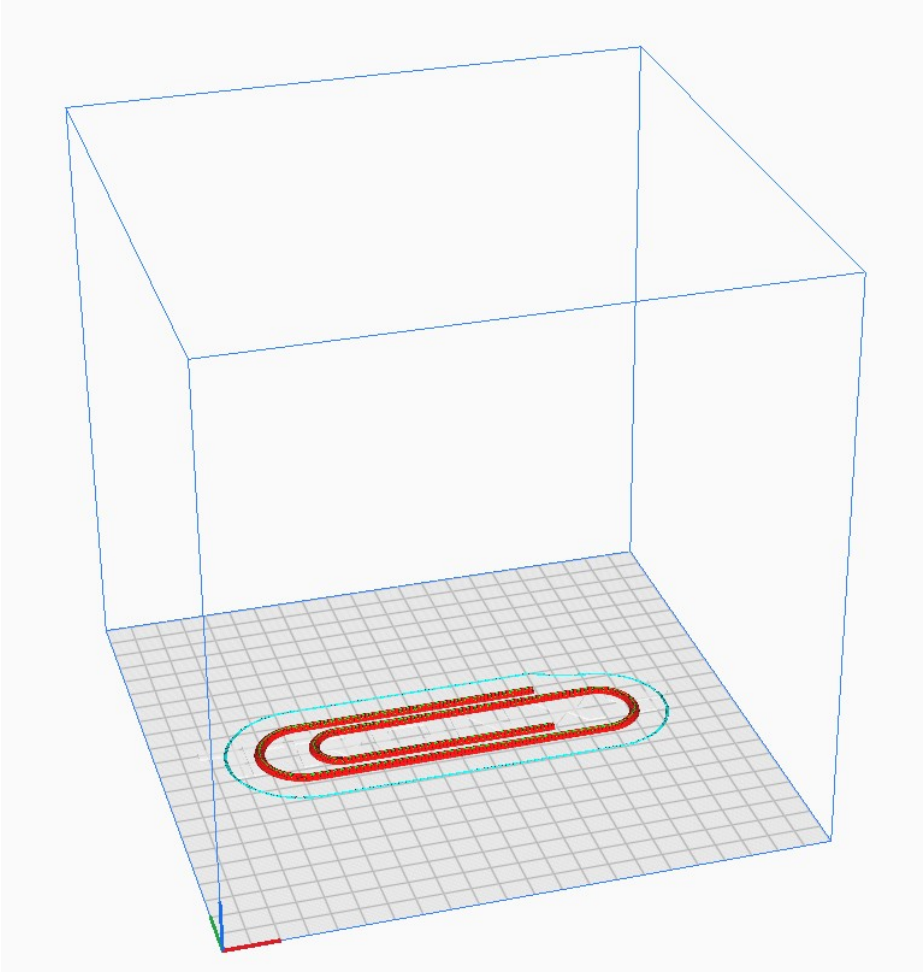

Lab 2 reference — as prepared in the tool

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

Step-by-step

9. Start a sketch on the XY plane and draw the paper-clip path — three nested U-turns — using the Line and Arc tools.

```
Create Sketch ▸ Line + Arc (3-point) — overall ~90 × 35 mm
```

10. Add fillets so every corner of the path is a smooth arc, then finish the sketch.

```
Sketch ▸ Fillet — radius 5 mm ▸ Finish Sketch
```

11. Create a plane perpendicular to one end of the path and sketch a 2.5 mm circle on it.

```
Construct ▸ Plane Along Path (t=0) ▸ Sketch ▸ Circle Ø 2.5 mm
```

12. Sweep the circle along the path to form the solid clip.

```
Create ▸ Sweep — profile: circle, path: clip sketch
```

13. Export the body as an STL file.

```
File ▸ Export ▸ STL
```

14. Open it in Cura and lay the clip flat on the build plate so no supports are needed.

```
Cura ▸ Open File ▸ clip.stl ▸ Rotate — flat
```

15. Slice with a 0.2 mm profile and print.

```
Cura ▸ Slice ▸ Save to Disk ▸ print
```

Test it

The preview shows the whole clip printing in contact with the bed; the printed clip flexes slightly and grips a few pages like a real paper clip.

Note: This lab lives in labs/lab-02-sweep-giant-paper-clip/ together with any sample files it needs.

Lab 3 — Loft — Mini Plant Pot with Custom Rails


TSC objective: A1 — apply the loft technique with guide rails to create a freeform printable vessel.

Goal: Model a mini plant pot in Fusion 360 by lofting between a square top and a circular base with custom guide rails, then slice and 3D print it.


What you'll build

A mini plant pot lofted from circle to square, 3D printed without supports. (Tools: Fusion 360, Ultimaker Cura, FDM printer (PLA).)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

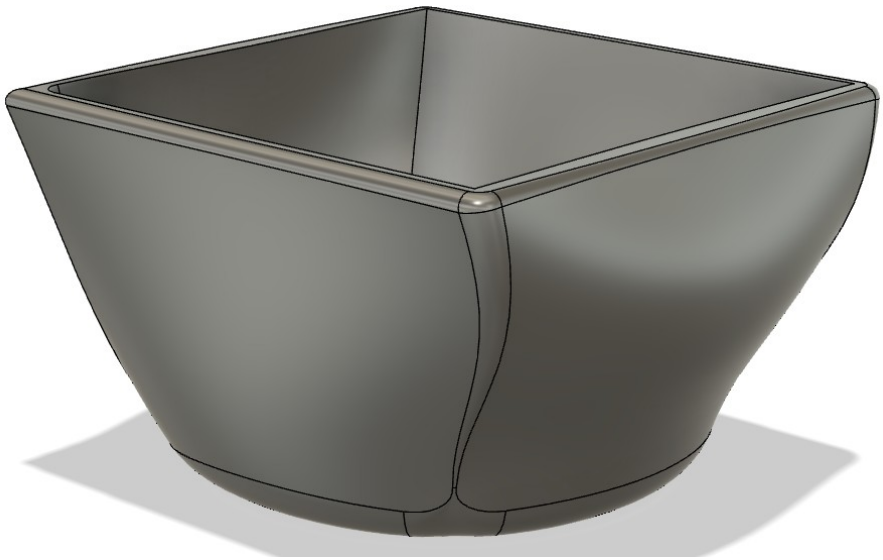

Lab 3 reference — target model / setting

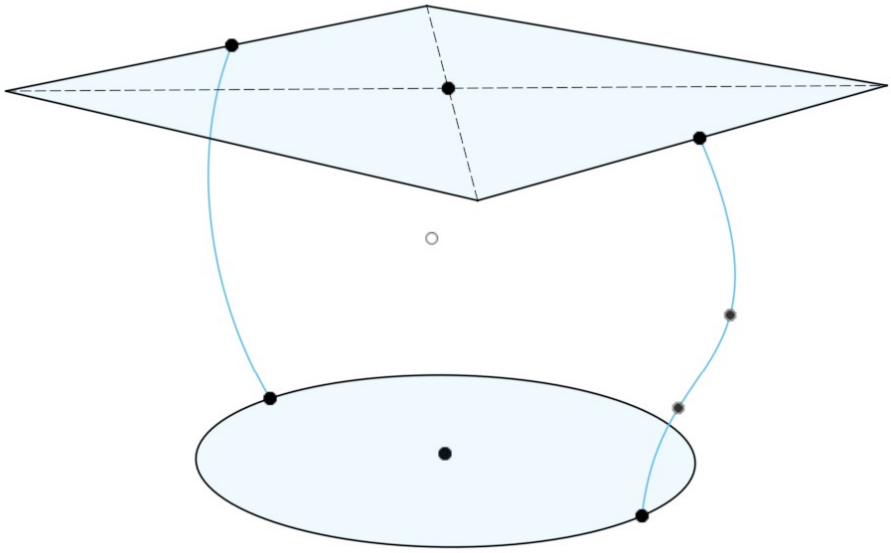

Lab 3 reference — as prepared in the tool

Step-by-step

16. Sketch a 50 mm circle on the XY plane — this is the pot base.

`Create Sketch ▸ Circle — Ø 50 mm ▸ Finish Sketch`

17. Create an offset plane 60 mm above the base and sketch a 60 mm square on it.

`Construct ▸ Offset Plane — 60 mm ▸ Sketch ▸ Rectangle 60 × 60 mm`

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

18. Loft from the circle to the square; add guide rails between matching points to control the curve.

```
Create ▸ Loft — profiles: circle + square, rails: optional splines
```

19. Shell the solid to a 2.5 mm wall, removing the top face, to hollow the pot.

```
Modify ▸ Shell — face: top, thickness 2.5 mm
```

20. Export the pot as an STL file.

```
File ▸ Export ▸ STL
```

21. Slice in Cura standing base-down; no supports are needed because the walls flare outward.

```
Cura ▸ Open File ▸ pot.stl ▸ Slice
```

22. Print the pot and inspect the loft surface finish.

```
Cura ▸ Save to Disk ▸ print
```

Test it

The pot prints support-free with an even 2.5 mm wall; the loft transition from circle to square is smooth with no layer separation.

Note: This lab lives in labs/lab-03-loft-mini-plant-pot/ together with any sample files it needs.

Lab 4 — Revolve — Funnel from a 2D Profile


TSC objective: A1 — apply the revolve technique and choose a print orientation that avoids supports.

Goal: Model a funnel in Fusion 360 by sketching its half cross-section and revolving it about the vertical axis, then invert it in Cura and 3D print it.

What you'll build


A working funnel revolved from a single 2D profile, printed wide-end down. (Tools: Fusion 360, Ultimaker Cura, FDM printer (PLA).)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

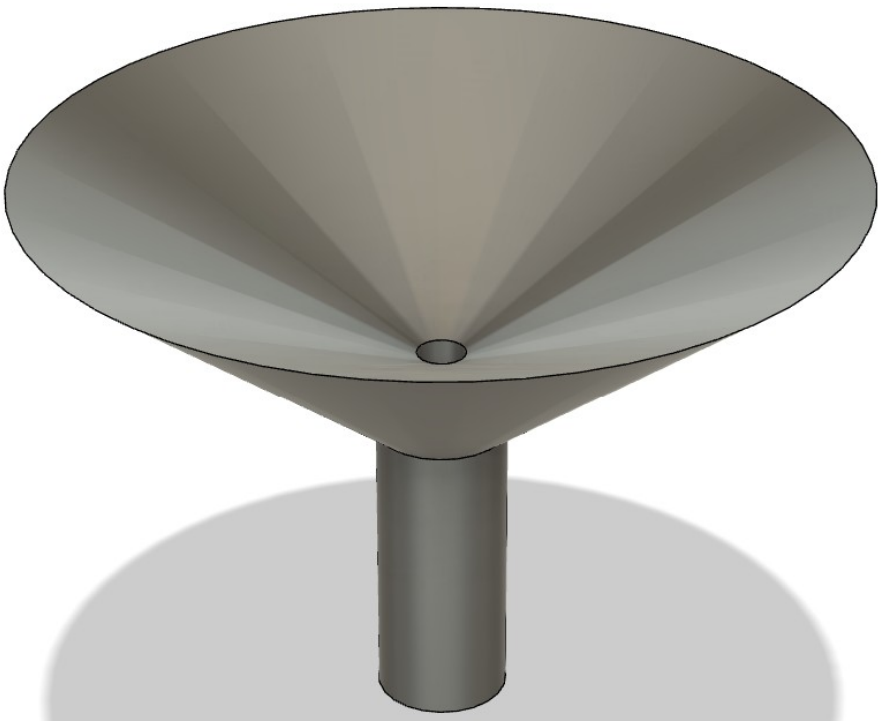

Lab 4 reference — target model / setting

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

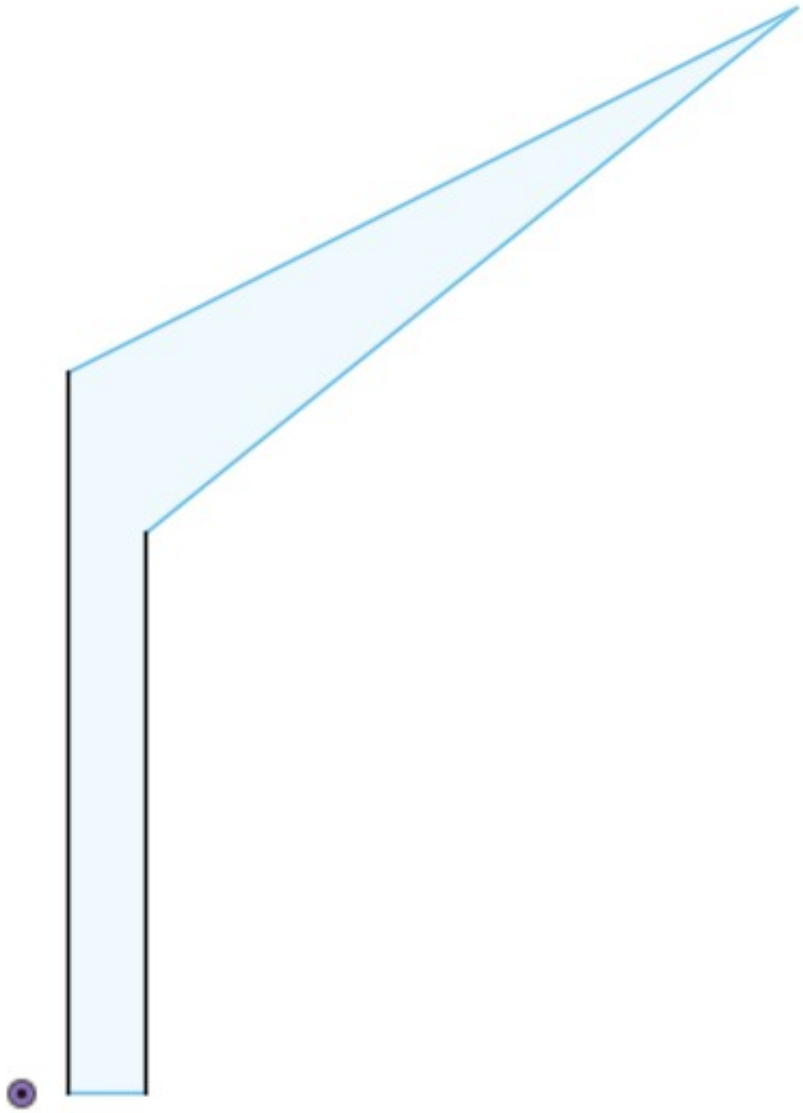

Lab 4 reference — as prepared in the tool

Step-by-step

23. Sketch the funnel's half profile on the XZ plane: a wide cone tapering into a narrow spout, drawn as a closed outline 2 mm thick.

```
Create Sketch ▸ Line — cone Ø 60 mm → spout Ø 8 mm, wall 2 mm
```

24. Revolve the profile 360° around the vertical (Z) axis to form the funnel body.

```
Create ▸ Revolve — profile: half section, axis: Z, angle 360°
```

25. Check the wall is watertight and uniform using the Inspect ▸ Section Analysis tool.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Inspect ▸ Section Analysis
```

26. Export the funnel as an STL file.

```
File ▸ Export ▸ STL
```

27. Open it in Cura — it imports spout-up; rotate it so the wide mouth sits on the build plate.

```
Cura ▸ Rotate — 180° about X (wide end down)
```

28. Slice and confirm the cone angle prints without supports, then print.

```
Cura ▸ Slice ▸ Preview ▸ Save to Disk
```

Test it

Sliced upside-down the funnel needs no supports; water poured into the printed funnel flows cleanly through the spout.

Note: This lab lives in labs/lab-04-revolve-funnel-from-a/ together with any sample files it needs.

Lab 5 — Tolerance — Container and Lid (0.2 mm Fit)


TSC objective: A1 — determine digital and physical tolerances between assembling parts.

Goal: Model a container and lid as two separate bodies in Fusion 360 with a 0.2 mm clearance, verify the digital tolerance, then 3D print and test the physical fit.


What you'll build

A two-part container whose lid slides on with a designed 0.2 mm clearance. (Tools: Fusion 360, Ultimaker Cura, FDM printer (PLA), digital calipers.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

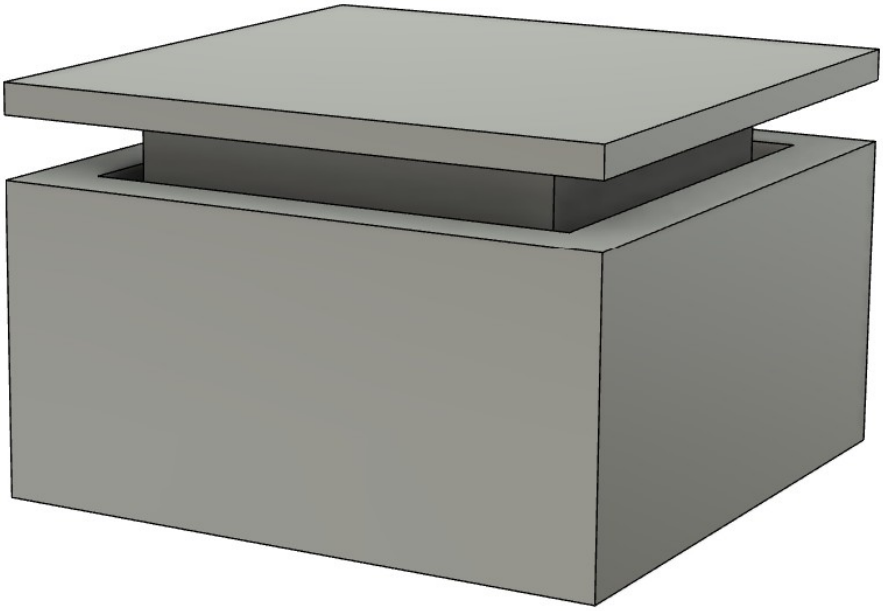

Lab 5 reference — target model / setting

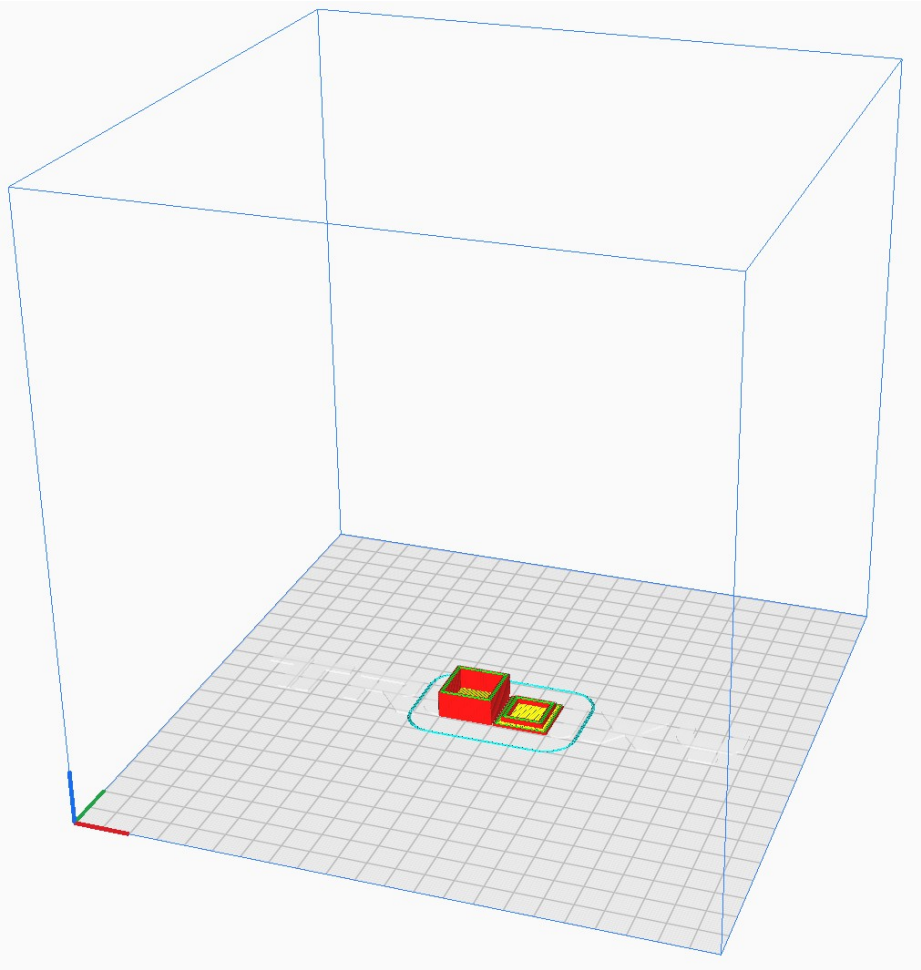

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

Step-by-step

29. Model a 50 × 50 × 30 mm box and shell it to 2 mm walls with the top face removed.

```
Create ▸ Box 50×50×30 ▸ Modify ▸ Shell — 2 mm
```

30. Model the lid as a second body: a 54 × 54 × 6 mm cap whose inner skirt is offset 0.2 mm from the box's outer wall.

```
Create ▸ Box (New Body) ▸ Modify ▸ Offset Faces — 0.2 mm clearance
```

31. Measure the designed gap with the Inspect ▸ Measure tool to confirm 0.2 mm per side.

```
Inspect ▸ Measure — wall-to-skirt gap = 0.2 mm
```

32. Export each body as its own STL file.

```
Right-click body ▸ Save As Mesh — container.stl, lid.stl
```

33. In Cura, print the container open-end up; rotate the lid open-end up as well (invert it).

```
Cura ▸ Open Files ▸ Rotate lid 180°
```

34. Slice and print both parts in one job.

```
Cura ▸ Slice ▸ Save to Disk ▸ print
```

35. Measure the printed gap with digital calipers and test the fit.

```
Calipers: outer wall vs lid skirt — expect ≈0.2 mm/side
```

Test it

The lid slides onto the container with light friction — neither loose nor forced — proving the digital 0.2 mm tolerance reproduced physically.

Note: This lab lives in labs/lab-05-tolerance-container-and-lid/ together with any sample files it needs.

Lab 6 — 3D Scan and Print a Real Object


TSC objective: A4 — evaluate reverse engineering of a component through 3D scanning and subsequent AM.

Goal: Scan a real object with a mobile 3D-scanning app, export the mesh as an STL file, repair it if needed, then slice and 3D print the reproduction.

What you'll build


© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

A 3D-printed reproduction of a real object captured by photogrammetry on your phone. (Tools: Polycam / Kiri Engine / Scandy Pro (mobile), Fusion 360, Ultimaker Cura.)

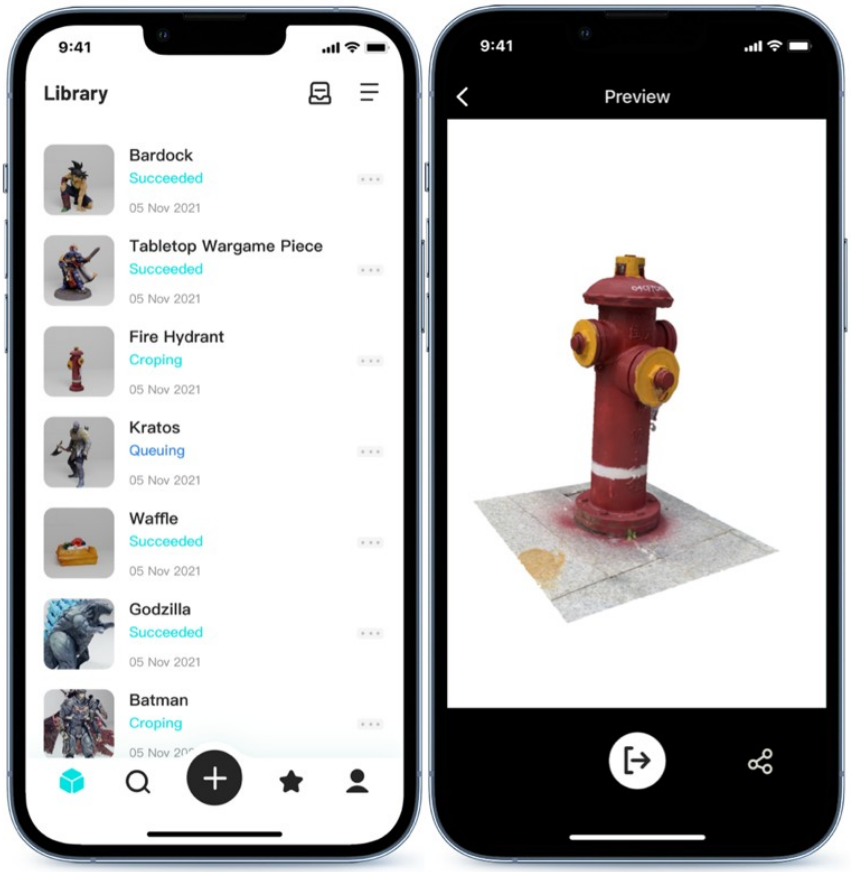

Lab 6 reference — target model / setting

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

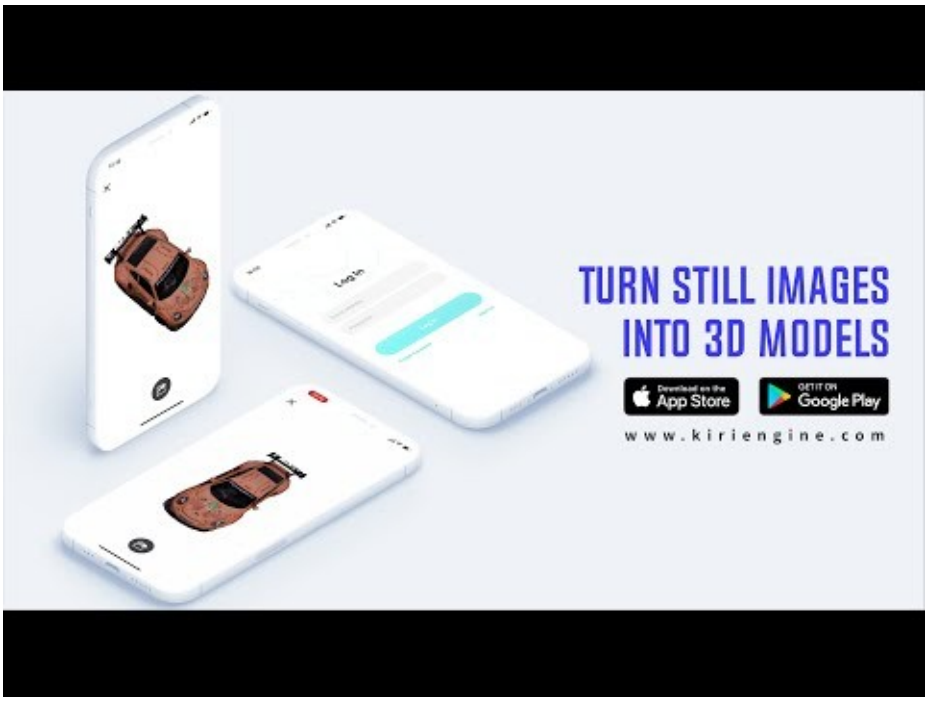

Lab 6 reference — as prepared in the tool

Step-by-step

36. Install a 3D scanning app on your phone — Polycam or Kiri Engine (Android/iOS), or Scandy Pro / Heges (iOS LiDAR).

```
App Store / Google Play ▸ Polycam or Kiri Engine
```

37. Pick a matte, textured object about the size of a mug and place it on a contrasting background with even lighting.

```
Object: non-shiny, non-transparent, stable
```

38. Capture 30–60 photos in two orbits around the object — one at eye level, one from above — keeping it centred.

```
App ▸ Photo mode ▸ capture 2 full orbits
```

39. Let the app reconstruct the mesh, then crop away the background and floor plane.

```
App ▸ Process ▸ Crop / Remove floor
```

40. Export the model as an STL (or OBJ, then convert via Fusion 360's Mesh workspace).

```
App ▸ Export ▸ STL
```

41. Repair holes or stray triangles: Fusion 360 ▸ Mesh ▸ Repair, or import directly into Cura if clean.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Fusion 360 ▸ Mesh ▸ Repair ▸ Export STL
```

42. Scale the model in Cura to a 20-minute print size (~40 mm tall), slice with supports if needed, and print.

```
Cura ▸ Scale 40 mm ▸ Slice ▸ print
```

Test it

The exported STL loads into Cura as a watertight mesh, and the printed part is a recognisable scaled reproduction of the scanned object.

Note: This lab lives in labs/lab-06-3d-scan-and-print/ together with any sample files it needs.

Topic 02 — Process Related Issues for AM

Printer hardware · slicing · adhesion · extrusion · temperature · materials (K2, K4 · A2, A3)

Key concepts

- Five issue sources — Printer hardware, materials, printing process conditions, environment conditions and design-caused issues.
- Slicing — The slicer converts an STL model into G-code printer instructions — settings decide quality, time and strength.
- Bed adhesion — Geometry, nozzle distance, platform surface and platform temperature govern whether the first layer sticks.
- Extrusion issues — Over/under-extrusion, retraction, oozing and stringing — diagnosed from the printed surface.
- Temperature window — Each material has a working temperature band; too low fails adhesion, too high causes sag, strings and smells.
- Material requirements — ABS, PLA, PETG and Nylon each demand specific temperatures, beds, ventilation and storage.

Lab 7 — Install Cura and Slice Your First Model


TSC objective: A2 — set up the slicing toolchain used to analyse and fix AM process issues.

Goal: Install Ultimaker Cura, add your printer profile, and slice a calibration cube to understand how the slicer turns an STL into G-code printer instructions.


What you'll build

A working Cura installation with your printer profile, and your first sliced G-code file. (Tools: Ultimaker Cura, cube10.stl.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

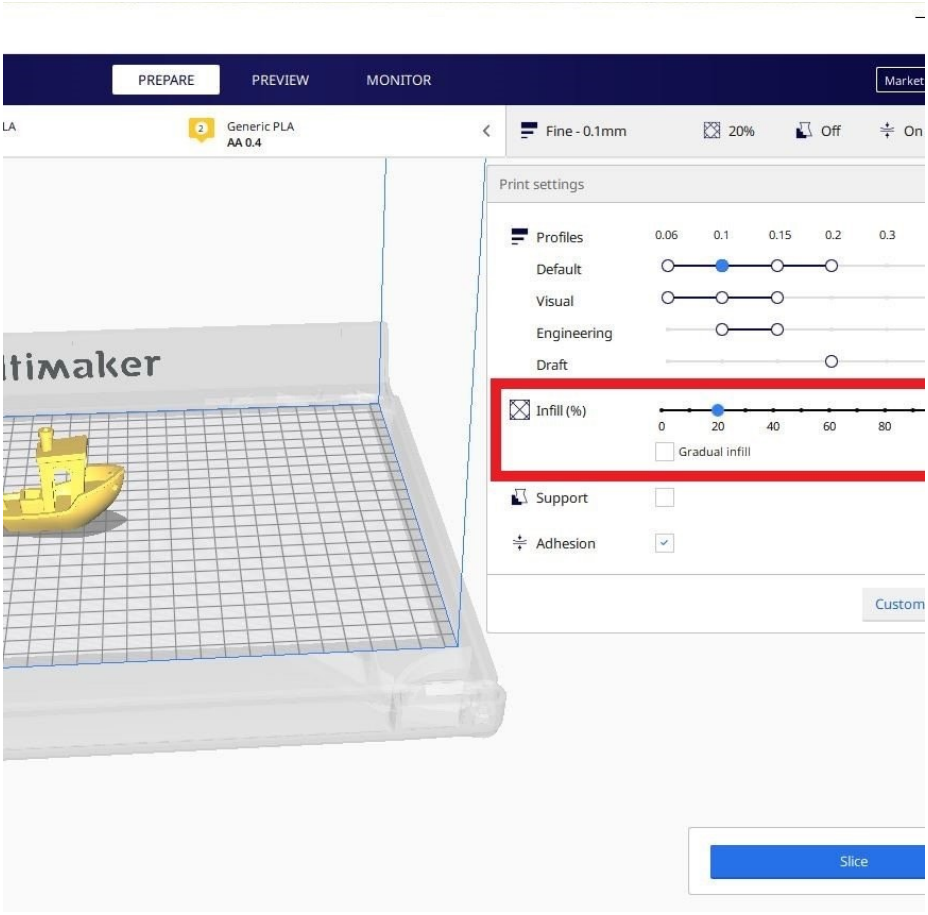

Lab 7 reference — target model / setting

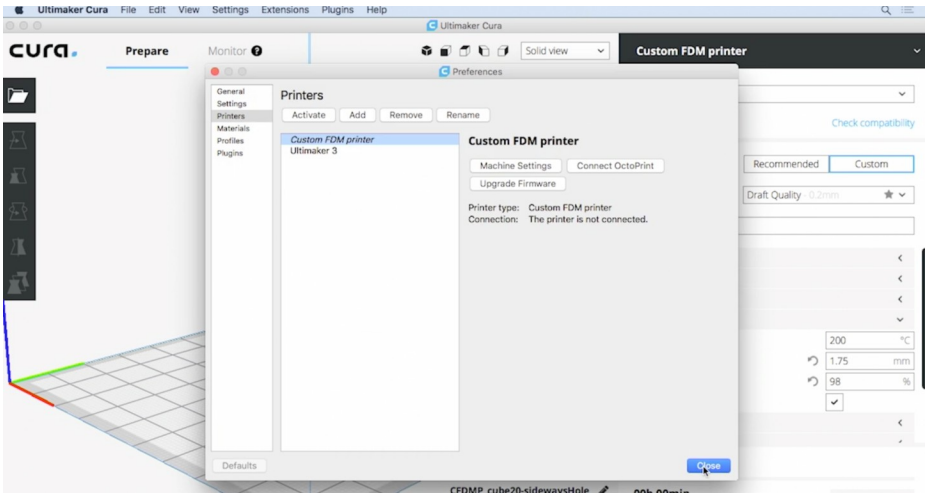

Lab 7 reference — as prepared in the tool

Step-by-step

43. Download Ultimaker Cura for your operating system and run the installer.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
https://ultimaker.com/software/ultimaker-cura
```

44. Launch Cura and step through the first-run wizard; skip account sign-in if offered.

```
Cura ▸ Get Started
```

45. Add your printer — pick the exact model, or 'Custom FFF printer' with your bed size and nozzle diameter.

```
Settings ▸ Printer ▸ Add Printer
```

46. Open the sample cube from the lab folder.

```
File ▸ Open File(s) ▸ cube10.stl
```

47. Select the Standard Quality 0.2 mm profile and note the default wall, infill, speed and temperature values.

```
Print Settings ▸ Profile — Standard Quality 0.2 mm
```

48. Slice the model and read the estimated print time and material use.

```
Slice ▸ note time + grams
```

49. Open the Preview tab and drag the layer slider to watch the toolpath layer by layer — walls, infill, travels.

```
Preview ▸ layer slider
```

50. Save the G-code to disk (or SD card) — this file is the printer's complete instruction set.

```
Save to Disk ▸ cube10.gcode
```

Test it

Cura shows a sliced preview with per-layer toolpaths and a time/material estimate, and a .gcode file is saved — open it in a text editor to see the raw movement commands.

Note: This lab lives in labs/lab-07-install-cura-and-slice/ together with any sample files it needs.

Lab 8 — Bed Adhesion — Skirt vs Brim vs Raft


TSC objective: A2 — analyse first-layer adhesion issues and select the correct adhesion aid.

Goal: Slice three instances of the same cube with a skirt, a brim and a raft, print them, and compare adhesion strength, removal effort and bottom-surface finish.


What you'll build

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

Three prints of cube10.stl demonstrating skirt, brim and raft — and a rule for when to use each. (Tools: Ultimaker Cura, cube10.stl, FDM printer.)

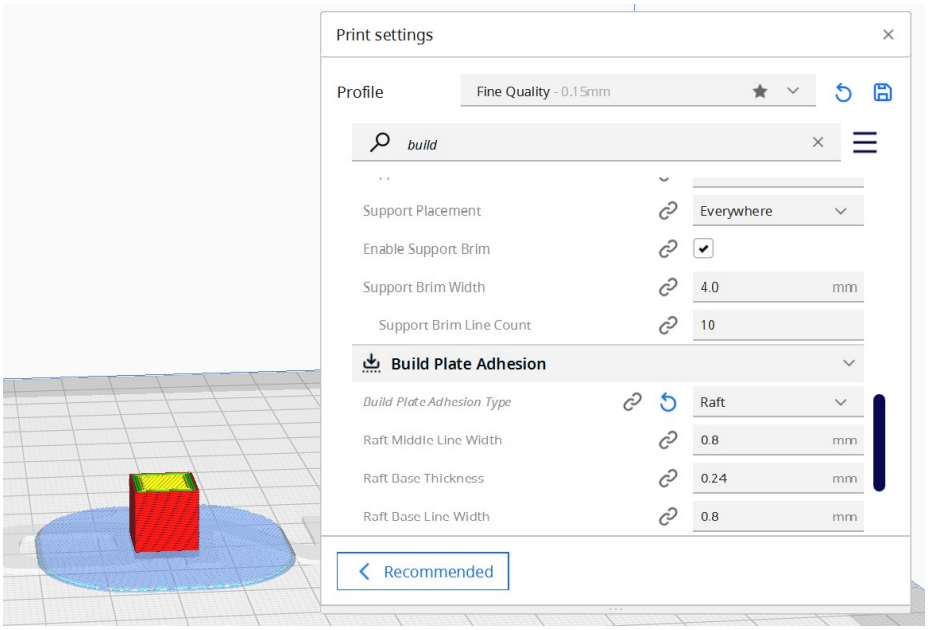

Lab 8 reference — target model / setting

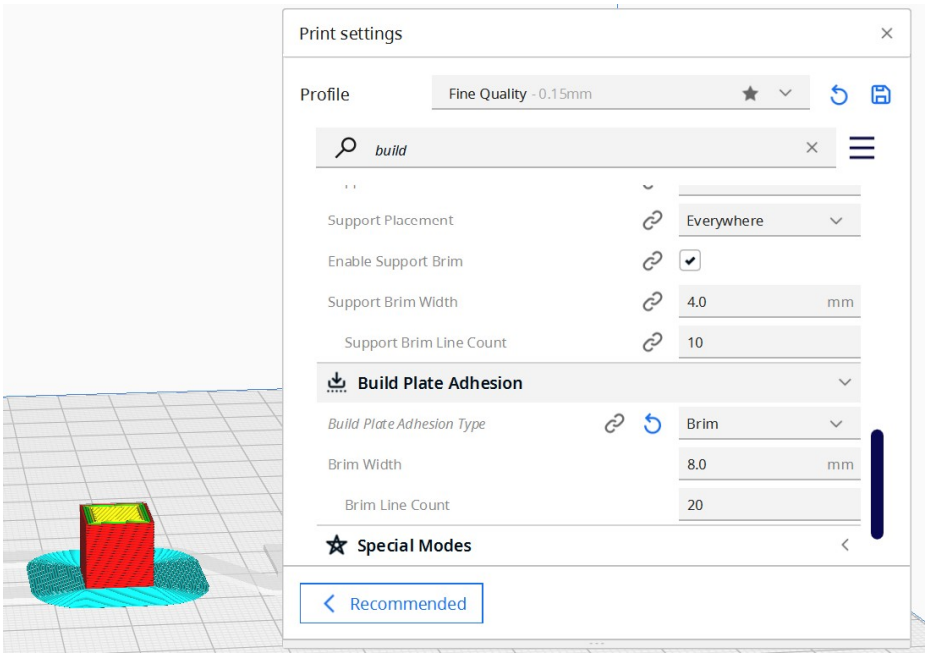

Lab 8 reference — as prepared in the tool

Step-by-step

51. Open cube10.stl in Cura and duplicate it twice so three cubes sit on the plate.

```
Right-click ▸ Multiply Selected — 2 copies
```


© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

52. Select cube 1 and set Build Plate Adhesion to Skirt — a loop that primes the nozzle without touching the part.

```
Per Model Settings ▸ Build Plate Adhesion ▸ Skirt
```

53. Select cube 2 and set adhesion to Brim, 8 mm — a flat border fused to the part's first layer.

```
Build Plate Adhesion ▸ Brim — width 8 mm
```

54. Select cube 3 and set adhesion to Raft — a printed platform the part sits on.

```
Build Plate Adhesion ▸ Raft
```

55. Slice and compare the three toolpaths in Preview; note the extra time and material the raft adds.

```
Slice ▸ Preview
```

56. Print all three cubes in one job.

```
Save to Disk ▸ print
```

57. Remove each cube: note how the skirt never touches, the brim peels off the edge, and the raft must be pried from the base.

```
Deburring tool / scraper
```

Test it

You can state when each aid applies — skirt to prime the nozzle, brim for warping-prone or small-footprint parts, raft for top-heavy or poorly adhering parts — and show the bottom-finish difference.

Note: This lab lives in labs/lab-08-bed-adhesion-skirt-vs/ together with any sample files it needs.

Lab 9 — Support Structures for Overhangs


TSC objective: A2, A3 — determine when overhang geometry requires supports and generate them.

Goal: Slice twist.stl — a model with steep overhangs — first without and then with generated supports, print it, and remove the supports cleanly.


What you'll build

A printed twist model whose overhangs succeeded because of correctly placed supports. (Tools: Ultimaker Cura, twist.stl, FDM printer.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

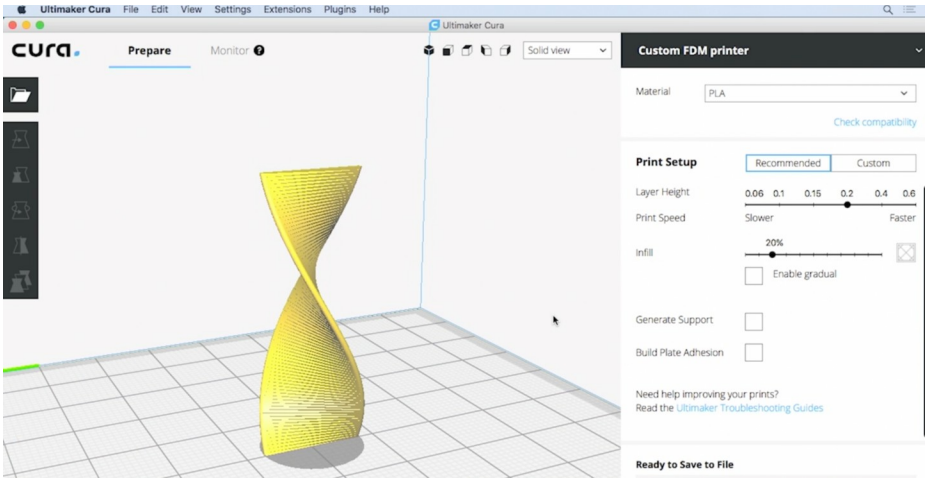

Lab 9 reference — target model / setting

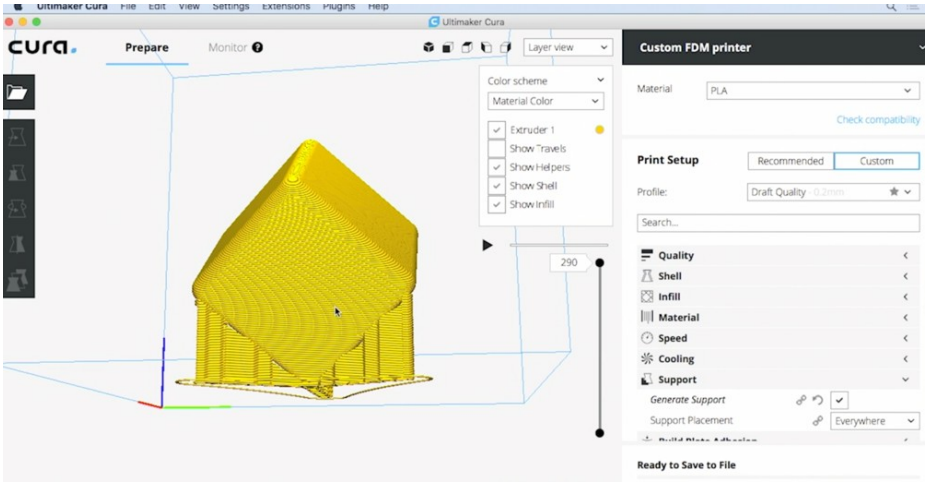

Lab 9 reference — as prepared in the tool

Step-by-step

58. Open twist.stl in Cura and slice it with supports off.

`File ▸ Open ▸ twist.stl ▸ Slice`

59. In Preview, find the layers that start in mid-air — these overhangs would droop or fail.

`Preview ▸ layer slider — spot unsupported islands`

60. Enable support generation.

`Print Settings ▸ Support ▸ Generate Support ✔`

61. Set placement to Touching Buildplate first; compare with Everywhere and note the difference in Preview.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Support Placement — Touching Buildplate vs Everywhere
```

62. Keep the support overhang angle at 45–50° so only genuinely steep faces get support.

```
Support Overhang Angle — 50°
```

63. Slice again and compare time and material with the unsupported version, then print.

```
Slice ▸ Save to Disk ▸ print
```

64. Snap the supports off with pliers, working from the edges inward, and inspect the supported surfaces.

```
Needle-nose pliers ▸ remove supports
```

Test it

The unsupported slice shows mid-air layers while the supported print completes; supports snap away leaving only minor scarring on the underside.

Note: This lab lives in labs/lab-09-support-structures-for-overhangs/ together with any sample files it needs.

Lab 10 — Filament Diagnostics — Diameter, Temperature and Flow


TSC objective: A2, A3 — analyse material-side causes of extrusion issues and verify filament quality.

Goal: Measure filament diameter with digital calipers, verify it against the slicer's material setting, and run a temperature check to place your filament in its working window.

What you'll build

A verified filament diameter entry in Cura and a chosen printing temperature backed by test evidence. (Tools: Digital calipers, filament spool (PLA/ABS/PETG), Ultimaker Cura, FDM printer.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

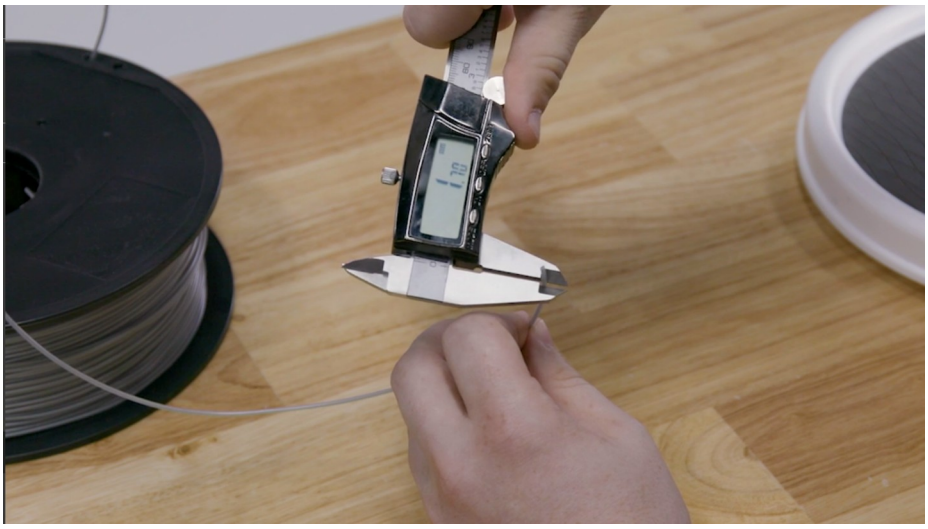

Lab 10 reference — target model / setting

Material	Extruder	Bed
PLA	195–215°C	Room temp or 60°C
PETG	240–260°C	Room temp for small objects, or 80–90°C
Nylon	240–260°C	Room temp, but requires special platforms
ABS	240–260°C	110–120°C
Polycarbonate	280–300°C	130°C+

Lab 10 reference — as prepared in the tool

Step-by-step

65. Cut off about 30 cm of filament from the spool end.

```
Flush cutters — ~30 cm sample
```

66. Measure the diameter with digital calipers at five points along the sample, rotating the filament at each point.

```
Calipers — 5 readings, 2 orientations each
```

67. Average the readings; a good 1.75 mm filament stays within ±0.05 mm.

```
Expect 1.70–1.80 mm
```

68. Enter the measured diameter in Cura's material settings so flow is computed from reality, not the label.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Print Settings ▸ Material ▸ Diameter — measured value
```

69. Check the material's temperature window: PLA 195–215 °C, PETG 240–260 °C, ABS 240–260 °C, Nylon 240–260 °C.

```
Material box / temperature table
```

70. Set the printing temperature to the middle of the window and print a small test cube; drop 5 °C if strings appear, raise 5 °C if layers don't bond.

```
Material ▸ Printing Temperature — tune in 5 °C steps
```

71. Watch the first layers: clicking from the extruder or ground filament means the temperature is too low or the nozzle is partially blocked.

```
Listen: extruder clicks = under-extrusion warning
```

Test it

Your five caliper readings average within ±0.05 mm of nominal, Cura carries the measured diameter, and the test cube prints with bonded layers and no stringing at the temperature you selected.

Note: This lab lives in labs/lab-10-filament-diagnostics-diameter-temperature/ together with any sample files it needs.

Topic 03 — Process Improvement for AM

Infill · surface quality · supports · post-processing · business impact (K5, K7 · A5, A6)

Key concepts

- Infill optimisation — Perimeters, infill pattern and density trade strength against material use and print time.
- Surface quality — Layer height, top thickness, ironing and fuzzy skin control the finish and the print duration.
- Support strategy — Orient parts to minimise supports; add them only where overhangs demand, and plan their removal.
- Post-processing — FDM, SLS, SLA and metal parts each have a defined finishing chain — from support removal to plating.
- Business impact — Measure speed, quality, material use, cost and user feedback before and after every process change.
- Sustainability — Calibration, training, sustainable materials and stakeholder collaboration keep AM operations viable long-term.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg


Lab 11 — Perimeters and Infill — Strength vs Speed

TSC objective: A5, A6 — apply wall/infill optimisation and assess its measured impact on time and material.


Goal: Vary wall count and infill density on the same model in Cura, and record how each change moves print time, material use and expected strength.

What you'll build

A comparison table of wall/infill settings against sliced print time and material grams. (Tools: Ultimaker Cura, cube10.stl.)

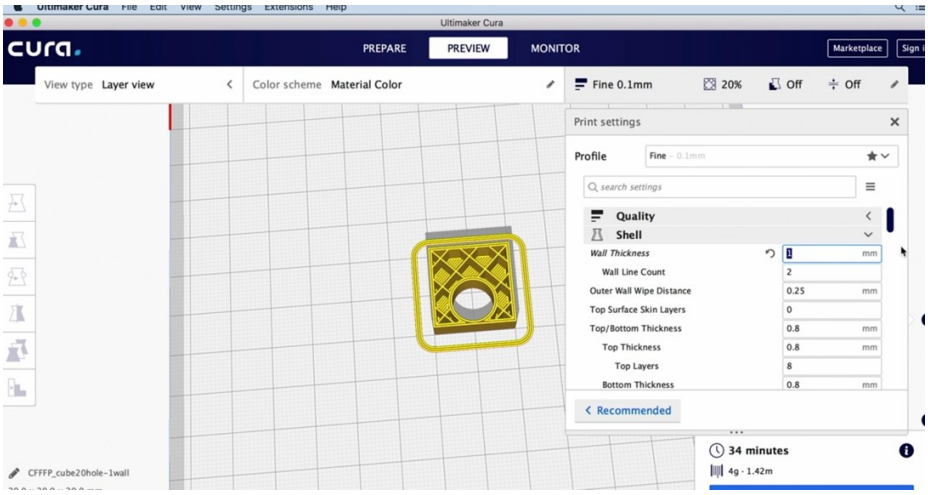

Lab 11 reference — target model / setting

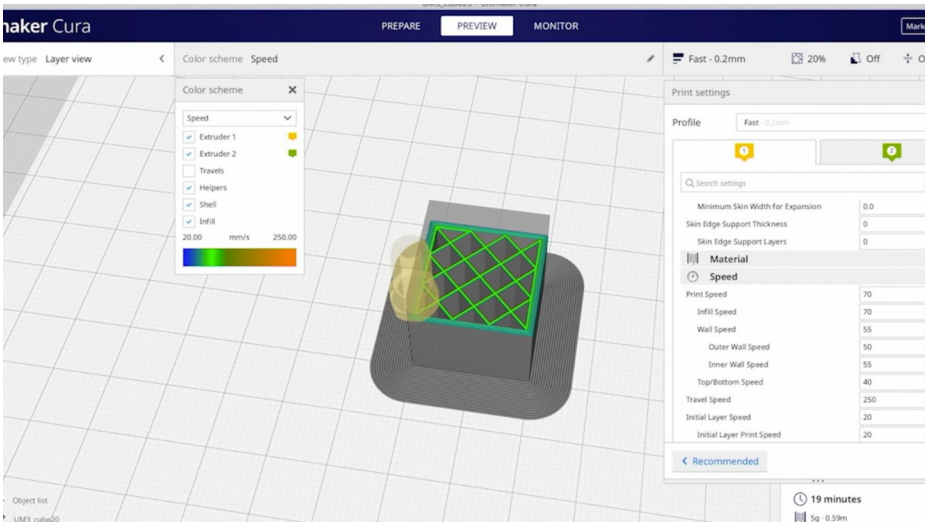

Lab 11 reference — as prepared in the tool

Step-by-step

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

72. Open cube10.stl and slice with the defaults — 2 walls, 20% infill; record time and grams.

```
Slice ▸ record: baseline
```

73. Raise the wall line count to 4 and re-slice; record the change.

```
Print Settings ▸ Walls ▸ Wall Line Count — 4
```

74. Reset walls to 2, then set infill density to 12% and re-slice; record.

```
Infill ▸ Density — 12%
```

75. Set infill density to 50% and re-slice; record.

```
Infill ▸ Density — 50%
```

76. In Preview, inspect how the infill lattice and wall thickness change at each setting.

```
Preview ▸ layer slider
```

77. Tabulate the four runs: time, grams, and where the strength actually comes from (walls more than infill).

```
Table: setting → time → grams
```

Test it

Your table shows infill density driving time/material roughly linearly while extra walls add strength more efficiently — and you can justify a setting choice for a functional vs decorative part.

Note: This lab lives in labs/lab-11-perimeters-and-infill-strength/ together with any sample files it needs.

Lab 12 — Infill Patterns — Zigzag vs Grid Strength Test


TSC objective: A5 — evaluate infill pattern and density as a quality-improvement technique.

Goal: Print cube10.stl with zigzag 20% and grid 30% infill, tune the top layers, then compare the two cubes' stiffness by hand.


What you'll build

Two printed cubes with different infill patterns/densities and a hands-on strength comparison. (Tools: Ultimaker Cura, cube10.stl, FDM printer.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

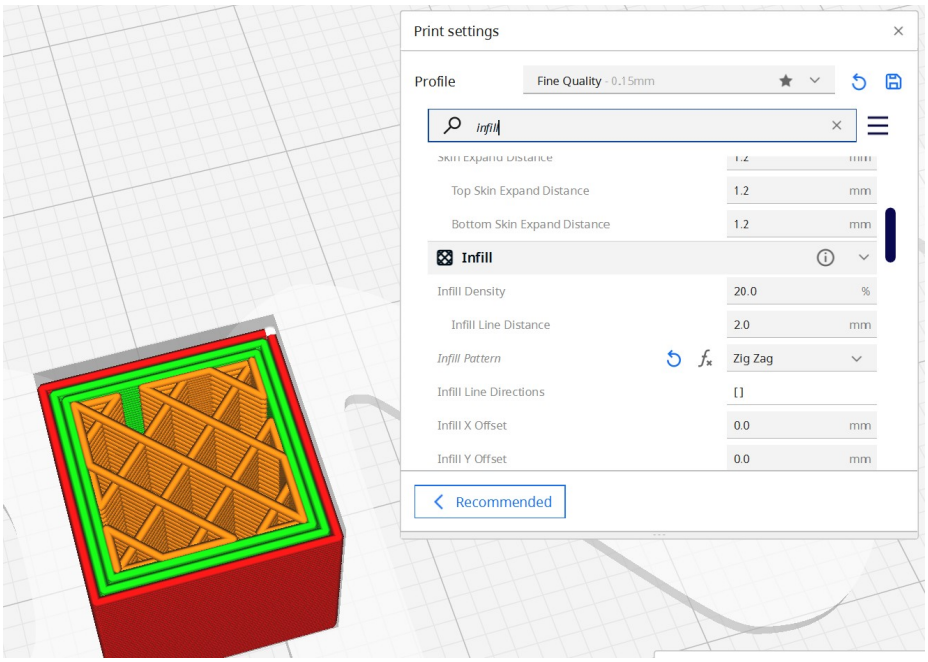

Lab 12 reference — target model / setting

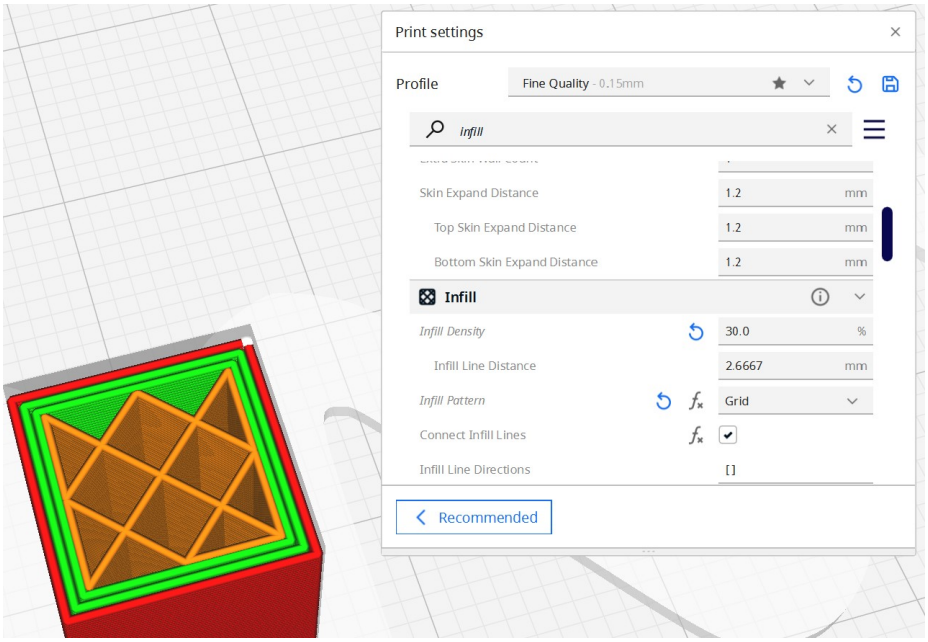

Lab 12 reference — as prepared in the tool

Step-by-step

78. Open cube10.stl and set infill pattern to Zigzag at 20% density.

```
Infill ▸ Pattern — Zigzag, Density — 20%
```

79. Set top layers to 4 so the roof closes cleanly over the infill.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Top/Bottom ▸ Top Layers — 4
```

80. Slice, save and print the first cube.

```
Slice ▸ Save to Disk ▸ print
```

81. Change the pattern to Grid at 30% density and re-slice; note the time difference.

```
Infill ▸ Pattern — Grid, Density — 30%
```

82. Print the second cube.

```
Save to Disk ▸ print
```

83. Compare the cubes: squeeze the walls, press the top faces, and note pillowing or gaps over the infill.

```
Hand test: wall flex + roof sag
```

Test it

The grid 30% cube is noticeably stiffer and its roof better supported; you can articulate the pattern/density/time trade-off for a production part.

Note: This lab lives in labs/lab-12-infill-patterns-zigzag-vs/ together with any sample files it needs.

Lab 13 — Layer Height and Top Thickness — Surface Quality


TSC objective: A5 — optimise layer height and top thickness for surface quality vs speed.

Goal: Slice the same model at 0.1 mm, 0.2 mm and 0.3 mm layer heights, adjust top thickness to a constant, and compare surface quality against print time.


What you'll build

Sliced (and optionally printed) evidence of the layer-height ladder: finish vs time. (Tools: Ultimaker Cura, cube10.stl, FDM printer.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

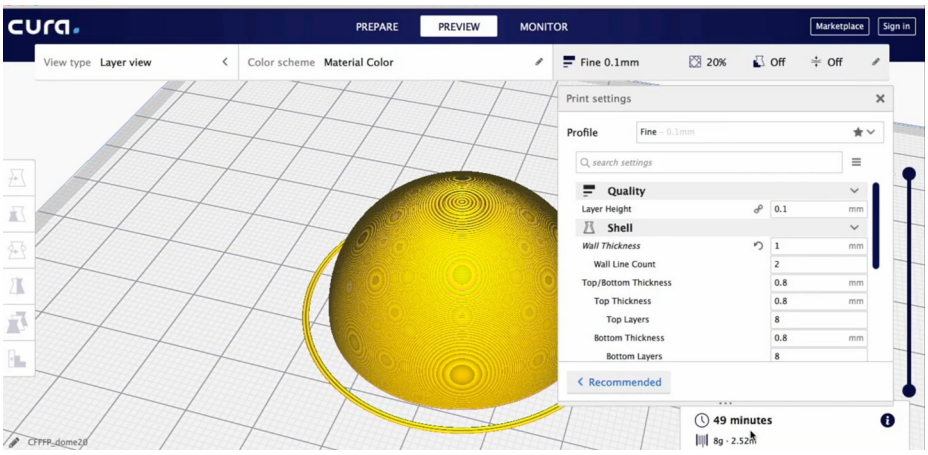

Lab 13 reference — target model / setting

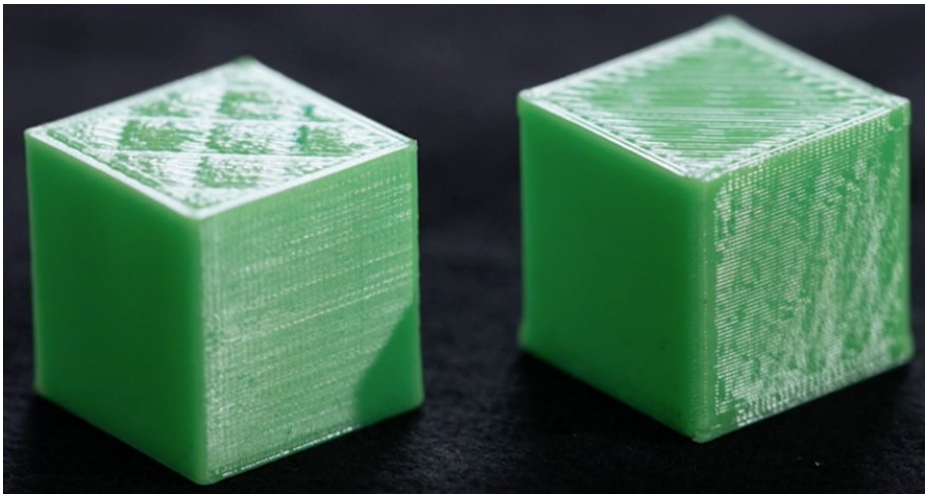

Lab 13 reference — as prepared in the tool

Step-by-step

84. Open cube10.stl and slice at 0.2 mm layer height; record the time.

`Quality ▸ Layer Height — 0.2 mm`

85. Slice at 0.1 mm; note the doubled layer count and time.

`Layer Height — 0.1 mm`

86. Slice at 0.3 mm; note the coarser stairs and the reduced time.

`Layer Height — 0.3 mm`

87. Keep top thickness constant at 0.8 mm — so the TOP LAYER COUNT changes with layer height (8 / 4 / 3 layers).

`Top/Bottom ▸ Top Thickness — 0.8 mm`

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

88. In Preview, compare side-wall stair-stepping and the roof at each height.

```
Preview ▸ compare walls + roof
```

89. Print the 0.1 mm and 0.3 mm cubes and compare finish by eye and touch.

```
print both
```

Test it

You can rank the three layer heights by surface quality and by print time, and state why top thickness (not top layer count) is the setting to keep constant.

Note: This lab lives in labs/lab-13-layer-height-and-top/ together with any sample files it needs.


Lab 14 — Ironing — Glass-Smooth Top Surfaces

TSC objective: A5 — apply ironing to improve top-surface quality and assess its cost.

Goal: Enable Cura's ironing feature, which passes the hot nozzle over the top surface with a tiny extrusion, and compare the top finish with and without it.


What you'll build

Two cube prints — ironed and standard — demonstrating the top-surface improvement. (Tools: Ultimaker Cura, cube10.stl, FDM printer.)

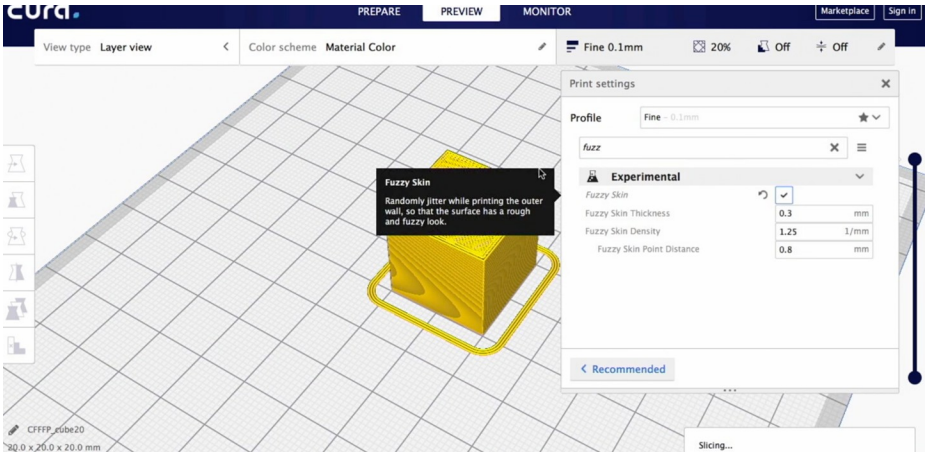

Lab 14 reference — target model / setting

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

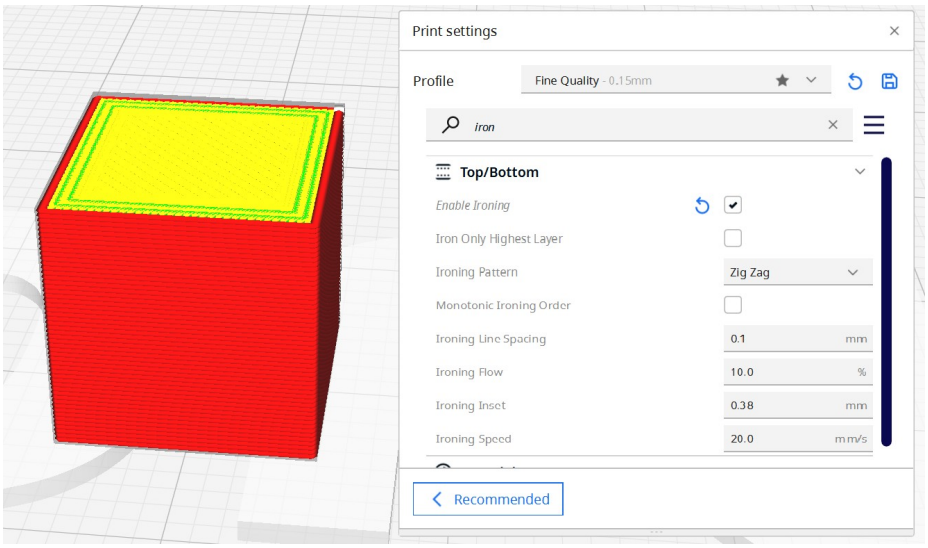

Lab 14 reference — as prepared in the tool

Step-by-step

90. Open cube10.stl and slice with the standard 0.2 mm profile; print cube 1 as the control.

```
Slice ▸ print control cube
```

91. Enable ironing.

```
Top/Bottom ▸ Enable Ironing ✔
```

92. Inspect the ironing pass in Preview — a dense zigzag over the top face at ~10% flow.

```
Preview ▸ top layer ▸ ironing pass
```

93. Slice and note the added time (ironing is slow but only on top faces).

```
Slice ▸ record extra minutes
```

94. Print cube 2 with ironing enabled.

```
Save to Disk ▸ print
```

95. Compare the two top faces under raking light: the ironed face should be near-flat with faint tool lines.

```
Visual + touch comparison
```

Test it

The ironed cube's top face is visibly smoother and flatter than the control's, and you can state when the extra time is worth it (visible top faces, lids, logos).

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

Note: This lab lives in labs/lab-14-ironing-glass-smooth-top/ together with any sample files it needs.


Lab 15 — Fuzzy Skin — Textured Walls on a Vase

TSC objective: A5 — apply fuzzy skin as a deliberate surface-texture treatment.

Goal: Enable fuzzy skin on a vase model so the outer wall is jittered into a stone-like texture that hides layer lines, and print it with buildplate adhesion.

What you'll build

A vase with a uniform fuzzy texture that masks layer lines completely. (Tools: Ultimaker Cura, open vase.stl, FDM printer.)

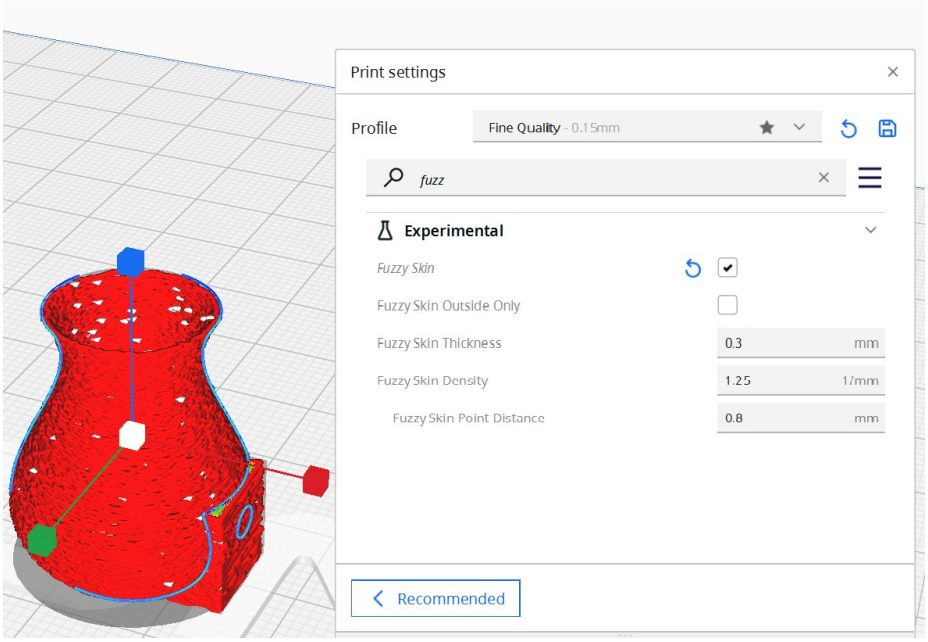

Lab 15 reference — target model / setting

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg



Lab 15 reference — as prepared in the tool

Step-by-step

96. Open 'open vase.stl' in Cura.

`File ▸ Open ▸ open vase.stl`

97. Enable fuzzy skin — the slicer adds random jitter to the outer wall toolpath.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

```
Experimental ▸ Fuzzy Skin ✔
```

98. Set fuzzy skin thickness to 0.3 mm and density to 1.25/mm for a fine stone texture.

```
Fuzzy Skin Thickness 0.3 mm · Density 1.25
```

99. Add a brim so the tall thin vase stays anchored.

```
Build Plate Adhesion ▸ Brim
```

100. Slice and inspect the jittered outer wall in Preview.

```
Slice ▸ Preview ▸ outer wall
```

101. Print the vase and examine the texture — layer lines should be invisible within the fuzz.

```
print + inspect
```

Test it

The printed vase carries an even, tactile texture on every outer wall with no visible layer banding — a finish achieved purely in slicing, with zero post-processing.

Note: This lab lives in labs/lab-15-fuzzy-skin-textured-walls/ together with any sample files it needs.

Lab 16 — Post-Processing — Support Removal and Sanding


TSC objective: A5 — apply post-processing to lift the quality of an FDM part.

Goal: Print the vase tilted so it needs supports, remove them cleanly, then sand the scarred surfaces through progressive grits to a smooth finish.


What you'll build

A tilted-print vase taken from raw support-scarred print to a smooth finished part. (Tools: Ultimaker Cura, open vase.stl, FDM printer, pliers, sandpaper 120→400 grit.)

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

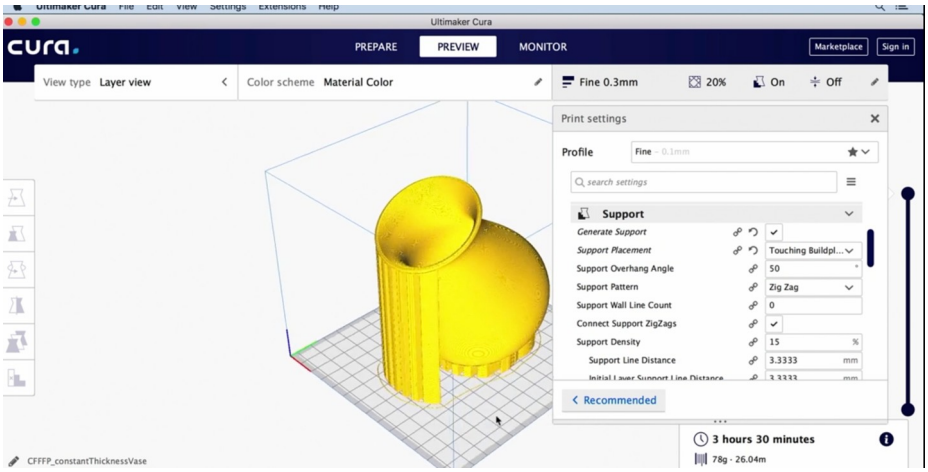

Lab 16 reference — target model / setting

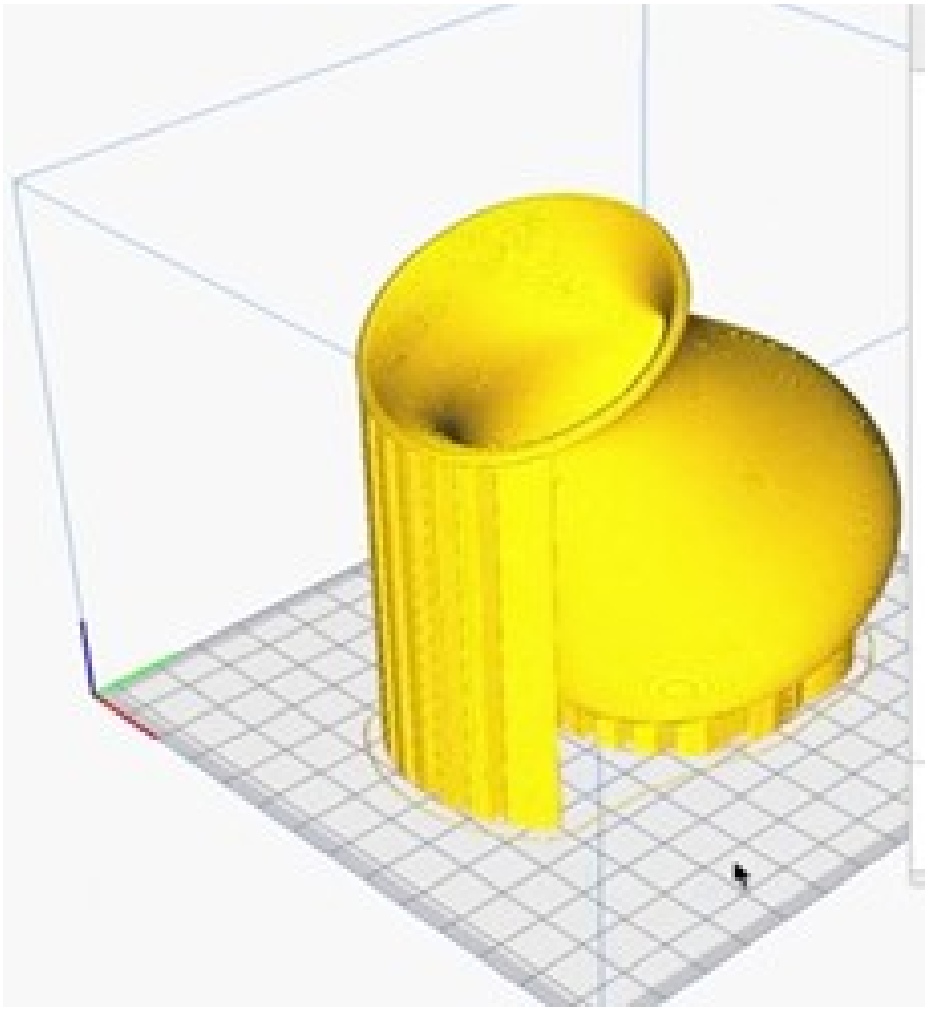

Lab 16 reference — as prepared in the tool

Step-by-step

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

102. Open 'open vase.stl' in Cura and rotate it 15–20° off vertical so one side overhangs.

```
Rotate — 15–20° tilt
```

103. Enable supports (Touching Buildplate) and slice.

```
Support ▸ Generate ✔ ▸ Touching Buildplate
```

104. Print the tilted vase with its supports.

```
Save to Disk ▸ print
```

105. Snap the supports off with pliers, working from the outer edge toward the part.

```
Needle-nose pliers
```

106. Sand the support-scarred areas with 120-grit, then step through 240 → 400 grit in circular motions.

```
Sandpaper 120 → 240 → 400
```

107. Optionally wet-sand at 400 grit for a satin finish, and compare the treated side with an untouched area.

```
Wet sand + compare
```

Test it

The support side of the vase is smooth to the touch with no visible scars from a normal viewing distance — the part looks moulded rather than printed.

Note: This lab lives in labs/lab-16-post-processing-support-removal/ together with any sample files it needs.

Revision — What to Master for the Assessment

Knowledge (Written Assessment, K1–K7)

- K1 — AM characteristics: layer-by-layer construction from CAD, design freedom, rapid prototyping, no part-specific tooling; the 7 ISO/ASTM process families and DMLS/SLS/SLM.
- K2 — Process requirements: correct material choice (PLA/ABS/PETG/Nylon/resins), temperature windows, build environment (draughts, humidity, vibration), calibrated and maintained printers.
- K3 — Selection factors: material properties, design complexity, production volume and speed, post-processing needs, cost.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

- K4 — Impact on operations: no tooling/molds, shorter development cycles, complex geometry, customisation without cost, less waste, distributed manufacturing.
- K5 — Performance review methods: dimensional accuracy and tolerance checks, surface-finish evaluation, material property tests, build speed/throughput, cost per part.
- K6 — Benefits vs trade-offs: rapid prototyping, design flexibility, low waste, customisation — against bulk-production cost, material limits, post-processing load, anisotropic strength.
- K7 — Sustainability: operator training, equipment calibration/maintenance, recycling and circular material use, sustainable-material R&D, stakeholder collaboration on standards.

Application (Practical Performance, A1–A6)

- A1 — Material and design analysis: mechanical/thermal properties, stress points, load-bearing needs, AM-process compatibility, post-processing and surface treatments.
- A2 — Process issues: DMLS warping/powder inconsistency; SLS incomplete sintering/thermal distortion; SLM oxidation/residual stress; powder-bed spreading and recycling; inkjet nozzle clogs and layer misalignment.
- A3 — Processes and procedures: DMLS/SLM for metals, FDM/SLS for non-metals, separate post-processing per material, bonding techniques (e.g. electroless deposition) for hybrid parts, integrity testing.
- A4 — Reverse engineering: scan → refine mesh to CAD → repair wear digitally → select AM process → manufacture and post-process.
- A5 — Optimisation: layer height/orientation, walls/infill tuning, machine calibration, support optimisation, surface treatments (ironing, fuzzy skin), real-time monitoring and simulation.
- A6 — Impact assessment: baseline → change → measure → compare → decide, across production speed, material use/wastage, quality (accuracy, finish, properties), resource utilisation, cost and operator feedback.

Practice

- Practice portal: https://exams.tertiaryinfotech.com
- Course portal (slides, guide, assessment submission): https://lms-tms.tertiaryinfotech.com
- Redo each lab's Test-it check from memory — the practical assessment mirrors the lab skills.

Glossary

- **Additive Manufacturing (AM) —** Building parts layer by layer directly from a CAD file — the industrial discipline around 3D printing.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg

- **STL —** The mesh file format (triangles) exported from CAD and consumed by slicers.
- **G-code —** The movement/temperature/extrusion command language slicers output and printers execute.
- **Slicer —** Software (e.g. Cura) that converts a 3D model into layer-by-layer printer instructions.
- **FDM/FFF —** Fused Deposition Modeling — melted filament extruded layer by layer; the desktop standard.
- **SLA / DLP / LCD —** Vat photopolymerisation — light selectively cures liquid resin.
- **SLS —** Selective Laser Sintering — a laser fuses polymer powder, no supports needed.
- **DMLS / SLM —** Metal powder bed fusion — sintered (DMLS) vs fully melted (SLM).
- **DED —** Directed Energy Deposition — blown powder or wire melted in place; repair and large parts.
- **Infill —** The internal lattice of a print — pattern and density trade strength for time/material.
- **Perimeter / wall —** The solid outline of each layer; walls carry most of a part's strength.
- **Raft / brim / skirt —** First-layer adhesion aids: platform under the part / border fused to its edge / non-touching priming loop.
- **Retraction —** Pulling filament back during travel moves to stop oozing and stringing.
- **Heat creep —** Heat spreading up the filament path causing jams before the melt zone.
- **Pillowing —** Top-surface sagging/curling over sparse infill on thin roofs.
- **Ironing —** A near-zero-flow hot pass that smooths top surfaces.
- **Fuzzy skin —** Deliberate jitter on outer walls that hides layer lines behind texture.
- **Reverse engineering —** Capturing an existing part (3D scanning) and rebuilding it as editable CAD for re-manufacture.
- **Photogrammetry —** Reconstructing 3D geometry from many overlapping photographs.
- **Post-processing —** Everything after the build: support removal, curing, heat treatment, machining, finishing.

© 2026 Tertiary Infotech Academy Pte Ltd. All rights reserved. · www.tertiarycourses.com.sg