
Sensor Fundamentals » maxEmbedded 12/01/2023, 18:04

maxEmbedded Index

Categories »

Tools

Search This Site...

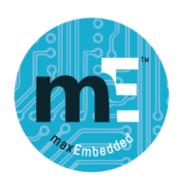

# maxEmbedded.com

a guide to industries, embedded electronices and computer vision

Home mE Index Getting Started Atmel AVR » Electronics More » About »

Home Atmel AVR

Mayank 30 comments

Atmel AVR Electronics Microcontrollers



# Sensor Fundamentals Human-like Robots

Humans (or in general any living organism) has to have some senses to become totally autonomous. Humans have five senses – vision, smell, taste, hearing and touch. If so, then what do robots have?



Search maxEmbedded

Popular Recent Random

MON The ADC of the AVR

FRI AVR Timers – TIMERO

TUE RF Module Interfacing without Microcontrollers

THU LCD Interfacing with AVR

FRI I/O Port Operations in AVR

Browse maxE by Categories

Sensor Fundamentals » maxEmbedded 12/01/2023, 18:04



Let me ask you a simple question. What does a robot needs to become totally autonomous? By totally autonomous, I mean that the robot should work on its own without any human interference. Most of you would agree with me that it needs intelligence. This intelligence is imparted by us (humans). But is it enough? Well, of course

the robot will work with that, but it will be totally isolated from the outside world. It won't be interactive and cannot take decisions valid in the real world. In order for it to interact with the real world, we need to implant sensors!

In simple words, a sensor is any device capable of sensing physical parameters (like temperature, pressure, proximity, etc) and then convert into electrical signals so that it can be used for processing. So, what do robots have? Camera, piezoelectric sensors, acoustic sensors, accelerometer, etc.

## Sensor Fundamentals

Now let's move on to some of the fundamentals of sensors. Starting with the basic question, **what can we measure using sensors?** Practically anything! Light, motion, temperature, magnetic fields, gravity, humidity, vibration, pressure, electrical fields, sound, and other physical aspects of the external environment can be measured using them. Of course there are different sensors for each purpose like IR sensors, proximity sensors, temperature sensors, tilt sensors, accelerometers, ultrasonic sensors, RADAR, SONAR, etc.




Every sensor in this world has three terminals:

- Vcc to power up the sensor
- GND to provide a fixed negative reference
- Output analog output of the sensor (in some sensors, there may be more than one output terminals)

The following block diagram demonstrates it.

Select Category \$

Subscribe to maxEmbedded

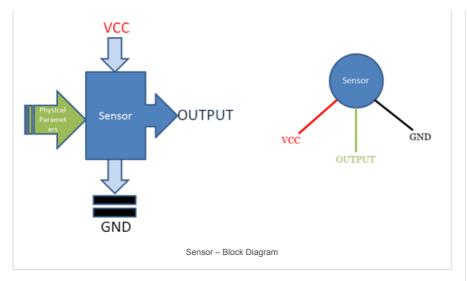


The sensor senses the physical parameters and gives a corresponding output. In most cases the output is analog. Some of the most common sensors used in the field of robotics and embedded systems are as follows:

• IR Sensor- This is the most fundamental type of sensor available in the market. The basic concept is simple. There is an emitter which emits infrared (IR) rays. These IR rays are detected by a detector. This concept is used to make proximity sensor (to check if something obstructs the path or not, etc), contrast sensors (used to detect contrast difference between black and white, like in



line follower robots), etc. The circuit diagram of a basic IR sensor is given below. So even you can make one by yourself.

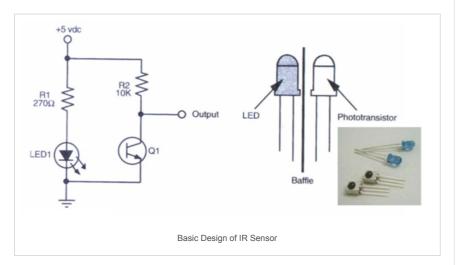

You can also put an op-amp (comparator) in the output terminal in order to amplify the signal and also to convert the analog sensor output to a digital one. We will discuss analog to digital conversion (using AVR) later. For more details on IR sensor design and construction, visit this page.

 LM35 Temperature Sensor – LM35 is a precision centigrade temperature sensor. It has three terminals – Vcc, Ground and Output – as shown in the adjoining diagram. It has a sensitivity of 10mV/°C. This means that for every degree rise in temperature, the output voltage increases by 10mV. In general, it gives a voltage of 0V at 0°C. Hence, say for an output of 450mV, the temperature is 45°C.

 Apart from LM35, there are many other temperature sensors like thermistors, thermocouples, etc which are widely used.



Accelerometer – An accelerometer is a device which can measure acceleration in any direction (X, Y, Z). MMA7260 is one such tri-axis accelerometer. Even this has three major terminals – Vcc, ground and output (it has three outputs, one each for X, Y and Z). This is a very cool stuff. You can program graphical LCDs using this, you can implement this in humanoids



(if you plan to make one) to measure the rate of fall, etc. Here is a short tutorial on using analog accelerometers.

 Camera

To give your robot the power of vision, you can put cameras on them.

The image processing is done using software like MATLAB, OpenCV, LabVIEW, etc and then the data is transferred to the MCU using serial communication. Even this is a cool stuff! In fact I am presently working on this and hope to bring you some exciting concepts regarding Digital Image Processing!



Well, these were just a few of the sensors. There are many other types of sensors used. Of course, the discussion of all of them is outside the scope of this post. So now, you have the fundamentals of the sensors. In the next post, we will discuss how to convert the analog output of sensors to digital signals using AVR.

## 30 Comments

#### ← Older Comments

zyac

can i use portA as input port of keypad and input for 2 sensor AT same time

**REPLY** 

#### ← Older Comments

Sensor Fundamentals » maxEmbedded

# Leave a Reply

Enter your comment here...

This site uses Akismet to reduce spam. Learn how your comment data is processed.

#### Copyright

maxEmbedded by Mayank Prasad is licensed under a Creative Commons Attribution-NonCommercial-NoDerivs 3.0 Unported License.

© Copyright 2011-2014 by maxEmbedded. Some rights reserved.

#### Tags

accelerometer adapter adc assembly avr adc avr basics avr eeprom avr interrupts avr serial avr timers

Dasics code gallery code optimization color spaces Counters cv basics development server filter circuit i2c iot basics ir sensor matlab msp430 basics msp430 launchpad openev pcb design pic basics power supply printed circuit boards pwm raspberry pi rf communication rf module robotics robot locomotion rs232 sbc basics sensors Serial spi timers uart usart web development wireless

### Top Posts & Pages

The USART of the AVR

AVR Timers - TIMER0

AVR Timers - CTC Mode

I/O Port Operations in AVR

Setting up AVR-GCC Toolchain on Linux and Mac OS X

AVR Timers - TIMER1

How to build an IR Sensor

Home Copyright Priv

Privacy Policy

Credits

Sitemap

Contact

© Copyright 2011-2014 by maxEmbedded. Some rights reserved.

maxEmbedded is a free and open source platform to share knowledge and learn about the concepts of robotics, embedded systems and computer vision. People from around the world who are enthusiastic about these topics and willing to support the open source community are invited to share their information, knowledge and expertise by means of written tutorials and videos on the website.