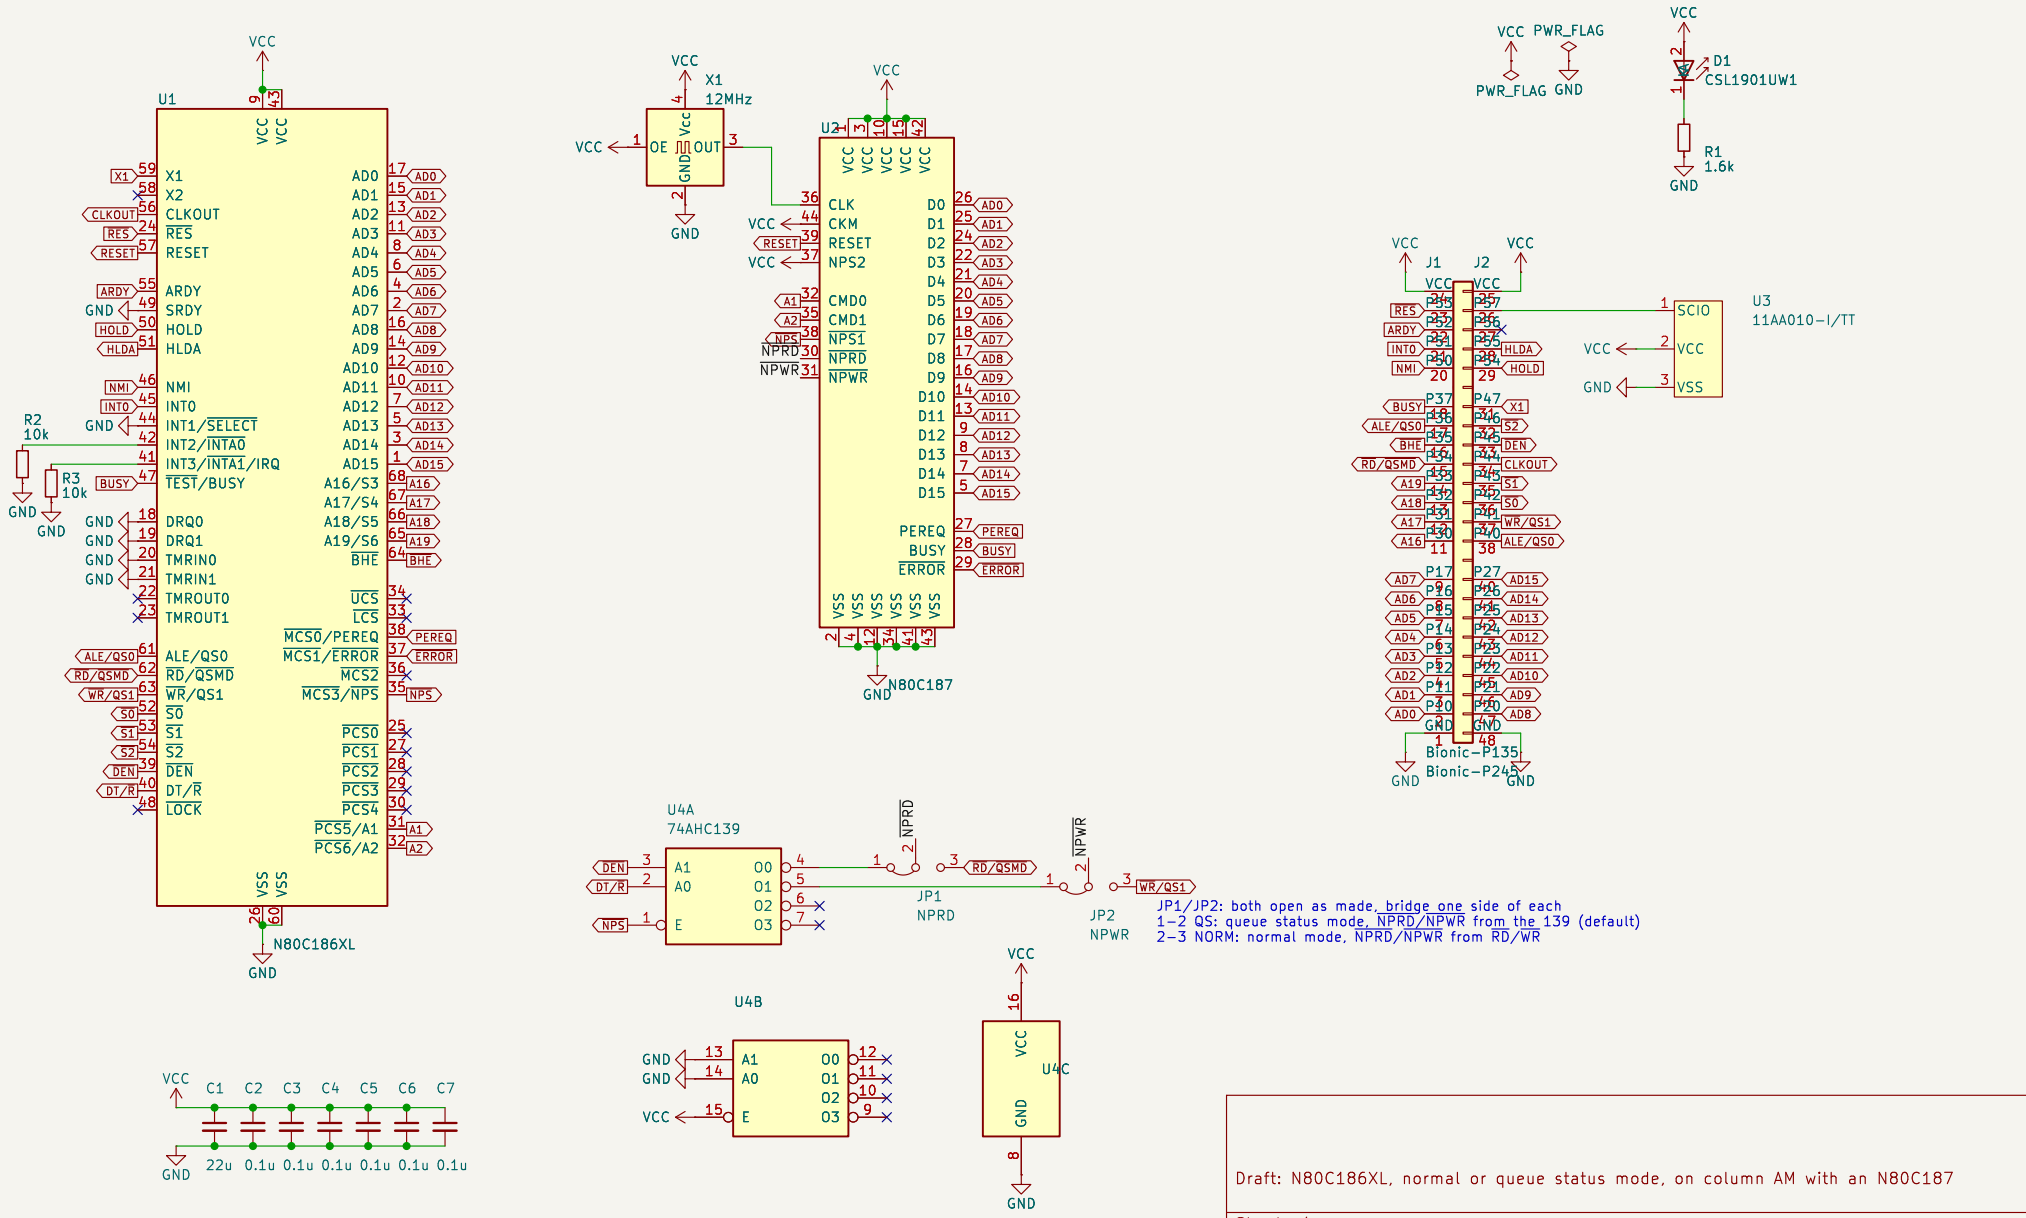

U1
N80C186XL
X1
X2
CLKOUT
RES
RESET
ARDY
SRDY
HOLD
HLDA
NMI
INT0
INT1/SELECT
INT2/INTA0
INT3/INTA1/IRQ
TEST/BUSY
DRQ0
DRQ1
TMRIN0
TMRIN1
TMROUT0
TMROUT1
ALE/QS0
RD/QSMD
WR/QS1
S0
S1
S2
DEN
DT/R
LOCK
AD0
AD1
AD2
AD3
AD4
AD5
AD6
AD7
AD8
AD9
AD10
AD11
AD12
AD13
AD14
AD15
A16/S3
A17/S4
A18/S5
A19/S6
BHE
UCS
LCS
MCS0/PEREQ
MCS1/ERROR
MCS2
MCS3/NPS
PCS0
PCS1
PCS2
PCS3
PCS4
PCS5/A1
PCS6/A2
R2
10k
R3
10k
X1
12MHz
U2
N80C187
CLK
CKM
RESET
NPS2
CMD0
CMD1
NPS1
NPRD
NPWR
D0
D1
D2
D3
D4
D5
D6
D7
D8
D9
D10
D11
D12
D13
D14
D15
PEREQ
BUSY
ERROR
U4A
74AHC139
U4B
U4C
JP1
NPRD
JP2
NPWR
JP1/JP2: both open as made, bridge one side of each
1–2 QS: queue status mode, NPRD/NPWR from the 139 (default)
2–3 NORM: normal mode, NPRD/NPWR from RD/WR
PWR_FLAG
D1
CSL1901UW1
R1
1.6k
J1
J2
Bionic–P135
Bionic–P245
U3
11AA010–I/TT
SCIO
C1
C2
C3
C4
C5
C6
C7
22u
0.1u
0.1u
0.1u
0.1u
0.1u
0.1u
Draft: N80C186XL, normal or queue status mode, on column AM with an N80C187
Sheet: /
File: bionic–n80c187.kicad_sch
Title: BionicN80C187
Size: A4
Date: 2026–11–04
Rev: 1
KiCad E.D.A. 9.0.8
Id: 1/1