

2. Windows 系统下制作下载需要的.bin 文件

2.1. 文件准备

FBFMake.exe 用于将.blf 文件生成.bin 文件

下载软件包,此处以 A50C4B01A7605M7_CUS_BSJ_A7605C_V102211211 举例

2.2. 目录准备

1.在桌面上新建一个临时目录 3333

2.将 FBFMake.exe 和 A50C4B01A7605M7_CUS_BSJ_A7605C_V102211211（下图为了后续操作，更名为 11）放入临时目录 3333 中

3.新建一个 output 的空文件夹



名称	修改日期	类型	大小
FBFMake.exe	2021/3/10 16:15	应用程序	4,732 KB
output	2022/5/11 21:42	文件夹	
11	2022/5/11 20:54	文件夹	

2.3.使用 windows cmd 工具生成.bin 文件

1.输入命令：FBFMake.exe -r 11\A7605C_Nor.blf -f output

```
C:\Windows\System32\cmd.exe
Microsoft Windows [版本 10.0.19042.1526]
(c) Microsoft Corporation。保留所有权利。

C:\Users\Y0262\Desktop\33333>FBFMake.exe -r 11\A7605C_Nor.blf -f output
```


2.等待执行完成

```
Successfully to prepare temp folder file for wtptp download
Complete to prepare fbf files for download

DoFBFMake successfully....

C:\Users\Y0262\Desktop\33333>
```

3.在 output 文件下，可以看到目标 BinFile.bin 文件

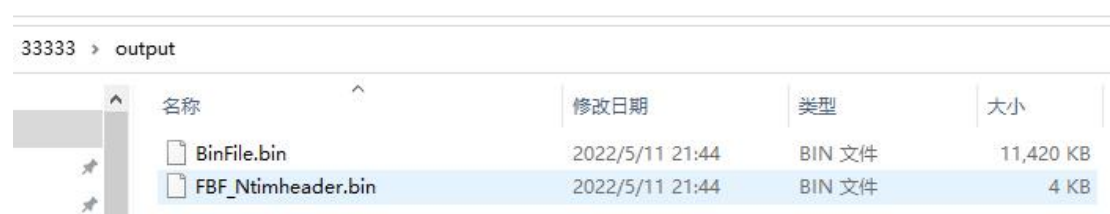

名称	修改日期	类型	大小
BinFile.bin	2022/5/11 21:44	BIN 文件	11,420 KB
FBF_Ntimheader.bin	2022/5/11 21:44	BIN 文件	4 KB

BinFile.bin 文件就是下载需要的.bin 文件。

3. 下载

3.1.文件准备

将 fbfdownloader_cross 和 BinFile.bin 放到同一个目录下，如下图所示：

```
root@longwei-pc:/home/zhangkechao/test# ls
1603 1606 1803s adownload-tiny.native BinFile.bin fbfdownloader_cross
```

3.2.开始下载

1.输入命令： ./fbfdownloader_cross -b BinFile.bin

```
root@longwei-pc:/home/zhangkechao/test# ./fbfdownloader_cross -b BinFile.bin

fbfdownloader version: 4.9.0.7
fbfdownloader date: 2020-6-19

BinFilePath is :BinFile.bin
Open BinFile.bin Succeeded!
Read from File Value is b26dac
Convert Value is b26dac
Offset of Map is 11693484
Size of Map is 4
Find image name:C:\Users\Y0262\Desktop\33333\temp\DKB_ntimheader.bin
```

2. 等待下载完成

下载开始工具会先查找设备 AT 口，下发切换下载模式的 AT 指令，所以无需重启设备，AT 下发成功后会等待设备强制下载口枚举，如果二十秒内没有检测到强制下载口，工具会自动退出。

```
Open dev OK
Check ifc_id OK!
DevName is /dev/bus/usb/001/005, PipeIn is 129, PipeOut is 2,
|Open an BootLoader Device: /dev/bus/usb/001/005 |
Get type of device successfully
Thread creation BootLoaderTypeThread
|/dev/bus/usb/001/005:Add an device |
Open device successfully
Enter into BootLoaderIOThread
Enter into WTPTPDownLoad
|Enter into WTPTPDownLoad....: /dev/bus/usb/001/005 |
|Start Image Downloading...: /dev/bus/usb/001/005 |
|Begin DownloadImage.....: /dev/bus/usb/001/005 |
|download file name is C:\Users\Y0262\Desktop\33333\temp\FBF_N
|Completed DownLoad file: C:\Users\Y0262\Desktop\33333\temp\FB
|Begin DownloadImage.....: /dev/bus/usb/001/005 |
|download file name is C:\Users\Y0262\Desktop\33333\temp\FBF_h
|Completed DownLoad file: C:\Users\Y0262\Desktop\33333\temp\FB
|Begin Burning flash...: /dev/bus/usb/001/005 |
remove DevName:/dev/bus/usb/001/005 percentage is:100 |
```

3. 下载结束

```
|Finish to disconnect: /dev/bus/usb/001/005 |
|/dev/bus/usb/001/005:Burn Successfully      |

BootLoader Thread Completed A!

TerminateBL.....
WTPTP dev: /dev/bus/usb/001/005 was closed!

CloseUsbPort devName = ....

Quit from detect device.....

BootLoader Thread Completed B!

BootLoader Thread Completed C!

BootLoader Thread Completed E!

please wait .....
FBFDownloader EXIT.....
```

4. 版本验证

```
[21:58:54.243]收←◆AT+simcomati
Manufacturer: INCORPORATED
Model: A7605C
Revision: A50C4B01A7605M7_CUS_BSJ
A7605M7_B01V01_220510
QCN:
IMEI:
MEID:
+GAP: +CGSM, +FCLASS, +DS
DeviceInfo:

OK
```

验证成功。