## **Description**

### **Image**






### Image caption

(1) Nicopress Toggle Action Swaging Tool © Superior55 at Wikimedia Commons (CC BY 3.0) (2) Swaged Stop Sleeve © Superior55 at Wikimedia Commons (CC BY 3.0)

#### The process

In ROTARY SWAGING (or RADIAL FORGING) a rod, wire or tube is reduced in diameter by the reciprocating radial movement of one or two pairs of opposed dies. The dies are shaped to give the required external shape. A mandrel may be used with thin-walled tubes and to give internal shape. Normally the dies are rotated around the workpiece as they reciprocate radially. The 'stationary die swaging' process is a variant in which bot spindle and dies do not rotate, allowing non-round external cross-sections to be formed. Good mechanical properties, surface finish and tolerances are achieved. Typical final diameters range from 0.5 mm to 150 mm, but swages capable of handling up to 350 mm diameter tubing have been produced.

### **Process schematic**

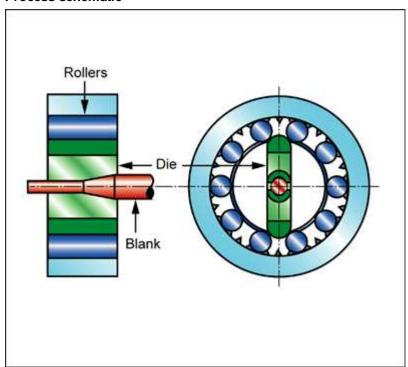

#### Figure caption



Α	rotary	/ swag	ne.

### **Tradenames**

Radial

# **Material compatibility**

Metals - ferrous	✓
Metals - non-ferrous	✓

# **Shape**

# **Economic compatibility**

Relative tooling cost	medium		
Relative equipment cost	medium		
Labor intensity	medium		
Economic batch size (units)	500 - 5e4		

# Physical and quality attributes

Mass range	0.0441	-	441	lb
Range of section thickness	19.7	-	5.91e3	mil
Tolerance	5.12	-	19.7	mil
Roughness	0.0236	-	0.126	mil
Surface roughness (A=v. smooth)	В			


### **Process characteristics**

Primary shaping processes	✓
Discrete	✓

### Cost model and defaults

Relative cost index (per unit)	10.9 - 15.9

<u>Parameters:</u> Material Cost = 3.63USD/lb, Component Mass = 2.2lb, Batch Size = 1e3, Overhead Rate = 150USD/hr, Discount Rate = 5%, Capital Write-off Time = 5yrs, Load Factor = 0.5

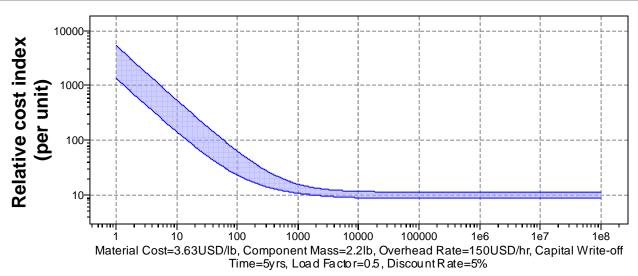

### **Batch Size**

Capital cost	5.37e4	-	1.34e5	USD
Material utilization fraction	0.98	-	1	
Production rate (units)	50	-	400	/hr
Tooling cost	1.34e3	-	5.37e3	USD
Tool life (units)	1e4	-	5e4	

### **Supporting information**

### Design guidelines

Swaging is usually limited to simple cylindrical parts except for use of stationary die swaging which allows production of non-round prismatic cross-sections. Internally shaped tubes are possible using shaped mandrels.

### **Technical notes**

Swaging is generally used with low-carbon steels and ductile nonferrous metals. For ferrous metals, swageability decreases as the carbon content or the percentage of alloying metals increases. It is the standard way of consolidating and reducing sintered tungsten billets to prepare them for wire-drawing for lamp filaments.

### Typical uses

Furniture legs, golf clubs, fishing rods, pins, needles, punches, bicycle spokes, screwdriver blades, rifle barrels, automotive torque tubes, steering posts, exhaust pipes, tungsten for lamp filaments.

#### The environment

The process is very

#### Links

MaterialUniverse