Flow Diagram Organization Version 01

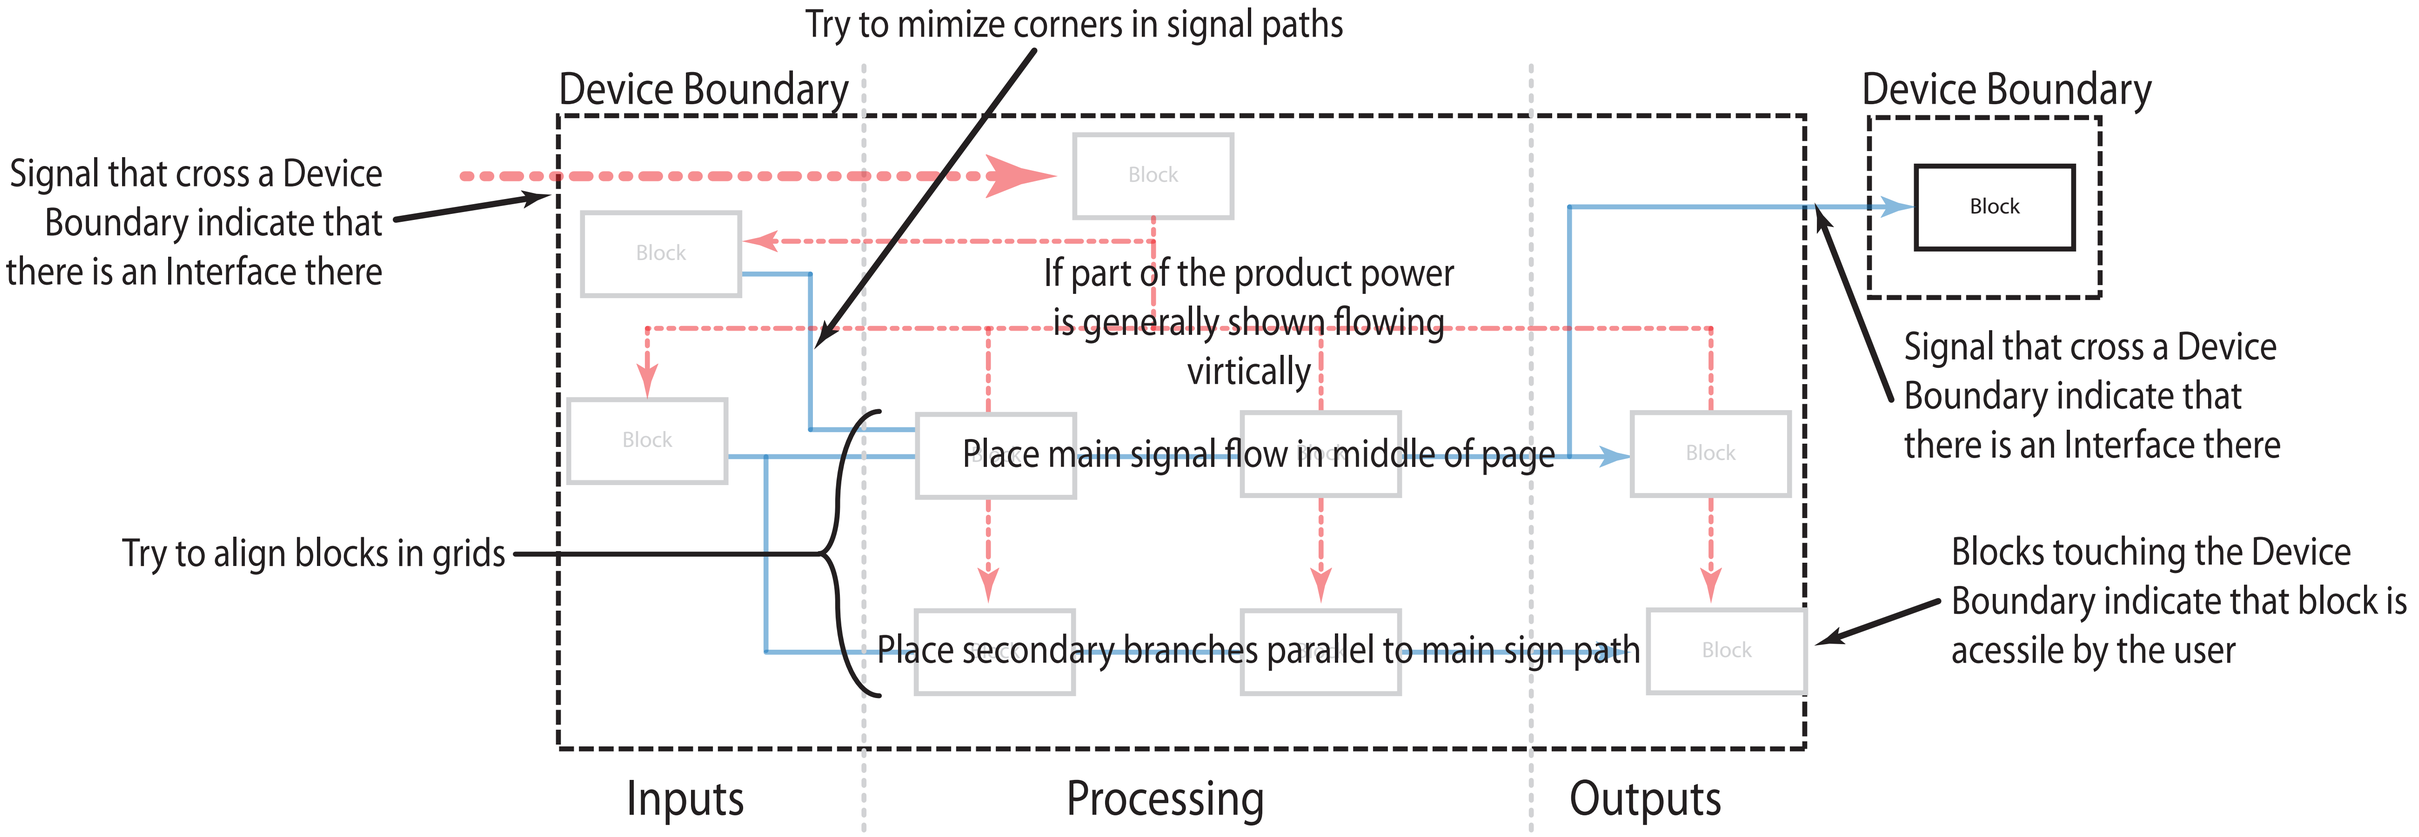

Key

- External Power - a high power signal that is come from out side the product. Examples are mains power, solar etc.
- Power - Indicates that there is a physical connection between the two blocks. Signficant power flows through the signal so designs should take that into account.
- Wireless Signal - Indicates that there is no physical connection between the two blocks. Generally these are low power signal carrying information.
- Wired Signal - Indicates an physical connection between the two blocks. Generally these are low power signal carrying information.