


PG-1 COMPLETE WIRING: every part, every lug, every wire

Each wire has its own lane and its number at both ends (same number = same wire: WIRE-LIST.md says what it is and how). Black = ground. Grey lugs = leave empty. Drawn from the wiring side of each part.

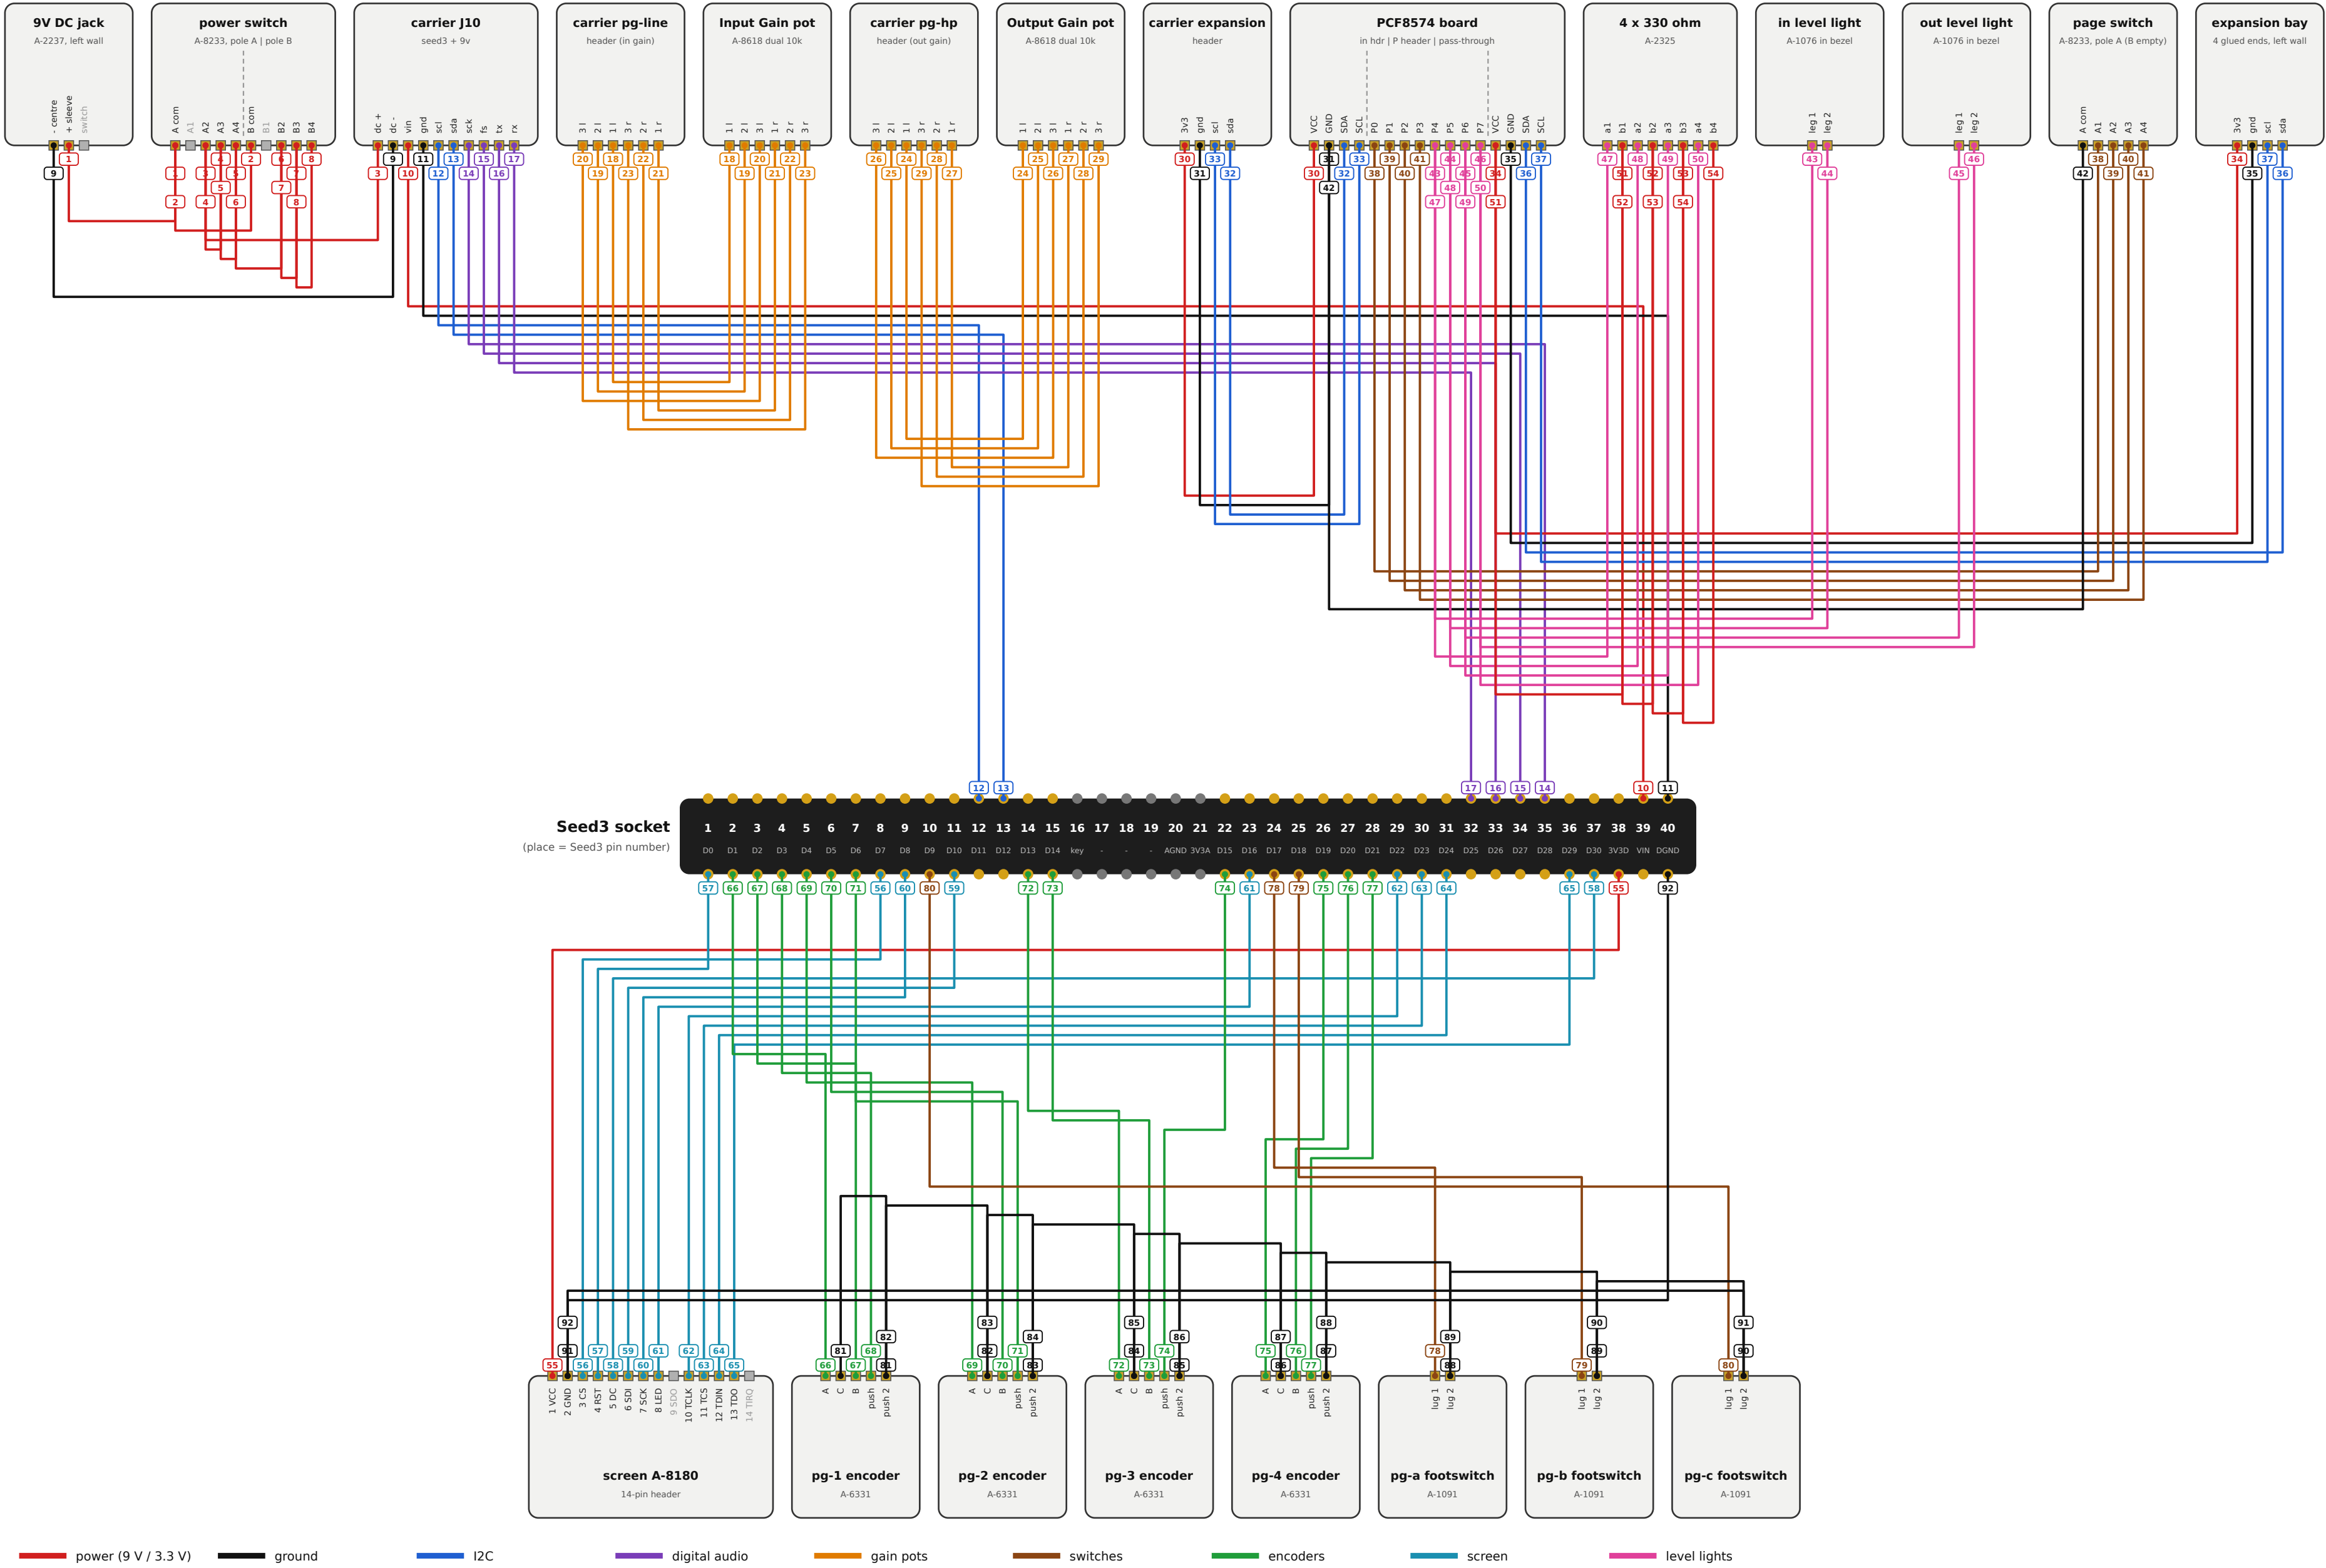

power (9 V / 3.3 V) ground I2C digital audio gain pots switches encoders screen level lights

Not drawn (on the carrier board already): the in / out jacks, the leveller's 2 light pairs OC1 / OC2 (BUILD-GUIDE 6c). fx loop header (2 x 4): leave it EMPTY.
Seed3 socket places 16-21 are not used (16 = the key: snip the Seed3's pin 16, block place 16). Grey lugs: leave empty. Wires marked 'join' are bare offcuts between neighbouring lugs (see WIRE-LIST.md).
The jack's + is its SLEEVE lug (centre-negative). Find the pot's pin 1 / 3 and the switches' lugs with the multimeter (BUILD-GUIDE 5, 6b, 6b2) before soldering.